

CASSINI ATE SYSTEM

REFERENCE GUIDE



ROOS INSTRUMENTS

ABOUT THIS MANUAL

This section provides information about:

- **How this manual is organized**
- **Revision history**
- **The notational conventions used in this manual**
- **How to interpret Notes, Cautions, and Warnings**

This book is dedicated to the engineers, technicians, and operators who have devoted themselves to the noble profession of semiconductor test. Often overlooked and seldom recognized, those in our field make possible the dreams and aspirations of countless others. We are the last stop in the arduous proving grounds of tomorrow's technology. We are the driving force that tests the boundary of what is possible. We are the silent reassurance that the next generation of technology will deliver on its promise of performance, innovation, and ingenuity. It is because we have devoted our life's work to the pursuit of quality, precision, accuracy, and reliability that greater technological achievements are possible. Though our tireless contributions may never be seen, they are imbued in every chip we test.

REVISION HISTORY

Version 1.4 — November 2014

Initial release of the Reference Guide.

Version 2 — March 2016

About This Manual | Section 2 - Using This Book

- Descriptions for scrolling view feature and font size adjustment features were added for iPads running iOS 9.0 or later.

Chapter 2 - Graphical Programming | Section 1 - Introduction

- General descriptions and user information added for the graphical programming environment: Synapse - Test Program Optimizer, Conditional Statements, Measure and Measure Sequence groups, Lock Step groups, Pre Measure and Post Measure groups, and Combined groups.

Chapter 2 - Graphical Programming | Section 11 - RI8574: System Controller (EPC)

- Edit button descriptions were added for button and blocks found in the Data Saves, Flow Control, State, Input Output State, and General Calculation panels. These include **Calc** buttons as well as program flow control, conditional statements, user-defined flags, and compiler directive buttons.

Chapter 2 - Graphical Programming | Section 15 - RI8581: 100kHz to 20GHz Receiver & Section 16 - RI8587: 100kHz to 20GHz DSP Receiver

- Edit button block diagrams updated to include the LO outputs (LO Out A, LO Out B, LO Out C) and IF inputs (IF In A, IF In B, IF In C) button controls via the source **Input** button.
- Edit button description for the source **Input** button updated to include description for controlling the tandem switch routing of the LO outputs (LO Out A, LO Out B, LO Out C) and IF inputs (IF In A, IF In B, IF In C).

Chapter 2 - Graphical Programming | Section 8 - RI8564: 71GHz to 83GHz TestSet

- Updated instrument description and block diagram to the latest version to reflect new performance specifications.

Chapter 5 - Diagnostics

- Chapter completely updated with an introduction to diagnostics on the Cassini ATE, including factory recommended practices for instrument validation and test system release procedures.

- Provide details and description of the diagnostic software UI: Diagnostic Executive including menu options, user controls, and data export.
- The Diagnostic Kit and associated diagnostic hardware are described with included examples.
- Updated procedures for running diagnostics, self tests, and supplemental diagnostics for the Cassini ATE system.

Chapter 7 - Troubleshooting

- Export Simulation section added. Section describes how to create a test setup capture of the Cassini test software environment for RI support assistance.
- Minor updates and corrections.

Chapter 8 - Appendix | Section 9 - RI8564: 71GHz to 83GHz TestSet

- Updated instrument description, block diagram, and performance specifications.

Chapter 8 - Appendix | Section 13 - RI8574: System Controller

- Minor corrections throughout chapter.
- Additional description and information about the RIFL Master topology were added.

Version 2.1 — August 2016

Chapter 1 - System Information | Section 5 - Installation

- Minor updates to clarify installation procedure.

Chapter 1 - System Information | Section 9 - Handler and Prober Interfacing

- Procedure added including steps to attach grounding cable and Handler/Prober control pod.

Chapter 3 - Care & Maintenance | Section 6 - RF Connector Care

- Steps and recommendations for SMA connector tightening.

Chapter 5 - Diagnostics

- Update to procedure for selecting an alternate diagnostic list.

Chapter 8 - Appendix

- Minor corrections throughout chapter.

Version 2.1.1 — October 2016

Chapter 8 - Appendix

- Minor correction to Ri8535: Universal Digital

USING THIS BOOK

The Cassini Reference Guide is a collection of basic resources that will assist in maintaining and troubleshooting the test system's software and hardware components. Here the user will find safety practices, system references and diagrams as well as general care, maintenance, diagnostic, calibration, and troubleshooting information. This book is an actively updated resource that will receive ongoing updates. We encourage our users to provide feedback on the experience and future content requests through support@roos.com to help us improve and enhance this guide.

We encourage our users to become familiar with the tools and features of both this interactive book and iPad to get the maximum benefits of the guide. With that in mind, this section of the eManual contains useful tips and information to become comfortable with using the iPad.

The book was designed to take full advantage of the features provided in the interactive guide. Throughout the manual, the user has access to multiple types of interactive figures, integrated notes, review questions, and multimedia to provide a rich resource for understanding and using the Cassini ATE system. The following pages provide a summary of the content available, explanation of the various resources used throughout this book, and some basic instruction on how to get the most out of the eManual.

GESTURES

The book design and layout were optimized for an iPad in both portrait and landscape modes to provide the best user experience. The following pages illustrate some common gesture conventions that will help the user interact with the book's features. Most gestures are also supported by PDF readers on devices with a touch interface.



Tap

The entire screen acts like a button. Tapping a single finger anywhere will register as a 'click.'

TAP

A one-finger tap can be used throughout the book to enable multiple features. When a single tap is used on a figure, the image or diagram will be rendered in a full screen view. A single tap within an interactive image, review question, or multimedia window in the book will provide interaction control. A single tap on text or the background of the book will show the menu bar at the top of the screen. Two taps in quick succession over text will select the word tapped. A menu will appear above the selected text allowing the user to choose an action.




Hold

Pressing one finger down on the screen and holding it in the same position on the screen.

HOLD

The hold gesture is a useful shortcut for using the highlighter feature in the text areas of the book. Pressing and holding one finger over text activates a highlighter that can be used to indicate important information. Once started, simply move the finger along the text of interest to highlight the text. The borders of the selection area can be enlarged by holding and dragging the demarcation boundaries.

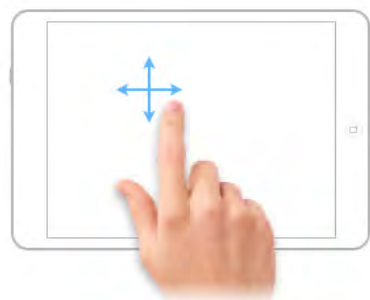


Swipe

Sliding a finger or multiple fingers across the surface of the screen in a swiping motion.

SWIPE

A finger swipe or multi-finger swipe can be used for many functions throughout the eManual. A single finger swipe is used to move from page to page, much like swiping the pages of a physical book. Swiping a single finger from right to left across the screen, will progress the book to the next page. Swiping from left to right will progress to the previous page. Within an interactive figure or illustration, a finger swipe will control the focal view on a zoomed image, progress to the next view, or can be used to manipulate a 3-dimensional object. Swiping up or down on lists will scroll the contents of the lists correspondingly.

NOTE: For iPads running iOS 9.0 or later, setting the book to Scrolling View will display the pages of the book in one contiguous view that can be scrolled by swiping up or down on the text.

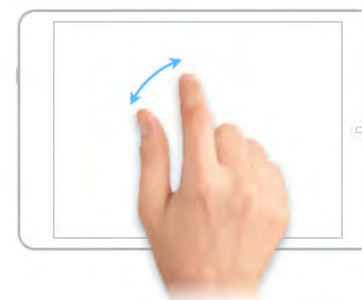

Pinch

Pressing the thumb and forefinger on the screen and swiping them toward or away from each other in a pinching motion.

PINCH

The pinch gesture has multiple functions in the book. Within a chapter or section of the book, pinching the thumb and forefinger together over text or the background will exit from the current page back to the chapter view. Pinching the thumb and forefinger away from each other over an interactive figure or gallery will expand the figure to fill the entire screen. Pinching the thumb and forefinger together over a figure in full screen mode will return it to its original size. Pinching can also be used for controlling the zoom view throughout the book. Pinching the fingers away from or towards each other over the book's text or background will zoom-in or zoom-out the view on the screen temporarily. Lifting one or both fingers off of the screen during the pinch will release the temporary zoom and the text and/or image will return to the original view size.



Rotate

Placing the thumb in a fixed position on the screen and simultaneously moving the index finger around the thumb in a circular motion.

ROTATE

The rotation gesture is used for temporarily rotating the view of the entire screen or the orientation of an interactive image. By placing one finger on the screen in a fixed position and placing another finger on the screen and then rotating around the fixed position clockwise or counterclockwise will rotate the text and images of the page as a single image correspondingly. This rotational view is temporary.

Removing one or both fingers from the screen will return the page or image to its original orientation.

MENU CONTROLS

The interactive book employs many features and controls available in the menu control. These features are illustrated in [Gallery 1](#).

NOTE: The PDF version of this book will only show the first illustration in a gallery. A gallery supplement PDF can be made available upon request.

For iPads running iOS 7.0:


When in portrait mode, the font size can be increased or decreased to improve readability. To adjust the font size, tap on the screen when in portrait mode to bring up the menu controls. Select the font menu icon ‘A’ and then tap on the corresponding font button to increase or decrease the size. The book will automatically save this setting for viewing in portrait mode.

NOTE: The font size cannot be adjusted in landscape mode.

For iPads running iOS 9.0 or later:

The book defaults to a portrait mode display when the iPad is held vertically or horizontal. The font size cannot be adjusted in this mode. The font size can be adjusted by switching to “Scrolling View” found under the ‘A’ menu icon. Once scrolling mode has been activated, the font size can be increased or decreased to improve readability. by

GALLERY 1 INTERACTIVE BOOK MENU BAR

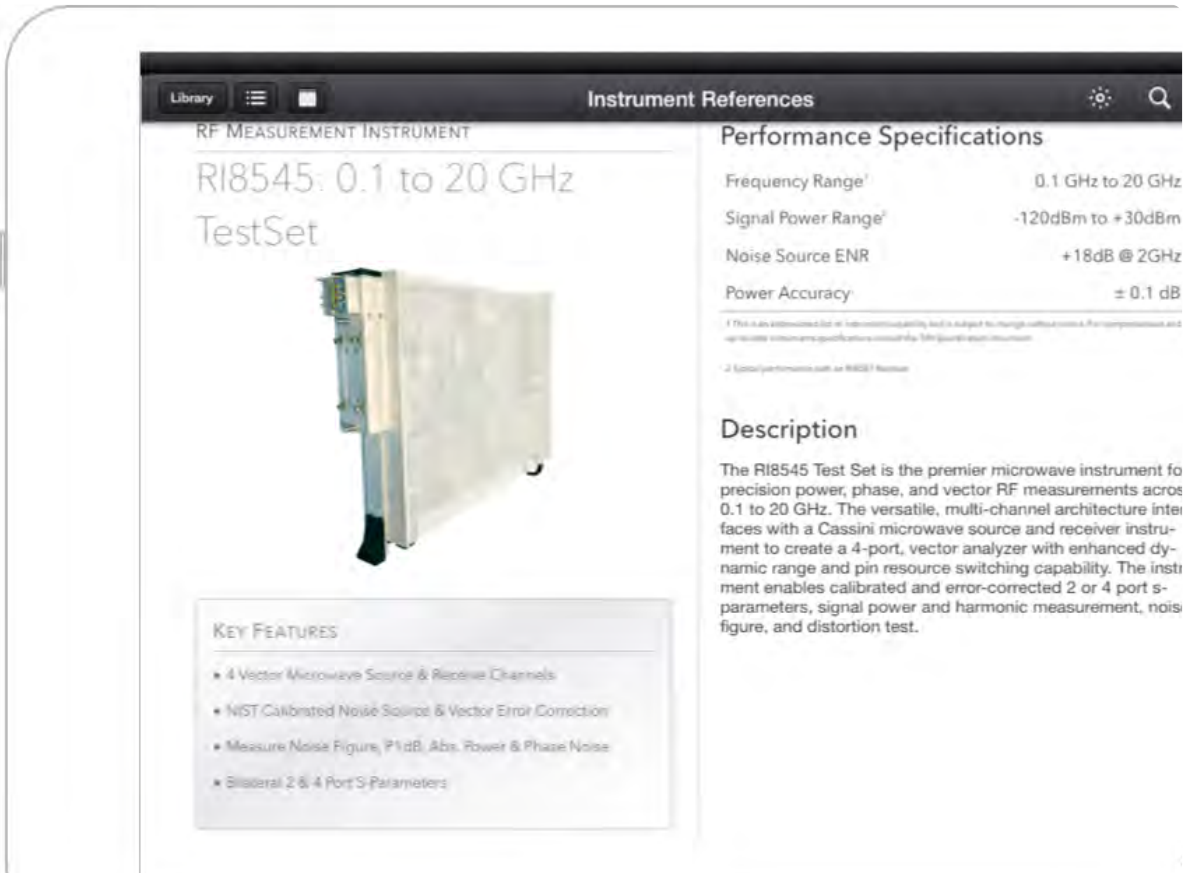

A single tap anywhere on the background will display the menu controls at the top of the book.

Swipe to the left to view more menu bar tools.



tapping on the corresponding font button to increase or decrease the size. The book will automatically save this setting for viewing in Scrolling View.

NOTES

Notes allow the reader to supplement text and figures with their own notes and emphasize important texts with highlights. The notes features are illustrated in [Gallery 2](#).

CAUTION: Updates to the Reference Guide can affect the user’s notes from version to version of the book. User notes are not deleted after an update, but the listed location of a note and hyperlink tab in the notes panel may be incorrect.

To correct a page mismatch, follow the guidelines below.

- If the page hyperlink is incorrect, select and copy the note of the highlighted phrase or text with the incorrect page link
- Select and search the highlighted text or phrase in the notes panel for matches in the book. (Reference [Gallery 2](#) for instructions on selecting and searching text)
- Once the highlighted text or phrase is located in the book, tap on the highlighted text and delete the note or highlight by selecting the trash icon.
- Create a new highlight and add a note.
- Tap the note space to paste the previous note information into the new note.
- Return to the notes panel and verify that the new note and page number are correct, and the old note is no longer present by verifying the creation date.

GALLERY 2 NOTES



Double-tapping selects texts and provides menu options of: copying, searching, highlighting and more. The selection area can be expanded by holding and dragging the selection handles at each end.

BOOKMARKS & RECENTLY VISITED PAGES

The bookmark feature allows the creation of a user-specified record of pages. These pages are compiled into a list that can be viewed by tapping on the bookmark icon located on the far right side of the book menu bar (see screenshot 7 of [Gallery 1](#)). Tapping on the bookmarks within the list provides quick access to content.

Beneath the list of bookmarks are buttons for accessing previously visited pages. These buttons allow the user to move forward and backward through the previously visited page of the book. This feature can be useful for more efficiently jumping between content that has been bookmarked or hyperlinked resources that are located on different pages.


HYPERLINKS

Hyperlinks are used throughout the text to allow quick access to referenced or associated material in the book or on the web by tapping on the hyperlink. Hyperlink text is designated by underlined blue text.

NOTE: The recently visited pages feature, found under the bookmark tool of the menu bar, is useful for moving between hyperlinked information.

Organization

INTERACTIVE About this Manual.1 TABLE OF CONTENTS & CHAPTER NAVIGATION

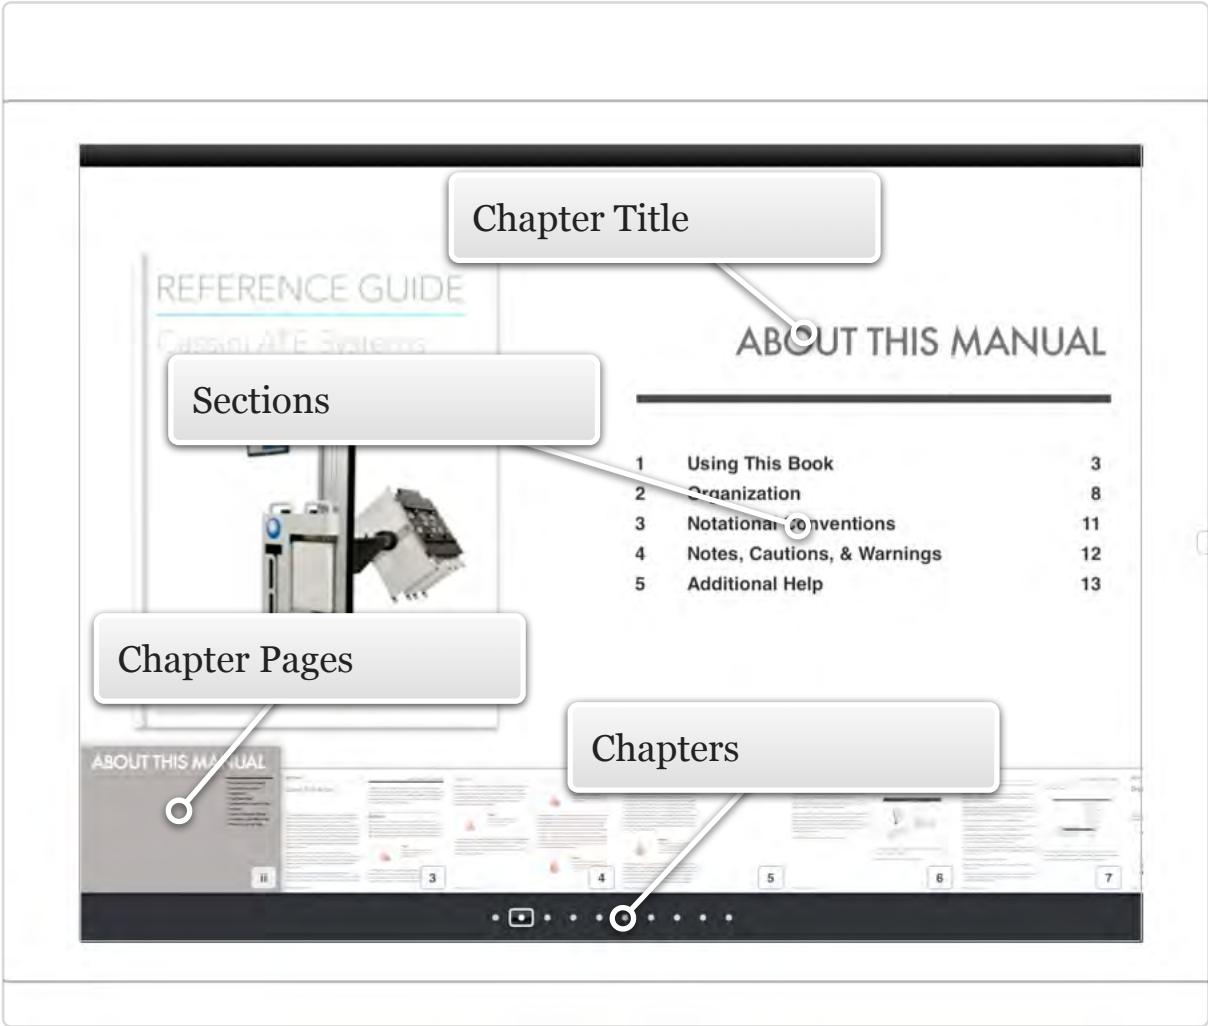

The Reference Guide contains a preface, instrument references, and an appendix. The table of contents, shown in [Interactive About this Manual.1](#), displays the chapters and their associated sections in a graphical UI view. The title of the chapter is shown on the top left of the page, sections within the chapter when available are shown as a scrollable list on the right side of the page, and thumbnails of all the pages within the chapter are shown across the bottom. The reader can swipe left or right on the thumbnails to navigate to a page and tap on the thumbnail or section list to jump directly to that page or section. The number of chapters in the book are displayed along the bottom of the table of contents page as dots. Swiping left or right on the chapter title background will move from chapter to chapter.

The Instrument Reference chapter provides comprehensive information for every Test Instrument Module available on the Cassini ATE platform. The chapter provides an introductory section with general hardware information:

- TIM form factor
- Design and dimension specifications
- Input/Output types
- Docking to the test head as well as general information about software interaction tools:
- Configuration panel

- Edit panels
- Control panels

Each individual TIM is listed in subsequent sections of the chapter in ascending order of model number. The TIM sections follow a standard organization:

- Description page that includes a picture of the TIM and lists the general functionality and key features
- A functional block diagram
- Abbreviated performance specifications (comprehensive specification sheets are available upon request at: support@roos.com)
- List of instruments provided by the TIM as shown in the Tester Configuration Panel
- List and descriptions of the graphical programming buttons and blocks found in the Editor Panel for each subsystem instrument
- Descriptions of the graphical control buttons found in the Control Panel for each subsystem instrument
- Some example tests/test plans using the editor button/blocks

AUDIENCE

The guide accompanies the 5-day *Cassini Basic Training Course*, covering several topics about the operation, maintenance, and general use of the Cassini Test System. This guide assumes the reader is familiar with Cassini's modular system design, graphical test plan development process, and software environment. For more information about our products and services, visit roos.com.

The Reference Guide sections are divided into the following subject areas:

- Chapter 1: System Information -- provides safety and operator guidelines, system shipping or unpacking, and site preparation information, as well as introductory material for the Cassini Infrastructure, Test Instrument Modules (TIMs), Fixtures, and Software Environment/Tools.
- Chapter 2: Graphical Programming -- provides an overview of the test design environment on Cassini. It includes an introductory chapter covering the basics of the test plan development environment. As well, the chapter includes individual sections for each of the test instrument modules, with descriptions, uses, and examples of instrument state buttons and measurement blocks.
- Chapter 3: Care & Maintenance -- provides general system and instrument maintenance cycles, safe ESD practices, and system care recommendations.

- Chapter 4: Service -- provides information about the service and support options offered for the Cassini ATE system as well as instruction for submitting support requests and TIM exchanges.
- Chapter 5: Diagnostics -- includes factory recommended practices for running diagnostics, self tests, and supplemental diagnostics for the Cassini ATE system to validate instrument and test system operation and release procedures. A detailed description of the diagnostic software UI (the Diagnostic Executive) is included along with menu options, user controls, and data export processes. The Diagnostic Kit and associated diagnostic hardware are described with included examples.
- Chapter 6: Calibration -- includes general practice calibration procedures as well as information on the associated hardware and software.
- Chapter 7: Troubleshooting -- provides software and hardware tips, tricks, and techniques for troubleshooting various parts of the Cassini's DC, digital, and RF instrumentation.
- Appendix -- contains reference material for the infrastructure (Mechanical diagrams with dimensions, specifications, etc.), all currently available Test Instrument Modules (descriptions, sub-instruments, functional block diagrams, and abbreviated specifications), user notes section, copyright information, and user agreement legal copy.

Notational Conventions

This manual uses the following notational conventions:

Control-C

Hold down the Control key, then press the C key.

LMB click

Press and release the Left Mouse Button.

RMB click

Press and release the Right Mouse Button.

LMB hold

Press and hold down the Left Mouse Button.

RMB hold

Press and hold down the Right Mouse Button.

DMB click


(Double Mouse Button) Press and release the left and right mouse button simultaneously.

RI7100C or Cassini

Refers to the family of modular ATE systems.

**Pinch Point Hazards**

This symbol indicates pinch point hazards. Pinch points can cause serious injury including contusions, crushing of tissues and bones, and broken bones. Always keep hands, fingers, loose clothing, and persons free of areas designated as pinch points.

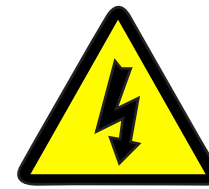**Hazardous Voltages**

This symbol indicates a voltage, either AC or DC, above 60 volts may be present. These voltages can cause bodily injury such as electrical shock or burns. A black flash signifies 60 to 999 volts. A red flash indicates the voltage exceeds 1000 volts.

Notes, Cautions, & Warnings

This manual uses notes, cautions, and warnings to highlight critical information. To attract the reader’s attention, these messages have special formats:

NOTE: Notes provide important information, useful hints, and/or tips.

CAUTION: Cautions have a higher level of severity. They caution the user to not perform an action or actions that may damage the tester.

WARNING: Warnings have the highest severity. They warn the user to not perform some action or actions that will damage the test system and may result in personal injury.

Additional Help

Online material and reference information are available through the Roos Instruments website at www.roos.com/support.html. Access to the online material requires a user name and password that can be obtained by registering online at roos.com/newFullUser or contacting Roos Instrument's support at support@roos.com.

To report hardware or software problems, suggest improvements to the test system, or request system features, contact support at support@roos.com.

For technical problems beyond the scope of the manual and the online help system, contact Roos Instruments support at 1.408.748.8589 between the hours of 9:00 a.m. to 6:00 p.m. (U.S. Pacific Standard/Daylight Time) or email support at support@roos.com.

ROOS INSTRUMENTS CONTACT INFORMATION:

Roos Instruments
2285 Martin Ave.
Santa Clara, CA 95050
United States of America

Phone: 1.408.748.8589
Fax: 1.408.748.8595

support@roos.com
www.roos.com

SYSTEM INFORMATION



General information about Cassini ATE System:

- **Operator & Safety Information**
- **Site Preparations**
- **Shipping & Packing**
- **System Installation**
- **Infrastructure**
- **Test Instrument Modules**
- **Fixtures**
- **Software Environment & Tools**

SAFETY INFORMATION

This section describes hazards for personnel using or near the test system may come across and the steps that must be taken to avoid injury. Also included is the the power up and shut down procedures and manipulator operation.

Cassini systems are designed with an emphasis on safety and are exempt from hazards included in the [OSHA compliant safety program](#) during normal operation of the test system. If the system is used in a manner not specified in the instructions, the protection provided by the equipment may be impaired. The following safety information is based on a standard operating air temperature from 10° to 35°C (50°to 95°F) and humidity from 8% to 80%.

The following symbols are provided with their meanings along with their application to the test system.



CE MARK

The Cassini 16 test system conforms with the essential requirements of the EMC Directive 2004/108/EC and LVD Directive 2006/95/EC, based on the following specifications applied: EU Harmonized Standards: EN 61326-1:2006, EN 61000-3-2:2006+A1:2009+A2:2009, EN 61000-3-3:2008, EN 61010-1:2001CE. Certificate available upon request. (Obtained June 16, 2011)



PINCH POINT HAZARDS

Pinch points can cause serious injury including contusions, crushing of tissues and bones, and broken bones. Pinch point hazards for the various Cassini test system models are provided.

WARNING: Keep hands and fingers clear of the manipulator when raising and lowering the test head.


CASSINI 16 ([RI8568](#))

Do not obstruct the manipulator arm channel when raising and lowering the test head. Keep it clear of objects at all times to prevent accidental damage.

WARNING: Keep fingers and loose clothing clear of the fixture docking ports when latching or unlatching fixtures or calibration/ diagnostic plates. Never insert fingers into the docking ports. Serious injury can occur.

Always use caution when docking a fixture to the test head. Insure that the pneumatic fixture lock switch is set to the 'unlatched' position when a fixture is not present on the test head. Keep hands, fingers, and loose clothing clear of open slots and around the perimeter of fixture and diagnostic/calibration plates.

FIGURE 1.1 CASSINI 16 PINCH POINTS

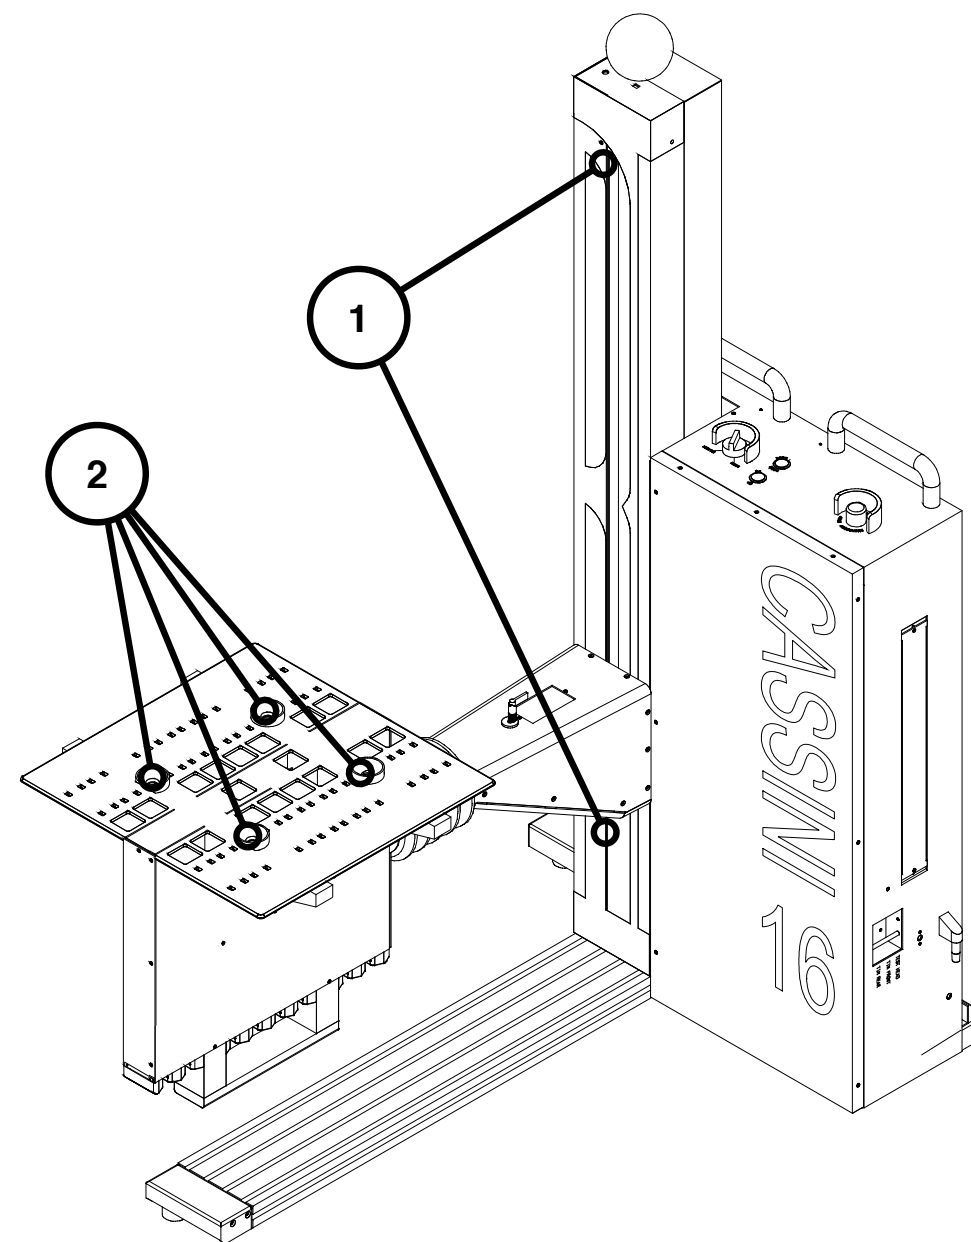


The pinch points are shown for the elevator lift's maximal positions at reference 1 and the pinch points on the test head at the fixture docking pin ports at reference 2.

SMALL CASSINI ([RI8556](#))

Do not obstruct the manipulator arm channel when raising and lowering the test head. Keep it clear of objects at all times to prevent accidental damage.

FIGURE 1.2 SMALL CASSINI PINCH POINTS

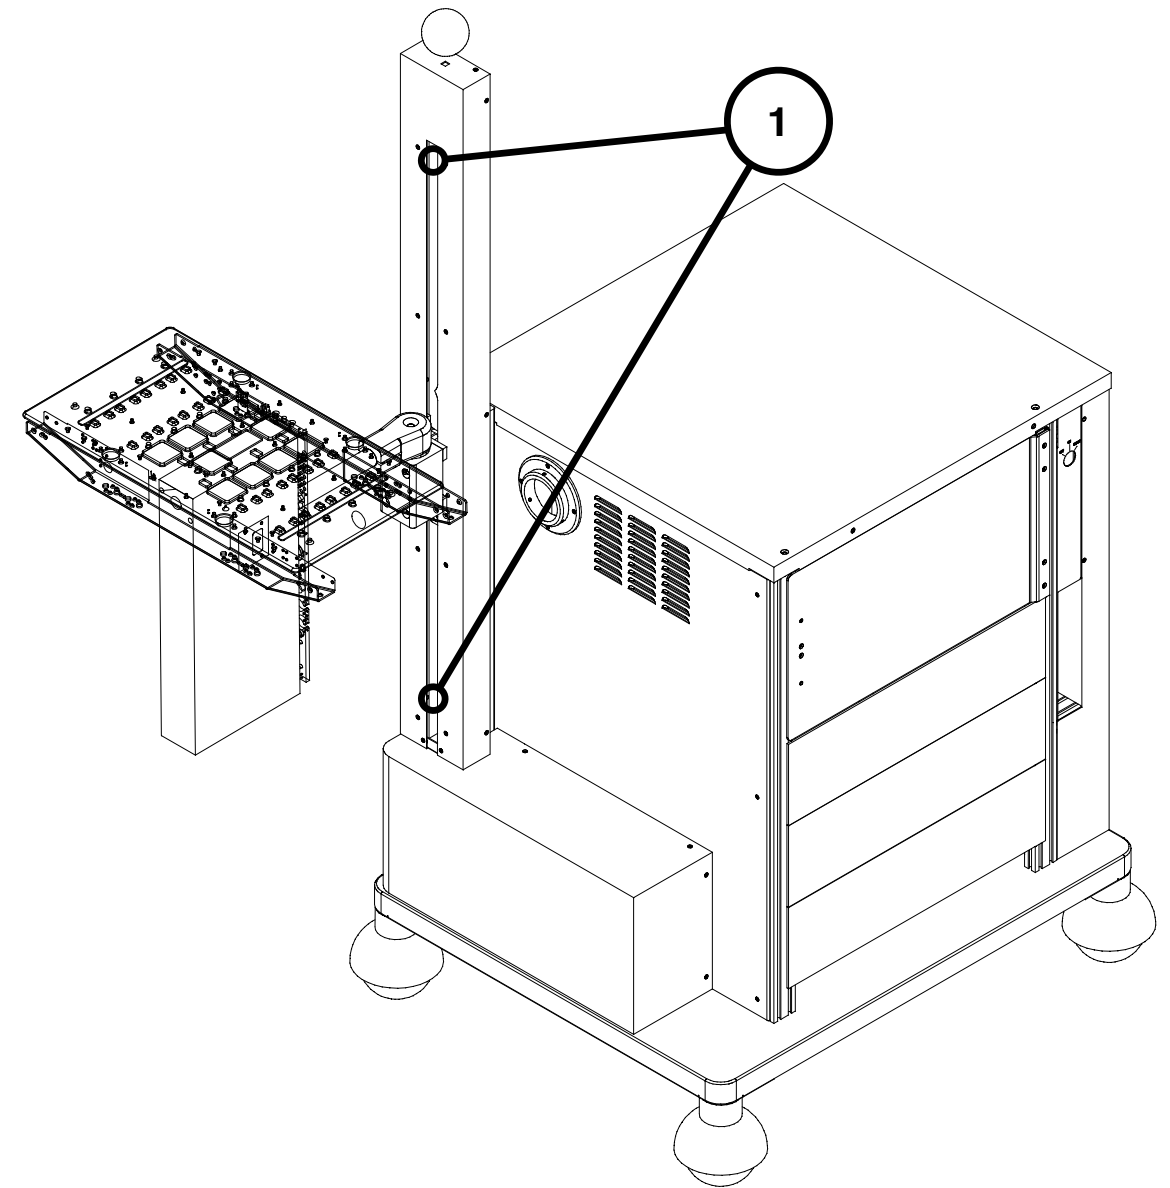


The pinch points are shown for the elevator lift's maximal positions at reference 1.

LARGE CASSINI ([RI8557](#))

Do not obstruct the manipulator tool-balancer when raising and lowering the test head. Keep it clear of objects at all times to prevent accidental damage.

FIGURE 1.3 LARGE CASSINI PINCH POINTS

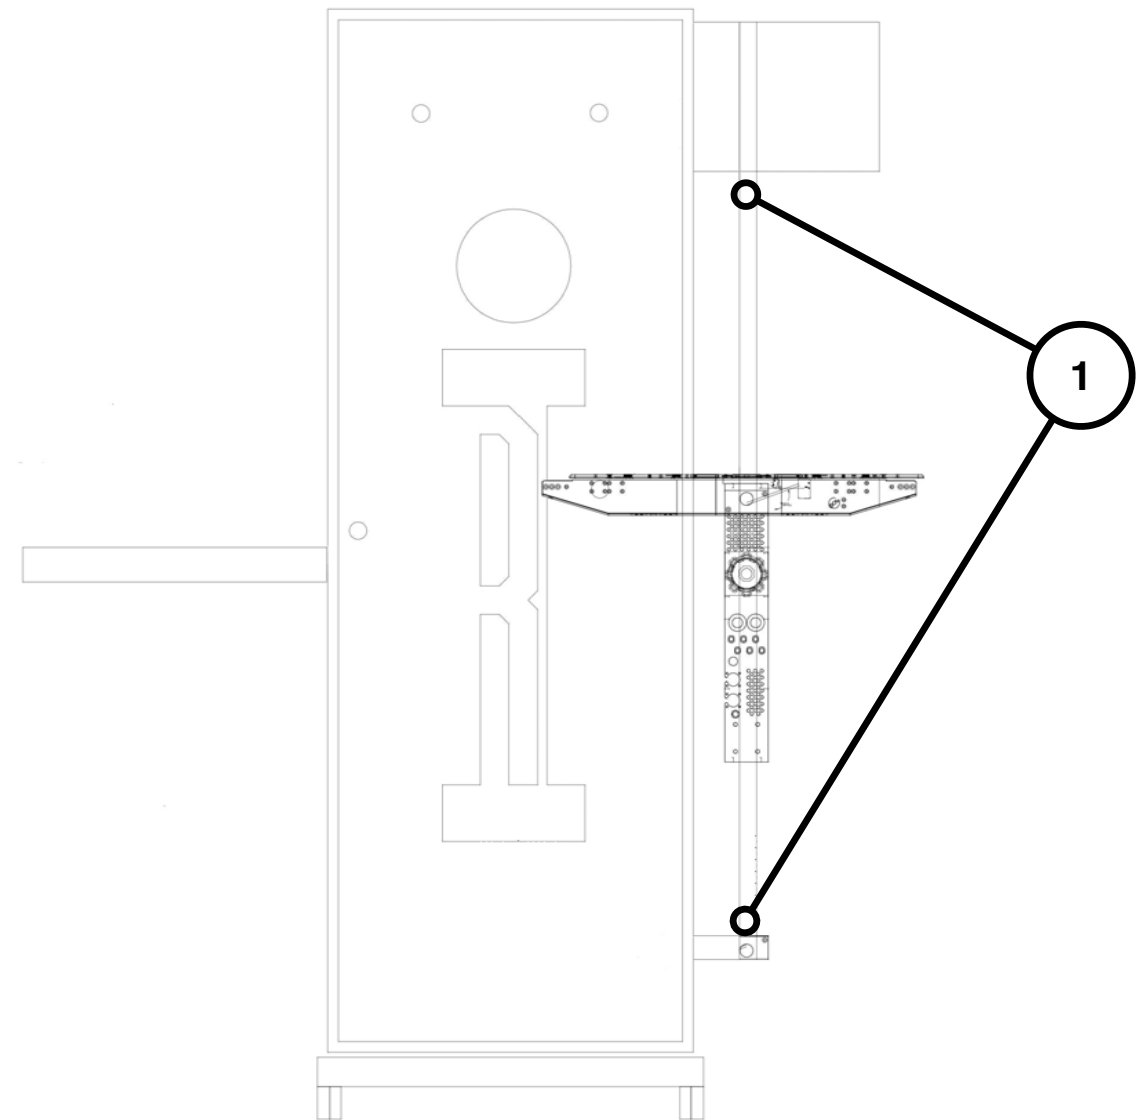

The pinch points are shown for the elevator lift's maximal positions at reference 1.



Hazardous Voltages

Cassini test systems include 120/220 AC to DC conversion supplies to distribute 48V instrument power to the test head instrument slots and auxiliary test head connectors. Improper safety practices when working with these voltage and power levels can cause electrical shock, injury, and/or damage to the test system equipment. Caution should be exercised when accessing and servicing the test system infrastructure or test head. Always power down the test system before servicing the infrastructure or test head. The Cassini 16 and Small Cassini chassis and test head are electrically connected to earth ground when properly installed to provide safety grounding. The Large Cassini provides electrical grounding for the test head to provide safety grounding.

CAUTION: Powder coated and anodized surfaces do not provide adequate grounding paths to the chassis' safety ground. Always exercise safe grounding techniques and ESD practices.

CAUTION: Insure common electrical grounding between the test system chassis, auxiliary rack, and handlers using the Roos Instruments supplied green grounding wire and alligator clip. Inadequate grounding can cause poor clock and or signal conditions on the communication line between the tester and 3rd party devices like handlers or probers.

WARNING: Depending upon system configuration options and test programs used, **HAZARDOUS VOLTAGES** may be present at the device interface during testing.

WARNING: The RI8589 High Power Supply/Pulser instrument can produce DC and pulse voltages in excess of 170V. Always power down and remove this instrument before performing any service to the instrument, fixture, device interface board, or test system.



RoHS Exemption

Roos Instruments is exempt from RoHS standards for lead free components due to the performance characteristics of lead free components and the class of hardware ([EEE Cat. 6: Large-scale stationary industrial tools](#)).

WARNING: Service and maintenance personnel should always exercise safe work practices to prevent exposure to lead-based solder when working with internal electrical components of the test system and equipment.

To prevent the accidental ingestion of lead-based solder, hands should be washed with soap and water before and after working with the internals of the test system and equipment. Work areas should be kept clean and wiped with a damp paper towel to minimize the potential of residual lead in the work area.

SAFETY PRECAUTIONS

Users should always adhere to the safety guidelines provided below:

- Read all of these instructions.
- Save this manual for later use.
- Do not use this test system unless it has been installed and maintained as specified in the appropriate Site Preparation and Installation and Maintenance manuals.
- Shut off all power before cleaning or servicing the test system. Shut down and remove test instrument modules, fixtures, and/or auxiliary equipment from the system before cleaning or servicing.
- Do not drop any part of the test system.
- Always remove fixtures or diagnostic/calibration plates from the test head when the pneumatic locks are disengaged.

CAUTION: *Rotating the test head with an unlatched fixture or plate can result in accidental drops and potential damage to instrumentation and fixtures.*

- Do not obstruct or cover the slots and openings in the system controller, test instrument modules, or test system. These openings provide cooling and ventilation for the computer and test equipment.
- Never obstruct openings of the auxiliary rack with other objects.

- Do not stack anything on top of the test system or auxiliary racks with the except of workstation equipment: monitors, keyboard, mouse.
 - Do not cover openings at the bottom of the test system.
 - Do not place anything next to the test system that can block or impede proper airflow to or from the test system.
 - Operate the test system only from the type of power source indicated on the labels and in the manuals.
 - Keep power cords away from areas where people stand or walk. Avoid stepping on power cables.
 - Follow all warnings and instructions marked on the labels.
 - Never spill liquids of any kind on the system controller, test system, test instrument modules, fixtures or related equipment.
 - Do not attempt to service the system controller, the computer peripherals, or the test system without consulting a Roos Instrument's service or support engineer. See the maintenance manuals for servicing procedures before opening any of equipment on the test system. Repair and maintenance should be done only by qualified service or repair persons.
 - Shut off the entire test system under any of the following conditions:
 - Smoke or an odor is present.
 - Any of the infrastructure cooling fans fail to operate.
- Any kind of liquid has been spilled on any part of the system controller, computer peripheral, or test system.
 - The system controller, computer peripheral or any part of the test system has been dropped.
 - The system controller, the computer peripherals, or any part of the infrastructure has been damaged.
- Contact Roos Instruments support for service or repair under any of the following conditions:
 - The controller, computer peripherals, or test system show any change in performance.
 - Test programs does not run properly.
 - The test head or any part of the test system cannot be adjusted for a test program.

EMERGENCY OFF (EMO) SWITCH

The emergency off (EMO) switch shown in [Figure 1.4](#), are kill switches that immediately disconnect power from the test system as quickly as possible even if this damages equipment. The EMO switch should only be used in cases of serious, unexpected, and/or dangerous situations requiring the immediate deactivation of the test system.

CAUTION: *The abrupt loss of power from an emergency shutdown can cause disk crashes, corrupted files, and lost test program edits and data.*

FIGURE 1.4 EMERGENCY OFF (EMO) SWITCH



The above figure shows the Emergency Off or EMO switch found on the Cassini16 and Large Cassini test systems.

EMERGENCY SHUTDOWN PROCEDURE

The Cassini 16 and Large Cassini test systems are all equipped with readily accessible emergency off switches. These kill switches immediately disconnect power from the test system completely and as quickly as possible even if this damages equipment. The location of EMO switches for the Cassini 16 system and Large Cassini test systems are provided in [Figure 1.6](#) and [Figure 1.5](#).

NOTE: The Small Cassini test system is not equipped with an EMO switch. The OFF/ON/START switch, shown in [Figure 1.7](#), serves as the emergency off function.

To activate the EMO switch, depress the red button fully. The EMO switch will remain in the recessed, engaged position after it has been activated. The switch must be deactivated to restore the test system to operation. The switch is deactivated by turning the knob in a clockwise motion. This will release the button, returning it to its armed or ready position.

CAUTION: After an emergency shutdown, set all switches, knobs, and breaker switches on the test system, auxiliary rack, and auxiliary equipment to their 'OFF' positions. Remove all test instrument modules and fixtures from the test system.

FIGURE 1.5 LARGE CASSINI EMERGENCY OFF SWITCH

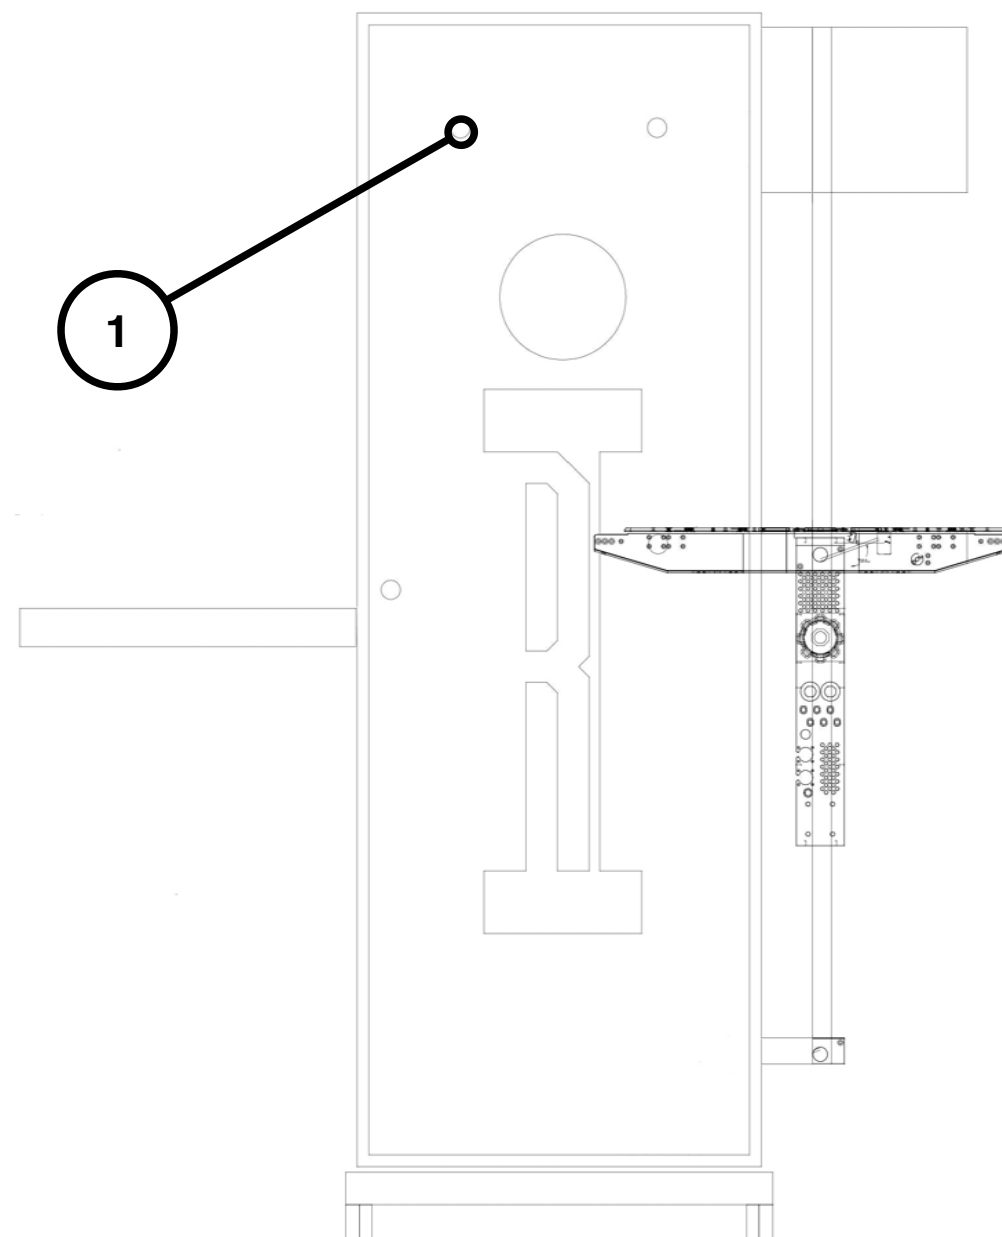


FIGURE 1.6 CASSINI 16 EMERGENCY OFF SWITCH


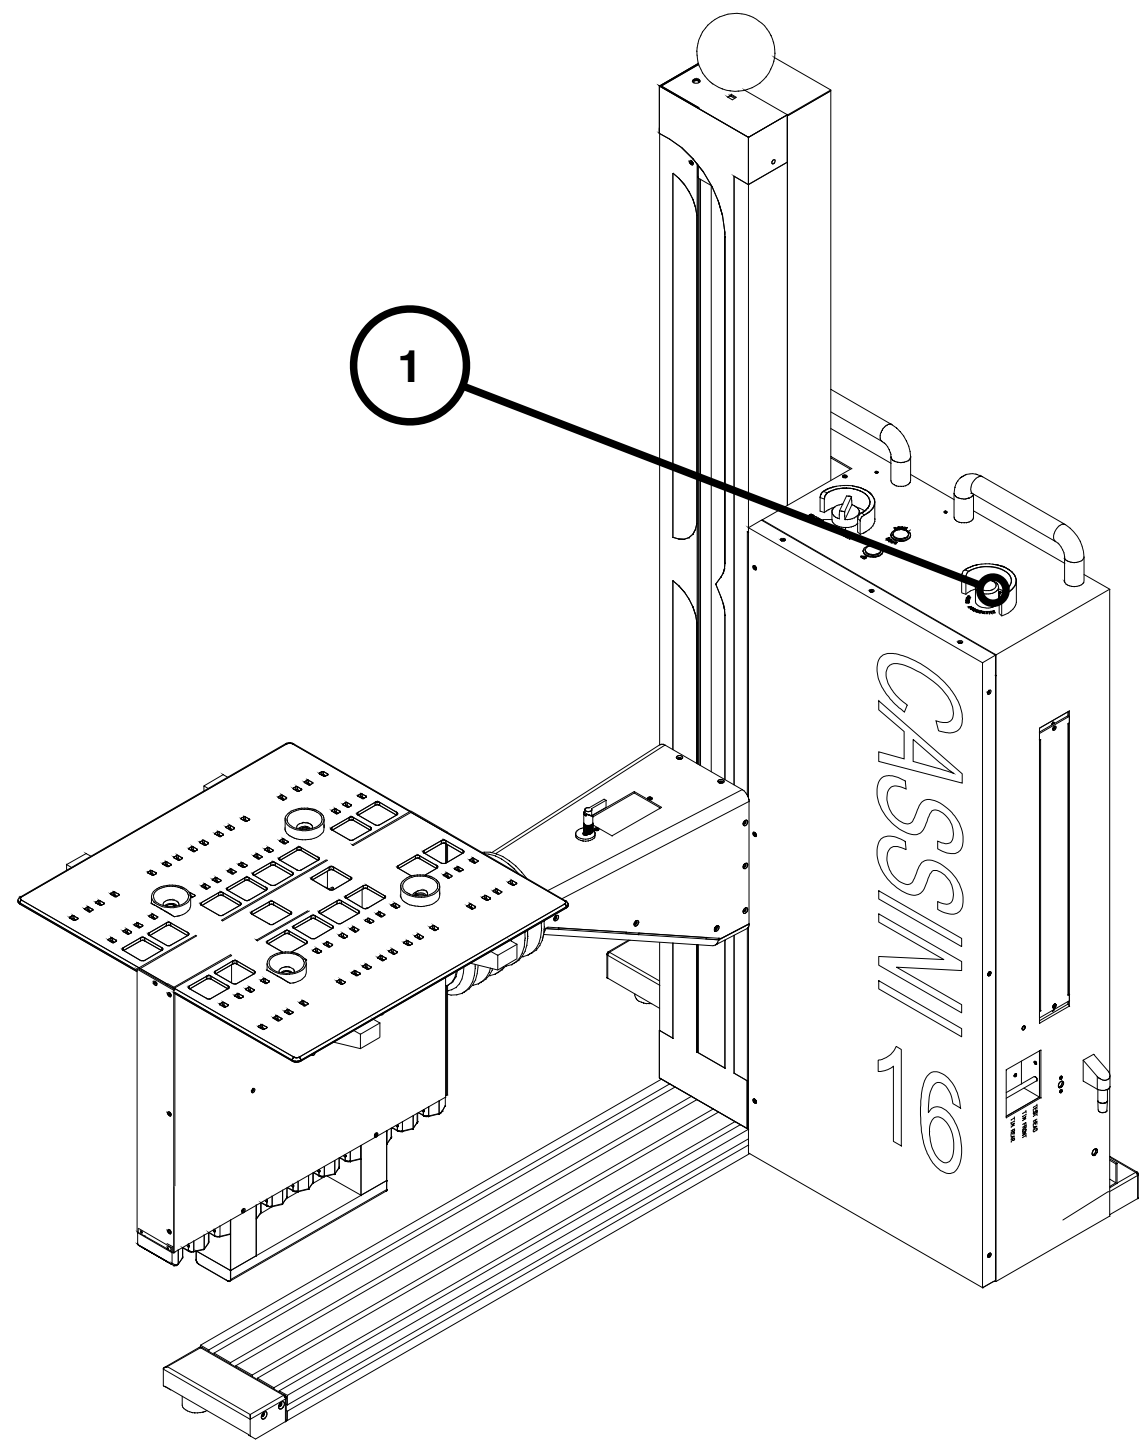


FIGURE 1.7 CASSINI 8 OFF/ON/START SWITCH

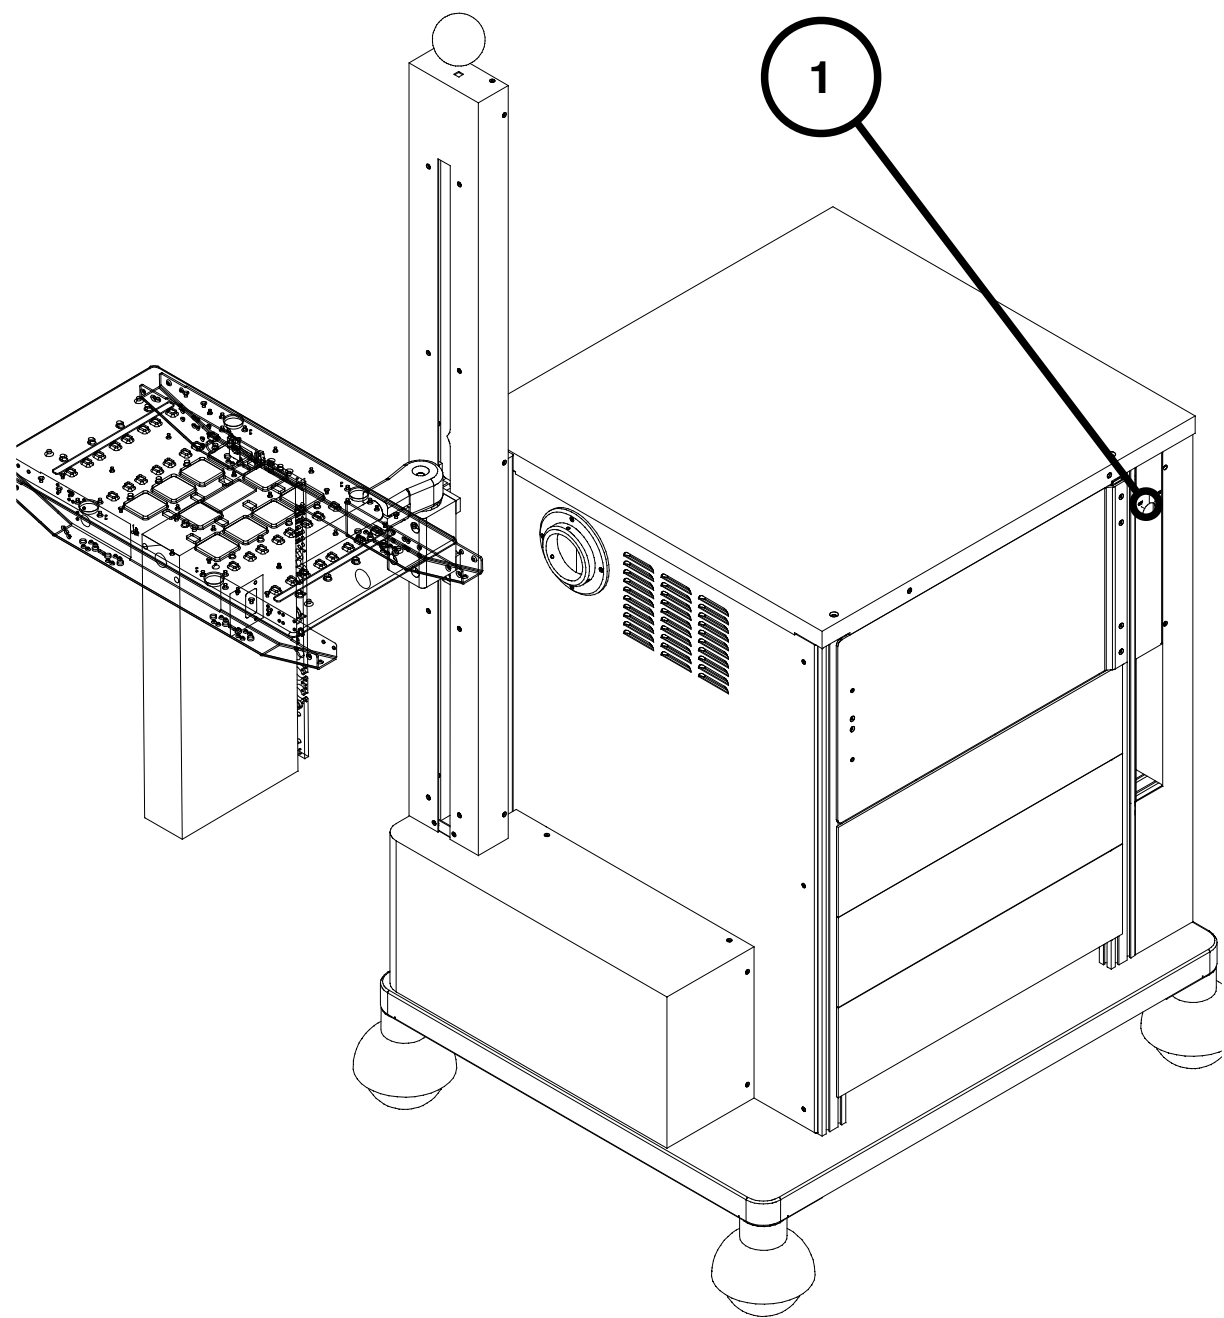

NORMAL SHUT DOWN PROCEDURE

To shut down a test system for routine service or maintenance, use the procedures outlined below for the appropriate Cassini system.

CASSINI 16


1. Read all steps and instructions before attempting to power down the test system.
2. Save edits and data from user programs in progress (if desired).
3. Close all test programs and other user programs.
4. If a shortcut is active, close the system shortcut by selecting the **System > Quit...** menu options from the main system window or RMB click the main system window 'x' button at the top right corner.

NOTE: The test system may prompt the user to confirm the shortcut closure.

5. If a user is logged into the test system, log off by selecting the **System > Logoff** options from the sidebar buttons.

6. Shutdown the operating system by selecting the OS shutdown shortcut or selecting the **Shutdown...** option from the eCS Start menu located at the bottom of the screen (reference [Figure 1.60](#)).
7. The operating system will prompt the user to confirm the shutdown.

FIGURE 1.8 CASSINI 16 OFF/ON/START SWITCH

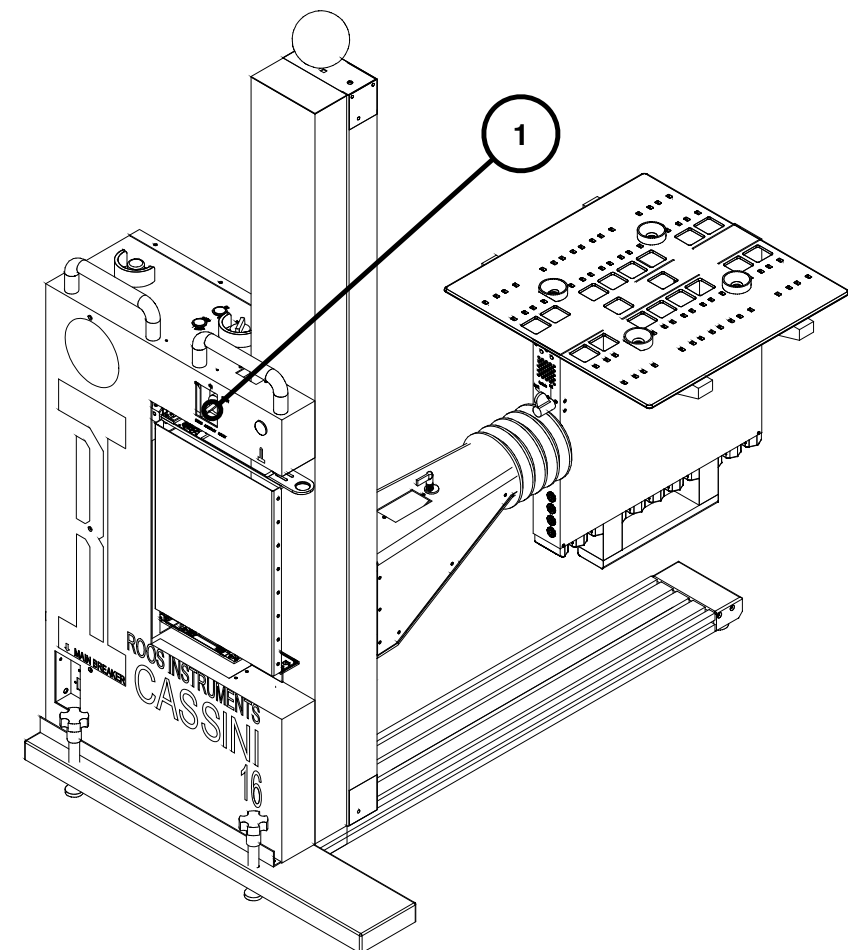

8. A shutdown screen animation (blink screen) followed by an audible series of beeps will prompt the user when it is safe to turn off the controller power.
9. After the screen animation has completed, the screen is blank, and the audible beeps begin, the user has 3-5 seconds to power off the controller before the test system initializes an auto start sequence.

NOTE: If the auto start sequence has begun, let the system complete the restart before attempting to shut down.

10. Power off the controller by turning the 'Main System' knob found on the controller side of the chassis (as shown in [Figure 1.8](#)) from the 'ON' position to the 'OFF' position.
11. Before performing service or maintenance to the system test head, switch the test head breakers (located next to the pneumatic hose hookup) to the 'OFF' position.
12. Before performing service to equipment in the auxiliary rack, switch the auxiliary rack breakers (located at the top interior of the rack) to the 'OFF' position.
13. Before performing service or maintenance to the infrastructure or AC/DC power supplies, switch the main breaker (located near the pneumatic hose hookup on the controller side of the tester) to the 'OFF' position.


LARGE CASSINI

1. Read all steps and instructions before attempting to power down the test system.
2. Save edits and data from user programs in progress (if desired).
3. Close all test programs and other user programs.
4. If a shortcut is active, close the system shortcut by selecting the **System > Quit...** menu options from the main system window or RMB click the main system window 'x' button at the top right corner.
5. The test system will prompt the user to confirm the shortcut closure.
6. If a user is logged into the test system, log off by selecting the **System > Logoff** options from the sidebar buttons.
7. Shutdown the operating system by selecting the OS shutdown shortcut or selecting the 'Shutdown...' option from the eCS Start menu located at the bottom of the screen.
8. The operating system will prompt the user to confirm the shutdown.
9. A shutdown screen animation (blink screen) will prompt the user when it is safe to deactivate power.

10. After the screen animation has completed and the screen is blank, the user has 3-5 seconds to power off the controller before the test system initializes an auto start sequence.

NOTE: If the auto start sequence has begun, let the system complete the restart before attempting to shut down.

FIGURE 1.9 LARGE CASSINI OFF/ON/START SWITCH

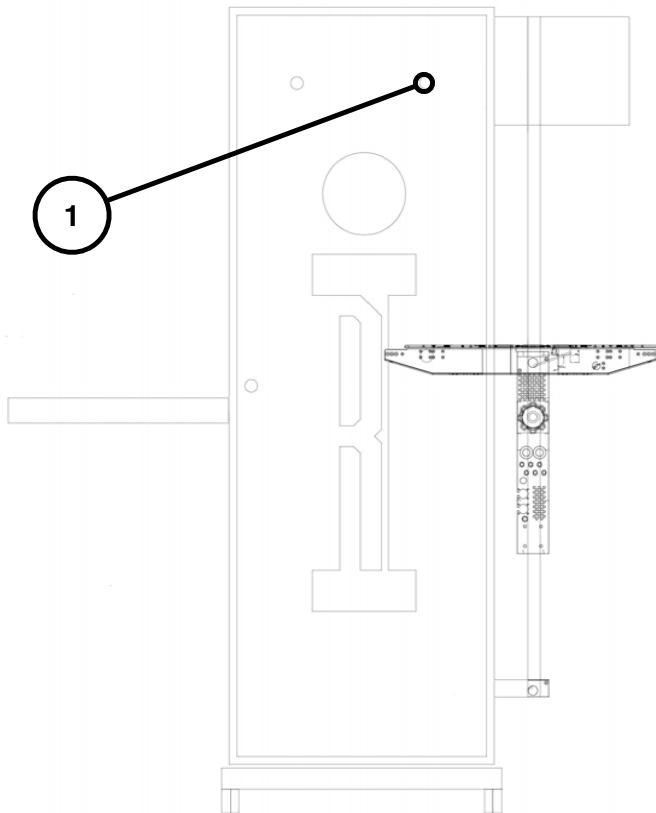

11. Power down the controller by turning the 'OFF/ON/START' knob found on the front side of the system rack adjacent to the EMO switch (as shown in [Figure 1.9](#)) from the 'ON' position to the 'OFF' position.
12. Before performing service or maintenance to the system, switch the 48V breakers (located at the bottom interior of the system rack) to the 'OFF' position.

SMALL CASSINI

1. Read all steps and instructions before attempting to power down the test system.
2. Save edits and data from user programs in progress (if desired).
3. Close all test programs and other user programs.
4. If a shortcut is active, close the system shortcut by selecting the **System > Quit...** menu options from the main system window or RMB click the main system window 'x' button at the top right corner.
5. The test system will prompt the user to confirm the shortcut closure.
6. If a user is logged into the test system, log off by selecting the **System > Logoff** options from the sidebar buttons.
7. Shutdown the operating system by selecting the OS shutdown shortcut or selecting the 'Shutdown...' option from the eCS Start menu located at the bottom of the screen. The operating system may prompt the user to confirm the shutdown.
8. A shutdown screen animation (blink screen) will prompt the user when it is safe to deactivate power.
9. After the screen animation has completed and the screen is blank, the user has 3-5 seconds to power off the controller before the test system initializes an auto start sequence.

NOTE: If the auto start sequence has begun, let the system complete the restart before attempting to shut down.

10. Power down the controller by turning the 'OFF/ON/START' knob found on the front-right side of the system rack (as shown in [Figure 1.7](#)) from the 'ON' position to the 'OFF' position.
11. Before performing service or maintenance to the system, switch the test head and main breakers (located on the front-right side of the system rack beneath the OFF/ON/START switch) to the 'OFF' position.

OPERATOR INFORMATION

This section provides operator procedure flowcharts, useful tips, and links to recommended guidelines and practices for operators on the Cassini test system. Included are links to the power up and shut down procedures, manipulator operation that is included with further detail in the Infrastructure section.

Below are hyperlinks to the associated procedures and guidelines:

- [Safety Information](#)
- [Emergency Off Switch and Shut Down Procedure](#)
- [Normal Start Up Procedure](#)
- [Docking to Handler or Prober](#)
- [Docking a Fixture or Diagnostic Plate](#)
- [Normal Shut Down Procedure](#)
- [Electrostatic Discharge \(ESD\) Practices](#)
- [RF Connector Care](#)

SITE PREPARATION FOR CASSINI SYSTEMS

Cassini ATE systems can operate in a wide range of environmental conditions. Depending on the system configuration, some specifications may not apply or have individual requirements. No special plumbing, ventilation, or electrical outlets are required. Items designated with **NOT PROVIDED** are not supplied by Roos Instruments. The spatial dimensions and shipping weight of the various Cassini ATE systems and associated equipment is provided in the following section for site preparation compliance. Mechanical diagrams of the infrastructure footprints are available in the Appendix for reference. All values are subject to change without notice.

RI8568B "CASSINI 16" INFRASTRUCTURE

DIMENSIONS:

- Max Height: 1,847 mm (73.1 in)
- Depth: 1,208 mm (47.6 in)
- Width: 844 mm (33.2 in)

WEIGHT:

- Max Shipping Weight: 250 Kg (550 lbs.)

ENVIRONMENT SPECIFICATIONS:

- Operating Air Temperature: 10°C to 35°C (50°F to 95°F)
For best calibration performance, a consistent ambient room temperature of ± 5°C is recommended.
- Humidity: 8% to 80%
- Electrical Specifications:
 - 120/220 AC (50 or 60 Hz) Single Phase
 - Plug type: NEMA 20

- Power Requirements (kVA=KiloVolt-Amperes)
 - Minimum: 0.15 kVA
 - Maximum: 0.75 kVA
 - Aux Rack Maximum: 1.2 kVA (300 VA per Source)
- System Controller requires a standard CAT-5 RJ45 ethernet network cable to integrate with a Guru Server.

ELECTRICAL GROUND:

It is essential to maintain a consistent electrical ground between the handler and the Cassini test system infrastructure and auxiliary rack. This prevents Device Under Test (DUT), test system, and or handler interface damage.

- The green ground wire should be connected between the infrastructure (and auxiliary rack if necessary) and the handler’s ground. This should be inspected each time a handler is connected to the test system by the operator.
- Measure both AC voltage (must be less than 50 millivolts) and ground resistance (which should be less than 5 Ohms) between the tester ground and the handler ground.

NOTE: Measuring negative resistance is a sign that DC or AC voltage is present. Any of these conditions would indicate failure to ground and should be corrected before testing parts.

PNEUMATIC/COMPRESSED AIR SPECIFICATIONS:

- Input Pressure Range: 65-120 PSI (regulated to 90 psi)
- System Connector Type: Quick-Disconnect US Industrial/Milton MIL-C-4109 Male (preferred), shown in [Figure 1.10](#)
- Adapters support alternative compressed air hose systems. These adapters are included with system:
- OPTION 1: Thread NPT 0.25 in Female Adapter onto air hose at facility and attach to quick disconnect on tester.
- OPTION 2: If the hose is 8 mm or 0.3125 in, use the barbed hose adapter with 0.25 in NPT male thread, shown in [Figure 1.13](#). Thread onto NPT 0.25 in Female Adapter shown in [Figure 1.11](#). Clamp the air hose to the adapter as shown in [Figure 1.12](#)

FIXTURE:

- Height: 195.6 mm (7.7 in) - includes clearance for alignment pins
- Depth: 266.7 mm (10.5 in)
- Width - 16 slot test head: 558.8 mm (22 in)

NOTE: Always consider the fixture height when determining the minimum clearance of the test head when working with a handler or prober.

HANDLER/PROBER:

- Docking and adapter plates are available based on Handler/Prober Type.
- A single GPIB/Parallel/Handler Pod is required for every handler/prober interface with a Cassini test system. Pods require factory configuration and programming. Handler/prober control logic documentation must be sent to support@roos.com at least one month prior to system installation date.
- Handler Pod Interfaces: Parallel 25 Pin Female D-Sub, Serial Female RS232, or GBIP cable. NOT PROVIDED

WORKSTATION:

- An auxiliary rack is required for monitor, keyboard and mouse workspaces. NOT PROVIDED
- Workspace must be located adjacent to the system within network cable reach of the System Controller
- The System Controller and Touch UI (RI8583A) option uses the power supply from the tester. Depending on the monitor type, it may use the AUX rack power supply or need an additional outlet.

FIGURE 1.10 QUICK DISCONNECT MIL-C-4109
MALE



This quick connect/disconnect adapter is pre-attached to the Cassini 16 system at the factory.

FIGURE 1.11 NPT 0.25 IN FEMALE ADAPTER



FIGURE 1.12 CORRECTLY INSTALLED NPT 0.25 IN FEMALE ADAPTER



The female adapter shown above attached to an input air hose supply compressed air.

FIGURE 1.13 NPT 0.25" MALE THREAD BARBED HOSE ADAPTER AND CLAMP



RI8557A "LARGE CASSINI" INFRASTRUCTURE:

DIMENSIONS:

- Height: 1700 mm (66.9 in)
- Depth: 900 mm (35.4 in)
- Width: 600 mm (23.6 in)

WEIGHT:

- Maximum Shipping Weight: 300 Kg (660 lbs)

ENVIRONMENT SPECIFICATIONS:

- Operating Air Temperature: 10°C to 35°C (50°F to 95°F)
For best calibration performance, a consistent ambient room temperature of ± 5°C is recommended.
- Humidity: 8% to 80%
- Electrical Specifications:
 - 115V AC ±10% (or 230V ±10% with option 30A)
 - System controller and monitor each require a separate 120V AC power supply outlets.

- Large Cassini Input kilovolt-amperes (kVA) approximately:
 - Minimum: 0.15 kVA
 - Maximum: 1.5 kVA
- System Controller requires a standard CAT-5 RJ45 ethernet network cable to integrate with a Guru Server.

ELECTRICAL GROUND:

It is essential to maintain a consistent electrical ground between the handler and the Cassini test system infrastructure and auxiliary rack. This prevents Device Under Test (DUT), test system, and or handler interface damage.

- The green ground wire should be connected between the infrastructure (and auxiliary rack if necessary) and the handler's ground. This should be inspected each time a handler is connected to the test system by the operator.
- Measure both AC voltage (must be less than 50 milliVolts) and ground resistance (which should be less than 5 Ohms) between the tester ground and the handler ground.

NOTE: Measuring negative resistance is a sign that DC or AC voltage is present. Any of these conditions would indicate failure to ground and should be corrected prior to testing parts.

FIXTURE:

- Height: 195.6 mm (7.7 in) - includes clearance for alignment pins
- Depth: 266.7 mm (10.5 in)
- Width - 8 slot test head: 266.7 mm (10.5 in)

NOTE: Always consider the fixture height when determining the minimum clearance of the test head when working with a handler or prober.

HANDLER/PROBER:

- Docking options based on Handler/Prober Type.
- Only one (1) Handler Pod per handler/prober per system.
Requires factory RI configuration and programming.
Use Serial, Parallel or GPIB standard cable and communication interfaces. Provide detailed handler control logic documentation to support@roos.com prior to ship date.
- Handler Pod Interface Cable: Parallel 25 Pin Female D-Sub, Serial Female RS232, or GBIP cable. NOT PROVIDED

WORKSTATION:

- A workspace cart is needed to hold monitor, keyboard, and mouse. NOT PROVIDED
- Workspace must be located adjacent to the test system within network cable reach of the System Controller.
- System Controller requires a standard CAT-5 RJ45 ethernet network cable to integrate with a Guru Server.

RI8556A "SMALL CASSINI" INFRASTRUCTURE:

DIMENSIONS:

- Height: 1,590 mm (62.6 in)
- Depth: 733 mm (28.9 in)
- Width: 853 mm (33.6 in)

WEIGHT:

- Maximum Shipping Weight: 250 Kg (550 lbs)

ENVIRONMENT SPECIFICATIONS:

- Operating Air Temperature: 10°C to 35°C (50°F to 95°F)
For best calibration performance, a consistent ambient room temperature of ± 5°C is recommended.
- Humidity: 8% to 80%
- Electrical Specifications:
 - 120/220 AC (50 or 60 Hz) Single Phase
 - Plug type: NEMA 20

- Power Requirements (kVA=KiloVolt-Amperes)
 - Minimum: 0.15 kVA
 - Maximum: 0.75 kVA
- System Controller requires a standard CAT-5 RJ45 ethernet network cable to integrate with a Guru Server.

ELECTRICAL GROUND:

It is essential to maintain a consistent electrical ground between the handler and the Cassini test system infrastructure and auxiliary rack. This prevents Device Under Test (DUT), test system, and or handler interface damage.

- The green ground wire should be connected between the infrastructure (and auxiliary rack if necessary) and the handler's ground. This should be inspected each time a handler is connected to the test system by the operator.
- Measure both AC voltage (must be less than 50 milliVolts) and ground resistance (which should be less than 5 Ohms) between the tester ground and the handler ground.

NOTE: Measuring negative resistance is a sign that DC or AC voltage is present. Any of these conditions would indicate failure to ground and should be corrected prior to testing parts.

FIXTURE:

- Height: 195.6 mm (7.7 in) - includes clearance for alignment pins
- Depth: 266.7 mm (10.5 in)
- Width - 8 slot test head: 266.7 mm (10.5 in)

NOTE: Always consider the fixture height when determining the minimum clearance of the test head when working with a handler or prober.

- Handler/Prober:
 - Docking and adapter plates are available based on Handler/Prober Type.
 - A GPIB/Parallel/Handler pod is required for every handler/prober interface with a Cassini test system. Pods require factory configuration and programming. Handler/prober control logic documentation must be sent to support@roos.com at least one month prior to system installation date.
 - Handler Pod Interfaces: Parallel 25 Pin Female D-Sub, Serial Female RS232, or GBIP cable. NOT PROVIDED

WORKSTATION:

- The workstation is integrated into the Small Cassini infrastructure.
- The System Controller and Touch UI (RI8583A) option uses the power supply from the tester.

SHIPPING AND UNPACKING A CASSINI SYSTEM

Cassini test systems should always be packaged and shipped using the Roos Instrument's provided shipping crates. DO NOT discard shipping crates. They are designed specifically for the test system with adequate sizing, anti-static material, and conformal padding to protect the test systems during transport. If this crate and shipping material are not available, contact Roos Instruments for further instructions.

NOTE: Always store test systems and shipping crates in an ESD safe, temperature controlled environment at all times.

Damage to test systems, TIMs, instruments, and/or equipment during shipping is the responsibility of the shipping party. Roos Instruments assumes liability for damage of equipment shipped from the factory. Roos Instruments is not liability for shipping damage of equipment shipped to Roos Instruments for service, repair, or otherwise.

SERVICE INFORMATION

If a test system is being returned to Roos Instruments for service, please provide enough information to help expedite repair and return of the product. For best service results, include as much information as possible: symptoms, date of failure, the status of the instrument, etc.

Items for return must include a Return Merchandise Authorization (RMA) number. To obtain an RMA number, please email support@roos.com or contact Roos Instruments at 1.408.748.8589 between the hours of 9:00 a.m. to 6:00 p.m. (U.S. Pacific Standard Time)

An RMA must be requested within 15 calendar days of the invoice date (ship date for credit card orders). NO returns of any type will be accepted without an RMA number and ALL returns must be shipped prepaid and insured via any common carrier (i.e. UPS, FedEx).

NOTE: Tracking information is required.

UNPACKING CASSINI TEST SYSTEMS

Always unpack a Cassini test system on a clean, flat surface in an ESD-safe, temperature controlled environment.

Before unpacking a Cassini test system, inspect the exterior of the crate. Shipping crates may include anti-tampering metal straps around the exterior of the crate. Insure shipping documentation is attached to the exterior of the crate, and that the crate has been delivered and stored according to the orientation arrows. Inspect the exterior of the crate for signs of improper handling, storage, shipping damage, tampering, or otherwise. If any signs of visible damage, suspected mishandling or evidence of possible tampering is present, contact Roos Instruments before opening and unpacking the crate.

TO REMOVE A CASSINI ATE SYSTEM FROM THE SHIPPING CRATE:

1. Insure the crate is oriented in accordance with the shipping arrows and directions on the exterior.
2. Remove and retain the shipping documentation affixed to the exterior of the crate for manifest reference and record keeping.
3. (If applicable) Remove the anti-tampering metal shipping straps from the exterior with an appropriate metal shearing tool.
4. Unlock the six tension latches located along the sides of the crate's fold down door/ramp.


5. Carefully open the fold-down crate door/ramp to access the interior.
6. Inspect the interior of the shipping crate for signs of shipping damage or improper storage during transport. Contact Roos Instruments if visible damage or moisture is present in the interior of the shipping crate.
7. The test system shipping contains other shipping containers for test instrument modules or other equipment. Remove these boxes before removing the test system infrastructure and/or auxiliary racks.
8. Loosen the wing nuts that secure the wooden cross brace in place and remove the brace as shown in [Figure 1.15](#).
9. Remove the dust cover bag.
10. Remove the test head support foam block located on the rear, right side of the ATE System.
11. Loosen the test system's stabilizer feet as shown in [Figure 1.16](#) by turning the adjustment knobs in a counter clockwise direction until they are as far above the floor as they can be adjusted. This will allow the system to roll freely on the system casters.
12. Pull the Cassini ATE System out of the crate using the two large handles located along the top of the infrastructure chassis.
13. The system should roll easily down the ramp created by the open crate door.

UNPACKING OPTIONAL SHORT AUXILIARY RACK

Once the test system is removed from the crate, the auxiliary rack can be removed.

1. Begin by removing the two foam blocks at the bottom of the rack as shown in [Figure 1.17](#).
2. Loosen the auxiliary rack's stabilizer foot by turning the knob in a counterclockwise direction until the stabilizer is as far above the floor as possible.
3. Roll the auxiliary rack out of the crate by pulling on the extended shelf so that rack can move out of the crate door and down the ramp

FIGURE 1.14 UNPACKING CASSINI 16: EXTERIOR

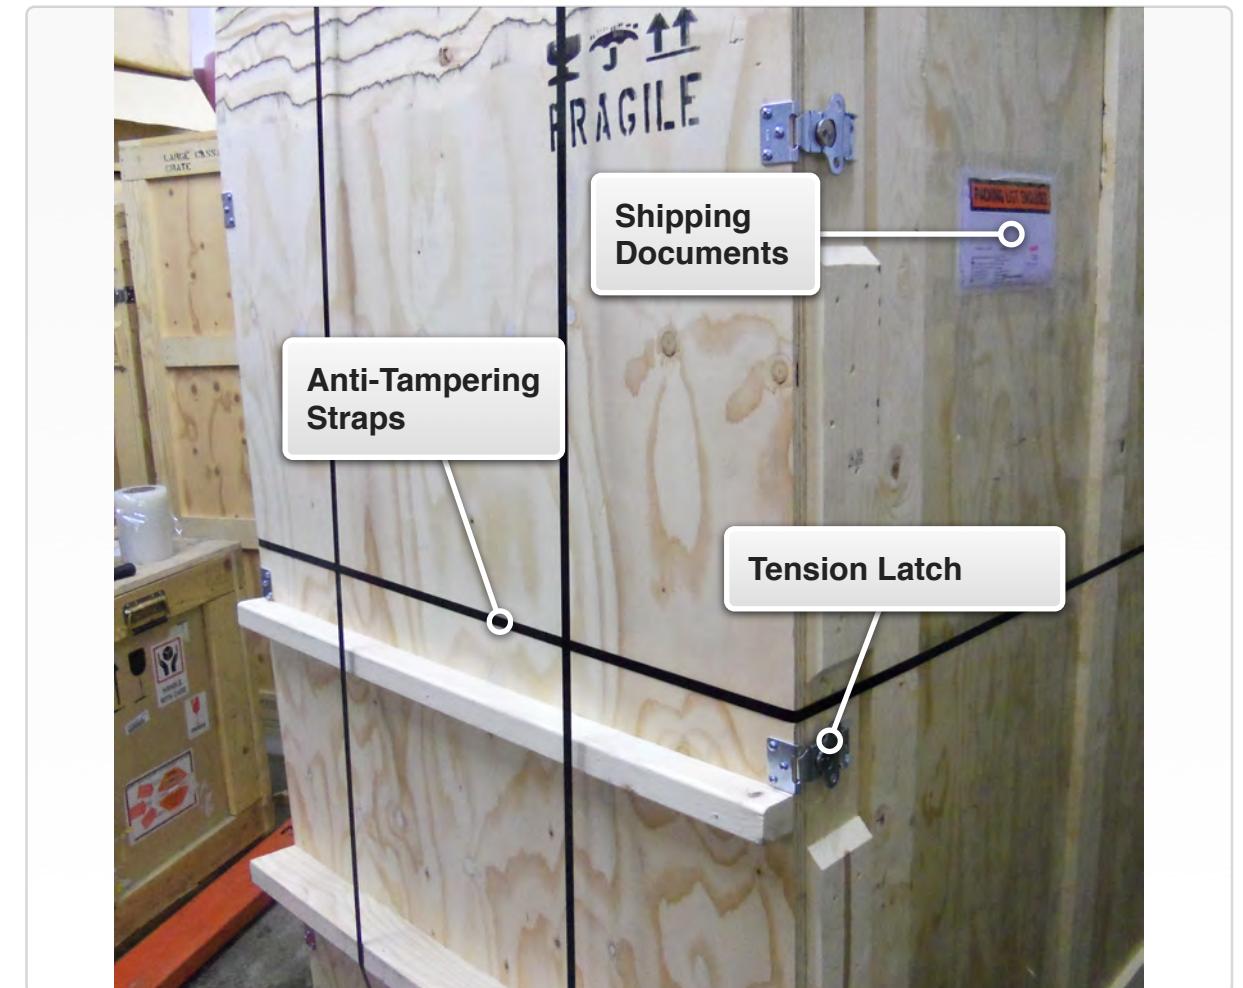

The image above shows the test system shipping crate oriented correctly with the door/ramp facing forward.

FIGURE 1.15 UNPACKING CASSINI 16: INTERIOR 1

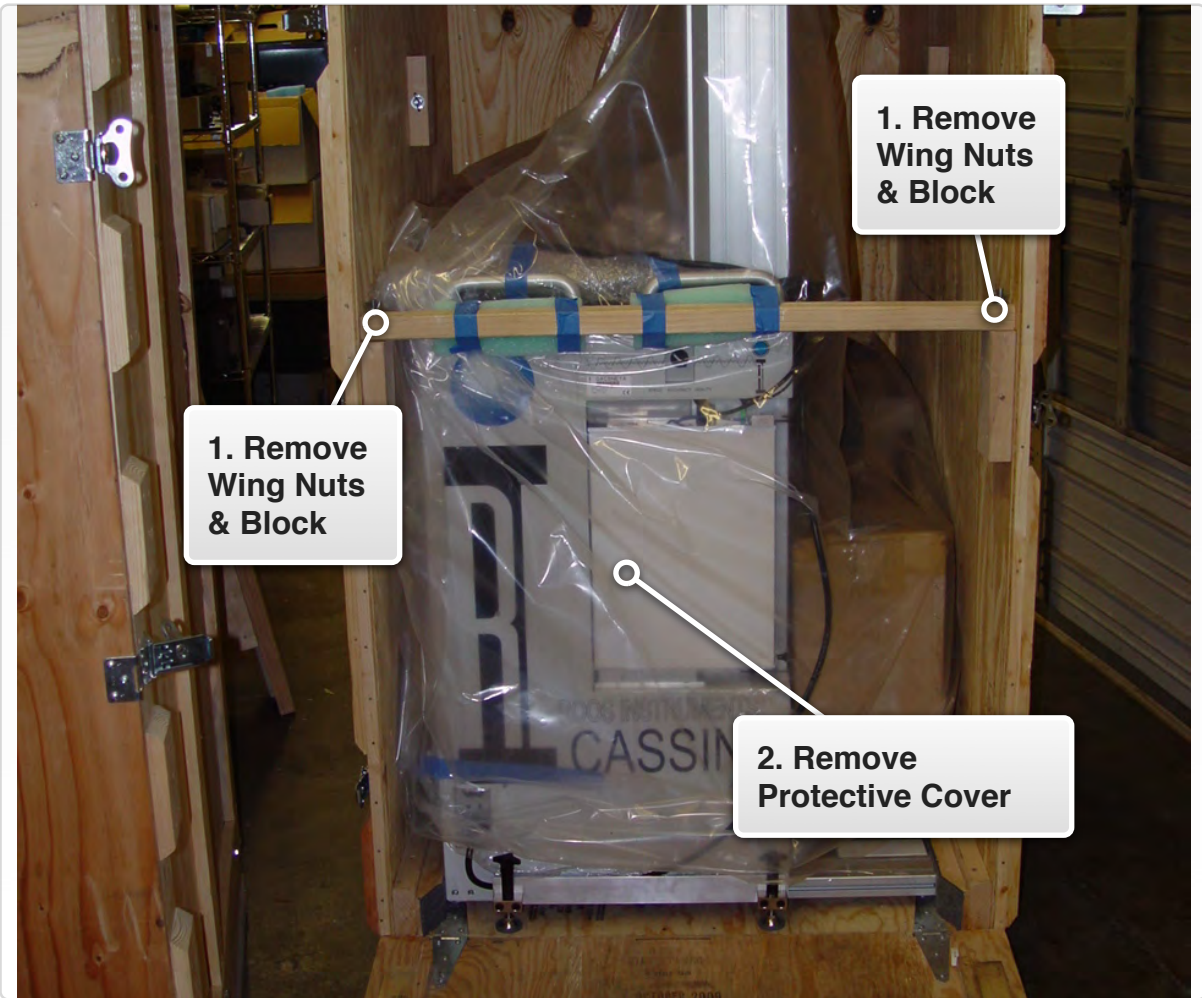


FIGURE 1.16 UNPACKING CASSINI 16: INTERIOR 2


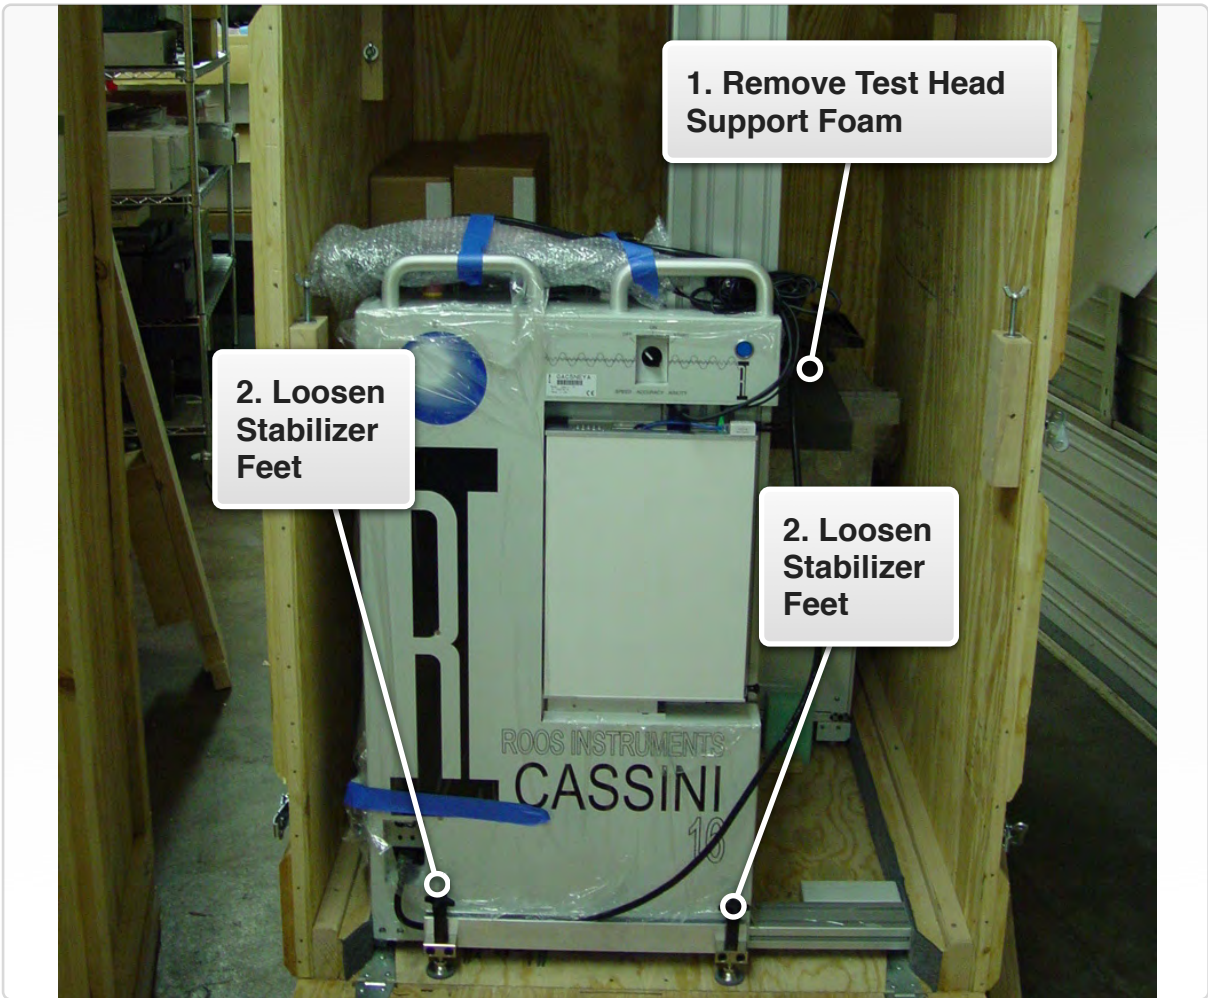


FIGURE 1.17 UNPACKING CASSINI 16: REMOVING AUXILIARY RACK

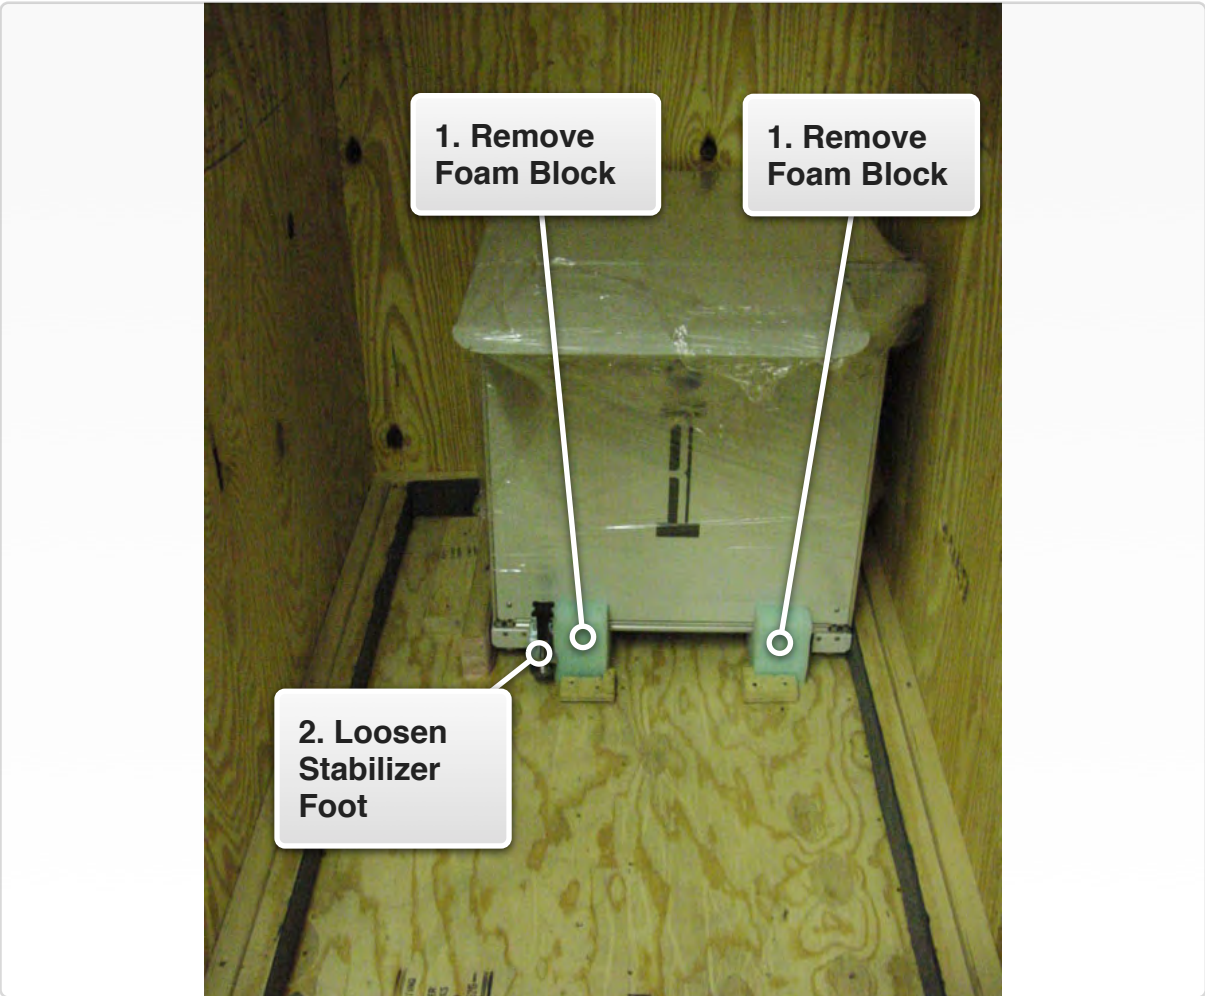

INSTALLATION

This section provides step-by-step procedures for installing a new or re-located Cassini test system. Reference the [Site Preparation for Cassini Test Systems](#) section in the System Information chapter for test floor compliance of environmental, electrical, and equipment requirements. If the system is a new, factory provided Cassini system, adhere to the unpacking guidelines outlined in the [Shipping and Unpacking a Cassini Test System](#) section in the System Information chapter. Users should always adhere to the safety guidelines provided in the [Operator and Safety Information](#) section in the System Information chapter.

WARNING: Before installing and powering up a Cassini test system, inspect the surfaces, connectors, and mechanical components of the chassis, TIMs, fixtures, and auxiliary equipment for damage. If there is any damage, do not attempt to power on the test system. Contact Roos Instruments support for recommended service, repair, and/or replacement of suspected equipment.

TO INSTALL A CASSINI 16 TEST SYSTEM:

Reference the [Cassini 16 Infrastructure Diagram](#) for component names and locations.

1. Before connecting AC power to the infrastructure, verify that both the main breaker switch and secondary breaker switches are in the OFF position.
2. Verify that the Fixture Docking Switch is in the UNLATCH position.

NOTE: A fixture or calibration/diagnostic plate should not be docked to the test head while installing ore removing TIMs.

3. Insure the manipulator locking pin is in the 'Maintenance Lock' position and the test head is fixed in place. This prevents the test head from moving horizontally during set up.

NOTE: The manipulator lock should be in the 'Maintenance Position' when the tester is not attached to a handler/prober or when the system is not in use.

4. Inspect the test head RIFL contact pads located on the underside of the test head. To access the contact pads, unlock and rotate the test head 180 degrees so that hub PCBs are visible and facing upwards.

WARNING: If any damage to the test head RIFL PCB or contacts is visible, do not attach TIMs to the test head. Contact Roos Instruments support for service recommendations.

5. If counterweights are to be installed, lock the test head rotation lock and install the counterweights in accordance with the included counterweight installation instructions.
6. Rotate the test head to the upright position and lock the rotation pin.
7. If the System Controller is not already installed in the infrastructure, insert the System Controller TIM. Reference the [System Controller Installation](#) instructions.
8. If the system is equipped with an auxiliary rack and auxiliary test equipment, position and lock the rack to the infrastructure chassis using the docking guides and pull lock. Reference the auxiliary rack position configurations shown in the Appendix for the [RI8568 Cassini 16 infrastructure](#). Plug in the AC line cord from the auxiliary rack's AC power distribution input.
9. Install TIMs into their appropriate slot locations. If the system is equipped with an auxiliary rack and auxiliary test equipment, also install the remote TIMs into their appropriate slot locations.

NOTE: Reference the provided Test Head Resources or Test Head Configuration diagram for the TIM locations on a Cassini test system.

10. Plug in the AC line cord to the infrastructure main AC input.
11. Connect the compressed air source to the test systems air input port located on the chassis adjacent to the secondary breakers. Reference the [Cassini Site Preparation](#) section for the specifications and setup of the pneumatic air system.
12. Check that the Emergency Off (EMO) switch is not engaged. Reference the EMO switch information in the [Operator & Safety Information](#) section.
13. Verify that the System Controller's ethernet port, located adjacent to the latch, is connected to a minimum standard ethernet CAT-5e RJ45 network cable connected to 10/100/1000BASE-T (Gigabit Ethernet) network switch or hub to connect the test system with a Guru Server and/or other network resources.
14. The test system can now be powered-on following the instructions provided in the [System Startup Procedures](#).

To install or setup a Small Cassini or Large Cassini test system, contact Roos Instruments at support@roos.com for instructions and procedures.

INFRASTRUCTURE



TOPICS

[Introduction](#)

[Chassis](#)

[Test Head & Hubs](#)

[Fixture Docking System](#)

[Fixture Resources](#)

[System Controller](#)

[Installation](#)

[Start Up Procedure](#)

[Shut Down Procedure](#)

INTRODUCTION

The Cassini test system infrastructure is designed to deliver a low-cost, high-throughput ATE solution platforms to support mixed signal, RF and microwave ICs. The three main elements to the Cassini architecture are:

- RF-based architecture designed for high accuracy, precisions, and test performance
- Modular test head that supports a high-speed data bus and precision power bus
- Small footprint, energy-efficient, system infrastructure and instruments

Cassini provides a completely configurable, modular architecture, making every part of the test system configurable. The test system design has partitioned all the measurement hardware into swappable instruments that can be inserted into universal slots on the test head to build a targeted production test solution. The modular test head design fuses a flexible microwave instrument architecture with 25 years of test system integration to deliver seamless multifunctional and multi-instrument test performance. With this versatile framework, the system can be adapted and scaled efficiently across a frequency range of DC to over 100 GHz. Instrument modularity is enabled by the Roos Instruments Fast Link(RIFL) instrument data and communication bus. It is the first open-standard bus designed specifically for production test. First introduced as a high-speed optical fiber bus,

RIFL was expanded to include precision 48V instrument power, transitioning from fiber to shielded copper. The bus is designed to support distributed compute packets across Cassini's instruments. The reduced data payloads boost overall system performance and by decoupling operation execution from the bus speed, Cassini can achieve much faster test times.

The following text provides a basic overview of the various Cassini ATE infrastructures and components.

CHASSIS


CASSINI 16

The following numbered components reference [Figure 1.18](#).

1. **Controller Power Indicator** - blue indicator light that signifies the AC/DC switching power supply/system controller power status.
2. **OFF/ON/START Switch** - rotary switch used to power on or power off the test system controller.
3. **System Controller** - embedded user interface, multi-instrument control, and graphical test programming environment for the Cassini ATE system. Supplies the RIFL (Roos Instruments Fast Link) communication bus as well as distributing 48V instrument power and a shared 10 MHz reference clock across the instrument test head.
4. **Main Breaker** - primary test system circuit breaker that interrupts the power to the AC/DC power supply in the test system in the event of an excess current fault condition. The switch can be manually operated to de-energize the test system power.
5. **Infrastructure Stabilizer** - provides test system stabilization and leveling of the test system with the floor.

6. **Infrastructure Stabilizer** - provides test system stabilization and leveling of the test system with the floor.
7. **Test Head Counterweight** - Optional test head counterweight attachment to compensate for test instrument module loading.
8. **RIFL Hub Ports (H-Ports)** - Four RIFL (Roos Instruments Fast Link) communication ports, typically used to connect auxiliary or peripheral test equipment to the test head communication hub.

FIGURE 1.18 CASSINI 16 REAR VIEW

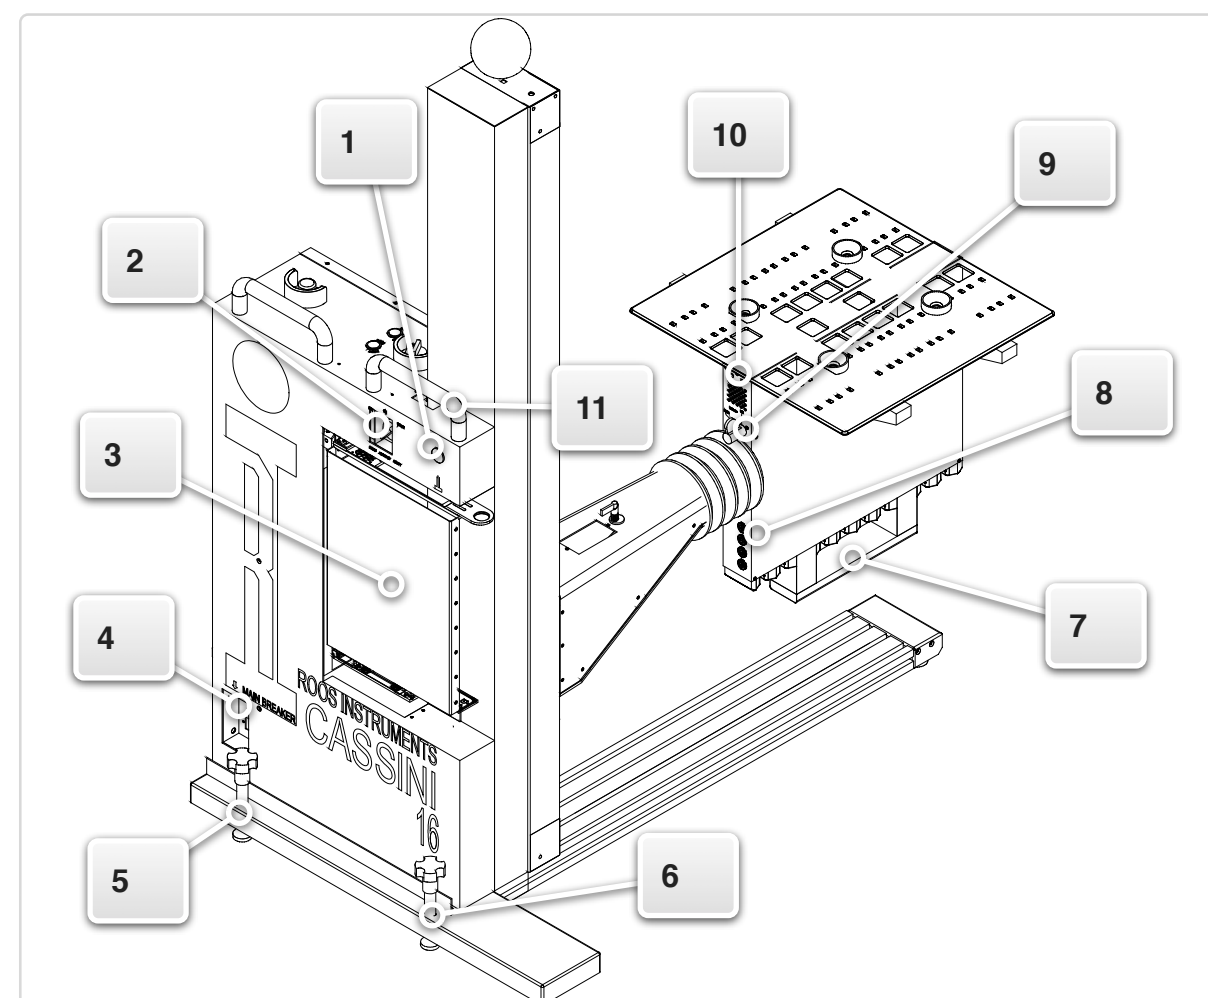


9. **Test Head Rotation Lock** - Rotational knob that locks and unlocks the test head rotation.
10. **Fixture Docking Indicators** - Two multi-color LEDs (ALIGN/DOCK) that indicate the docking status of fixtures or diagnostic/calibration plates.
11. **Serial Number** - Infrastructure identification and Guru ID.

The following numbered components reference [Figure 1.19](#).

1. **Fixture Docking Switch** - rotary switch for controlling the pneumatic fixture docking system. The 'Latch' setting locks a fixture to the test head. The 'Unlatch' setting unlocks a fixture from the test head.
2. **Test Head Elevation Control** - two push button switches 'UP/DOWN' for raising and lowering the test head and manipulator arm.
3. **Emergency Off (EMO) Button** - emergency off button for the test system.
4. **AC/DC Power Supply Access Panel** - access panel to the infrastructure AC to DC switching power supply.
5. **Compressed Air Intake** - compressed air input for the pneumatic fixture docking system.

6. **Secondary Breakers** - multiple circuit breakers that interrupt power to the test head power supply in the test system in the event of an excess current fault condition. The switch can be manually operated to de-energize the test head and infrastructure power.

FIGURE 1.19 CASSINI 16 FRONT VIEW

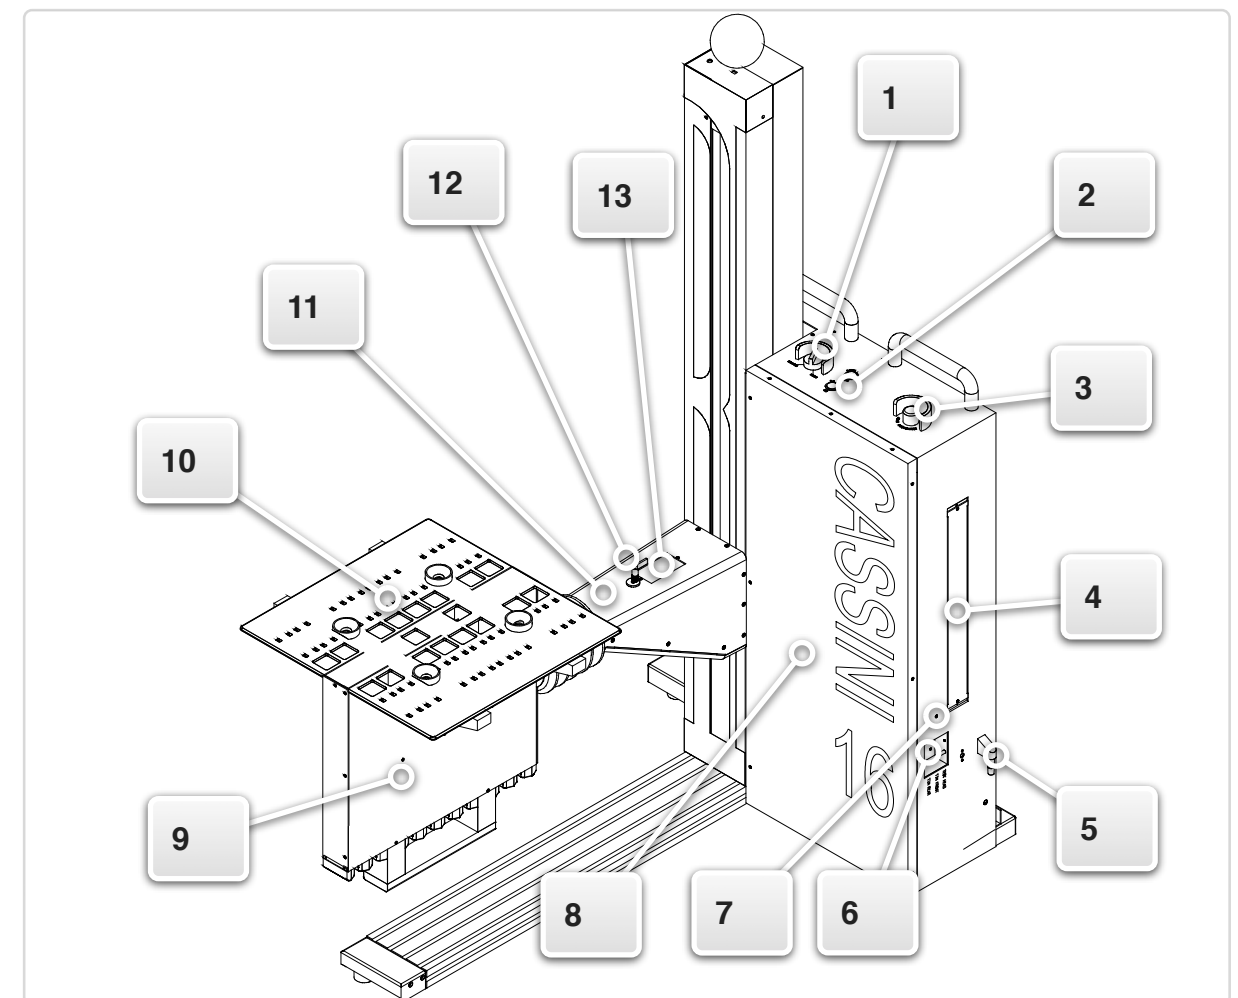


7. **Green Handler/Prober Grounding Cable with Alligator Clip** - attach this green ground cable directly to the Handler/Prober's ground. Optionally, connect AUX Rack Ground to this location.
8. **Infrastructure Access Panel** - aluminum panel can be removed to provide access to the infrastructure AC/DC power supply and supporting circuitry.
9. **Test Head Access Panel** - aluminum panel that can be removed to provide access to the test head RIFL hub and supporting circuitry.
10. **Test Head (T-Slots)** - Anodized aluminum plate with 16 universal Test Instrument Module slots and fixture (FIX) interface.
11. **Manipulator Arm** - armature with 6 degrees of freedom for positioning and supporting the test head.
12. **Manipulator Lock** - Locking pin for fixing the manipulator arm into the 'Maintenance Position' during service or repair and allowing planar movement of the test head in the 'Docking Position.' Pulling the locking pin upwards and rotating the head 180 degrees, unlocks the manipulator arm for fine planar positioning of the test head. To lock the manipulator arm in the maintenance position, rotate the locking pin head until the pin recesses into the locking position. Using blue dot of the docking position indicator, move the test head into the 'Maintenance Position' until the locking pin engages with an audible click.
13. **Docking Position Indicator** - provides a blue dot indicator for position reference of the test head in either the locked 'Maintenance Position' or with planar movement freedom when in the 'Docking Position' setting.

SMALL CASSINI

The following numbered components reference [Figure 1.20](#).

1. **OFF/ON/START Switch** - rotary switch used to power on or power off the test system controller.
2. **Main Breaker** - primary test system circuit breaker that interrupts the power to the AC/DC power supply in the test system in the event of an excess current fault condition. The switch can be manually operated to de-energize the test system.
3. **Instrument Rack** - test system equipment rack for storing RI7725/7710 Sources, 7000 series instruments, and test controller.
4. **Cable Feed Port** - an opening in the workstation infrastructure for routing DC and RF cables to the test head within a flexible cable accordion boot.
5. **Test Head Access Panel** - aluminum panel that can be removed to provide access to the test head RIFL hub and supporting circuitry.
6. **Test Head** - Anodized aluminum plate with 8 universal test instrument module slots and fixture RIFL interface block.

FIGURE 1.20 CASSINI 8 FRONT VIEW

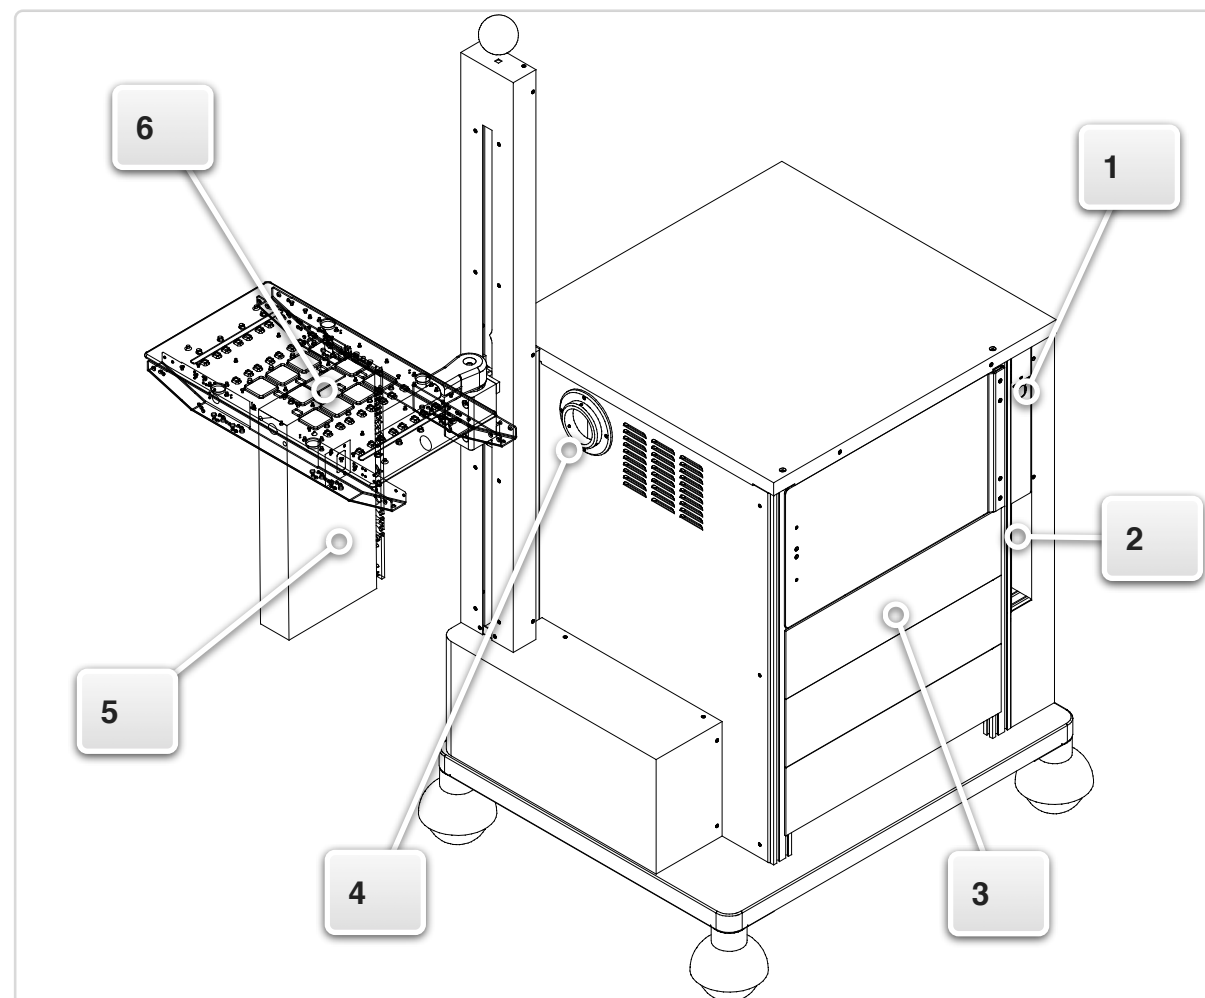


The following numbered components reference [Figure 1.21](#).

1. **Workstation** - integrated operator workstation for monitors, keyboard, etc.
2. **Fixture Docking Switch** - solenoid switch control for docking/undocking a fixture to the test head. Depressing the bottom allows the lock to be manually actuated for locking a fixture to the test head or unlocking a fixture for removal from the test head.

NOTE: Depressing the solenoid release switch for an extended period of time (> 5-10 seconds) results in excess current through the switch. To prevent damage, the button has a built-in, cool down mode before reuse. The button will flash indicating the solenoid release is temporarily disabled during this cool-off period.

3. **Test Head Rotation Lock** - the sliding handle on the manipulator arm locks or unlocks the test head rotation position.
4. **Test Head Elevation Control** - pull button knob that releases the test head elevation lock to manually raise or lower the test head and manipulator arm.
5. **Tool Balancer** - the lift-assist mechanism for raising and lowering the test head.

FIGURE 1.21 CASSINI 8 REAR VIEW

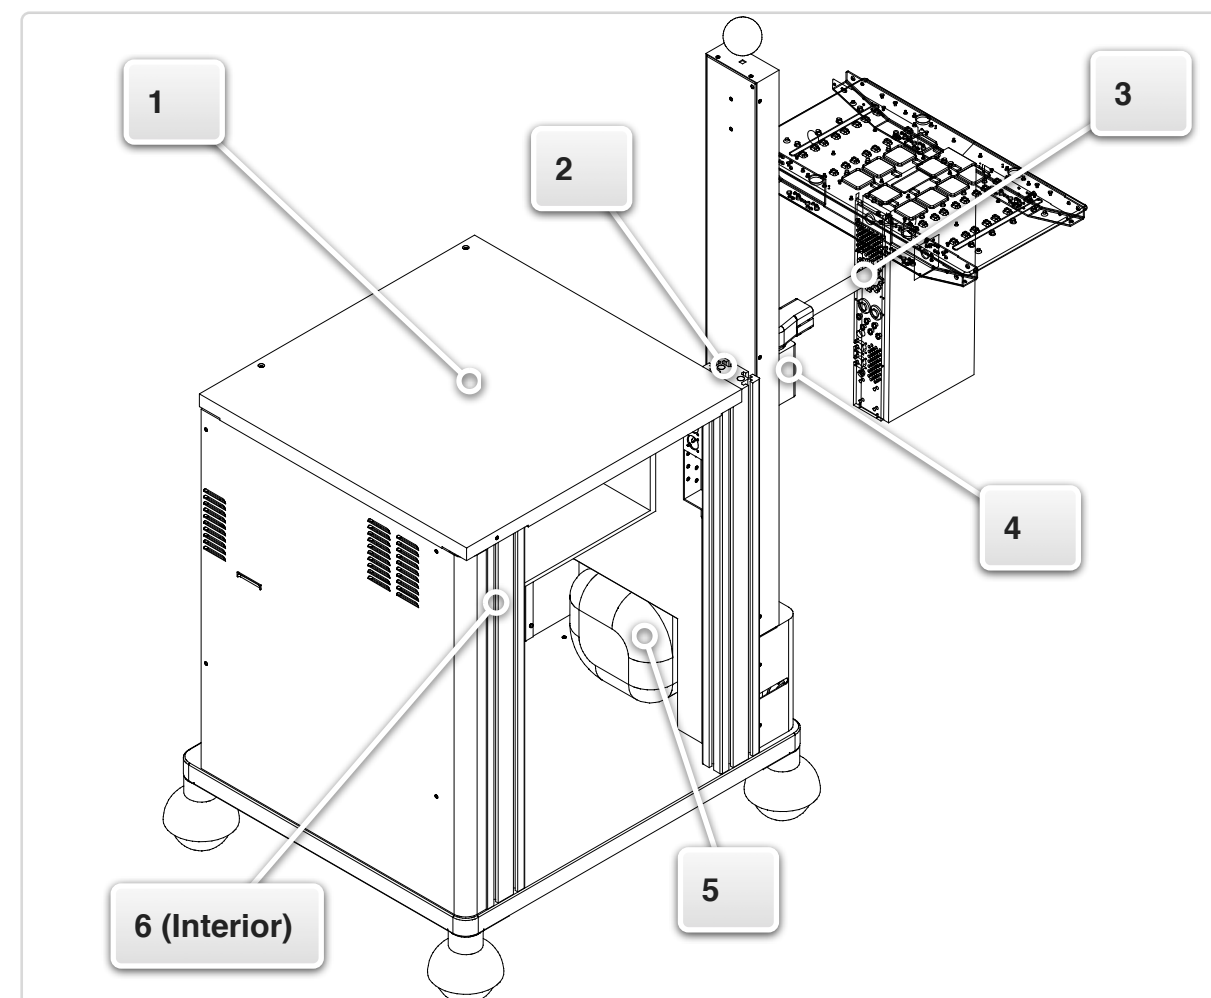

6. **48V Distribution Breakers** - circuit breakers that interrupt 48V power to the test head and controller in the test system in the event of an excess current fault condition. The switch can be manually operated to de-energize the test head and system controller.

LARGE CASSINI

The following numbered components reference [Figure 1.22](#).


1. **Tool Balancer** - the lift-assist mechanism for raising and lowering the test head.
2. **Test Head** - anodized aluminum plate with 8 universal test instrument module slots and fixture RIFL interface block.
3. **Fixture Docking Switch** - solenoid switch control for docking/undocking a fixture to the test head. Depressing the bottom allows the lock to be manually actuated for locking a fixture to the test head or unlocking a fixture for removal from the test head.

NOTE: Depressing the solenoid release switch for an extended period of time (> 5-10 seconds) results in excess current through the switch. To prevent damage, the button has a built-in cool down period before reuse. The button will flash indicating the solenoid release is temporarily disabled during this cool-off period.

4. **48V Distribution Breakers** - circuit breakers that interrupt 48V power to the test head and controller in the test system in the event of an excess current fault condition. The switch can be manually operated to de-energize the test head and system controller.
5. **Rack Access Lock** - rotational knob for accessing the instrument rack and equipment.

6. **Workstation Surface** - an optional workstation table for placing computer/controller monitor, keyboard, and/or mouse.
7. **OFF/ON/START Switch** - rotary switch used to power on or power off the test system controller.
8. **Emergency Off (EMO) Button** - emergency off button for the test system.

FIGURE 1.22 LARGE CASSINI (BIG CASSINI) FRONT VIEW

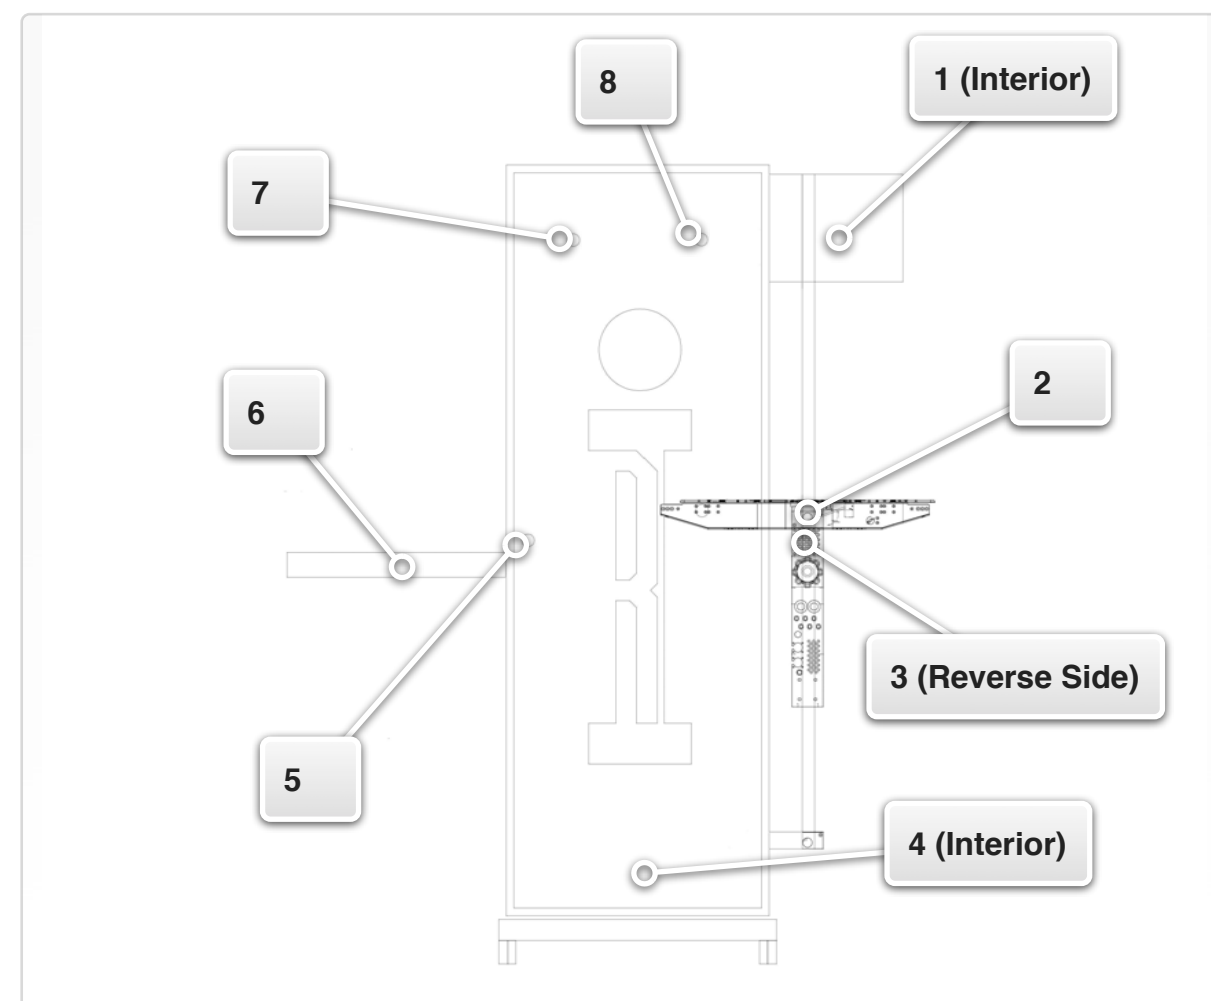

TEST HEAD

Cassini test systems include a manipulator arm and configurable test heads that are designed for Roos Instruments test instrument modules(TIMs). The test heads support eight (Cassini8 or Large Cassini) or 16 TIM slots to allow a completely configurable test head for different applications, test floors, sites, or customers. TIMs are designed with quick release latches and blind mate connectors that are designed to allow multiple features:

- System is easy add, remove, and configure test head resources
- Unified test head plane with easy access to TIM resources
- Simplified fixture docking and instrument resource interfacing
- 48V-supplied TIM power and RIFL data bus connections

The manipulator arm allows movement of the test head with compliance for various handler and prober setups. Small Cassini and Large Cassini models allow 2-axis of movement: vertical lift and 225 degrees of test head rotation. Cassini 16 allows for 6 axes of test head movement: vertical lift, 2-axis fine planar movement, 2-axis of gimbal movement, and 225 degrees of rotation (see [Figure 1.24](#)). All Cassini test systems contain a RIFL test head hub that connects TIMs to the RIFL hub. The RIFL hub of Small Cassini and Large Cassini have eight instrument nodes with 12 contact pads that connect the TIMs RIFL pogo pins to the controller bus as shown in [Figure 1.25](#) and [Figure 1.27](#). The Cassini 16 test system contains two, eight slot nodes as shown in [Figure 1.23](#) and [Figure 1.26](#). The 'Front Test Head'

hub provides RIFL connection for TIMs in slots 5 through 8 and 13 through 16. The 'Rear Test Head' hub provides RIFL connection for TIMs in slots 1 through 4 and 9 through 12.

FIXTURE POWER

DC power is provided for active devices inside the fixture. Additionally, open-collector drivers are provided for controlling switches inside the fixture.

FIXTURE DC POWER


Fixture Control Lines (cbits)

Open-collector lines, available for controlling switches or other devices inside the fixture.

- Quantity: 8
- Low Voltage (typical): 0.5V
- Maximum current, per line: 0.1A
- Maximum combined current, all 8 lines: 0.5A


NOTE: A smart fixture uses approximately 0.13 amps from the fixture +5V. If a smart fixture is used, the maximum available current from the fixture +5V is 1.37A.

FIGURE 1.23 CASSINI 16 TEST HEAD LAYOUT

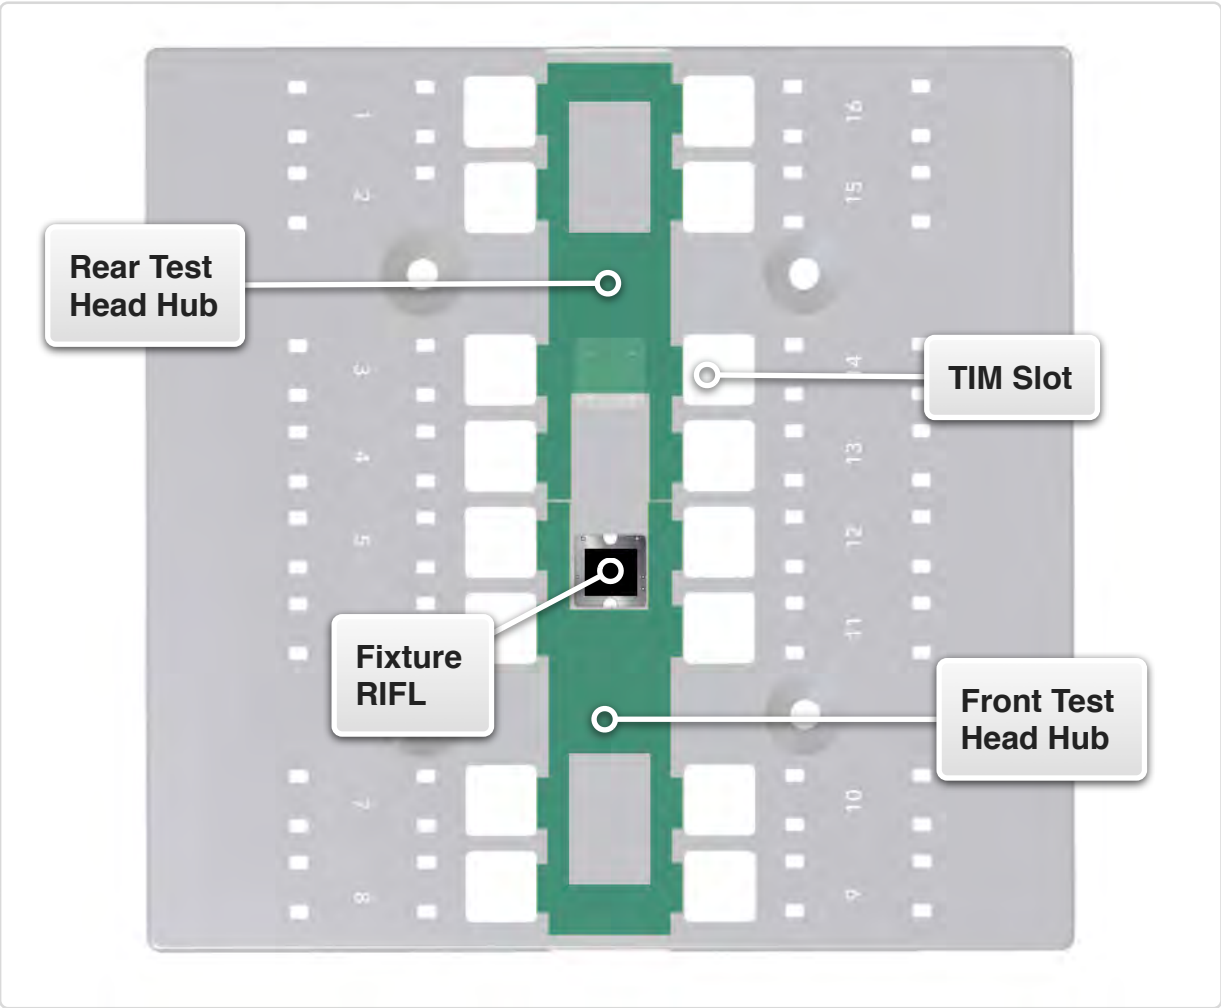


The illustration above shows a top-down view of the Cassini16 test head (shown transparent) with the locations of the Front and Rear test head RIFL hubs, and the fixture RIFL blind-mate interface.

FIGURE 1.24 CASSINI 16 TEST HEAD ARTICULATION

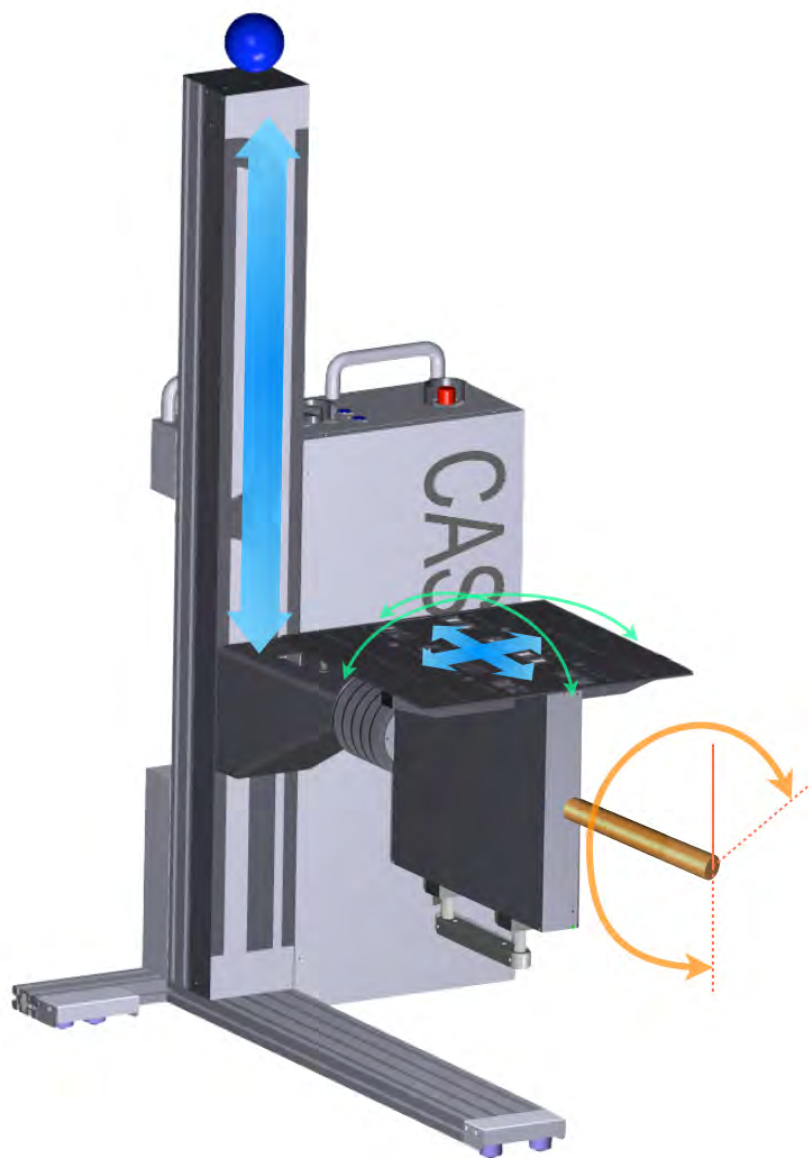


The manipulator arm can be elevated (blue) and the test head allows gimbal movement (green), 2 axes of fine planar movement (blue) and 225 degrees of rotation (orange).

FIGURE 1.25 CASSINI8/RI7100C TEST HEAD LAYOUT

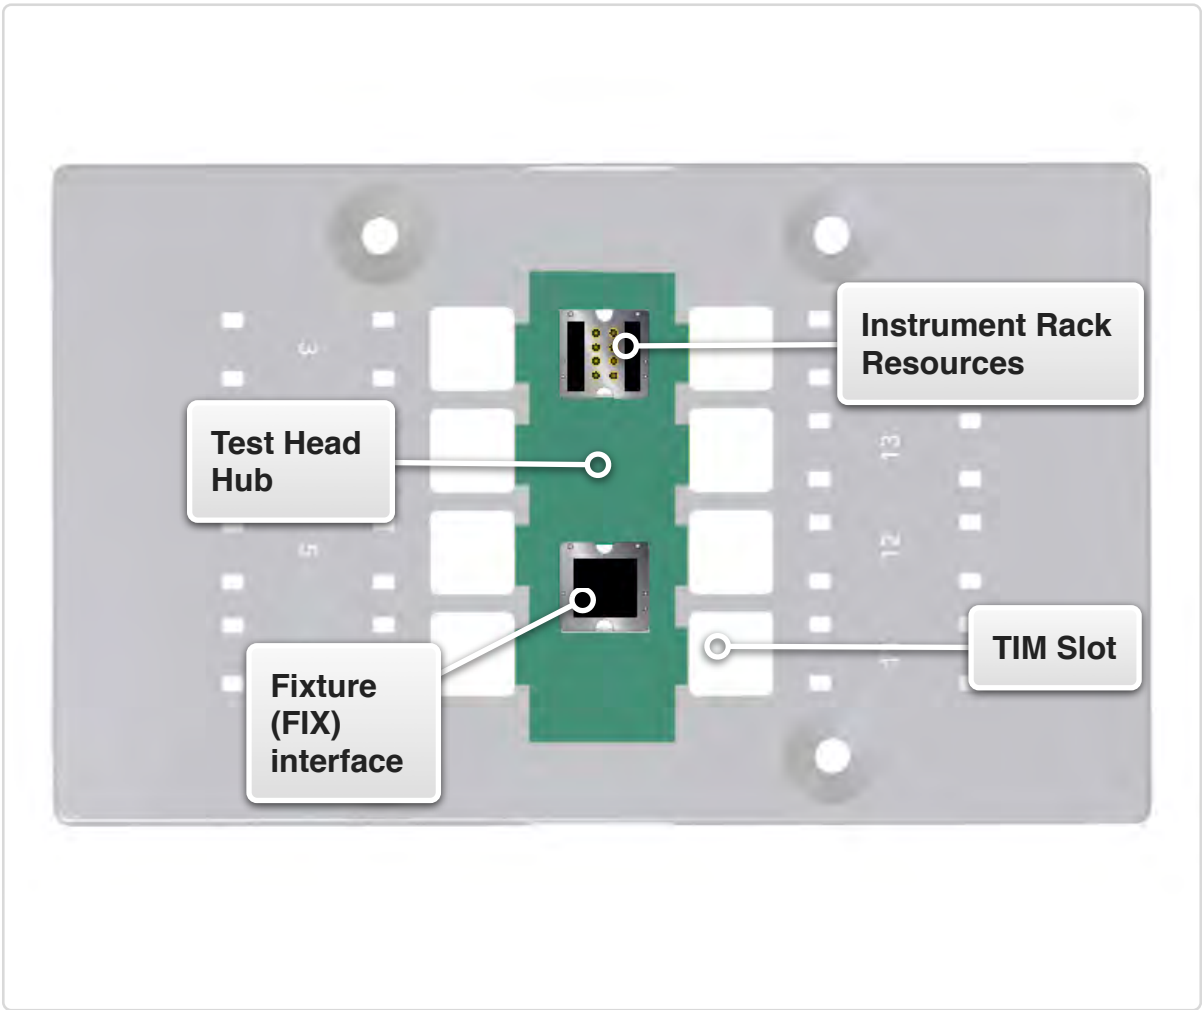


The illustration above shows a top-down view of the Cassini 8/ RI7100C test head (shown transparent) with the location of the test head RIFL hub, fixture FIX blind-mate interface, and instrument rack resources(DC/RF) blind-mate interface.

FIGURE 1.26 CASSINI 16 TEST HEAD RIFL HUB (1 OF 2)

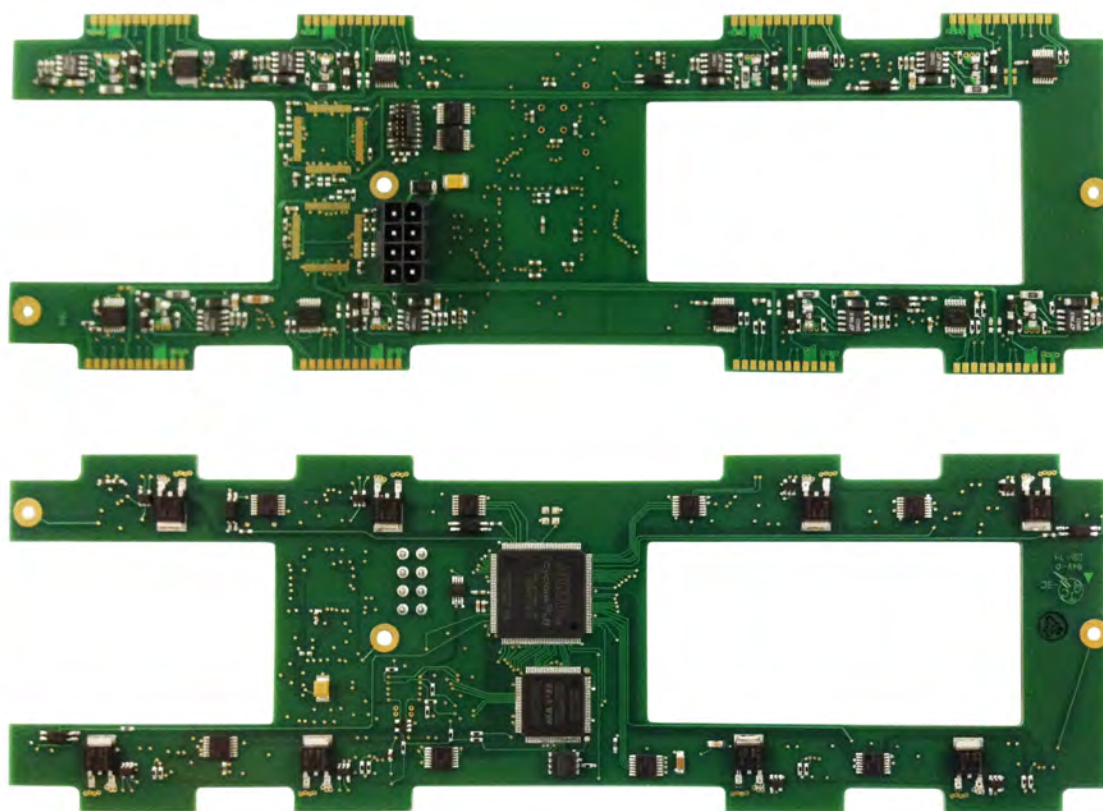

The picture above shows the bottom or TIM view(top) and the top or test head plate view(bottom) of one of the two 8 slot RIFL hubs used in the Cassini 16 test heads. Two of these hubs located on the underside of the test head to connect up to 16 TIMs to the RIFL data bus. The tabs on the PCB provide 12-pad RIFL interface pressure contacts with the 12-pin pogo blocks found on the test instrument modules.

FIGURE 1.27 8 SLOT TEST HEAD RIFL HUB

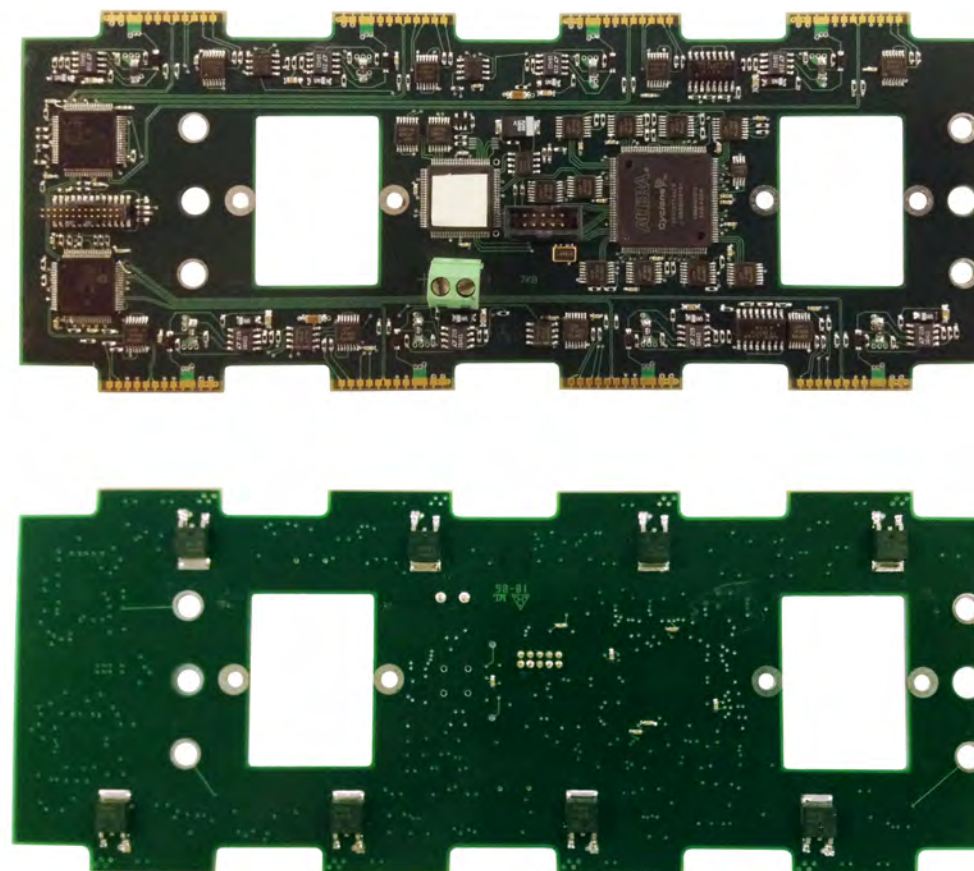


The picture above shows the bottom or TIM view(top) and the top or test head plate view(bottom) of the 8 slot hubs used in the Cassini 8 and RI7100C test heads. The hub is located on the underside of the test head to connect up to 8 TIMs to the RIFL data bus. The tabs on the PCB provide 12-pad RIFL interface pressure contacts with the 12-pin pogo blocks found on the test instrument modules..

FIXTURE DOCKING SYSTEM

Cassini test heads include a specialized, blind-mate TIM interface system for fixtures. Four receive ports on the test head connect fixture docking pins to a mechanical lock system. The system uses two canoe-shaped slide locks to engage the docking pins. The Small Cassini and Large Cassini systems provide a solenoid release switch to manual actuate the fixture lock system. The Cassini 16 test system uses a pneumatic (forced air system) to lock the fixture docking pins with mechanical canoe locks, securing the fixture to the test head as shown in [Figure 1.28](#). Alignment and keyed-guide pins between the fixture mating blocks and the TIM blind-mate interface, insures proper alignment and compliance.

See [Inserting and Removing Fixtures](#) for the detailed docking procedure.

FIGURE 1.28 CASSINI 16 PNEUMATIC FIXTURE DOCKING SYSTEM

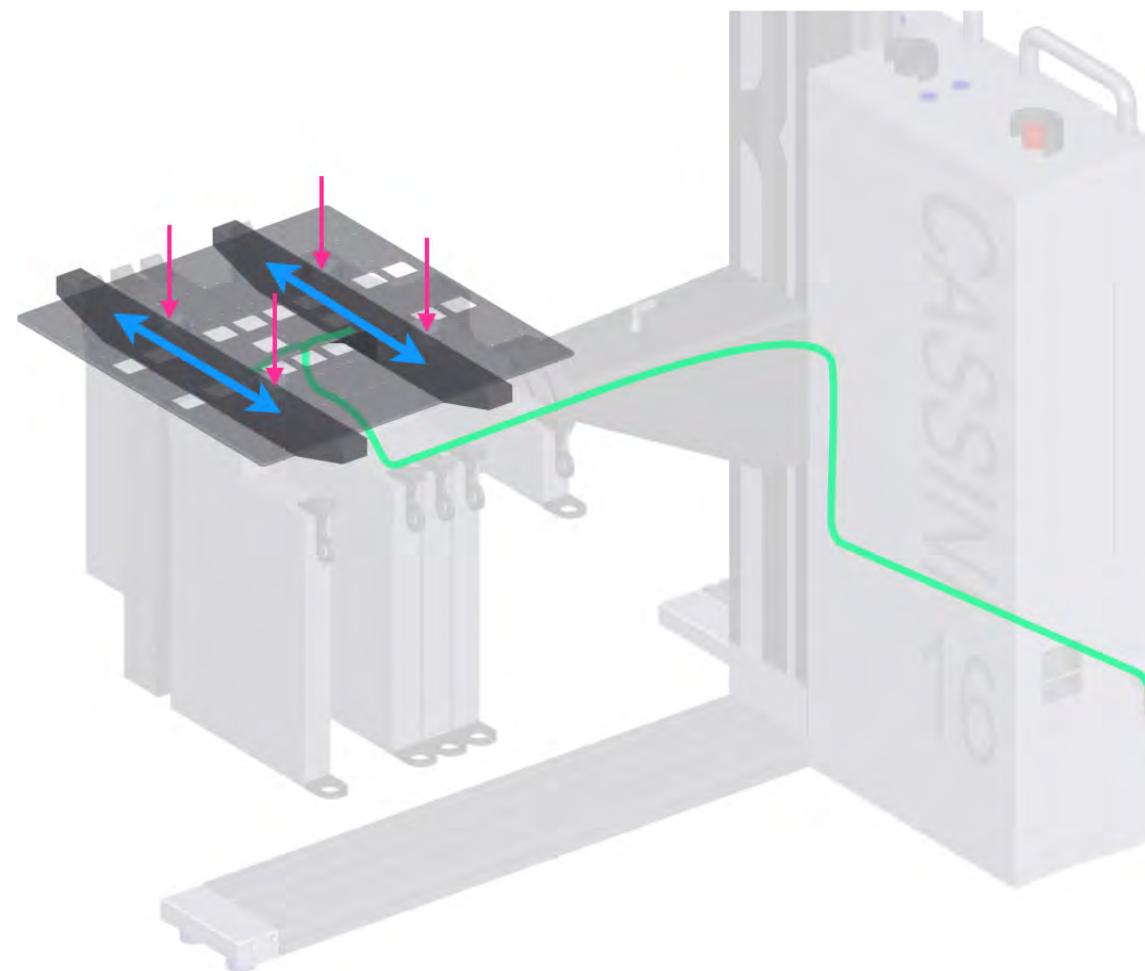

The diagram above shows the various components of the fixture locking system. Forced air from the air hookup (green) is regulated to provide consistent locking force of approximately +100 lbs. between the blind-mate fixture blocks and the TIM interfaces. Fixture docking pins engage the u-bars (red arrows) at four locations on the test head for uniform force distribution. The u-bar locks move horizontally to engage the fixture docking pins and secure the fixture.

SYSTEM CONTROLLER

The System Controller provides the embedded user interface, multi-instrument control, and graphical test programming environment for the Cassini ATE system. Instrument control and management are provided via the RIFL (Roos Instruments Fast Link) bus. RIFL provides the communication bus as well as distributing 48V instrument power and a shared 10 MHz reference clock across the instrument test head. The controller provides networked data storage and communication capabilities (Guru™) via a standard CAT-5 connections with local storage for online and offline development and USB ports for non-network data transfer. Guru™ provides tools for organizing files, data, and software test resources along with built-in file versioning, automated backups, data and test distribution control, access control and more.

On Cassini 16 test systems, the system controller is a TIM that is connected to the rear side of the infrastructure chassis as shown in [Figure 1.18](#). On Small Cassini and Large Cassini infrastructures, the system controller is an instrument module located in the workstation/instrument rack.

INSTALLATION

CASSINI 16

Before installing a System Controller:

- Exercise proper ESD procedures with the Cassini test system and System Controller TIM.
- Verify that the system is powered down: OFF/ON/START knob is in the OFF position, the main breaker switch is in the OFF position and the secondary breakers are in their OFF positions.
- Inspect the TIM to insure that no damage has occurred to the chassis or RIFL block interface and check that air exhaust channels are free of debris. Verify that mechanical components such as the bottom and top latch releases and locks are operating correctly and that the computer ports and pins: VGA, serial, parallel, USB, and PS/2 are not damaged.

TO INSTALL A CASSINI 16 SYSTEM CONTROLLER:

1. Hold the TIM using the top and bottom latch releases in the unlocked position with the blind-mate interface facing down.
2. Guide the system controller into place in the infrastructure controller slot located on the backside of the test system chassis.

3. Verify that the RIFL block and pogo pins of the system controller align properly and make good contact with the chassis RIFL master pads.
4. Release the bottom latch handle to engage the detent lock and engage the top-latch by pressing the knob inwards toward the TIM to lock the system controller into place.
5. Verify that the controller is seated and secured firmly in place before proceeding.

NOTE: The system controller must be installed in order to control the pneumatic fixture docking system and to supply 48V to the front and rear test head RIFL hubs.

6. Connect the computer peripherals: keyboard, monitor, mouse or touch screen, to their associated IO port on the system controller.
7. Connect the System Controller's ethernet port located adjacent to the bottom latch to a standard CAT-5 RJ45 ethernet network cable to connect the test system with a Guru Server.

SMALL CASSINI AND LARGE CASSINI

The system controllers are pre-installed into the instrument racks. To remove, service, or replace system controllers for the Large Cassini or Small Cassini test systems, contact Roos Instruments at support@roos.com.

START UP PROCEDURE

To perform a standard start up, use the procedures outlined below for the appropriate Cassini system.

NOTE: There is a recommended 2 hour minimum warm up time for test systems before calibrations should be run on test systems with RF test instrument modules (TIMs). RF TIMs contain temperature control systems designed to maintain a pre-defined temperature for internal instruments and components to insure consistent measurement accuracy.

CASSINI 16

Insure that the test system has been installed correctly and in accordance with the requirements listed in the [Site Preparation](#), [Shipping and Unpacking](#), and [System Installation](#) instructions.

1. Move the system into final operating position, ready for docking with a Handler or Prober (if applicable).
2. If a fixture is attached, [undock the fixture](#) from the test head.

WARNING: The DUT, DIB or Fixture could be damaged if the Fixture is latched while the system is starting up. Never add or remove TIMs while the Fixture is latched to the test head.

3. Verify that AC power has been connected to the infrastructure and the rotary OFF/ON/START knob is in the OFF position.

4. Insure the pneumatic air hose is connected to a compressed air source with required pressure specified in the site preparations information.
5. Insure the system controller is installed and locked into the infrastructure and that all computer peripherals (CAT-5 Ethernet, monitor, keyboard, mouse, touch screen, etc.) are connected to the controller before powering up the system.
6. Confirm the Main Breaker switch located on the rear, lower left side of the infrastructure chassis is in the ON position. Also confirm the secondary breakers, located adjacent to the forced-air hookup, are in the ON position.

NOTE: Depending on the model year, the number and naming of secondary breakers may vary. For newer models -- switch ON the 'MAINFRAME' switch followed by the 'HEAD' switch. For early models -- switch ON the 'Test Head' followed by the 'TIM FRONT' and then the 'TIM REAR' switch.


7. If not already attached, TIMs and auxiliary equipment (Handler Pod) may be connected to the test head with the system powered off adhering to the [Installing a TIM](#) procedure. Do not connect a Fixture until after the system software is running.

NOTE: If a handler or prober will be used, connect the ground cable from the infrastructure to a ground plug on the handler or prober.

8. Turn the OFF/ON/START rotary knob located on the rear side of the chassis (see [Figure 1.29](#)) from the OFF position to the ON position, and then rotate and hold it in the START position for 1-2 seconds to start up the test system. The system can take up to 3 minutes before the Guru control bar appears and the user can logon.
9. If an external monitor is used, turn on the monitor power and allow the system OS to complete start up process. If a touch screen monitor is used, the monitor power will automatically power on.
10. The user should select **Logon**, enter the username and password and press **Log On**. Then press **Short Cuts** or **User Apps** to continue loading the system software.
11. If a handler is being used, dock the Fixture to the handler and [connect the handler Pod](#) while the RI system software is loading. Once the Cassini main window appears, [dock the Fixture or Diagnostic/Calibration plate](#). Always choose **System > Check** after docking to activate the Fixture.

The system is now ready to begin testing.

FIGURE 1.29 CASSINI 16 OFF/ON/START SWITCH

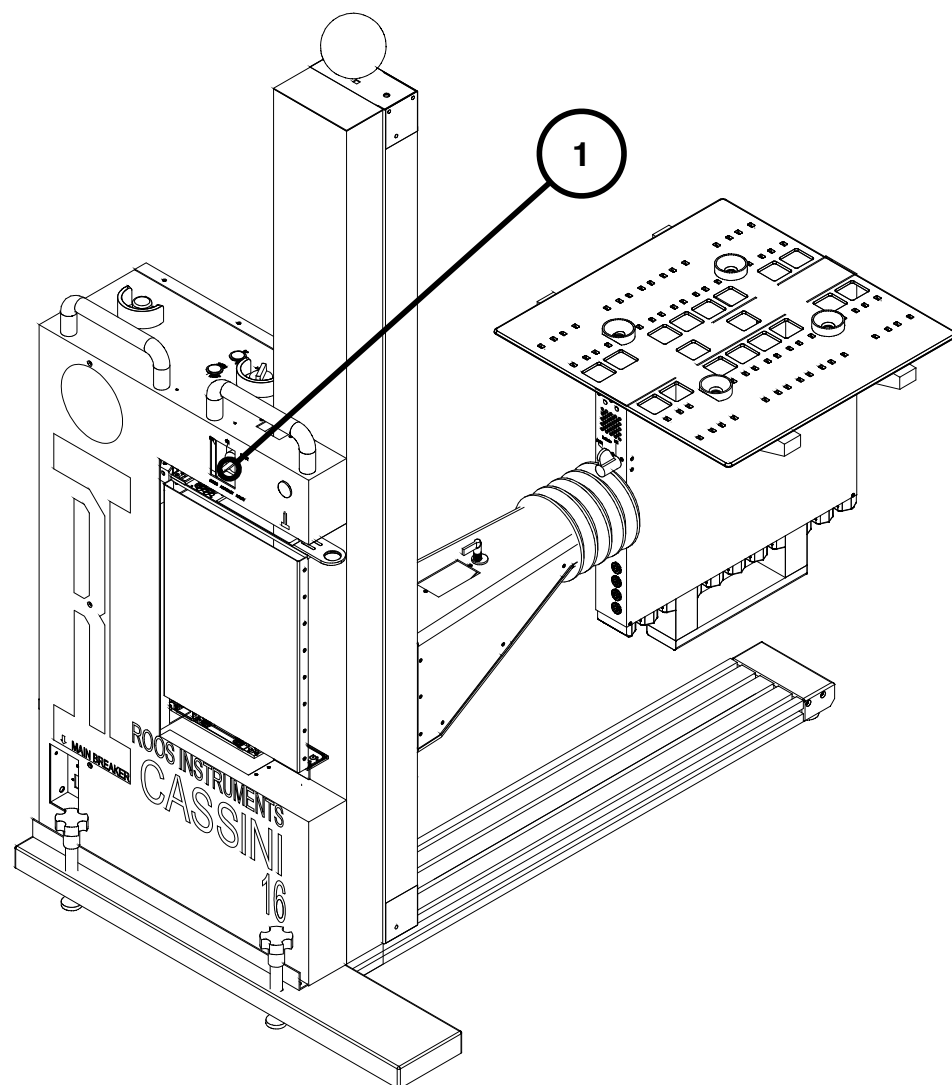


LARGE CASSINI

Insure that the test system has been installed correctly and in accordance with the requirements listed in the [Site Preparation](#), [Shipping and Unpacking](#), and [System Installation](#) instructions.

1. Remove all fixtures, calibration/diagnostic plates, and auxiliary equipment from the test head.
2. Verify that AC power has been connected to the test system and that all breakers on the 48V distribution panel, located inside and at the bottom of the instrument rack, are in the OFF position.
3. Insure the system controller is installed in the instrument rack and locked into a rack position.
4. Verify that all computer peripherals (CAT-5 Ethernet, monitor, keyboard, mouse, touch screen, etc.) are connected to the controller before attempting to power up the system.
5. Insure all RF cables routing from the instrument rack to the test head are connected.
6. Turn on the 48V Distribution breaker switches from the OFF position to the ON position in the following sequence: 1 RACK, 3 FANS, and then 5 HEAD. Reference [Figure 1.22](#) for location.
7. Turn the OFF/ON/START rotary knob located on the front exterior of the instrument rack (see [Figure 1.30](#)) from the OFF position to the ON position, and then hold it in the START position for 2-3 seconds to start up the test system.

8. If an external monitor is used, turn on the monitor power and allow the system software to complete start up. If a touch screen monitor is used, the monitor power will automatically power on.
9. Once the system software has successfully booted, a user has logged in, and a System Check has been performed, TIMs and auxiliary equipment may be connected to the test head followed by fixtures or diagnostic/calibration plates, adhering to the procedures outlined in Section 5: Test Instrument Modules and Section 6: Fixtures.

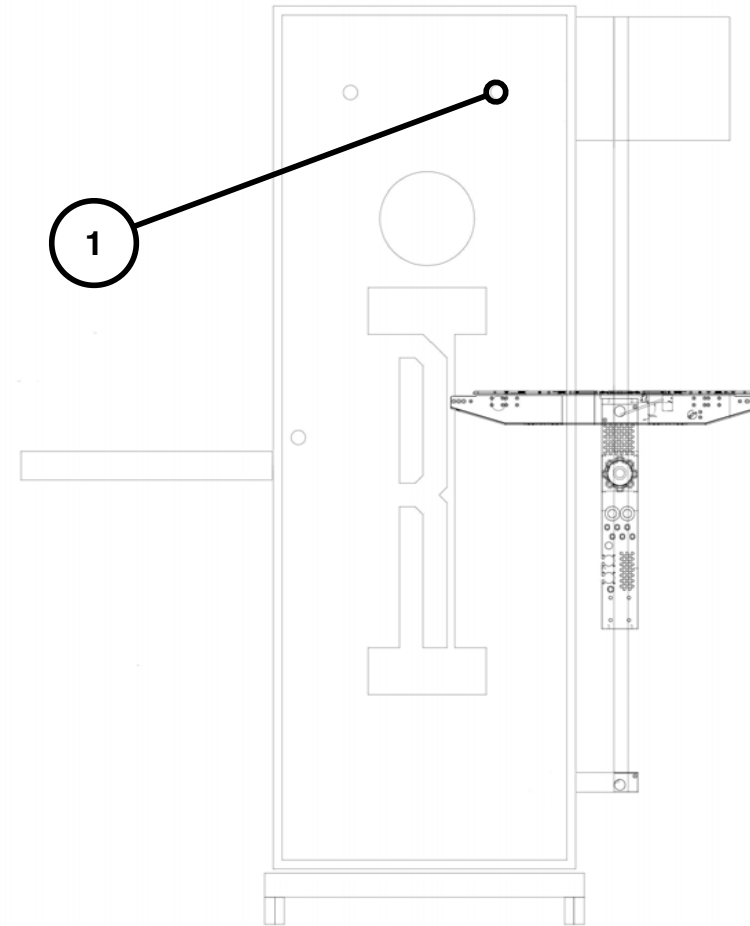
FIGURE 1.30 LARGE CASSINI OFF/ON/START SWITCH

SMALL CASSINI

Insure that the test system has been installed correctly and in accordance with the requirements listed in the [Site Preparation](#), [Shipping and Unpacking](#), and [System Installation](#) instructions.

1. Remove all fixtures, calibration/diagnostic plates and auxiliary equipment from the test head.
2. Verify that AC power has been connected to the test system and that main breaker, located on the front lower right side of the workstation rack, and the 48V Distribution breakers, located in the rear of the workstation rack, are in the OFF position. Reference [Figure 1.20](#) and [Figure 1.21](#) for locations.
3. Insure the system controller is installed in the workstation rack and locked into a rack position.
4. Verify that all computer peripherals (CAT-5 Ethernet, monitor, keyboard, mouse, touch screen, etc.) are connected to the controller before attempting to power up the system.
5. Insure all RF cables routing from the instrument rack to the test head are connected.
6. Place the Main breaker switch from the OFF position to the ON position. Reference [Figure 1.20](#) for location.
7. Place the 48V Distribution breaker switches from the OFF position to the ON position in the following sequence: RACK, and then HEAD. Reference [Figure 1.21](#) for location.
8. Turn the OFF/ON/START rotary knob located on the front lower right exterior of the workstation rack (see [Figure 1.31](#)) from the OFF position to the ON position, and then hold it in the START position for 2-3 seconds to start up the test system.
9. If an external monitor is used, turn on the monitor power and allow the system software to complete start up. If a touch screen monitor is used, the monitor power will automatically power on.
10. Once the system software has successfully booted, a user has logged in, and a System Check has been performed, TIMs and auxiliary equipment may be connected to the test head followed by fixtures or diagnostic/calibration plates, adhering to the procedures outlined in Section 5: Test Instrument Modules and Section 6: Fixtures.

FIGURE 1.31 CASSINI 8 OFF/ON/START SWITCH

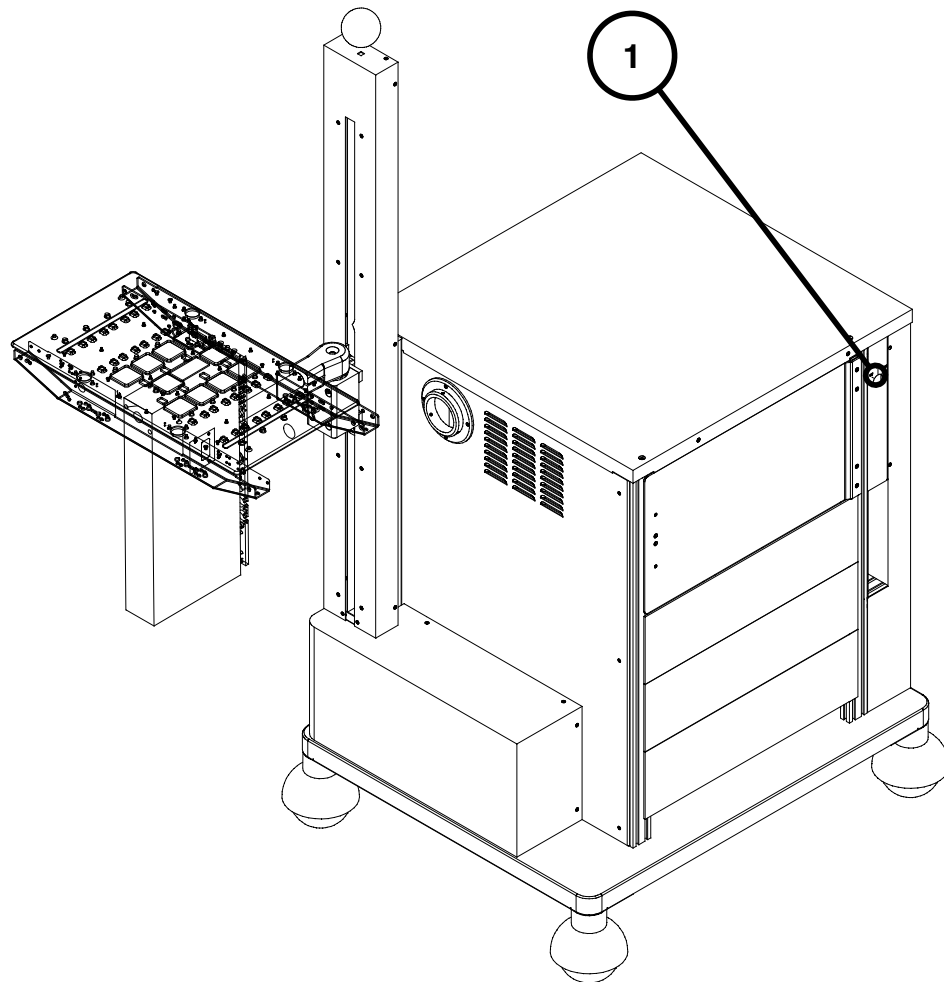

SHUT DOWN PROCEDURE

To shut down a test system for routine service or maintenance, use the procedures outlined below for the appropriate Cassini system.

CASSINI 16

1. Stop all test programs and other user programs.
2. Save edits and data from user programs in progress (if desired).
3. If a shortcut is active, close the system shortcut by selecting the **System > Quit...** menu options from the main system window or RMB click the main system window 'x' button at the top right corner.
4. The test system will prompt the user to confirm the closure of the Cassini main system window.
5. Shutdown the operating system by selecting the OS shutdown shortcut or selecting the **Shutdown...** option from the eCS Start menu located at the bottom of the screen.
6. The operating system will prompt the user to confirm the shutdown.
7. A shutdown screen animation (blink screen) followed by an audible series of beeps will prompt the user when it is safe to deactivate power.

8. After the screen animation has completed, the screen is blank, and the audible beeps begin, the user has 3-5 seconds to deactivate the controller before the test system initializes an auto start sequence.

NOTE: If the auto start sequence has begun, let the system complete the restart before attempting to shut down.

9. Shut down the controller power by turning the 'Main System' knob found on the controller side of the chassis (as shown in [Figure 1.29](#)) from the 'ON' position to the 'OFF' position.
10. Before performing service or maintenance to the system test head, switch the test head breakers (located next to the pneumatic hose hookup) to the 'OFF' position.
11. Before performing service to equipment in the auxiliary rack, switch the auxiliary rack breakers (located at the top interior of the rack) to the 'OFF' position.
12. Before performing service or maintenance to the infrastructure or AC/DC power supplies, switch the main breaker (located near the pneumatic hose hookup on the controller side of the tester) to the 'OFF' position.

LARGE CASSINI

1. Stop all test programs and other user programs.
2. Save edits and data from user programs in progress (if desired).
3. If the Cassini main system window is open, close the system shortcut by selecting the **System > Quit...** menu options from the main system window or RMB click the main system window 'x' button at the top right corner.
4. The test system will prompt the user to confirm the shortcut closure.
5. Shutdown the operating system by selecting the OS shutdown shortcut or selecting the **Shutdown...** option from the eCS Start menu located at the bottom of the screen. The operating system will prompt the user to confirm the shutdown.
6. A shutdown screen animation (blink screen) will prompt the user when it is safe to deactivate power.
7. After the screen animation has completed and the screen is blank, the user has 3-5 seconds to deactivate the controller before the test system initializes an auto start sequence.

NOTE: If the auto start sequence has begun, let the system complete the restart before attempting to shut down.

8. Shut down the controller power by turning the 'OFF/ON/START' knob found on the front side of the system rack adjacent to the EMO switch (as shown in [Figure 1.30](#)) from the 'ON' position to the 'OFF' position.
9. Before performing service or maintenance to the system, switch the 48V breakers (located at the bottom interior of the system rack) to the 'OFF' position.

SMALL CASSINI

1. Stop all test programs and other user programs.
2. Save edits and data from user programs in progress (if desired).
3. If the Cassini main system window is open, close the system shortcut by selecting the **System > Quit...** menu options from the main system window or RMB click the main system window 'x' button at the top right corner.
4. The test system will prompt the user to confirm the shortcut closure.
5. Shutdown the operating system by selecting the OS shutdown shortcut or selecting the **Shutdown...** option from the eCS Start menu located at the bottom of the screen. The operating system will prompt the user to confirm the shutdown.
6. The operating system will prompt the user to confirm the shutdown.

7. A shutdown screen animation (blink screen) will prompt the user when it is safe to deactivate power.
8. After the screen animation has completed and the screen is blank, the user has 3-5 seconds to deactivate the controller before the test system initializes an auto start sequence.

NOTE: If the auto start sequence has begun, let the system complete the restart before attempting to shut down.

9. Shut down the controller power by turning the 'OFF/ON/START' knob found on the front-right side of the system rack (as shown in [Figure 1.31](#)) from the 'ON' position to the 'OFF' position.
10. Before performing service or maintenance to the system, switch the test head and main breakers (located on the front-right side of the system rack beneath the OFF/ON/START switch) to the 'OFF' position.

TEST INSTRUMENT MODULES



TOPICS

[Form Factor](#)

[Dual Latch System](#)

[Signal & Communication Interfaces](#)

[Inserting & Removing](#)

[Software Control](#)

[Configuration Panel](#)

[Edit Panel](#)

[Control Panel](#)

[Test Programming Environment](#)

[Shipping & Receiving Requirements](#)

INTRODUCTION

At the heart of Cassini's configurable architecture are Test Instrument Modules (TIMs). These self-contained, swappable instruments provide all the source, receive, measure, and signal processing capabilities for a broad range of DC, digital, mixed-signal, RF, and millimeter-wave applications. Each TIM contains an instrument or multiple instruments with a targeted feature sets specific to a test application.

As the entire test system is modular, RF TIMs were designed to integrate with each other to provide enhanced feature capability such as multi-path switching, resource sharing, signal combination, multi-instrument measurement, frequency translation, and more. In this section the user will find introductory information about the TIM hardware, capability, and software control.

FORM FACTOR

Test Instrument Modules use a standardized design to support Cassini's modular test head slots. This allows for completely configurable instrument layouts on the test head. An aluminum frame and panel covers protect instrumentation while keeping TIMs both light and portable for swapping and repairing. The ruggedized exterior provides a durable enclosure on the production floor with enhanced microwave shielding. Thermal exhaust ports are incorporated into the panel covers with a built-in, air-cooling system to provide stable operating temperature. TIM dimensions of a standard can be found in [Figure 1.33](#).

DUAL LATCH SYSTEM

Standard TIMs, except for remote TIMs, incorporate a 2-lock system for securing the instrument to the test head. The top latch, found next to the blind-mate interface, secures the TIM to the underside of the test head by way of a preload latch. The bottom latch is then released while being pulled away from the test head.

FIGURE 1.32 DIAGRAM OF A TIM



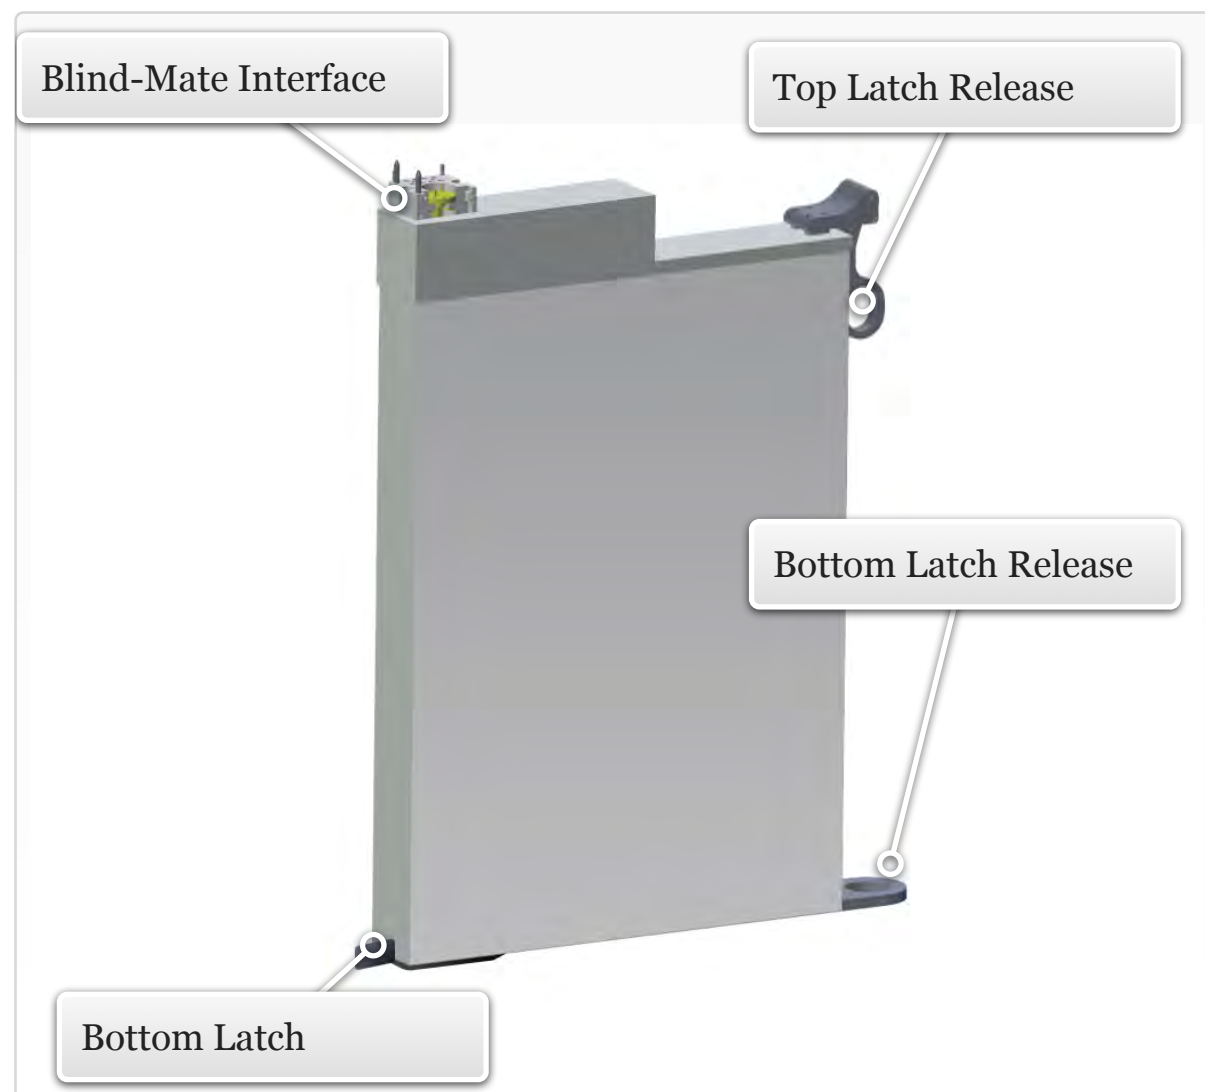


FIGURE 1.33 STANDARD TIM DIMENSIONS

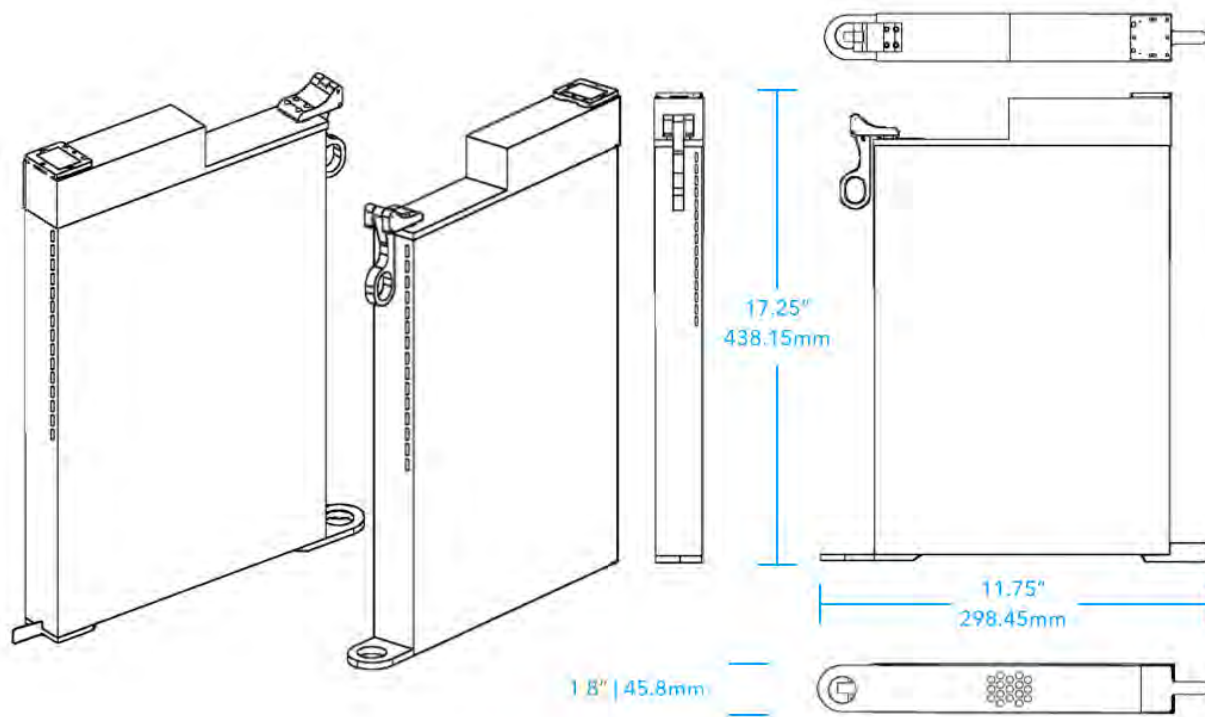

 Standard TIM design and dimension. Examples of the different available types are shown in this gallery.




ROOS INSTRUMENTS FAST LINK (RIFL)

RIFL is an open-standard communication and instrument power bus. The 12-pin RIFL connector block can be found next to the blind-mate TIM interface (see [Figure 1.34](#)). The block contains pogo pin contacts that interface with Cassini's RIFL hub on the underside of the test head. This bus is responsible for communication and control of the instruments from the EPC System Controller.

BLIND-MATE INTERFACE

The resources of a TIM are accessible by way of a blind-mate connector. This system provides instrument layout flexibility and a unified test head with access to tester resources for calibration and debug purposes. DC, digital, RF and millimeter-wave ports are standardized within the test head block and are designed to mate directly with resource blocks in the device interface environment. This provides configurable cross-instrument connections and signal routing. Two alignment pins found on the top portion of the blind-mate block ensure mechanical alignment and tolerance when docking to the test head. On the sides of the block, keyed guide pins prevent accidental mismatch docking between different types of fixture blocks and TIMs. [Figure 1.35](#), [Figure 1.36](#), [Figure 1.37](#), [Figure 1.38](#), and [Figure 1.39](#) provide examples of the different types of TIM interfaces.

FIGURE 1.34 RIFL BLOCK

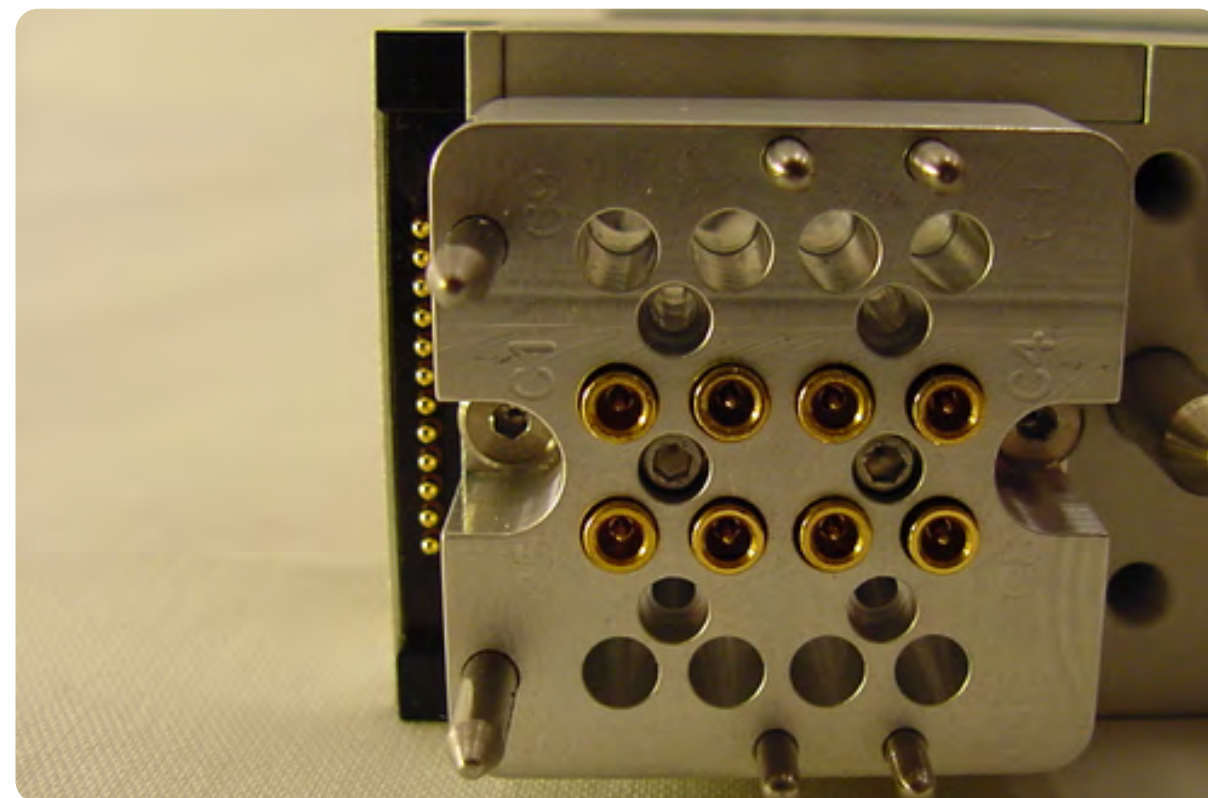

A black 12-pin RIFL connector block shown above, (just left of the blind-mate interface), carries instrument's DC power, communications, and the system's reference clock.

FIGURE 1.35 DC BLIND-MATE INTERFACE



TIMs with DC resources use a precision Hypertronics pin interface. The Hypertronics connectors are designed for low-mating force requirements and high-reliability.

FIGURE 1.36 DIGITAL BLIND-MATE INTERFACE



The high-speed digital TIM uses a High Density Shielded Interconnect (HDSI). These low profile, micro-miniature, ribbon coaxial cable assemblies are designed for optimal signal integrity and impedance matching up to 1 GHz.

FIGURE 1.37 RF BLIND-MATE INTERFACE




RF TIMs use a specialized, military-grade #12 PKZ connector. This blind-mate interface provides an inner and outer conductor separated by an air dielectric for constant impedance up to 40 GHz. The high-performance design functions across the widest mating tolerance available in any microwave blind-mate connector.

FIGURE 1.38 DC/RF COMBO BLIND-MATE INTERFACE



TIMs that provide both direct current and RF resources (like a Remote TIM) use a combination of the DC Hypertronics and #12 PKZ connectors. These blind-mate types are typically used in remote TIMs to route multiple resource types from auxiliary rack to the test head.

FIGURE 1.39 WAVEGUIDE BLIND-MATE INTERFACE

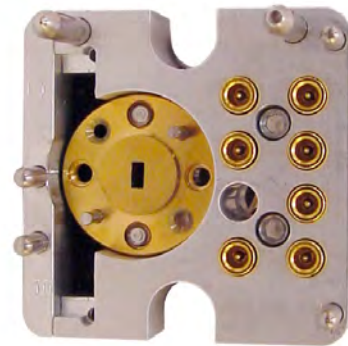

Millimeter wave resources are routed through a blind-mate waveguide interface as shown above. Precision alignment pins and guides on the waveguide connector face ensure planarity and safeguard against misalignment. The frequency range of waveguide is defined by the center port geometry (Typically WR-15 for 55-65 GHz range and WR-12 for 75-85 GHz).

INSTALLING & REMOVING TIMs

TIMs were designed to be inserted and removed quickly to support the reconfigurable nature of Cassini's modular test head as well as service requirement needs. The universal test head slots and standard TIMs allow Cassini to be reconfigured in support of different applications, site, and/or customer requirements. Included in the following text are instructions for inserting and removing standard TIMs on the Cassini test head.


INSTALLING A TIM

Before installing a TIM from Cassini's Test Head, always:

- Exercise proper ESD procedures with the Cassini test system, fixtures, and TIMs.
- Remove any fixtures or diagnostic/calibration plates from the test head to prevent damage to blind-mate interfaces.
- Perform a system check to update the system configuration before installing the TIM.
- Inspect the TIM to insure that no damage has occurred to the chassis or blind-mate interface and check that air exhaust channels are free of debris. As well, verify that mechanical components such as the bottom and top latch releases and locks are operating correctly.
- Rotate and lock the test head into the upright position as shown in [Figure 1.40](#) and set the manipulator arm in the locked 'Maintenance Lock' position.

To install a TIM to the Test Head:

1. Hold the TIM using the top and bottom latch releases in the unlocked position with the blind-mate interface facing up as shown in .
2. Bring the TIM up to the test head from underneath, using the alignment pins and blind-mate interface to guide the TIM into the test head slot.
3. When the alignment pins are visibly through the test head, the TIM's top-latch should be resting against the underneath of the test head and the clasps of the top latch should extend past the top of the test head.
4. Continuing to hold the TIM in this position, insure the bottom latch insert is aligned with the slot's associated detent receiving port.
5. Release the bottom latch handle to engage the bottom lock and continue to hold the bottom of the TIM up against the bottom side of the test head. The engaged bottom latch will prevent the TIM from accidental drops while the top latch is not engaged.
6. Engage the top latch by pressing the knob inwards toward the test head (early model versions) or by pressing the lever arm down the against the side of the TIM (late model versions).
7. Inspect the top latch clasps to insure they have engaged the top of the test head and that the TIM is securely in place.
8. Perform a software **System > Check** to activate the TIM

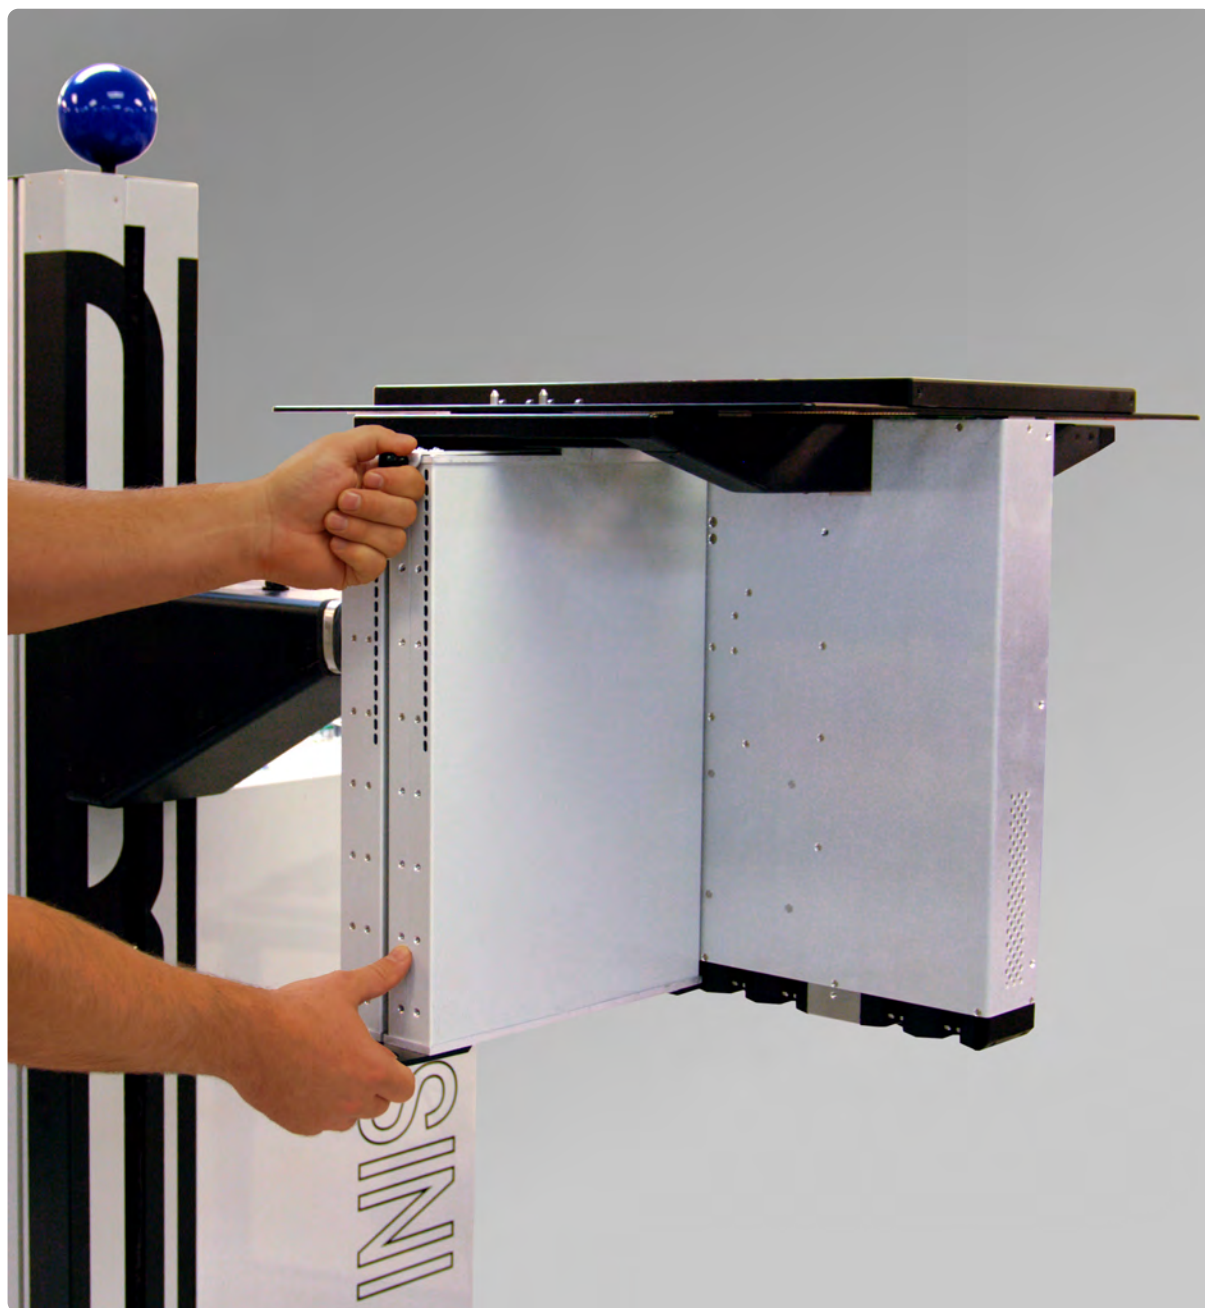FIGURE 1.40 ADDING TIMS TO THE TEST HEAD

Holding the top and bottom latch releases as shown, the TIM can be aligned and inserted into the Cassini test head.

If the TIM was successfully installed, verify that the TIM's instrument resources appear in the Tester Configuration and/or equipment pool window in the appropriate test head slot.

NOTE: Power to the TIM from the test head can be verified by checking that the instrument fan on the bottom of the TIM has powered on after the System Check.

REMOVING A TIM

Before removing a TIM from Cassini's test head, always:

- Exercise proper ESD procedures with the Cassini test system, fixtures, and TIMs
- Remove any fixtures or diagnostic/calibration plates from the test head to prevent damage to blind-mate interfaces
- Rotate and lock the test head into the upright position, as shown in [Figure 1.41](#), and set the manipulator arm in the locked 'Maintenance Lock' position.
- It is recommended but not required to power down the TIM before removing it from the test head.

To remove a TIM from the test head:


1. Grasp the top-latch release and pull the knob directly away from the blind-mate interface in a motion parallel to the test head plate(older model versions) or pull the top-latch handle upwards and away from the side of the TIM. This will release the TIM's top-

latch clasps from the test head and the TIM will rest on the engaged bottom latch approximately 0.25in or ~6.4mm below the test head.

2. The distance between the TIMs top latch and the test head plate will disengage the RIFL block from the 48V instrument supply and the communication bus.
3. Verify that instrument power has been removed from the TIM by performing a software System Check to confirm the TIM instruments are no longer in the Tester Configuration or Equipment Pool list. This can also be confirmed by checking that the fan on the bottom of the TIM is no longer running.
4. Holding the top latch release handle firmly, pull the bottom latch release tab directly away from the center of the test head in a motion parallel to the test head plate to release the TIM completely from the test head.
5. Move the TIM away from the test head in downward motion to prevent contacting the TIM slot RIFL pins underneath the test head and adjacent TIMs.

Always store removed or inactive TIMs in a ESD safe, temperature controlled environment.

FIGURE 1.41 REMOVING TIMS FROM THE TEST HEAD

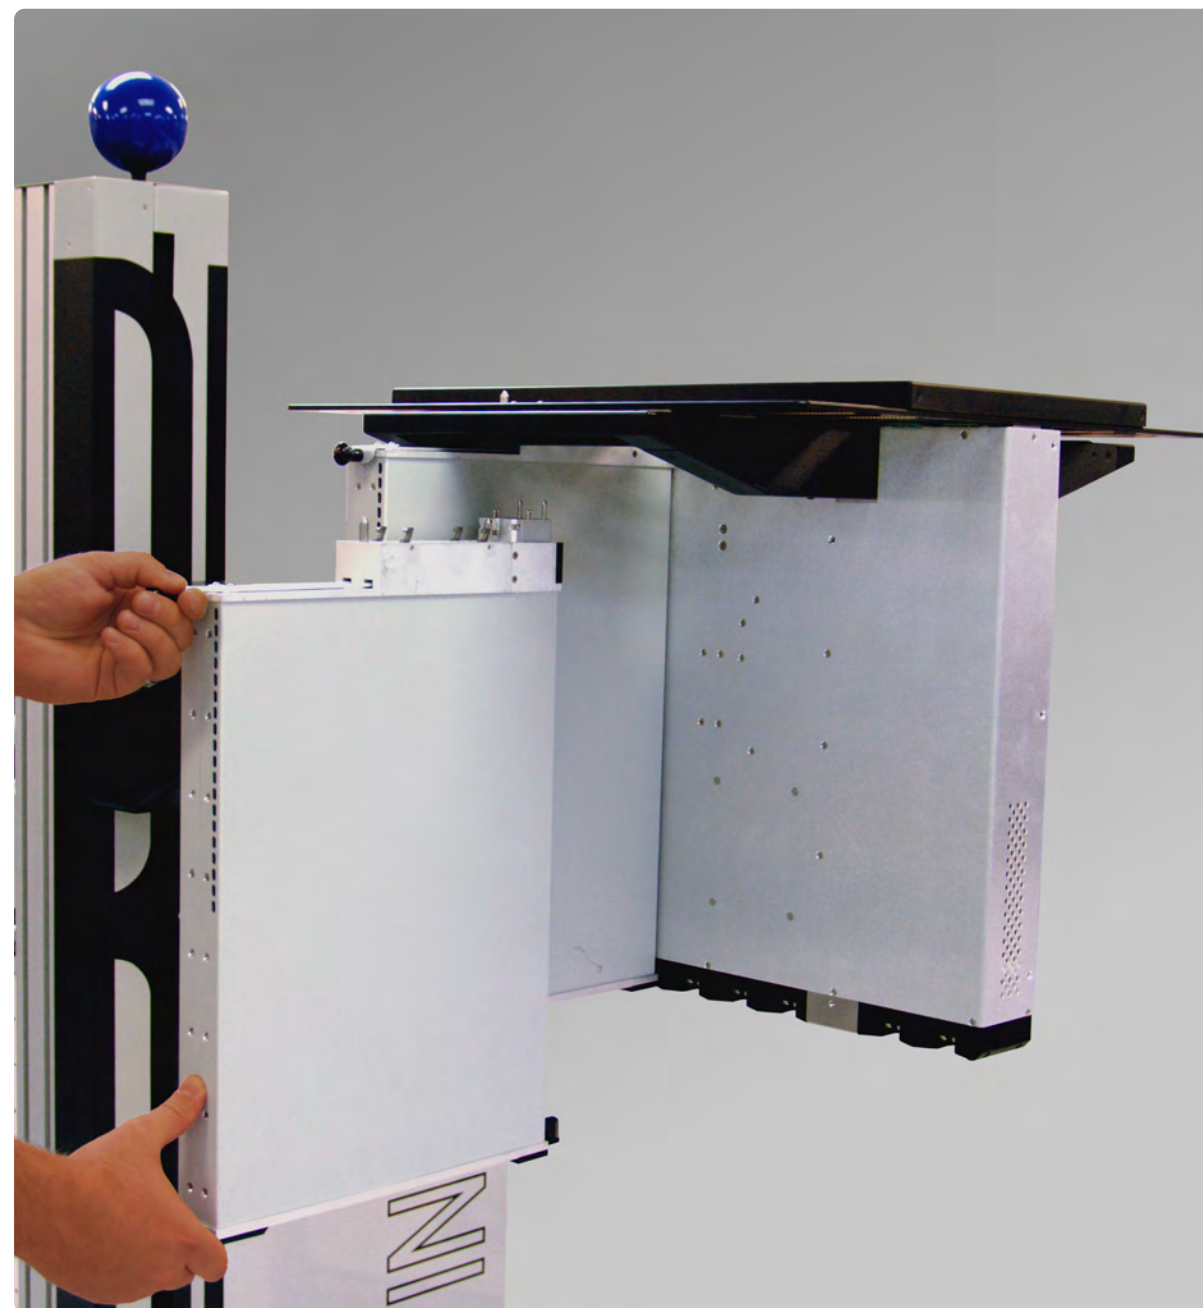

Holding the top and bottom latch releases as shown, the TIM can be aligned and inserted into the Cassini test head.

SOFTWARE CONTROL


This section will provide a basic introduction to the tools and software resources that manage and control the TIMs and their internal instruments.

As Cassini is a configurable test system, the software manages the tester’s setup dynamically. When a TIM or multiple TIMs are inserted into the Cassini test head, the software must build up the configuration of the test system in software correspondingly. All the TIM configurations and various instrument controls, settings, and command buttons for TIMs can be found in the Tester Configuration Window, Editor and Control Panels. Each of these tools are described in this section with examples of each of these tools.

CONFIGURATION PANEL

The Configuration panel provides a comprehensive view of the test system setup and as well as providing instrument management tools such as instrument diagnostics as well as calibration information. The configuration panel’s window, shown in [Figure 1.42](#), is divided into three panes. The pane at the top of the window provides a list of all instruments within TIMs that are currently active in the tester. Selecting any of the instruments in this list provides more information in the pane to the lower left of the window. This lower left pane contains cross-instrument and waveform or pattern definitions for digital and analog signal generators that can be modified. The bottom right pane contains a help dialog for buttons or blocks selected from

FIGURE 1.42 TESTER CONFIGURATION PANEL EXAMPLE

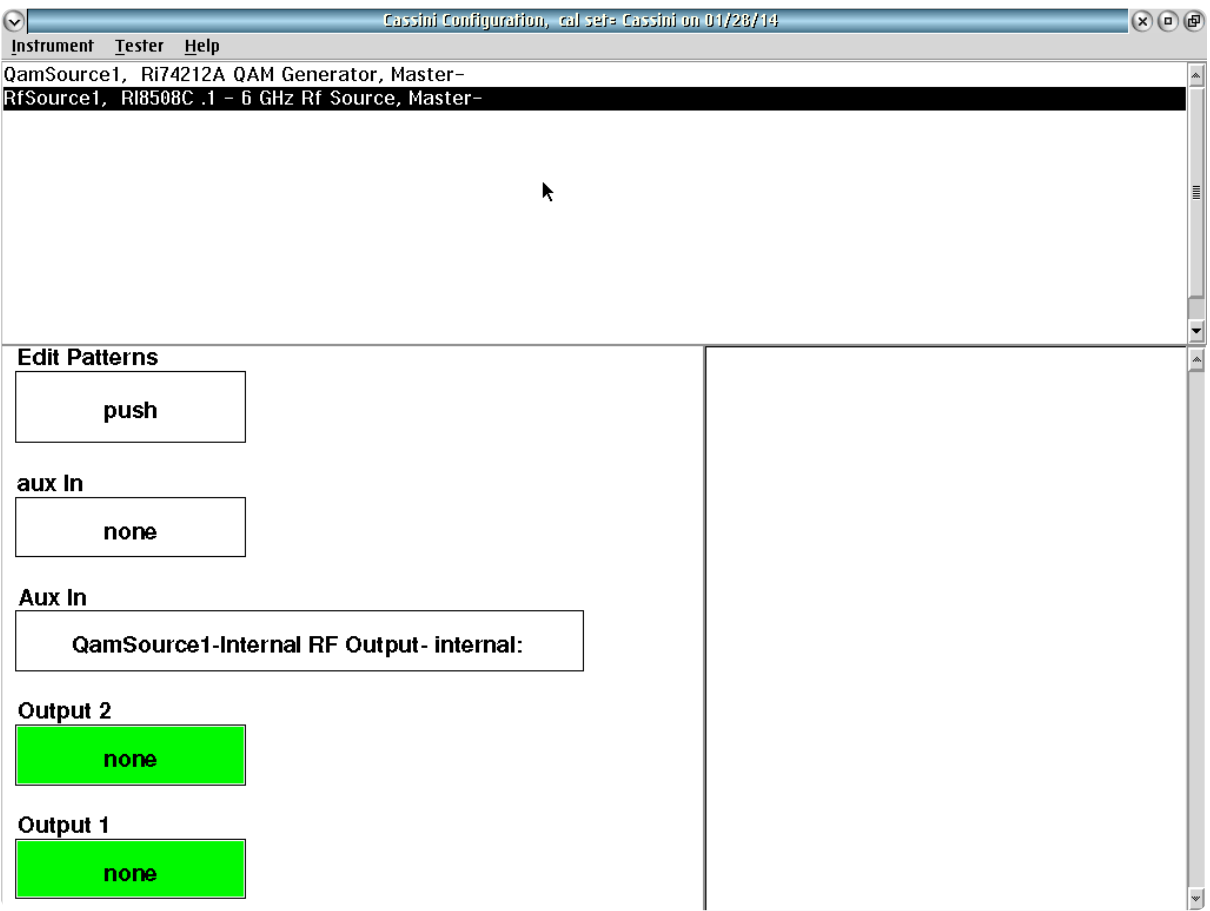

The Configuration panel provides set up options for the instruments including path connection definitions (interconnects) and provide waveform or pattern management.

the bottom left pane. Green boxes denote path definitions for an I/O port that must be defined in software by a device connection definition or fixture definition. These software device connection definitions represent a fixture interconnect path in the device interface environment. Along with providing configuration information, several tester features can be accessed through the tester configuration window:

ADDING INSTRUMENTS

Selecting an instrument from the list and then selecting the **Instrument** menu option at the top of the window will provide a drop down menu for: adding instruments, GPIB instruments, calibration kits, fixture definitions, and device interface board definitions to the system by choosing the corresponding menu selection.

REMOVE INSTRUMENTS

Instruments can be removed by selecting an instrument from the list and then selecting the **Instrument > Remove** menu options. This provides a pop-up window to rename the selected instrument. If the change is to be permanent, [save the tester configuration](#) after making changes to the instrument configuration.

RENAMING INSTRUMENTS

Instruments can be removed by selecting an instrument from the list and then selecting the **Instrument > Rename** menu options. This provides a pop-up window to rename the selected instrument.

NOTE: Changing an instrument name can affect test plans. Buttons and measurement blocks within test plans must match the button owner name to the instrument name listed in the tester configuration window. Conflicts between the owner name and the instrument name will result in test plan compile errors and failure to compile. This can only be resolved by changing the owner name to match the instrument name or renaming the instrument to match the owner. Always exercise caution when changing instrument names in a configuration.

SAVING A TESTER CONFIGURATION

The tester configuration can be saved to preserve user-defined instrument naming conventions and their associated instruments. This is useful for system setup that use custom naming conventions and/or defining a numbering convention of a multiple instrument setup to specific slot locations. To save a system configuration select the **Tester > Save** from the Cassini main system window.

CALIBRATION & DIAGNOSTIC INFORMATION

Calibration information for an instrument can be viewed by selecting the **Instrument > Calibration** menu list options. This opens a sub-menu list with several options for viewing selected instrument calibration data, or launching the calibration and diagnostic tools for the specified instrument.

NOTE: To calibrate or diagnose a TIM, see Chapter 5: Diagnostics or Chapter 6 Calibration for detailed information.

EDITOR PANEL

The editor panel provides instrument buttons and measurement blocks used in the graphical test programming environment. This tool can be accessed by selecting the **Tester > View** menu selections. Multiple editor panels can be open at the same time.

CONTROL PANEL


The control panel or controller as it is commonly referred to, provides interactive instrument buttons for live control of TIM instruments. This tool is typically used for in-situ instrument debugging and diagnostic purposes. The control panel can be accessed by selecting the **Tester > Control** menu selections. Multiple control panels can be open at the same time.

NOTE: Always return instrument controls to their default settings by manually resetting the button values in the control panel or performing a System Check. Use caution when using the controller with a fixture, diagnostic/calibration plate, or device interface board in place.

EDIT PANEL

The edit panel or editor window provides instrument function blocks and state buttons used in Cassini’s graphical programming environment. Every button or block within the edit and control panels represent a programming concept known as an ‘object’ in Cassini’s software environment. Objects are built upon a programming hierarchy consisting of attributes that describe the object and its’ functions and procedures known as methods. These buttons and blocks are placed within test plan panels to design multi-instrument measurements, algorithms, and test state-flow. The library of blocks and buttons are dynamically built from the system’s instrument configuration that is provided in the configuration panel.

FIGURE 1.43 EDIT PANEL EXAMPLE

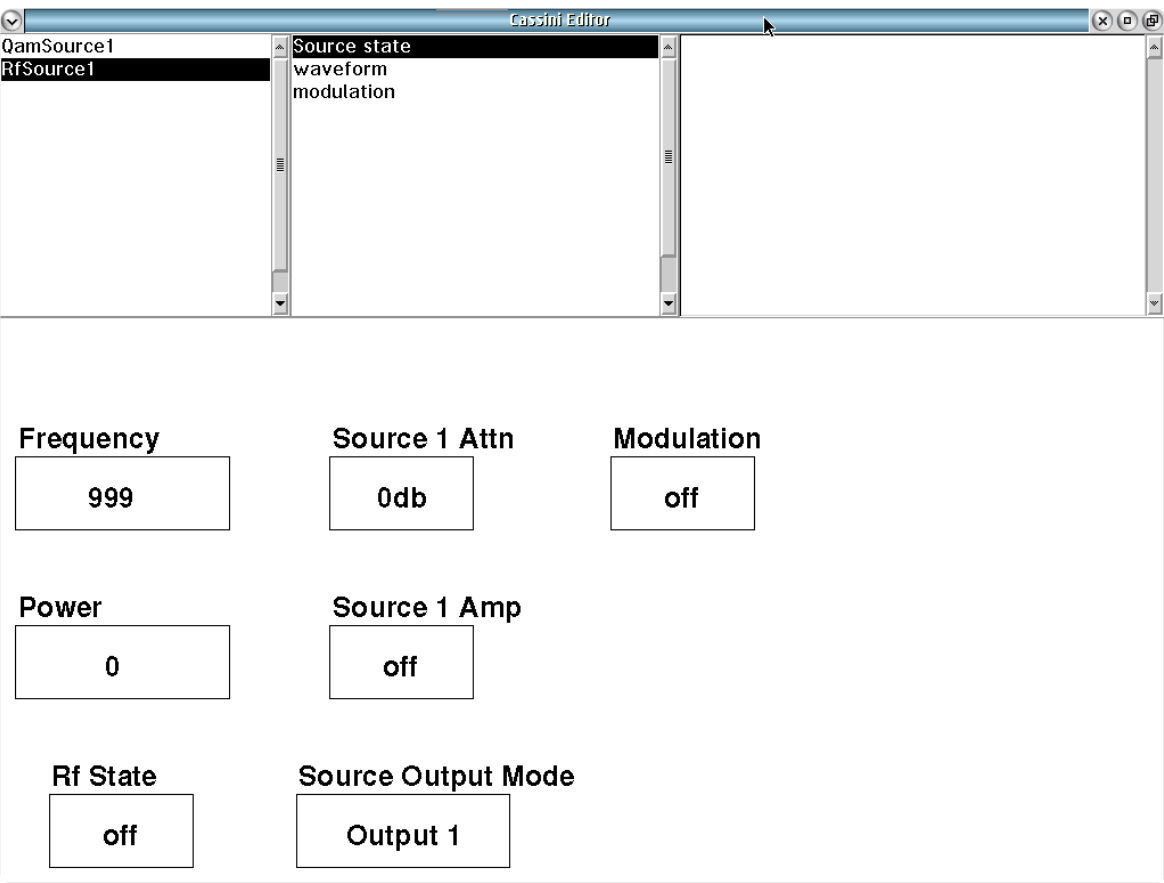

Edit panels provide a library of instrument state buttons and measurement blocks for Cassini’s graphical programming environment.

The edit panel window shown in [Figure 1.43](#), provides view of the individual instruments within TIMs in the upper-left pane, their instrument subsystems in the upper-center pane in the upper-right pane. Selecting an instrument from list in the top left pane will provide a view of the subsystems of the selected instrument in the pane to its right. Selecting one of the subsystem options will display all the buttons and function blocks available for that particular instrument or

subsystem in the large pane below. The values displayed in the buttons are the default settings of the instrument and can be changed before or after placing them in a test panel. Clicking on a button will provide some basic information about its use and function in the top right pane of the editor panel window.

The edit panel can be accessed from the Configuration panel and the Test Plan Editor by selecting the 'Tester' menu from the top, and then selecting 'View' from the drop down menu.

CONTROL PANEL


The control panel provides a direct view and control of TIM instrument settings much like the view and controls of bench-top equipment shown in [Figure 1.44](#). The window has three panes across the top showing the instrument list, subsystems, and a help dialog much like the editor panel. In the bottom pane of the window, buttons similar to the control panel display the current instrument settings. The control panel can be used to bypass the creation of test plans (programs) and directly control the instruments in the test system. This panel is also used for in-situ view and control of the instruments at a breakpoint within a running test plan or measurement.

Clicking on a button's value in a control panel during a test program breakpoint will refresh the display. Clicking a button changes the value in real-time within the instrument.

NOTE: Multiple refreshes of a measure button are useful for verifying measurement repeatability.

The Control Panel is accessed from the Configuration 'Tester' menu, select Control. From a test plan breakpoint, it is accessed by selecting 'Control' from the pop-up menu during test execution.

FIGURE 1.44 CONTROL PANEL EXAMPLE

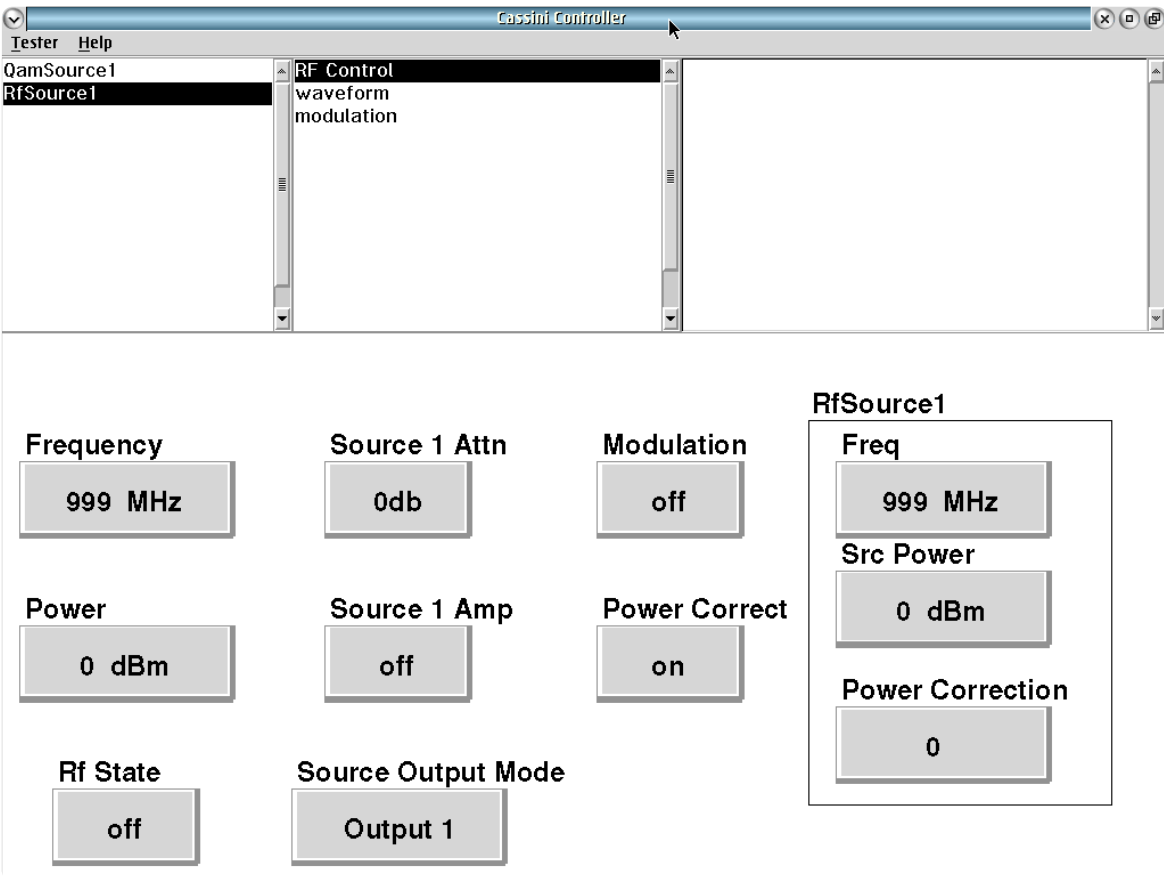

Control Panels allow real-time interaction with instruments, and can be called during test execution breakpoints to debug test plans and evaluate instrument state/functions.


TEST PROGRAMMING ENVIRONMENT

Cassini uses an advanced, graphical state-flow test development environment for creating test programs. The object oriented programming elements used to control the instrument hardware have been abstracted to graphical instrument buttons that define and control the instrument states, and arithmetic function or measurement blocks. A library of available instrument buttons and measurement blocks available in the Edit Panel are dynamically created by the test system from test instrument modules connected to Cassini’s test head or added by a user in the simulator. The underlying philosophy is that the graphical state-flow abstraction provides an environment where test engineers with limited ATE coding experience can write test programs and deploy new instrument and measurement solutions in less time when compared to traditional ATE programming.

USER INTERFACE

The test design environment provides both views and user control of test flow organization and test design as shown in [Figure 1.45](#). The user interface window is divided into two section panes. In the top pane is a view of the test program flow divided into different programming sections. By default this view contains the “Test Plan Settings” which contains a global default, disconnect settings, and connect sequence section. The user can add a test section by right clicking within this pane and choosing “Add Test Section” from the selection menu. This test flow view allows the user to control and organize their test plans in a linear flow convention. Selecting or left clicking on any of the test flow sections on in the top pane will display

FIGURE 1.45 TEST PROGRAMMING ENVIRONMENT

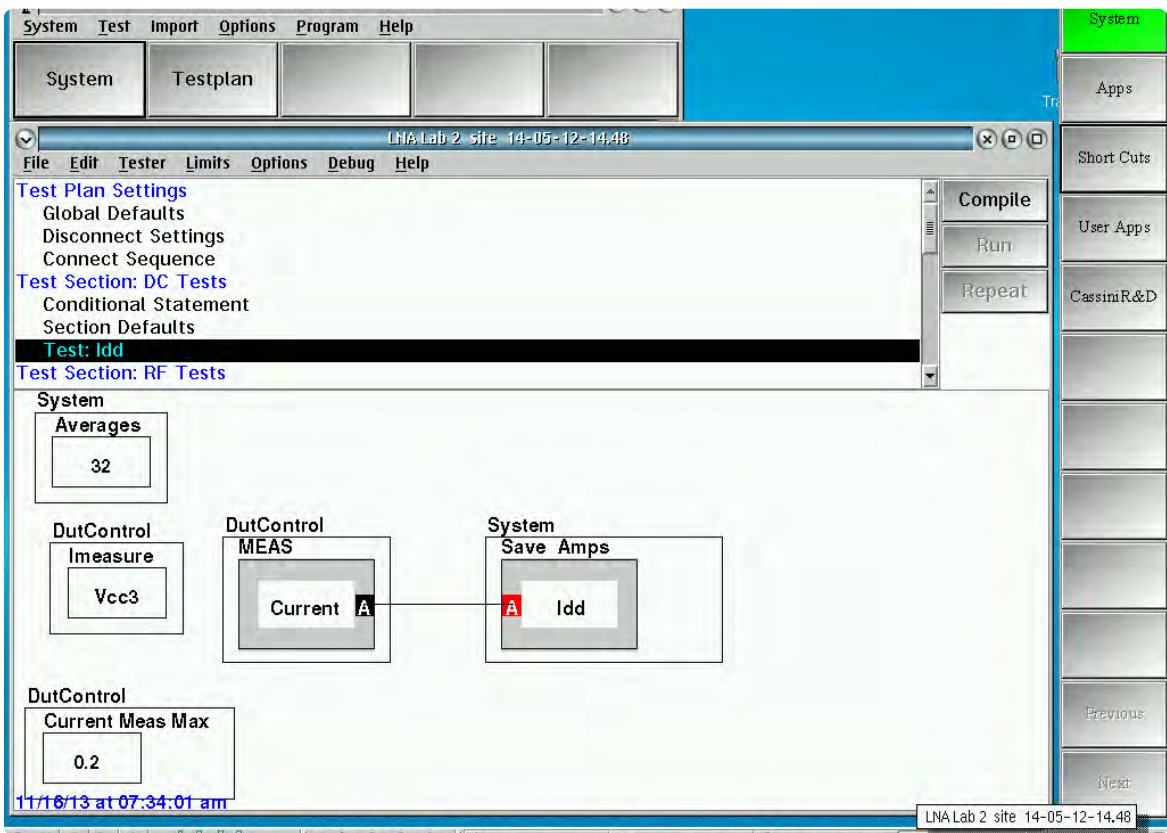

Test Panel Example: Current measurement

the button or block contents contained within the selected section in the pane on the bottom of the UI. The bottom pane is the test design canvas for placing the graphical instrument control buttons and measurement blocks from the library contained in the Edit Panel.

DISCONNECT SETTINGS/CONNECT SEQUENCE

The Disconnect Settings and Connect Sequence sections are used strictly for designating the test system's default states before a test program starts, at the end of a test program, and the sequencing of

these states when connecting or disconnecting from a device under test (DUT). The Disconnect Settings section allows the user to define application-specific instrument pin or port settings and states (that may differ from the test systems default settings or user's global defaults) before the first device under test is placed in the socket and to define the state the tester's instrument pin or port settings return to at the end of a test program before the DUT is removed from the socket. This is the state the system enters first, before the DUT is inserted and before the DUT is removed.

The startup sequence is a specialized section that defines application-specific sequencing of how the instrument pin or port settings and states are set. The sequencing executes instrument state buttons in the lower pane following a left-to-right convention for first-to-last sequencing.

NOTE: Instrument state buttons in the Disconnect Settings, Global Defaults and Section Defaults panels do not follow a sequencing convention. The sequence is controlled by the compiler. Within test panels; instrument state buttons are executed first, followed by premeasure groups, measurement or function blocks, and finally postmeasure groups, all in a left to right order.

GLOBAL DEFAULTS AND SECTION DEFAULTS

The Global Defaults section allows the user to define the default instrument state settings that will hold true for the entire test program execution by placing state buttons in the lower pane.

Section Defaults are located in every Test Section, allowing the user to define instrument state settings that will hold true for all test panels with the test section by placing state buttons in the lower pane.

TEST SECTIONS OR TEST PANELS

Test sections provide a test flow convention and organization for the user’s test program. The user can add a test panel by right clicking on a highlighted Test Section and choosing “Add Test” or “Add Test State” from the selection menu. Measurements are designed by placing instrument state buttons and measurement or function blocks in the test panel sections. The programmer connects blocks by drawing lines to create algorithmic flow. The lines propagate each block’s object attribute information to the connected block to relay data, function, and calling conventions. This allows the compiler to automatically manage data type flow, measurement unit handling, and advanced multi-instrument measurement (virtual instrument) functions for the user. The graphical approach also allows programmers to build test programs and measurement flows by dropping instrument state buttons that represent instrument control states and interconnect measurement or arithmetic element blocks from editor panel library to create algorithmic flow.

BLOCK AND BUTTON CONVENTIONS

There are two types of coding elements used to build graphical test programs: state buttons and function blocks. Both contain object oriented attributes and conventions that relay data, function, and calling conventions to the compiler. This allows the system to

automate and manage data type flow, measurement unit handling, and advanced multi-instrument measurement functions.

At the top left of every block or button is the “owner” attribute. The owner ties the block or button object to its’ associated instrument.

NOTE: All buttons and blocks must contain an owner. Test Plans that contain buttons and blocks without owners or misidentified owners will fail to compile.


Within the block at the top left corner is the “function” attribute that defines the control or operation task. Depending on the type of button or block, the “function” may denote a measurement, instrument resource or operation. Within the function area are user-editable fields such as variable name, a list of options, or numerical entry.

NOTE: Buttons or Blocks highlighted in red within a test panel denote the associated instrument is not present or active in the test system. Test Plans with these buttons or blocks will not compile unless the instrument is activated, the test panel or test section is deactivated, or the buttons or blocks are removed.

TYPES OF BUTTONS AND BLOCKS

Examples and descriptions of the four common button or block types found in the edit panel are given below. Notice how “buttons” do not have a grey border and anchors, whereas “blocks” perform some action (measurement, calculation or variable) at a state provided by a collection of buttons.

RFSrc1

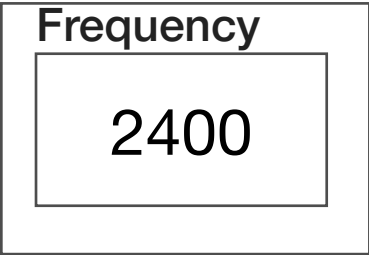

Owner: RFSrc1


Function: Frequency

Parameter: 2400 (user defined in units)

STATE BUTTON

Defines an instrument or device setting. These programming elements are used to create a defined instrument or device state within a test panel. They are most commonly used in conjunction with measurement blocks and are executed before any measurement functions are executed within a test panel. Values are normally floating point numbers, but can also be a string of characters or a selection from a drop down list.

Receiver

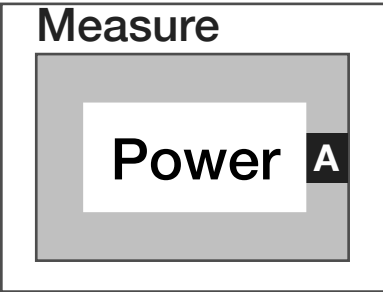

Owner: Receiver


Function: Measure

Parameter: Power

OUTPUT BLOCK

These blocks are designated with a gray region within the “measurement” name and provide an output value from an instrument. The black box with “A” denotes the instrument’s measurement output that can be connected to a variable or calculation block.

System

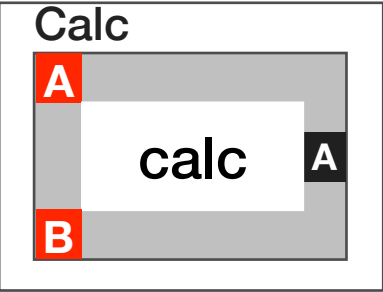

Owner: System


Function: Calc (Calculation)

Parameter: calc (a menu list of operations for 2 input, single output calculation are accessed by left clicking the center of the button)

CALCULATION OR FUNCTION BLOCK

Calculation or function blocks are designated with a gray region within the “Function” area. These blocks provide one, two, or three inputs on the left side of the block designated by red squares with “A”, “B”, and “C.” The output on the right side of the block is designated with an “A” in a black square. Algorithmic flow is designed by stringing together multiple blocks with a left-to-right flow convention to denote execution order.

System

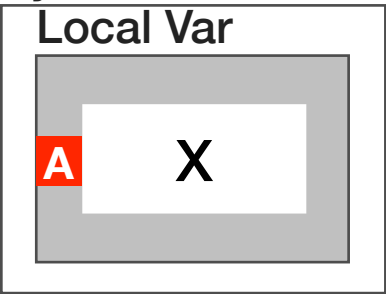

Owner: System

Function: Local Var (Local Variable)

Parameter: X (user-defined variable

INPUT BLOCK

Variables are denoted with a gray region within the “Function” area and provide an input designated with a red square on the left side of the block. There are two types of variables available: local variables and data saves. Local variables are used for temporary data storage, typically for use between test panels in multistage measurements or multiple step algorithms. Local variable data is discarded at the end of a test plan’s execution.

Data saves store variable information for data logs, final test results, and data reporting and are saved at the end of a Test Plan.

SHIPPING & RECEIVING REQUIREMENTS

Test instruments and TIMs should always be packaged and shipped using the Roos Instrument's provided container. DO NOT discard these containers. They are designed specifically for the instruments and TIMs with adequate sizing, anti-static material, and conformal padding to protect them during transport. If this container and shipping material are not available, contact Roos Instruments for further instructions.

Damage to TIMs, instruments, and/or equipment during shipping is the responsibility of the shipping party. Roos Instruments assumes liability for damage of equipment shipped from the factory. Roos Instruments is not liability for shipping damage of equipment shipped to Roos Instruments for service, repair, or otherwise.

SERVICE INFORMATION

If a product is being returned to Roos Instruments for service, please provide enough information to help expedite repair and return of the product. For best service results, include as much information as possible: symptoms, date of failure, the current status of the instrument, etc.

Items for return must include a Return Merchandise Authorization (RMA) number. To obtain an RMA number, please email support@roos.com or contact Roos Instruments at 1.408.748.8589 between the hours of 9:00 a.m. to 6:00 p.m. (U.S. Pacific Standard Time)

An RMA must be requested within 15 calendar days of the invoice date (ship date for credit card orders). NO returns of any type will be accepted without an RMA number and ALL returns must be shipped prepaid and insured via any common carrier (i.e. UPS, FedEx). Tracking information is required.

PACKAGING A TIM

Proper packaging of TIMs prevents damage and improves response time for repair and replacement. Every TIM should be individually boxed with the supplied shipping container and packaging provided by Roos Instruments following the instructions below:

- Wrap the instrument in heavy paper or plastic. If the instrument is a circuit board, wrap it in anti-static material first, then add additional wrapping material. (If shipping to Roos Instruments for service, attach a tag indicating the service required, return address, model number, and full serial number).
- Use the provided shipping container as shown in [Figure 1.46](#).

- Insert the layer of shock-absorbing foam over the open side of the sides of the instrument as shown in [Figure 1.48](#), to provide firm cushioning and prevent movement inside the container.
- Seal shipping container securely. To close securely, DO NOT use masking tape, cellophane tape, duct tape, string, or paper over-wrap. Instead, use a strong tape such as pressure-sensitive plastic -- two inches (5.08 cm) or more in width, or nylon reinforced filament tape -- 60 lbs. (27 kg) grade tape at least three inches (7.62 cm) wide.
- Apply three strips to seal the open flaps of the box, where they meet in the center. If necessary, apply three strips of tape to the bottom of the box, so the middle and two edge seams are sealed.
- Mark shipping container “FRAGILE” to ensure careful handling.
- In any correspondence, refer to instrument by model number, serial number, and/or RMA number.

PACKAGING AN RI7710/7725 SOURCE

The RI7710/7725 Source is considerably larger and more fragile than other Cassini instrument. As such, special care must be used when packaging for shipment. If at all possible, the source should be packaged in a Roos approved, Anritsu (OEM) shipping box. If shipping from North America, Roos Instruments will provide a box at request. When properly packaged in the appropriated Anritsu box, the

instrument is sandwiched between two plastic sheets, suspending it in the center of the box and provide adequate cushion against shock.

To package an Anritsu source, follow the instructions provided below:

- Wrap the instrument chassis in the conductive foam packing material provided. Be sure to complete encase the instrument, covering sharp edges and corners of the instrument chassis.
- Wrap the encased instrument with the provided plastic cover and tape the bag closed with standard clear packing tape.
- Place the wrapped instrument in the Anritsu box on top of the plasticized insert as seen in [Figure 1.49](#).
- Place the second plasticized insert on top of the wrapped source, and press it down firmly to sandwich the instrument between the inserts.
- Seal shipping container securely. To close securely, DO NOT use masking tape, cellophane tape, duct tape, string, or paper over-wrap. Instead, use a strong tape such as pressure-sensitive plastic -- two inches (5.08 cm) or more in width, or nylon reinforced filament tape -- 60 lbs. (27 kg) grade tape at least three inches (7.62 cm) wide.
- Apply three strips to seal the open flaps of the box, where they meet in the center. If necessary, apply three strips of tape to the bottom of the box, so the middle and two edge seams are sealed.
- Mark shipping container “FRAGILE” to ensure careful handling.

- In any correspondence, refer to instrument by model number, serial number, and/or RMA number.

RECEIVING TIMs


Once a TIM is returned from a factory or service repair, a visual inspection and validation of instrument functionality should be performed as soon as possible to insure that no shipping damage has occurred. If the TIM is not to be utilized immediately, it should be stored in the provided shipping packing and kept in a temperature controlled, static-free environment.

If the TIM has been upgraded or utilizes calibration data, there are several software resources that must be updated in Guru. Installing these software resources first will allow the TIM to download and utilize the updated resources automatically when inserted and powered up in the test system. A .gzp file containing the appropriate TIM firmware and cal data is provided by Roos Instruments via email. This .gzp file must be imported into the Cassini test system's Guru. This can be accomplished by using the Importer feature of Guru Browser on the local test system, or by importing the file into the networked Guru Server (via a Cassini VirtualBox simulator or Guru Client application) that services the associated Cassini test systems. Once this has been imported and is available on the test system, the TIM can be installed. If the TIM is installed before the software resources are updated, a system startup is required to force the installed TIM to download and recognize the updates and calibration

data. The following steps provide the recommended actions for receiving a TIM:

1. Verify the RMA number and information on the shipping container match the service documentation.
2. Inspect the cardboard TIM container for visible signs of shipping damage such as holes, cracks, and/or dents. If the shipping container appears to be significantly damaged, inform Roos Instruments immediately.
3. Remove the TIM from shipping container and visually inspect the chassis, latches, and instrument interface for any signs of shipping damage. If the TIM appears damaged or internal components appear loose, inform Roos Instruments immediately. DO NOT install a TIM that is suspected to be damaged into the test system. Contact a Roos Instruments service or support engineer.
4. If the TIM has been re-calibrated or upgraded at the factory, the TIM software resources must be updated in Guru. Reference the text above for more information.
5. If the TIM appears to be in good working order and software resources are up to date, it can be installed in the test system and powered up. Be sure to remove any fixture or diagnostic/calibration plates before installing the TIM.
6. Allow 20 minutes of warm-up time before performing TIM validations, calibration, or using the instrument.

FIGURE 1.46 RI PROVIDED TIM SHIPPING CONTAINER

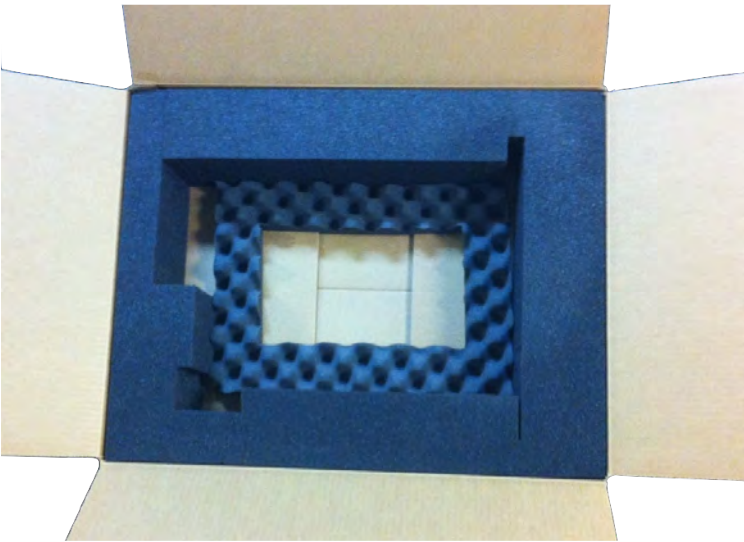

The Roos Instruments TIM shipping shown above is designed for standard TIM transport. The container’s dimensions are 26in x 20in x 8in (66cm x 51cm x 20cm). Conductive foam is shaped to conform to the TIM shape, providing ESD and impact shock protection.

FIGURE 1.47 TIM PLACEMENT IN SHIPPING CONTAINER



The TIM should be placed inside the shipping container as shown, orienting the instrument with its’ associated conformal foam shape.

FIGURE 1.48 FOAM PLACEMENT IN SHIPPING CONTAINER



Place the included packing foam over the top of the TIM to encase the instrument within the container as shown.

FIGURE 1.49 RI7710/7725 SHIPPING CONTAINER




The shipping container for an Anritsu sources suspends the source between within the container using a plasticized insert.

FIGURE 1.50 RI7710/7725 SHIPPING INSERT



After placing the Anritsu instrument in the shipping container, it is sandwiched by the plasticized insert shown above, suspending the instrument within the container and securing it in place.

FIXTURES

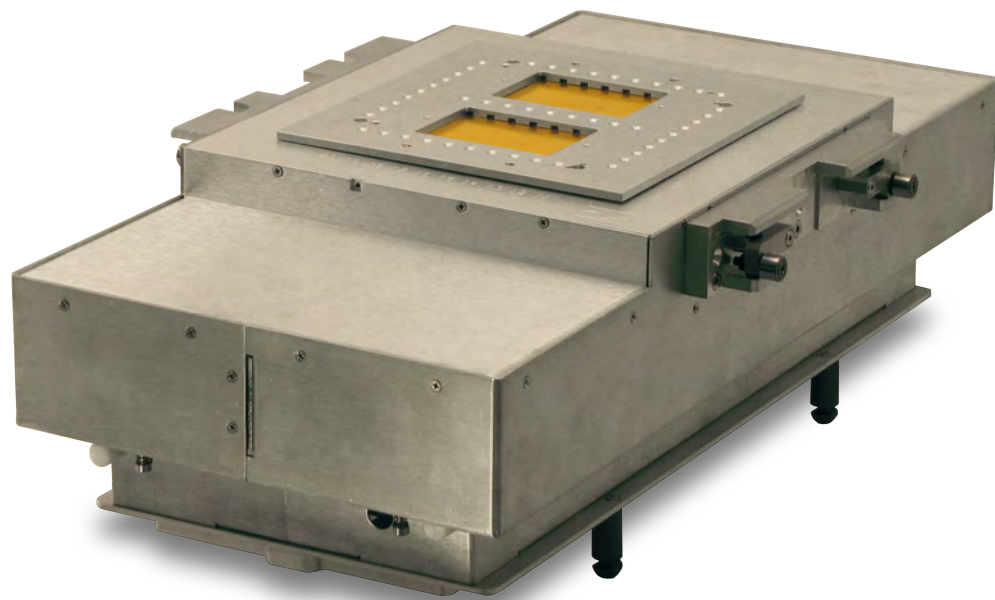

TOPICS

[General Information](#)

[Diagnostic & Calibration Interface Plates](#)

[Inserting & Removing](#)

[Shipping Requirements](#)

OVERVIEW


Cassini fixtures carry the modular architecture of Cassini into the device interface environment. Housed in a rugged aluminum enclosure is a completely configurable test resource environment. The form factor and discrete design layers support an application range from DC to 90GHz. Integration with Cassini's software allow fixtures to extend and enhance the capabilities of test instruments with an integrated calibration layer that delivers signal accuracy right to the device pin.

COMPONENTS

All of the functionality and capability of traditional load boards have been re-engineered to take advantage of the configurable instrument framework of Cassini. The discrete layers shown in [Figure 1.51](#), enable design and development flexibility for high-performance RF devices that can be optimized independently to suite application needs. Listed below are the component names and definitions:

1. **Device Interface Board (DIB) Clamp** - One of three components comprising the Quick-Lock™ system, the DIB clamp aligns and protects the Device Interface PCB by sandwiching it between electrically shielded aluminum with a pliable conductive elastomer liner. The clamp frame design coupled with the pedestal support enhances multi-site RF signal isolation.
2. **Device Interface Board (DIB)** - With most of the application specific resources moved inside the fixture, the DIB consists of a

FIGURE 1.51 ANATOMY OF A HARD-DOCK FIXTURE

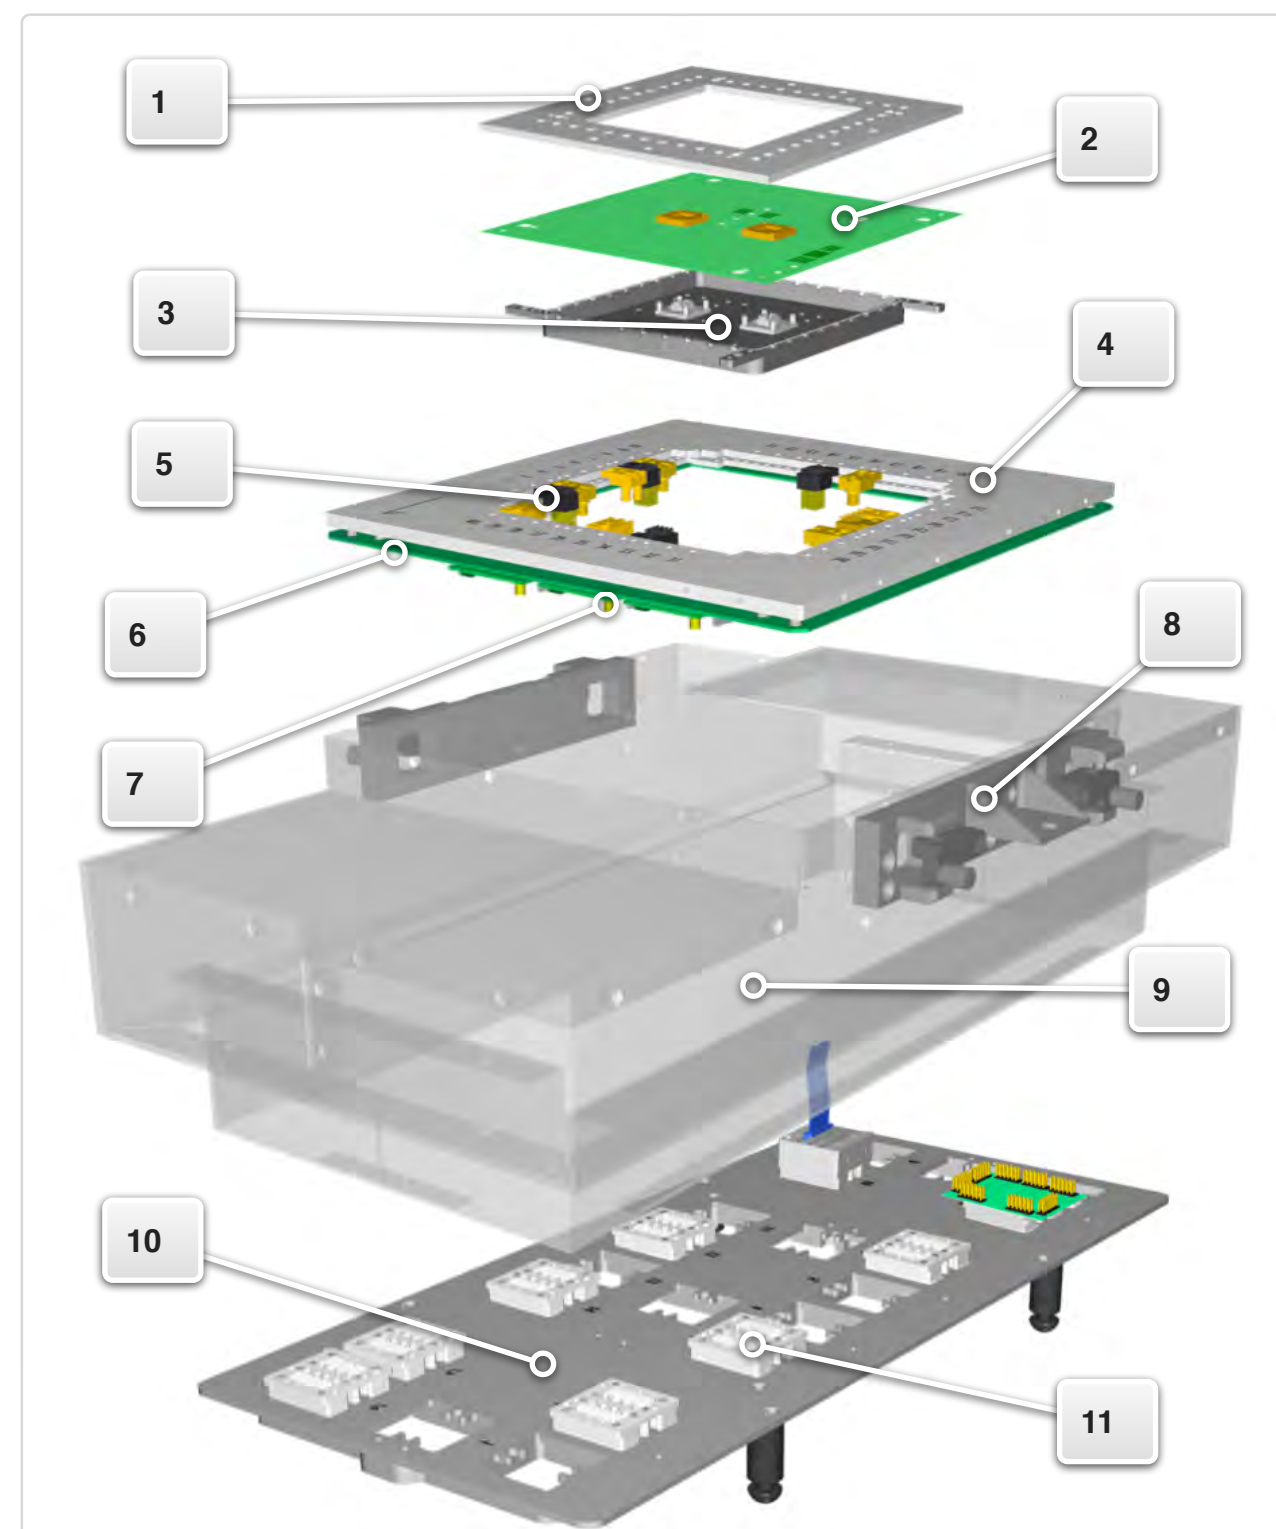

- 2-layer PCB of interconnect with passive RF matching components. With a solid ground plane on top and strip line microwave signal paths, the DIB delivers unmatched performance up to 20GHz, providing a low-cost solution for a high-wear component.
3. **Pedestal Support & Pedestals** - The Pedestals and Pedestal Support completes the Quick-Lock™ system. Aluminum pedestals and pedestal support provide reinforcement of the socket sites from underneath the PCB during handler insertion. The support housing doubles as both protection of the PCB as well as providing RF shielding and enhancing site isolation for the socket sites with a pliable, conductive elastomer liner.
 4. **Top Plate** - The aluminum top plate frame incorporates a hinge top design for easy access to resources within the enclosure in addition to over 30 signal launch locations to support custom site topologies.
 5. **Signal Launches** - Standardized and interchangeable DC, high-speed digital, RF, and millimeter wave inserts provide high performance, precision signal launching around the perimeter of the device interface board. The launches incorporate spring loaded pogo pins for DC and digital signal interfaces with the PCB. RF signal launches utilize a unique pressure contact and RF launch tab design on the PCB. Several RF launch designs offer differential pair, enhanced matching, and frequency range options.
 6. **Fixture Carrier** - the fixture carrier PCB provides 13 standard fixture module locations in addition to static control bits and $\pm 5V$, $\pm 15V$, and $+28V$ supply power distribution. The carrier includes interfaces with Cassini's RIFL test head data bus to bring integrated software identification, control, and RF path calibration into the device interface environment.
 7. **Fixture Modules** - Standardized instrument resources to extend and enhance TIM capabilities such as: RF switches, DC/RF relays, signal conditioning, parametric measure, and more.
 8. **Docking Ears** - part of the mechanical handler docking system with built-in mechanical dampening and compliance for a variety of handler setups.
 9. **Fixture Body** - The rugged aluminum enclosure provides protection of sensitive microwave components in addition to providing thermal and electrical shielding. The frame supports an integrated, precision handler docking system.
 10. **Bottom Plate** - an aluminum plate with 16 universal TIM interface slots and standard docking pins for interfacing with Cassini's test head. Each TIM slot accommodates standard TIM interface blocks with precision mechanical compliance.
 11. **TIM Interface Blocks** - standard, blind-mate signal interface blocks for all of Cassini's test instrument modules. The blocks bring all of the TIM resources into the fixture's device interface environment.


DIAGNOSTIC/CALIBRATION INTERFACE PLATES

Diagnostic and calibration plates are fixture design bottom plates, inserts and interconnect that are designed specifically for a test system configuration. The TIM interface blocks provide access to the various signal/path resources of microwave TIMs. Resources from different microwave TIMs are connected to other TIMs for routing signals for calibration or mimicking connections in an application fixture for custom or application specific calibration/diagnostic purposes. DC TIMs are connected specialized interface blocks for calibration and/or diagnostic purposes.

CAUTION: Always verify the test head TIM configuration matches the calibration/diagnostic plate interface block layout before docking to the test head. Keyed pins are designed to prevent mismatched TIM and interface block mating but unintentional damage can occur.

Every calibration/diagnostic plate is fitted with a serial ID chip located on the Fixture RIFL interface block. This serial ID matches the serial bar code sticker on the plate. The system software uses this ID chip to identify the plate when installed and automatically load the microwave signal path/interconnections. These software-defined interconnections and plate resources are needed to compile and execute diagnostics and calibrations of individual TIMs as well as the overall system.

FIGURE 1.52 CASSINI16 CALIBRATION PLATE EXAMPLE

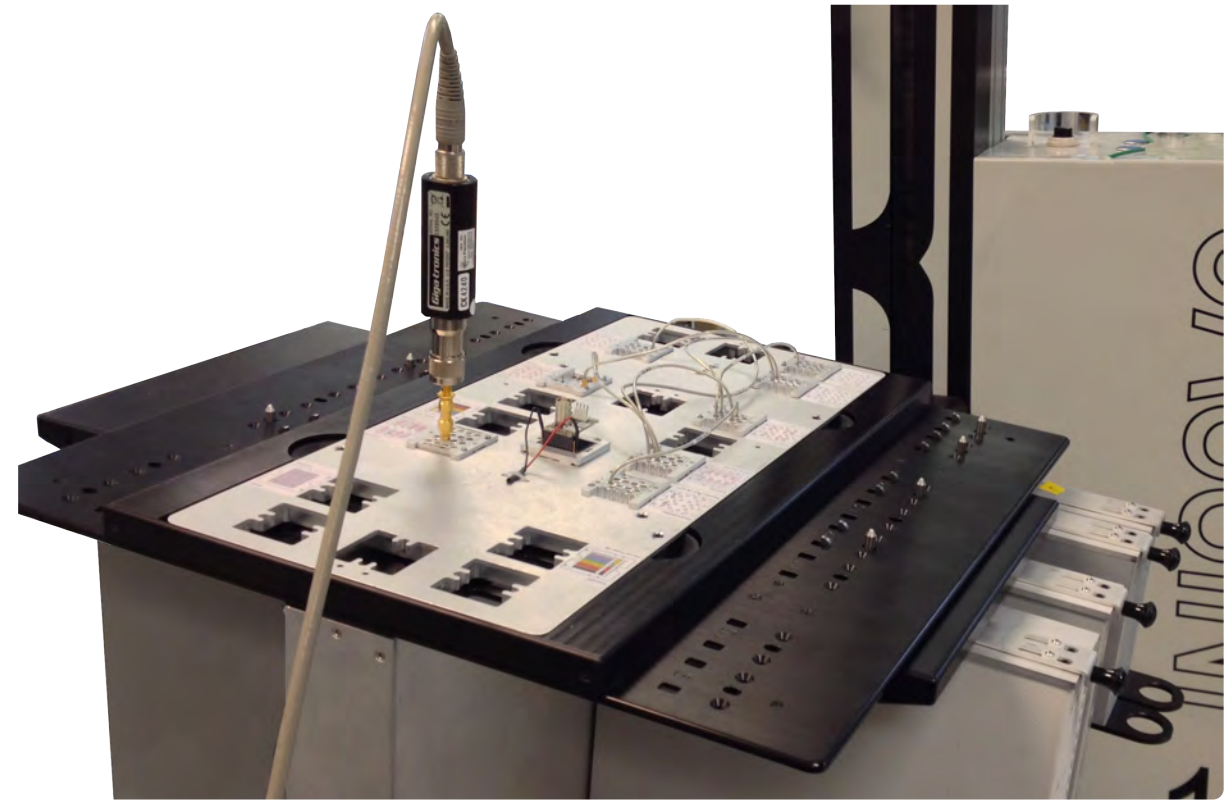

The image above shows a Cassini16 system and calibration plate with an RF power sensor/meter inserted to calibrate a microwave TIM.

INSERTING AND REMOVING FIXTURES

Fixtures and calibration/diagnostic plates are designed with test head docking fasteners, blind-mate TIM interface blocks, and alignment pins to make them easy to add and remove from the test system. These components provide easy access to test resources and require no teardown of the test setup when performing maintenance procedures on the tester. The methods for docking and undocking a fixture from the Cassini test systems are detailed in the following text.

CASSINI 16

NOTE: Always use a TIM-compatible 16 slot or 8 slot bottom plate/fixture when docking to a Cassini 16 test system.

TO DOCK A FIXTURE OR DIAGNOSTIC PLATE, FOLLOW THE STEPS BELOW:

1. Rotate the test head into the upright position and secure the rotation lock by putting it into the LOCKED position.
2. Position the manipulator arm into the MAINTENANCE POSITION using the locking latch found on top of the manipulator armature.

3. Insure that the TIM locations on the test head match the TIM interface blocks on the bottom plate of the fixture or calibration/diagnostic plate.

CAUTION: *Keyed pins on the TIMs and keyed receive openings on the TIM interface blocks are designed to prevent mismatched TIM/interface block mating but unintentional damage can occur if the layouts do not match when docking.*

4. Insure the docking rotary knob on the infrastructure is in the UNLATCHED position.
5. Verify that the test head is active and the docking system is operational by checking that both fixture docking LEDs (ALIGN and LOCK) on the side of the test head nearest the chassis are both red as shown in image 1 of [Figure 1.53](#).
6. Holding the fixture or calibration/diagnostic plate along the short edges of the fixture or bottom plate with the docking pins facing downward, orient the alignment arrow (found on the fixture top plate or the sticker on a calibration/diagnostic plate) to point at the infrastructure chassis. Bring the fixture or calibration/diagnostic plate straight down onto the test head, checking that the docking pins move freely into position within their receive ports and interface blocks comply with their corresponding TIM alignment pins. Verify that the fixture orientation and alignment is correct by checking that the ALIGNMENT LED is now green and the LOCK LED is red (as shown in image 2 of [Figure 1.53](#)).

NOTE: The alignment must be correct, and ALIGN LED must be green to activate the pneumatic locking drive system.

7. The bottom plate or fixture should sit level on the test head and be slightly above flush relative to the finger guard on the test head that surrounds the bottom plate.
8. Turn the docking rotary knob to the LATCH position. The pneumatic drive force will engage the docking canoes underneath the test head with the bottom plate docking pins, pulling the bottom plate down and flush across the finger guard.
9. Verify that the fixture has been successfully docked checking that the ALIGNMENT LED and the LOCK LED are now green (as shown in image 3 of [Figure 1.53](#)).
10. Perform a **System Check** to activate the fixture or calibration/diagnostic plate resources in the test system software.

CAUTION: Always verify that both docking indicator lights are green before moving or rotating the test head to prevent accidental drop of the fixture or calibration/diagnostic plate.

When docking the test system to a handler, typically the fixture is docked to the handler first, and then the test system is positioned underneath or adjacent to the handler/fixture by rotating the test head accordingly and using the rolling castors. Fine adjustment is achieved through the electromechanical lift and 2-axis planar/gimbal movement

FIGURE 1.53 FIXTURE DOCKING INDICATOR LIGHTS



The docking indicator lights are located on the side of the test head nearest the infrastructure chassis. When the test head is powered up and active but no fixture or calibration/diagnostic plate is present both LEDs are red.

to dock the system to the fixture/handler. The docking indicator lights are used to visually verify alignment and successful dock.

TO UNDOCK A FIXTURE OR DIAGNOSTIC PLATE:

1. Rotate the test head into the upright position and secure the rotation lock by putting it into the LOCKED position.
2. Position the manipulator arm into the MAINTENANCE POSITION using the locking latch found on top of the manipulator armature.
3. Turn the docking rotary knob on the infrastructure from the LATCH to the UNLATCH position.
4. Verify that the pneumatic lock disengages the docking canoes underneath the test head from the bottom plate docking pins by checking that the LOCK indicator light is now red. (The bottom plate should move away from the test head and slightly above flush across the finger guard on the test head.)
5. Remove the fixture or calibration/diagnostic plate from the test head by lifting upwards and away from the test head.
6. Perform a **System Check** to remove the fixture or calibration/diagnostic plate resources from the test system software.
7. When undocking the test system from a handler, turn the rotary latching knob from the LATCH position to the UNLATCH position. The test system can be moved away from the handler/fixture using the fine adjustment electromechanical lift and 2-axis planar/gimbal movement to undock. The test head can then be rotated back to upright and the system can be moved away using the rolling castors. The docking indicator lights can be used to visually verify undocking. The fixture can then be undocked from the handler.

LARGE CASSINI

NOTE: Always use an 8 slot bottom plate/fixture when docking to a Large Cassini test system.


TO DOCK A FIXTURE OR DIAGNOSTIC PLATE:

1. Rotate the test head into the upright position and secure the rotation lock using the slide handle.
2. Position the manipulator arm for ease of access to the fixture and lock into place using the two rotary knobs on the armature.
3. Insure that the TIM locations on the test head match the TIM interface blocks on the bottom plate of the fixture or calibration/diagnostic plate.

CAUTION: *Keyed pins on the TIMs and keyed receive openings on the TIM interface blocks are designed to prevent mismatched TIM/interface block mating but unintentional damage can occur if the layouts do not match when docking.*

4. Holding the fixture or calibration/diagnostic plate along the perimeter of the fixture or perimeter of the bottom plate with the docking pins facing downward, orient the alignment arrow (found on the fixture top plate or the sticker on a calibration/diagnostic plate) to point at the instrument rack. Bring the fixture or calibration/diagnostic plate straight down onto the test head, checking that the docking pins move freely into position within

FIGURE 1.54 CASSINI 8/RI7100C FIXTURE DOCKING HANDLES

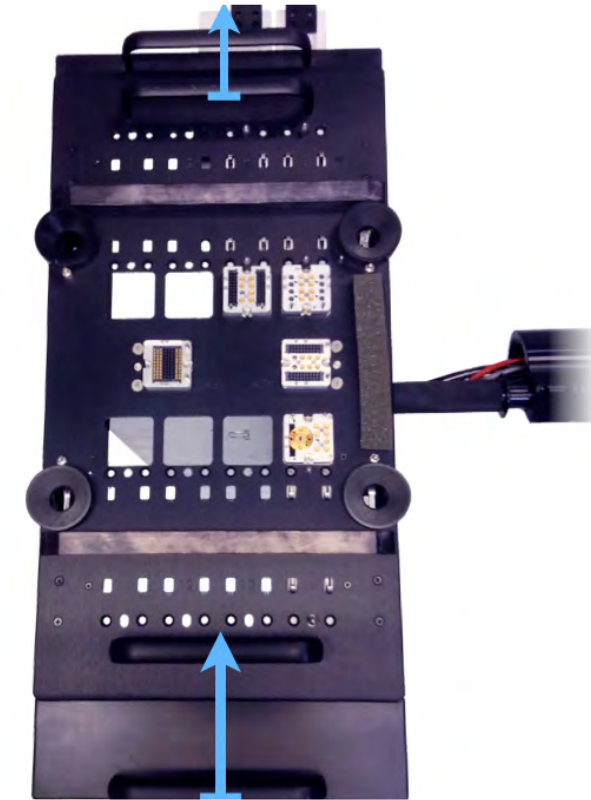

Actuation movement for locking a fixture to the test head.

- •
- their receive ports and interface blocks comply with their corresponding TIM alignment pins.
5. The bottom plate or fixture should sit level on the test head and be slightly above flush relative to the finger guard on the test head that surrounds the bottom plate.
 6. Depress the fixture lock release switch located on the side of the test head nearest to the instrument rack(reference [Figure 1.22](#) for

location) and manually actuate the canoe locks using the hand grips on the test head as shown in image 1 of [Figure 1.54](#).

NOTE: Depressing the solenoid release switch for an extended period of time (> 5-10 seconds) results in excess current through the switch. To prevent damage, the button has a built-in, cool down mode before reuse. The button will flash indicating the solenoid release is temporarily disabled during this cool-off period.

7. The locking canoes will engage the fixture docking pins, pulling the bottom plate down and flush across the finger guard.
8. Perform a **System Check** to activate the fixture or calibration/ diagnostic plate in the test system software.

TO UNDOCK A FIXTURE OR DIAGNOSTIC PLATE:

1. Rotate the test head into the upright position and secure the rotation lock by putting it into the LOCKED position.
2. Position the manipulator arm for ease of access to the fixture and lock into place using the two rotary knobs on the armature.
3. Depress the fixture lock release switch located on the side of the test head nearest to the instrument rack(reference [Figure 1.22](#) for location) and manually actuate the canoe locks using the hand grips on the test head as shown in image 2 of [Figure 1.54](#).

NOTE: Depressing the solenoid release switch for an extended period of time (> 5-10 seconds) results in excess current through the switch. To prevent damage, the button has a built-in, cool down mode before reuse. The button will flash indicating the solenoid release is temporarily disabled during this cool-off period.

4. The locking canoes will engage the fixture docking pins, pulling the bottom plate down and flush across the finger guard.
5. Perform a **System Check** to remove the fixture or calibration/ diagnostic plate resources from the test system software.

SMALL CASSINI

NOTE: Always use an 8 slot bottom plate/fixture when docking to a Small Cassini test system.

TO DOCK A FIXTURE OR DIAGNOSTIC PLATE:

1. Rotate the test head into the upright position and secure the rotation lock using the slide handle.
2. Position the manipulator arm for ease of access to the fixture and lock into place using the two rotary knobs on the armature.
3. Insure that the TIM locations on the test head match the TIM interface blocks on the bottom plate of the fixture or calibration/diagnostic plate.

CAUTION: Keyed pins on the TIMs and keyed receive openings on the TIM interface blocks are designed to prevent mismatched TIM/interface block mating but unintentional damage can occur if the layouts do not match when docking.

4. Holding the fixture or calibration/diagnostic plate along the perimeter of the fixture or perimeter of the bottom plate with the docking pins facing downward, orient the alignment arrow (found on the fixture top plate or the sticker on a calibration/diagnostic plate) to point at the instrument rack. Bring the fixture or calibration/diagnostic plate straight down onto the test head, checking that the docking pins move freely into position within

their receive ports and interface blocks comply with their corresponding TIM alignment pins.

5. The bottom plate or fixture should sit level on the test head and be slightly above flush relative to the finger guard on the test head that surrounds the bottom plate.
6. Depress the fixture lock release switch located on the side of the test head nearest to the instrument rack (reference [Figure 1.21](#) for location) and manually actuate the canoe locks using the hand grips on the test head as shown in image 1 of [Figure 1.54](#).

NOTE: Depressing the solenoid release switch for an extended period of time (> 5-10 seconds) results in excess current through the switch. To prevent damage, the button has a built-in, cool down mode before reuse. The button will flash indicating the solenoid release is temporarily disabled during this cool-off period.

7. The locking canoes will engage the fixture docking pins, pulling the bottom plate down and flush across the finger guard.
8. Perform a **System Check** to activate the fixture or calibration/diagnostic plate in the test system software.

TO UNDOCK A FIXTURE OR DIAGNOSTIC PLATE:

1. Rotate the test head into the upright position and secure the rotation lock by putting it into the LOCKED position.

2. Position the manipulator arm for ease of access to the fixture and lock into place using the two rotary knobs on the armature.
3. Depress the fixture lock release switch located on the side of the test head nearest to the instrument rack (reference [Figure 1.21](#) for location) and manually actuate the canoe locks using the hand grips on the test head as shown in image 2 of [Figure 1.54](#).

NOTE: Depressing the solenoid release switch for an extended period of time (> 5-10 seconds) results in excess current through the switch. To prevent damage, the button has a built-in, cool down mode before reuse. The button will flash indicating the solenoid release is temporarily disabled during this cool-off period.

4. The locking canoes will engage the fixture docking pins, pulling the bottom plate down and flush across the finger guard.
5. Perform a **System Check** to remove the fixture or calibration/ diagnostic plate resources from the test system software.

SHIPPING REQUIREMENTS

Factory assembled fixtures are shipped inside a shipping container with a specially designed fixture storage crate. Fixtures should always be packaged and shipped using the Roos Instrument's provided container and storage crate. DO NOT discard these containers. They are designed specifically for the instruments and TIMs with adequate sizing, anti-static material, and conformal padding to protect them during transport. If this container and shipping material are not available, contact Roos Instruments for further instructions.

Damage to fixtures during shipping is the responsibility of the shipping party. Roos Instruments assumes liability for damage of equipment shipped from the factory. Roos Instruments is not liability for shipping damage of equipment shipped to Roos Instruments for service, repair, or otherwise.

SERVICE INFORMATION

If a product is being returned to Roos Instruments for service, please provide enough information to help expedite repair and return of the product. For best service results, include as much information as possible: symptoms, date of failure, the current status of the instrument, etc.

Items for return must include a Return Merchandise Authorization (RMA) number. To obtain an RMA number, please email

support@roos.com or contact Roos Instruments at 1.408.748.8589 between the hours of 9:00 a.m. to 6:00 p.m. (U.S. Pacific Standard Time)

An RMA must be requested within 15 calendar days of the invoice date (ship date for credit card orders). NO returns of any type will be accepted without an RMA number and ALL returns must be shipped prepaid and insured via any common carrier (i.e. UPS, FedEx). Tracking information is required.

PACKAGING A FIXTURE

Proper packaging of fixtures prevents damage and improves response time for repair and replacement. Every fixture should be individually boxed with the supplied shipping container, storage crate, and packaging provided by Roos Instruments following the instructions below:

The fixture should be placed inside the provided shipping containers. If not available, the fixture should be shipped in a container with the following specifications:

- Single Wall Corrugated
- Bursting Test: 200 lb./sq. inch
- Min Comb WT Facings: 84 lbs per m sq. ft
- Size Limit: 75 inches
- Gross Weight Limit: 65 pounds
- Min Dimensions: 20"x20"x12"

The box used should allow for at least 3 inches of isolation between the fixture and box walls (not including the thickness of the bubble wrap).

Avoid placing styrofoam or packaging material in and around interface pins and ports as well as the interior of the fixture as this may damage connectors, cables, etc.

HANDLER AND PROBER INTERFACING

This section provides the procedures and recommended best practices for interfacing a Cassini 16 test system with a Handler or Prober. Reference the [Site Preparation for Cassini Test Systems](#) section in the System Information chapter for test floor compliance of environmental, electrical, and equipment requirements. Users should always adhere to the safety guidelines provided in the [Operator and Safety Information](#) section in the System Information chapter.

OVERVIEW

The Cassini test system was designed to enable a single user to interface and dock the tester to a handler or prober. The process breaks down into four main steps:

1. Connect the common or ground between the test system and handler or prober.
2. Mount the fixture to the handler or prober.
3. Position and dock the test system to the mounted fixture.

4. Connect the communication pod from the test system to the handler/prober.


The components necessary to mount the test fixture to a handler are provided in [Interactive 1.1](#). The handler's backplane is outfitted with an adapter that provides the thru mount threaded holes for mounting the adapter plate to the backplane and the docking plate to the adapter plate. The docking plate provides a manual actuating lever that docks the Cassini fixture to the handler. Four shoulder rails on the docking plate engage the 4 cams on the fixture's docking ears. These cams provide ~128 pounds of z-force pressure to align and secure the fixture to the handler with a high degree of z-height precision.

NOTE: The z-height can be adjusted to comply with the handler manufacturers specifications. Contact support@roos.com for more information.

With the fixture attached to the handler, the test system can be positioned and docked to the fixture using the rolling castors on the infrastructure, see [Figure 1.55](#). This method enables the use of the blind-mate TIM interfacing system on Cassini for more consistent and reliable docking compliance as shown in [Figure 1.56](#). Reference the [Infrastructure Section](#) for more information on the test head manipulator and the [Cassini 16 infrastructure diagrams](#) in the appendix for mechanical compliance. After the test system is docked to the handler, the handler/prober communication pod can be connected. The handler or prober pod is pre-programmed for a

specific model and configuration of Handler or Prober. Additional [Configuration Instructions](#) are available online.

INTERACTIVE 1.1 HANDLER DOCKING COMPONENTS (TOP VIEW)

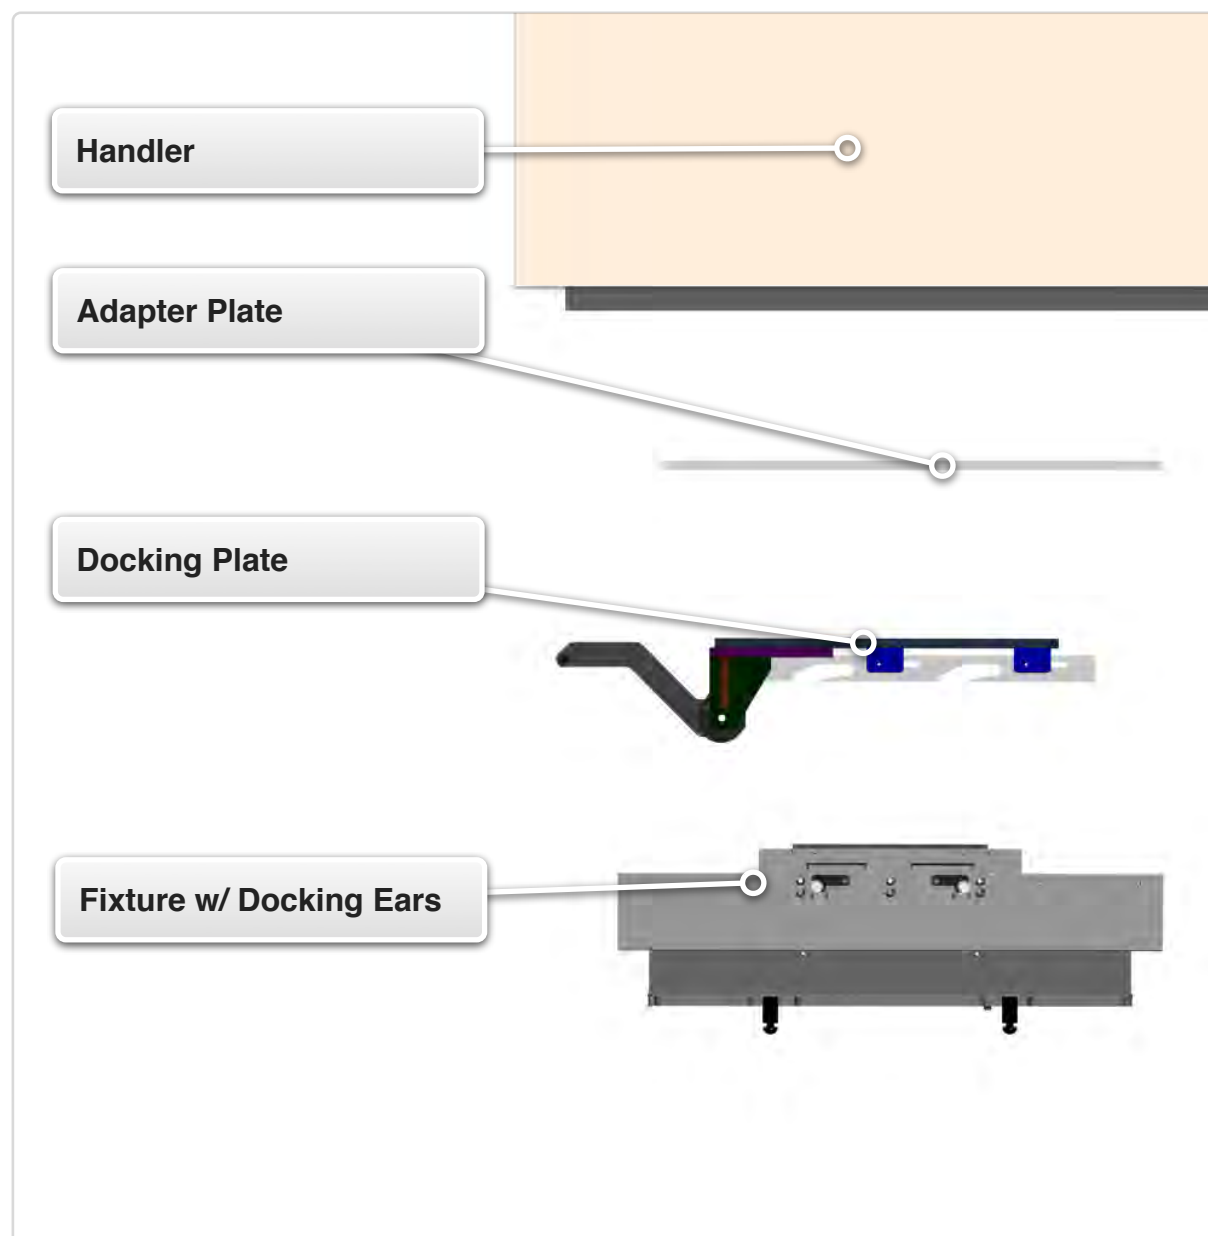

CONNECTING TO HANDLER OR PROBER:

Reference the [Cassini 16 Infrastructure Diagram](#) for component names and locations. The test system can be powered on with TIMs installed when connecting to a handler or prober.

1. The system should be installed following the instructions provided in the [Installation section](#) and powered-on following the instructions provided in the [System Startup Procedures](#).
2. Position the Cassini test system adjacent to the Handler or Prober in preparation for attaching the grounding cable.
3. Attach the green grounding cable with alligator clip from the Infrastructure (see [Figure 1.57](#)) to a grounding point on the Handler/Prober indicated by a post or mounting point with the ISO ground symbol $\perp$. If an auxiliary rack is present, an additional green grounding wire should be connected from the auxiliary rack to either the test system's infrastructure ground or the Handler/Prober ground.

A grounding cable is required to maintain a common voltage ground between the handler or prober and the test system to prevent ESD. Handler communication issues and/or DUT failures can occur if the green ground cable is not properly connected.

NOTE: The alligator clip can be removed from the ring connector when attaching the grounding cable with a fastening screw.

4. Dock the fixture (equipped with docking ears) to the handler or prober using the manually actuating docking plate.
5. Rotate and lock the test head into the docking orientation (test head facing the handler/prober with the attached fixture). Verify that the orientation of the fixture matches with the test head, checking that corresponding TIM block inserts in the fixture match the test head TIM layout before continuing. See the [Infrastructure](#) section and/or [Appendix](#) for more on the test head articulation operation and mechanical compliance.

WARNING: Always lock the test head rotation pin after any test head positioning to prevent accidental rotation that could cause injury to persons or damage to the test head manipulator's internal components.

6. Attach the GPIB, parallel, or serial cable from the Handler or Prober to the communication pod (see [Figure 1.58](#)).

NOTE: This cable must be provided by the facility and should be assembled according to Handler or Prober manufacturer's specifications.

7. Attach the RIFL3-RIFL2 cable to any of the Infrastructure's available [RIFL H-Ports](#) and to the Handler Pod or Prober Pod (See [Figure 1.59](#)).

NOTE: The Handler Pod or Prober Pod is pre-programmed for the intended Handler or Prober manufacturer model and interface type.

8. Perform a [System Check](#). This will identify the connected pod and add it to the system configuration.

NOTE: The pod will not appear in the instrument list of the Configuration Window. The pod can be viewed from the [Equipment Pool](#) window at the attached H-Port location.

9. Release the test head manipulator lock pin (reference [Figure 1.19](#)) and move the test head so that the test head indicator dot is in the 'Docking Position,' allowing for fine planar adjustment of the test head.

10. Use the manipulator arm elevation control buttons to align the fixture docking ports with the fixture docking feet.

WARNING: Insure that the fixture docking switch on the infrastructure is in the 'UNLATCH' position before continuing to the next steps. Failure to do so could result in injury to personnel or damage to the TIMs, test head, and/or fixture.

11. Position the test system using either the elevation control (vertical docking) or the rolling castors (horizontal docking) so that the fixture docking feet slide into the test head fixture docking ports.
12. Verify that the 'ALIGN' LED on the test head is green, indicating that the fixture is properly aligned with test head before proceeding. Reference the [fixture docking](#) section for more information.


13. Engage the fixture docking pins by turning the fixture docking switch to the 'LATCH' position.
14. Verify that the 'LOCK' LED on the test head now is green, indicating that the test system has successfully docked to the fixture. Reference the [Inserting and Removing Fixture](#) section.

DISCONNECTING FROM HANDLER OR PROBER:

It is recommended to permanently secure the Handler Pod, RIFL3-RIFL2 cable, and the GPIB, parallel, or serial cable directly to the Handler or Prober.


1. Undock the test head from the fixture following the instructions provided in the [Inserting and Removing Fixture](#) section.
2. Rotate and lock the test head into the upright orientation and lower the manipulator arm elevation so that the test head TIM interface can be viewed/accessed.
3. Place the test head manipulator lock pin into the lock position and using the test head position indicator into 'Maintenance Position' to lock the planar test head movement.
4. Detach the RIFL3 cable from the test head [RIFL H-Port](#) and secure the Pod and cables to the Handler or Prober.
5. Perform a [System Check](#) to remove the handler/prober pod from the test system configuration. Verify that the pod is no longer in the configuration by checking that the resource has been removed from the [Equipment Pool](#).

FIGURE 1.55 INFRASTRUCTURE POSITIONING

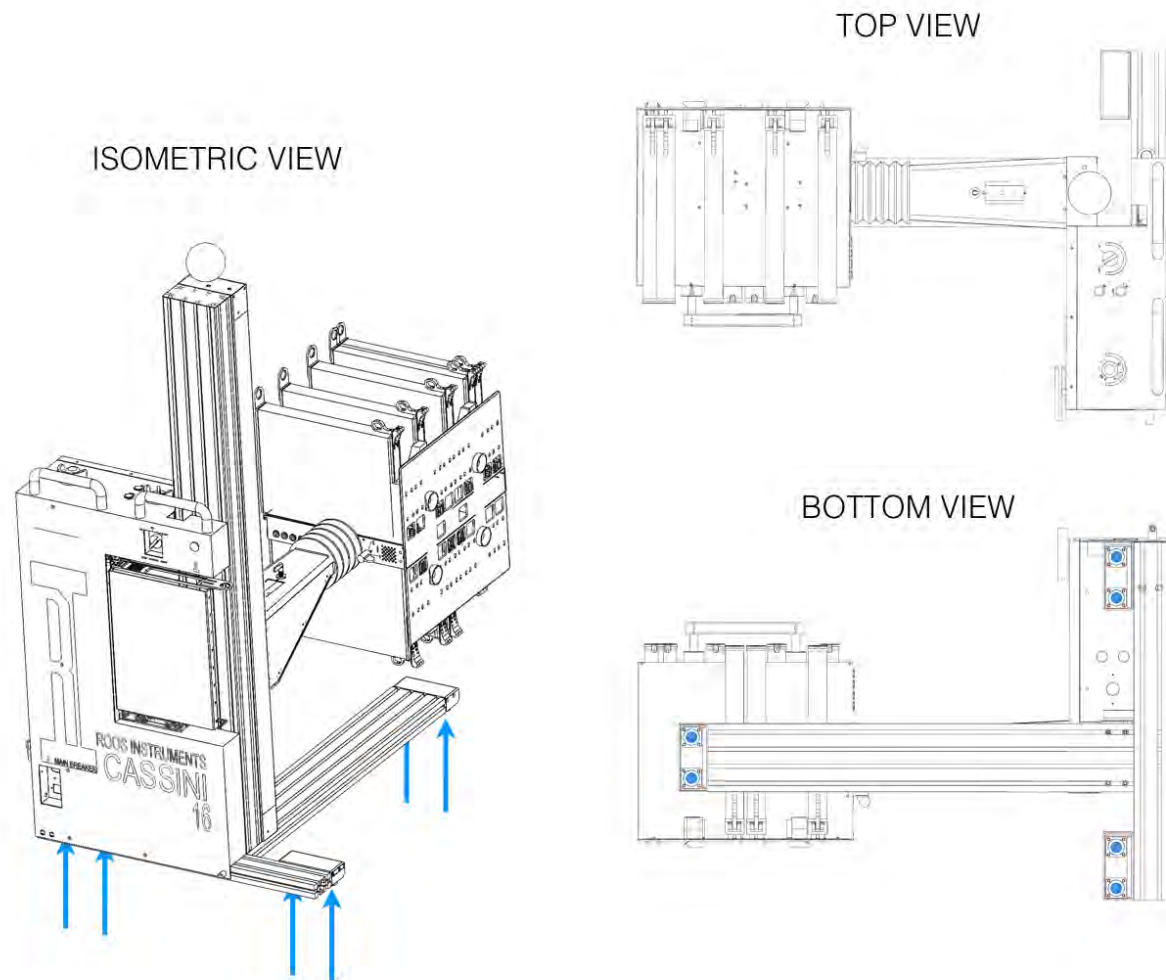


Six rolling castors on the underside of the infrastructure allow for positioning of the test system using the two hand bars located on the top of the chassis.

FIGURE 1.56 DOCKING CASSINI 16 TO A HANDLER (TOP VIEW)

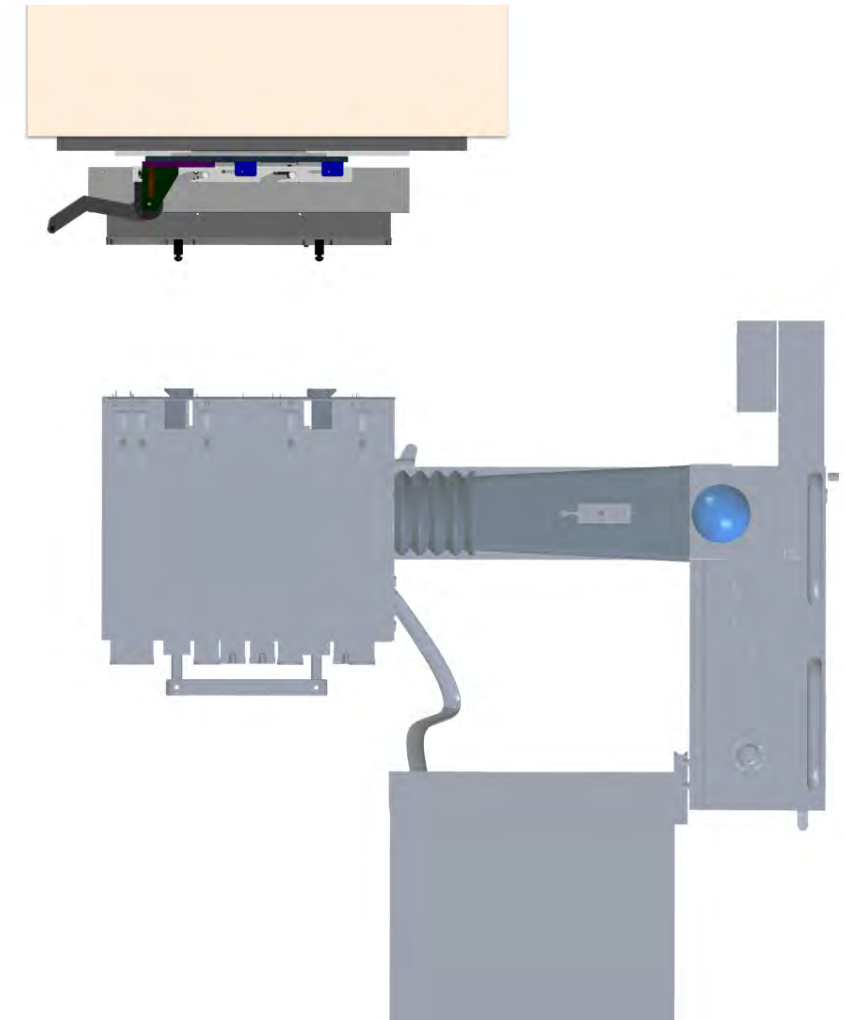

With the fixture secured by the docking plate to the handler, the Cassini test system can be positioned with the rolling castors and docked using the fine planar movement of the test head and the blind mate TIM interface.

FIGURE 1.57 GROUNDING CABLE

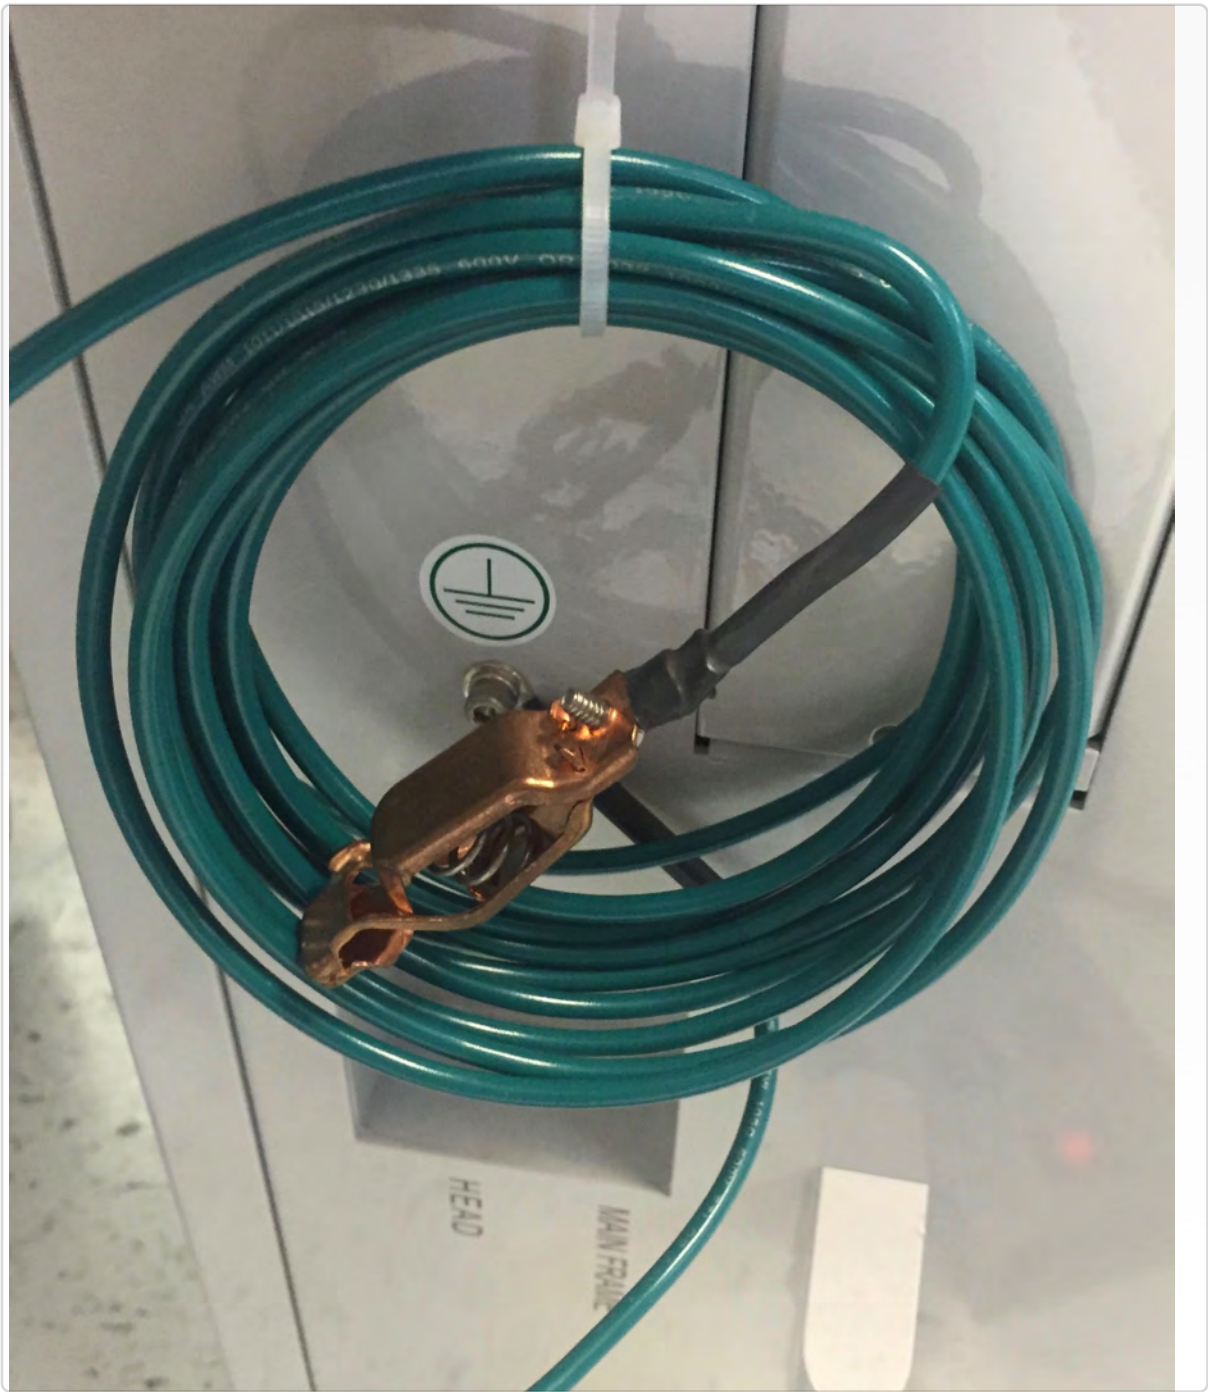

The green grounding cable from the Infrastructure must be connected to a grounding mount on the Handler or Prober.

FIGURE 1.58 GPIB HANDLER OR PROBER POD (RI8552B)




The Handler/Prober Pod provides a GPIB, Parallel, or Serial connector conversion to RIFL2 and pre-programmed communication translation from the Handler or Prober type to Cassini. The RIFL2 connector attaches to Cassini with the included RIFL3-RIFL2 cable.

FIGURE 1.59 RIFL3 TO RIFL2 CABLE



The cable provides a conversion from a RIFL2 connector (Shielded RJ45) that plugs into the Handler/Prober Pod and a RIFL3 plug that connects to the RIFL H-Ports on the side of the Cassini test head.

SOFTWARE: ENVIRONMENT & TOOLS

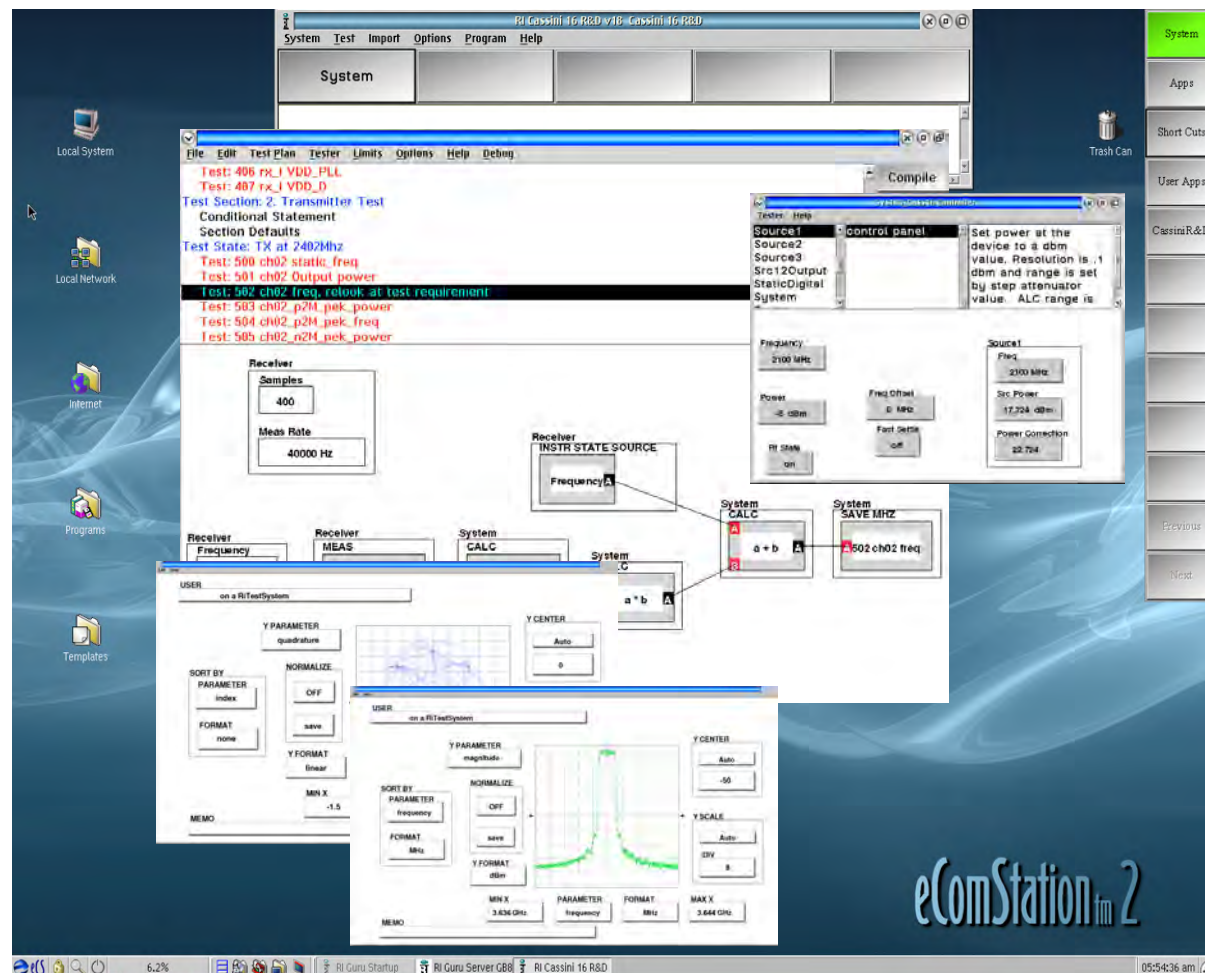

TOPICS

[Operating System](#)

[User Interface Control](#)

[Shortcuts & Software Patches](#)

[Main System Window](#)

[Message Window](#)

[Tester Configuration](#)

[Equipment Pool](#)

[Guru Introduction & Concepts](#)

[Guru Browser](#)

[Viewing Objects in Guru Browser](#)

[Importing Objects with Guru Browser](#)


[Exporting Objects with Guru Browser](#)

[Object Revision History](#)

OPERATING SYSTEM

Cassini’s test software is built upon the eComStation (eCS) operating system. With its’ combination of stability, reliable performance, and relatively small memory footprint, eComStation provides environmental features and controls in parity with operating systems such as Linux, UNIX, and Windows based systems. While majority of test operations are executed through the Cassini test system

FIGURE 1.60 FEATURES OF THE ECS OPERATING SYSTEM

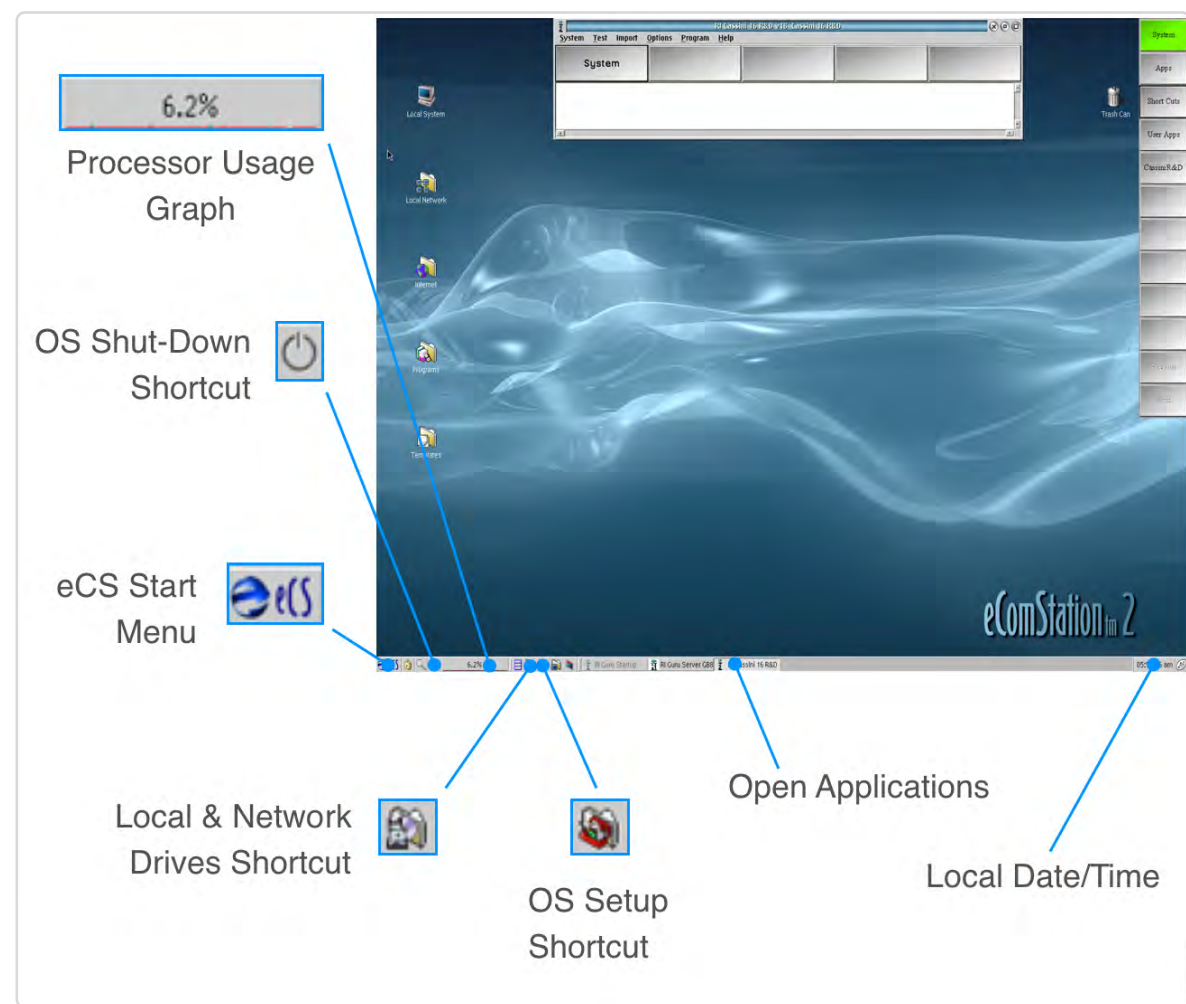

environment, some useful features of eComStation are shown below for reference.

In [Figure 1.60](#), several useful shortcuts and features are depicted:

- **Processor Usage Graph** - displays a real-time line graph and percentage value of the current system processor usage. This tool is useful for determining the usage of current and background applications running on the test system.
- **OS Shutdown Shortcut** - provides a single button function for accessing the shutdown window of the operating system. This is typically used for a complete system shutdown after the Cassini test system software has been shutdown.
- **eCS Start Menu** - provides a central launching point for eComStation applications and programs. Applications such as the screenshot capture tool PMCamera can be accessed through the Start Menu.
- **Local & Network Drives Shortcut** - provides a pop-up list of local and network attached drives. A left-button click on a drive in the list shows subdirectories and files. A right-button click opens a subdirectory view within a window with various file and directory hierarchical views.
- **OS Setup Shortcut** - provides single button access to the various operating system setups and preferences in a pop-up list view. A left click on the list opens the selected setup applications, and a right-button click opens the applications within a window.

- **Open Applications** - open application windows are displayed along the operating system bar along the bottom of the screen. Left-clicking on a tab will make the selected application window active and highlight it's associated tab along the bottom. Background applications are displayed in the order they were launched. Right-clicking a tab provides an options pop-up list. Open applications can be browsed quickly by using the keyboard shortcut of holding down the Shift key and pressing the Tab key to switch between them. As well, clicking both the left and right mouse button anywhere on the background will open a list view of all open windows.
- **Local Date/Time** - the local date and time of the system is displayed in the lower right-hand corner of the screen. This date and time are used by the test system for local timestamp of files and data created and managed in Guru.

CASSINI TEST SYSTEM ENVIRONMENT

The Cassini test system software is accessible through the login sidebar button found on the right side of the screen. This environment is designed specifically for managing the various resources of the Cassini ATE system.

NETWORK CONNECTIVITY

The Cassini system uses a networked file management system called Guru (more information provided in the [Guru section](#)). The Logon/System button is color-coded to represent the test system's Guru network connection status. This color-coding updates in real-time to provide the user with a visual cue of the test system's network status. See Guru section for more information.

USER INTERFACE CONTROL

The log-in environment enables access control and provides specific software user-interface environments tailored for engineers, service and support technicians, and test operators. User interface, software application, and file directory access control can be customized for individual users, groups of users, and customer sites.

SERVICE & SUPPORT TECHNICIANS

Service and support technicians have user-defined access to tester features and functionality that can be tailored to customer specifications. Typically these users have access to essential software tools, functions, and files to perform tester general maintenance and diagnostic procedures in support of the test equipment. The tools typically include:

- Equipment Pool
- System Configuration Window & Control Panel
- Guru Applications: Importer/Exporter/Browser/Address Book
- Diagnostic Plans & Data
- Calibration Plans & Data

ENGINEERS & TEST DEVELOPERS

Engineers and test developers have wide access to all the design and development tools for device, device interface, and test plan development tools as well as the file database directory on the Cassini ATE system.

TEST FLOOR OPERATORS

A simplified touch screen user interface is deployed for test floor operators that can be customized to sites and users. An example of the UI for operators is provided below. The touch screen user controls

are limited to pre-approved test plan execution and essential tester functionality, i.e - test start/stop/pause/re-test, etc. Access to the underlying files, file directories and test development environment is prohibited by the UI.

SHORTCUTS & SOFTWARE PATCHES

Shortcuts are predefined test environment packages that define the Cassini test system environmental and operational software update versions. These settings are typically customized to company parameters and/or site and include:


- User interface versions and settings
- Test software and instrument updates, drivers, and firmware patches

Shortcuts are typically provided by Roos Instruments as locked shortcuts. Locking a shortcut sets the current environment settings and software patches into a fixed set that cannot be altered. A system running a locked shortcut configuration will not receive software updates or patches. Updates and features are provided in new/released shortcuts.

NOTE: Only one shortcut can be active at time. To launch a different shortcut, the user must first close Cassini application before launching a new shortcut.

Shortcuts can be accessed by the Short Cuts button found on the right side of the screen after logging into the tester, see [Figure 1.61](#). Scroll the list by Left-clicking on the PgUp/Up or Down/PgDn buttons to move up or down the list. To launch the shortcut, left click on the button of choice from the list. Once a shortcut is selected, the main system window will launch and appear at the top portion of the screen. The name of the launched shortcut is displayed across the top of the main system window's menu bar.

FIGURE 1.61 OPENING A SHORTCUT

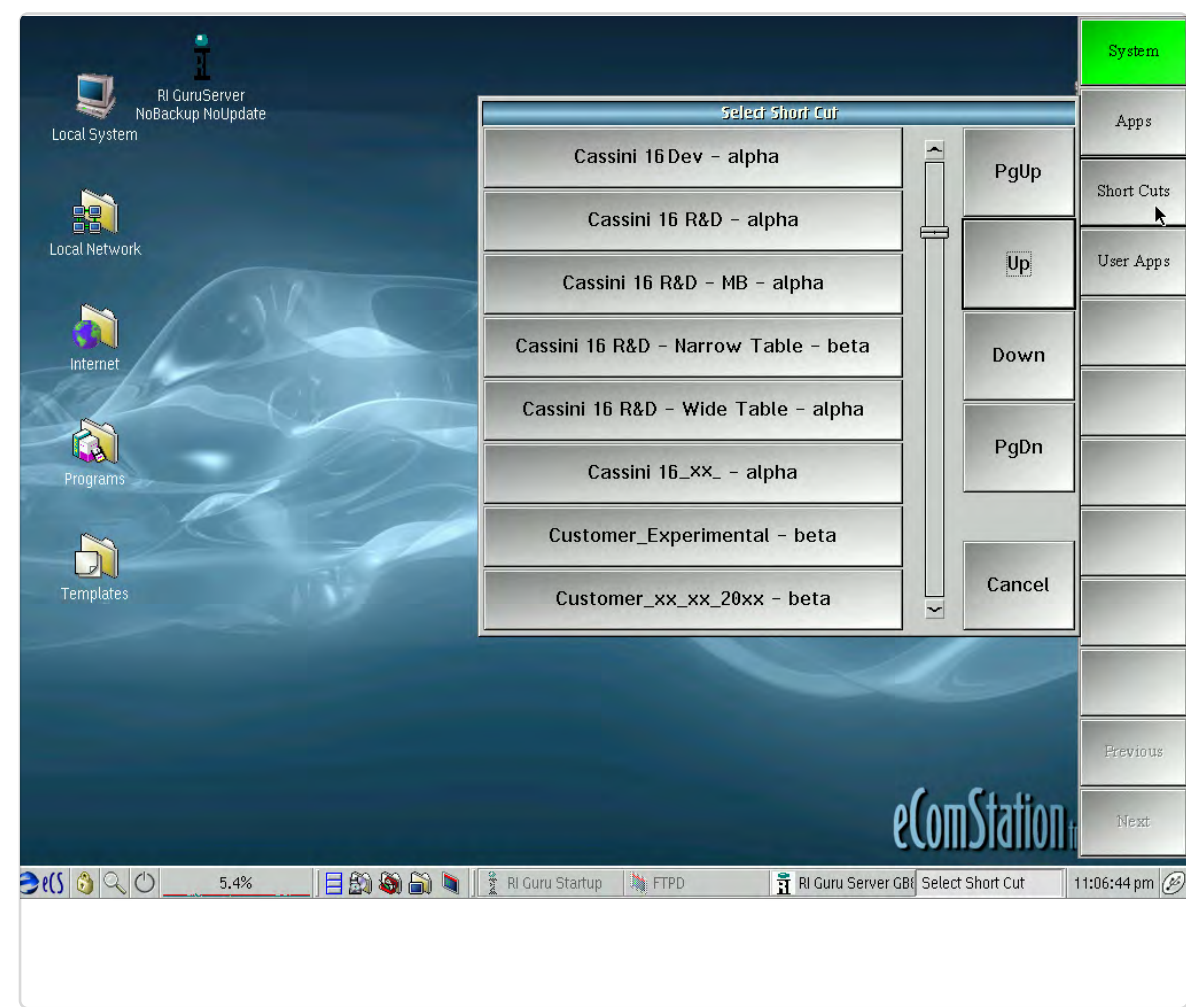

CLOSING A SHORTCUT

Before closing a shortcut, always save and close all other applications and windows. To close the shortcut, left-click on the 'x' button found at the top right corner of the main system window menu bar. A pop-up window will prompt the user to confirm closing the shortcut. Selecting "Yes" will close the shortcut. Another option is to select the System menu option, and then select 'Quit' from the drop-down menu list. A pop-up window will prompt the user to confirm closing the shortcut.

NOTE: To launch a different shortcut, the user must logoff of the currently active shortcut.


SOFTWARE UPDATES

Software patches provide updates, improvements, new features, and software updates for the Cassini test system. Roos Instruments releases software patches on a regularly basis, and there are several ways to view them.

To view the list of patches that are currently loaded, select the 'Options' menu from the main system window, and then select the 'Show patches...' option from the list. This opens a 'Loaded Patches' window as shown in [Figure 1.62](#). Loaded software patches are listed in the top pane of this window with the bottom pane providing a description of the patch. Patches are listed from oldest to latest from top to bottom. The patches in the top pane show an alphanumeric ID


that matches the patch with the application it updates. Following the decimal point is a three unit patch number. This designator number is

FIGURE 1.62 VIEWING SOFTWARE PATCHES: OPTION 1

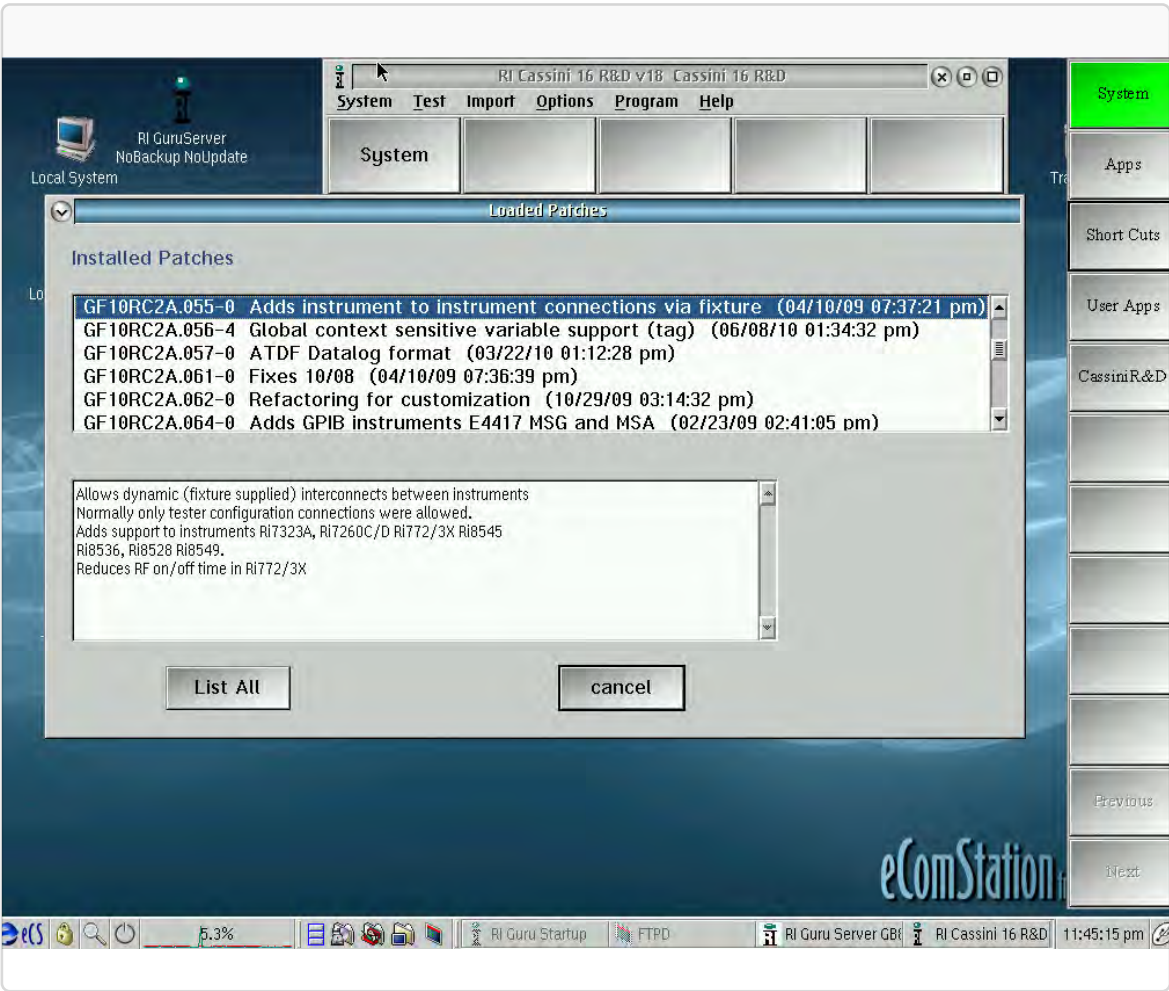

The Loaded Patches window is accessed through the **Options > Show patches...** menu selections in the main system window. The selected patch belongs to 'GF10RC2A,' which is the ID of the application that will be updated, with patch designation 055, subversion 0. It was created on April 10, 2009 and includes a description of the patch features in the lower pane.

FIGURE 1.63 VIEWING SOFTWARE PATCHES: OPTION 2

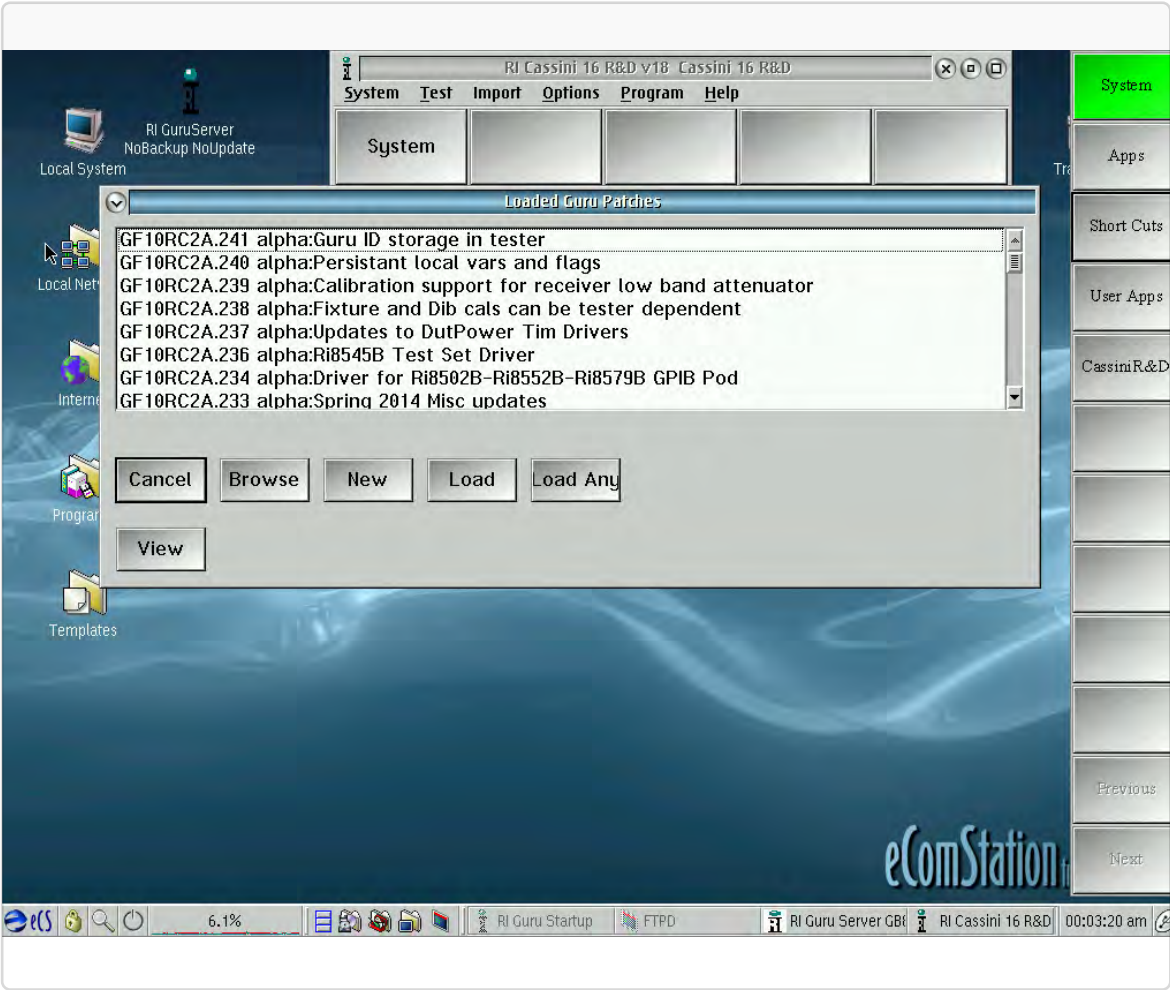

The Loaded Guru Patches window is accessed through the **Program > Guru Patch...** menu selections in the main system window. This option offers additional features such as browsing and loading additional patches, and viewing all patches in a text list for saving, email, or printing.


the commonly referenced name of the patch. Following the patch number and '-' character is the patch subversion. Newer versions of the patch/update are defined by an increment of subversion number.

Another option for viewing software updates is accessed by selecting the 'Program' menu of the main system window, and then selecting 'Guru Patch...' from the drop-down list. This option, shown in [Figure 1.63](#), opens a 'Loaded Guru Patches' window with several more options. Loaded updates/patches are displayed in the top pane of the window in order of descending patch number beginning with the highest patch number at the top of the list. As with the other patch viewing option, the alphanumeric designator of the patch's application is listed, followed by the three digit patch number. This is followed by the release version and a brief description of the patch. To view a list of all loaded patches in a text view, the user can select the View button below the list pane. This is useful for saving, emailing, or printing the list of loaded patches on the tester. Additional patches can be loaded by selecting the Load button and choosing from the available list in the pop-up window. The other button selections are reserved for Roos Instruments internal purposes only.

MAIN SYSTEM WINDOW

The main system window is the central point for control and configuration information of the Cassini test system. The window launches automatically once a shortcut is selected and can be used as a quick visual verification that the tester is logged into a user and is running a software shortcut. The main system window provides access to the Equipment Pool window, Tester Configuration window

FIGURE 1.64 MAIN SYSTEM WINDOW

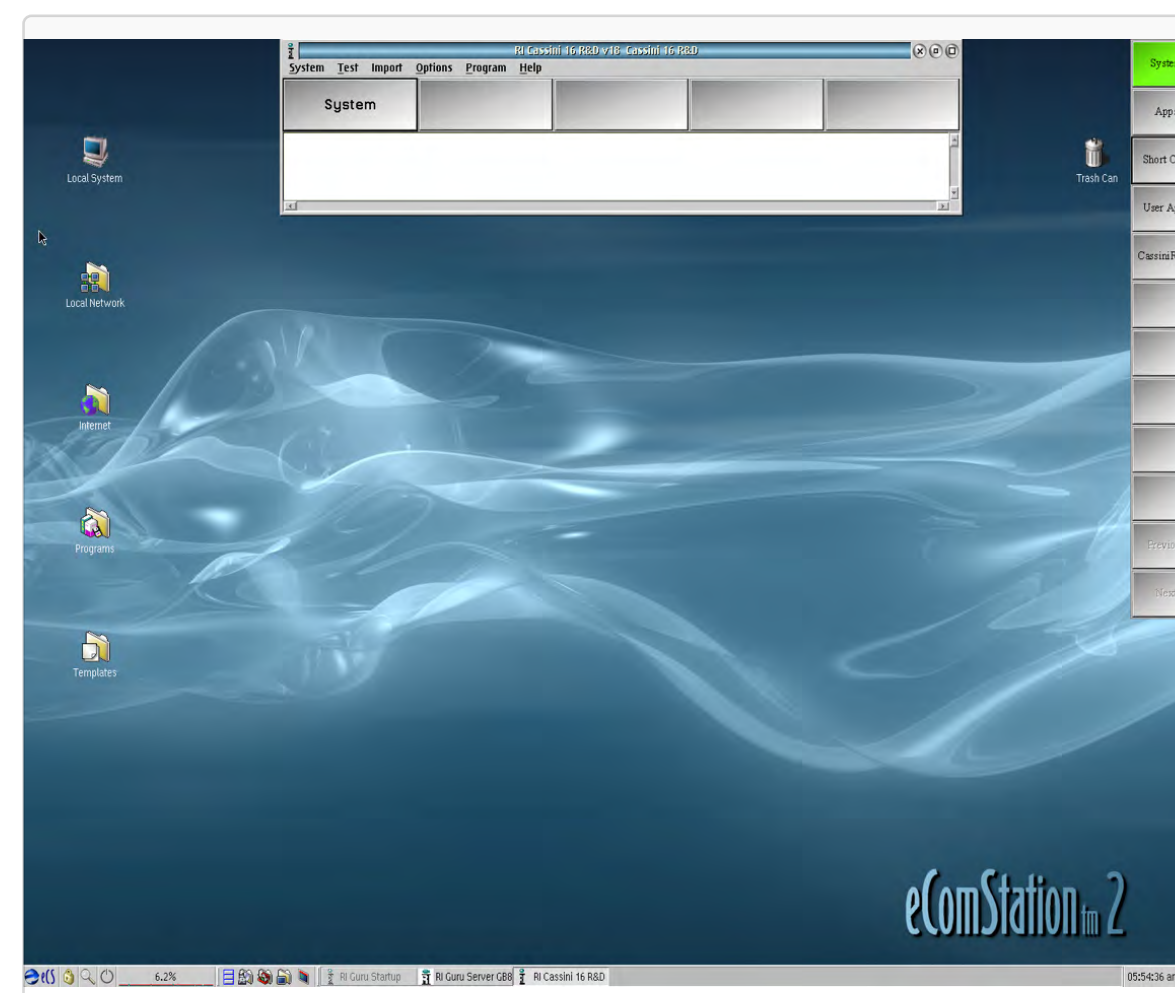

and System Messages window along with providing instant instrument control features through the Controller window and performing system checks and system startup functions.


SYSTEM CHECK

The system check function is used to update the status of the Cassini test head configuration. Performing a system check requests the tester to refresh the status of connected instruments, fixtures, and peripheral hardware on the test head by way of the Roos Instruments Fast Link (RIFL) bus. In the case of added TIMs, the system check will verify the instruments identity, its location on the test head, provide 48V power to activate it, assign a serial number and RIFL address, and then add its' instrument functions to the list of available controls in the Controller and Editor panels. In the case of a TIM or fixture being removed from the tester, the system check will relinquish the test head slot, serial number, and RIFL address back to the software as an open slot and remove that instrument's function from the list of available instrument functions in the Controller and Editor panels. In the case of an instrument that has remained in the system before and after the system check, the software does not make any changes. Whenever a test instrument module (TIM), fixture or diagnostic/calibration plate, or auxiliary instrument (by way of a RIFL/GPIB pod) is added or removed from the test head, a system check function should be performed.

This function is performed by selecting the **System** button located on the left side of the main system window, and then selecting **Check** from the pop-up window of button choices. Once the Check button has been selected, the UI will not respond to user selections until the

pop-up window closes. The user can verify that the tester is performing the system check function by observing the processor activity meter located at the bottom of the OS screen and notice changes to any open Tester Configuration or Equipment Pool windows.

FIGURE 1.65 SYSTEM CHECK

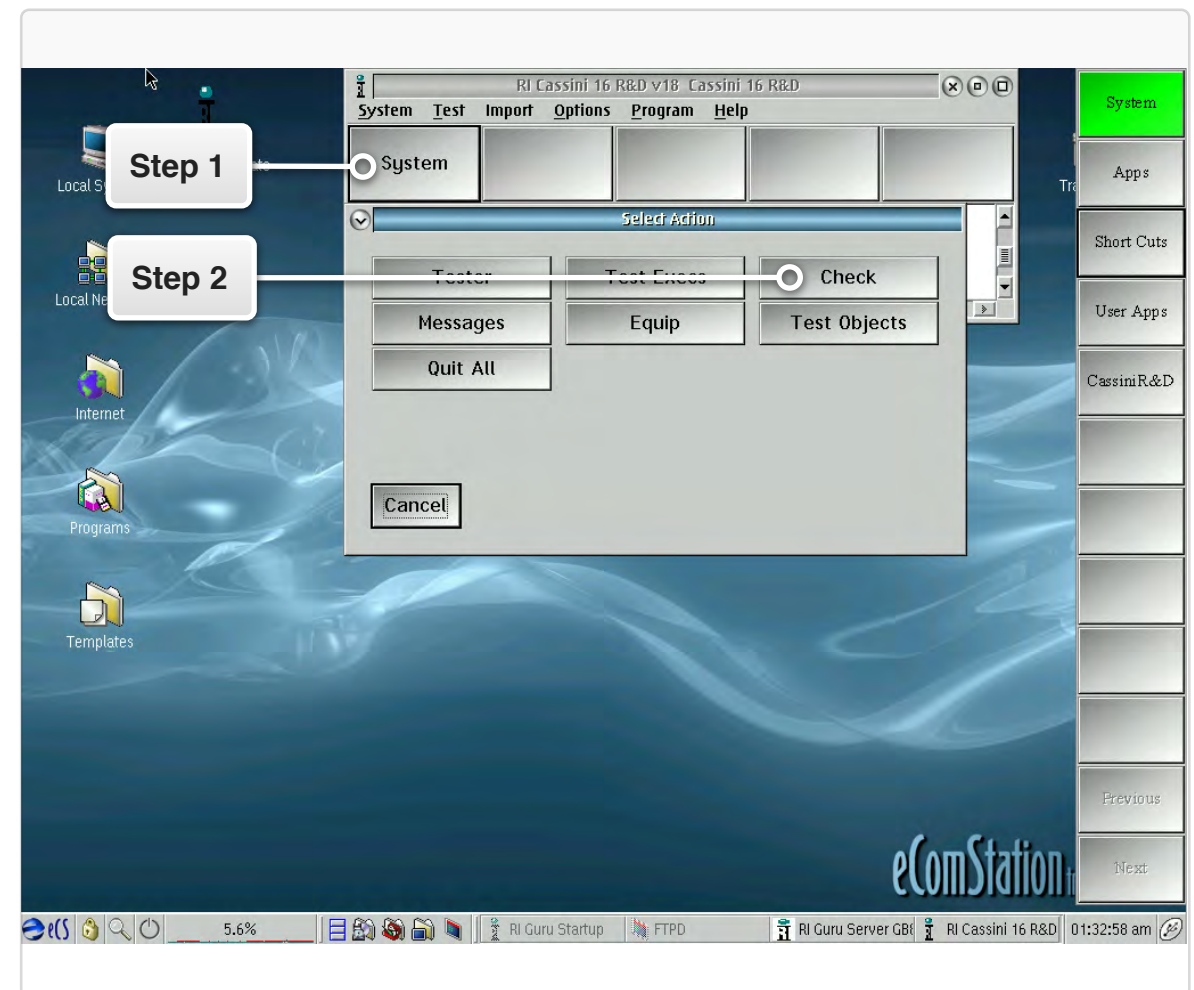

A system check is performed by selecting the 'System' button from the main system window, and then selecting the 'Check' button from the pop-up window.


CAUTION: Attempting to execute other tester commands or functions while an active ‘System Check’ request is being processed can result in erroneous instrument configuration information and/or system walk back errors. Always wait for the pop-up window to close before continuing.

SYSTEM STARTUP

The system startup function serves a similar function as the system check function. A system startup sends a software request to the Cassini controller to rebuild the entire RIFL node tree, hub, and attached instruments and equipment on the test head. This function will remove power from all instruments and equipment attached, rebuild the RIFL node-tree topology and recheck in all instruments connected to RIFL back into the system configuration. The system startup is a more thorough and exhaustive method for checking equipment and TIMs into the tester, and therefore more time consuming than a system check. Typically, startups are used as a soft restart of the test system if there is an unknown loss in communication with a test instrument module or modules.

NOTE: Always remove fixtures and or diagnostic plates from the test head before performing a system startup. If the startup was successful, system checks are adequate for subsequent equipment additions to the test head.

FIGURE 1.66 SYSTEM STARTUP

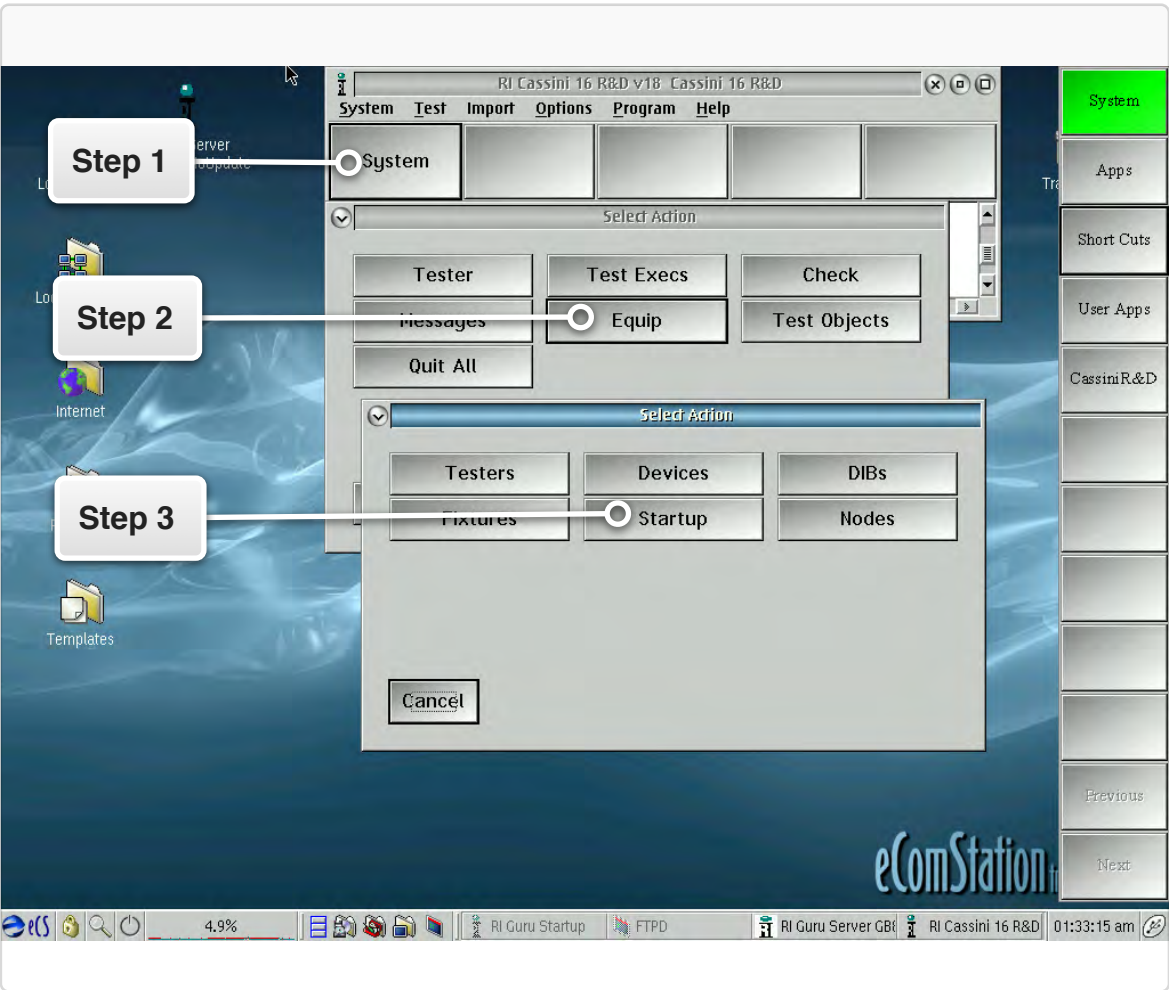


A system startup is performed by selecting the ‘System’ button from the main system window, then selecting the ‘Equip’ button and then ‘Startup’ button progression from the pop-up window options.

MESSAGE WINDOW

The message window provides a console for system message information from the Cassini test software environment. Information such as system status, responses from applications, system warnings, and errors are displayed in the message window. Messages follows a common convention of general information and warnings in black text, and errors displayed in red text. It will display the date and time of system checks and instrument self calibrations as they occur. The window is also useful during test development, diagnostics or calibration, displaying compile warnings for instrument settings in black text, with compile errors in red. System errors such as RIFL communication loss to an instrument are also displayed in the messages window in red text. The console provides feedback confirmation of RIFL loopback tests conducted from the equipment pool. [Figure 1.67](#) shows an example of the messages window.

The message window can be accessed through the main system panel by selecting **System > Messages**.

FIGURE 1.67 MESSAGE WINDOW

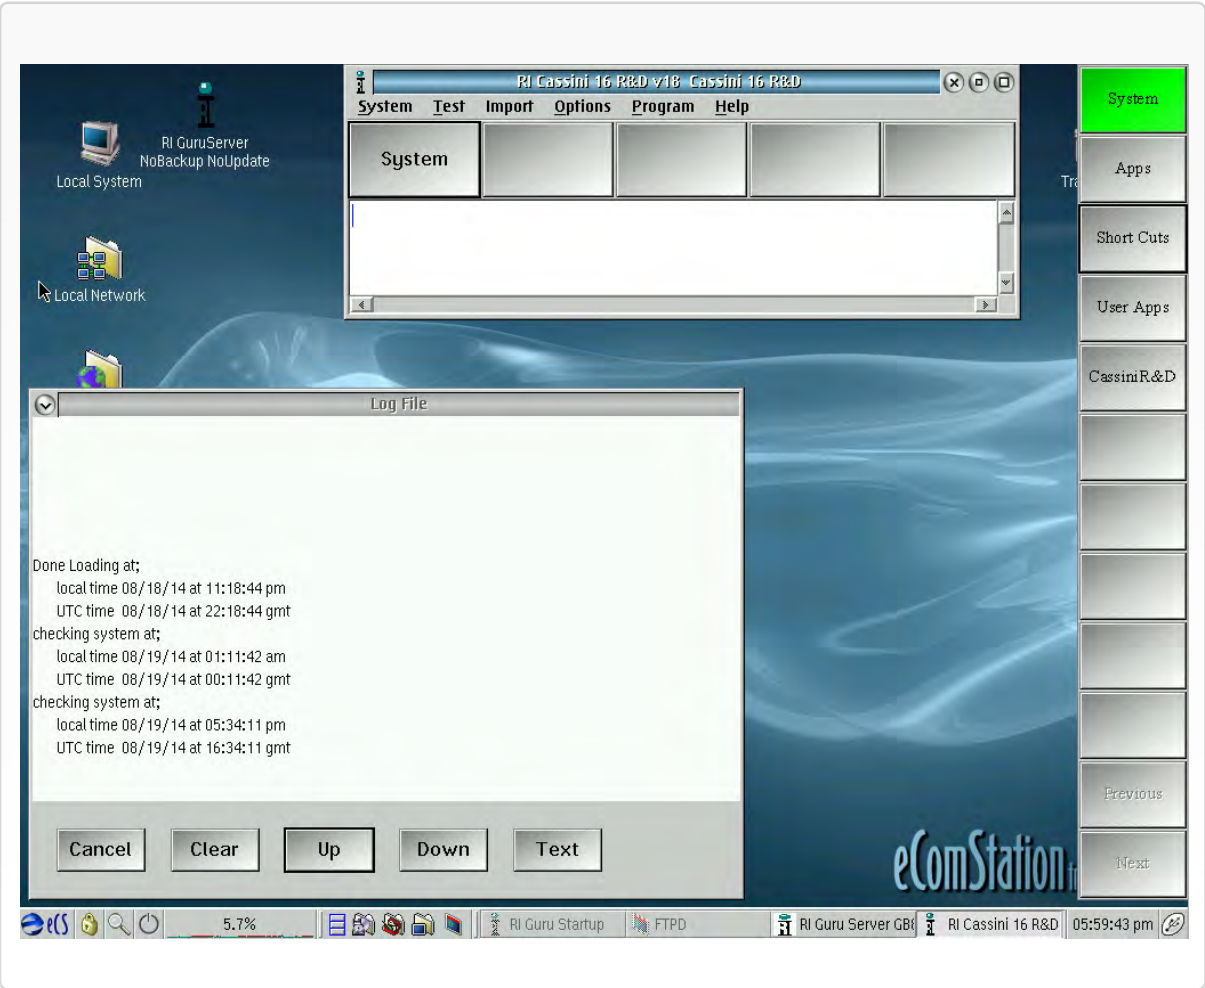

The message window is shown at the bottom left. The displayed messages reflect a loaded Shortcut and two subsequent system checks completions.

TESTER CONFIGURATION

The tester configuration window provides a comprehensive summary of the current system configuration. All instruments and equipment connected to the test system are displayed in this window such as: the system controller, test instrument modules, fixtures and diagnostic/calibration plates, and calibration kits. As well, software-created instruments and resources or “virtual instruments” as they are commonly referred to, are also displayed in this window. Examples of these virtual instruments include the ‘vna’ (combination of the Testset, Source, and Receiver TIM resources), ‘noise figure’ Device Control Definitions (register definitions), and calibration kits (data for calibration standards). [Figure 1.68](#) shows an example of the tester configuration.


The configuration window can be accessed through the main system panel by selecting the **System > Tester**.

NOTE: Handler/GPIB Pods can only be viewed in the Equipment Pool window. Handler pods are factory programmed, but require onsite configuration to the handler type and local settings before use.

Performing a **System > Check** or **System > Startup** will refresh this list. The tester configuration window is divided into three panes. The pane at the top of the window displays the connected equipment resources. Test instrument modules are represented by their individual sub-instrument model numbers in alphabetical order, i.e. - an RI8546 Device Power TIM is shown as three instruments: DUTControl,

RI7421B Dut Control; PowerVI, RI7431A High Current Supplies; StaticDigital, RI74311A 16-bit Device Digital Controller. If the instrument is part of a TIM, the test head slot location is displayed at the end of the of the instrument name in the top pane. Multiple instruments of the same type will be represented with the sub-instrument name followed by an enumeration number. Depending on

FIGURE 1.68 TESTER CONFIGURATION VIEW

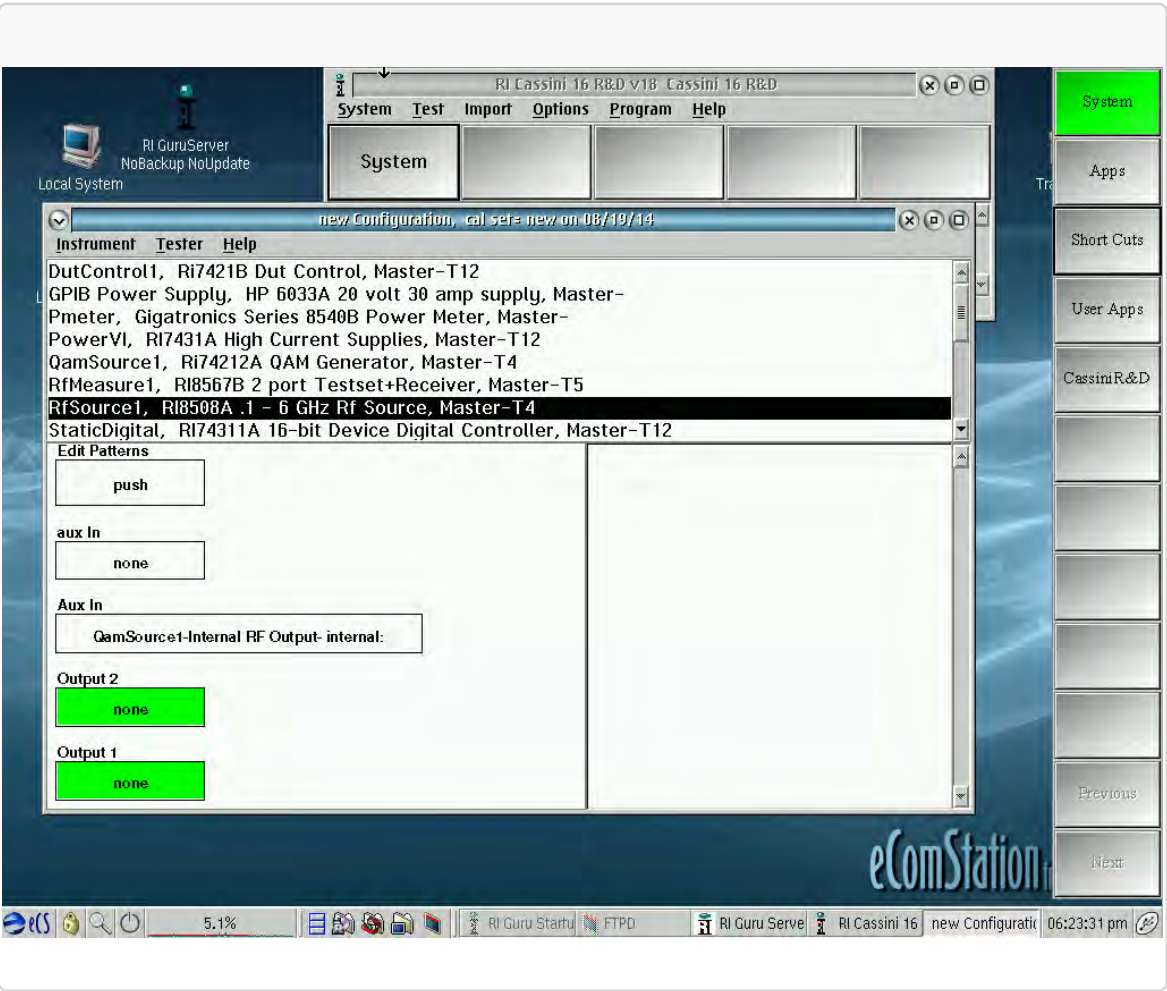

The tester configuration or tester view displays all installed instruments.

the configuration settings and/or instrument type, instruments may or may not contain an enumeration value for the first instrument instance, but subsequent instruments of the same type will have an enumeration of value of '2,' i.e - RFSource1, RFSource2 versus DUTControl, DUTControl2. Selecting an instrument from this list displays instrument-specific information in the lower left pane that varies by instrument. Typically, this information displays waveform pattern information and management on a source instrument or RF instrument's Input/Output port path definitions. Input/Output port names are displayed at the top of a box, with the path definition displayed internally. Green boxes denote path definitions for an I/O port that must be defined in software by a device connection definition or fixture definition. These software device connection definitions represent a fixture interconnect path in the device interface environment. Along with providing configuration information, several tester features can be accessed through the tester configuration window.

ADDING INSTRUMENTS

Selecting an instrument from the list and then selecting the **Instrument** menu option at the top of the window will provide a drop down menu for: adding instruments, GPIB instruments, calibration kits, fixture definitions, and device interface board definitions to the system by choosing the corresponding menu selection.

REMOVING INSTRUMENTS

Instruments can be removed by selecting an instrument from the list and then selecting the **Instrument > Remove** menu options.

RENAMING INSTRUMENTS

Instruments can be removed by selecting an instrument from the list and then selecting the **Instrument > Rename** menu options. This provides a pop-up window to rename the selected instrument.

CAUTION: *Changing an instrument name can affect test plans. Buttons and measurement blocks within test plans must match the button owner name to the instrument name listed in the tester configuration window. Conflicts between the owner name and the instrument name will result in test plan compile errors and failure to compile. This can only be resolved by changing the owner name to match the instrument name or renaming the instrument to match the owner. Always exercise caution when changing instrument names in a configuration.*

SAVING A TESTER CONFIGURATION

The tester configuration can be saved to preserve user-defined instrument naming conventions and their associated instruments. This is useful for system setup that use custom naming conventions and/or defining a numbering convention of a multiple instrument setup to specific slot locations. It is also required to use the tester configuration from a Virtual Workstation simulator. To save a tester configuration select the **Tester** menu at the top of the window, and then select **Save** from the drop-down menu list.

CALIBRATION & DIAGNOSTIC INFORMATION

Calibration information for an instrument can be viewed by selecting the **Instrument > Calibration** menu list options. This opens a sub-menu list with several options for viewing selected instrument calibration data, or launching the calibration and diagnostic tools for the specified instrument.

NOTE: To calibrate or diagnose a TIM, always select the “System” instrument from the tester configuration list. Then select the Instrument > Calibration > Calibrate or Instrument > Calibration > Diagnose menu options. This will provide the list of calibrations or diagnostic plans for sub-instruments grouped by their TIM and organized in the order they should be executed in the system.

EDITOR PANEL

The editor panel provides instrument buttons and measurement blocks used in the graphical test programming environment. This tool can be accessed by selecting the **Tester > View** menu selections. Multiple editor panels can be open at the same time. For more information about the editor, reference the [Edit Panel](#) in the Test Instrument Module section.

CONTROL PANEL

The control panel or controller as it is commonly referred to, provides interactive instrument buttons for live control of TIM instruments. This tool is typically used for in-situ instrument debugging and diagnostic purposes. The control panel can be accessed by selecting the **Tester > Control** menu selections. Multiple control panels can be open at the same time. For more information about the editor, reference the [Control Panel](#) in the Test Instrument Module section.


WARNING: Always return instrument controls to their default settings by manually resetting the button values in the control panel or closing the panel and performing a System Check. Use caution when using the control panel with a fixture, diagnostic/calibration plate, or device interface board in place.

EQUIPMENT POOL

The equipment pool window provides a hierarchical view of the Cassini test head configuration as expressed through the RIFL node tree. This window allows the user to view, test, and verify the status of the various RIFL nodes and hubs. When the test head is configured with TIMs, the user can view TIM information such as: their slot location on the test head, sub-instrument names, serial numbers, node ID, and base instrument information.


NOTE: Handler/GPIB Pods can only be viewed in the Equipment Pool window. Handler pods are factory programmed, but require onsite configuration to the handler type and local settings before use.

RIFL NODE TREE

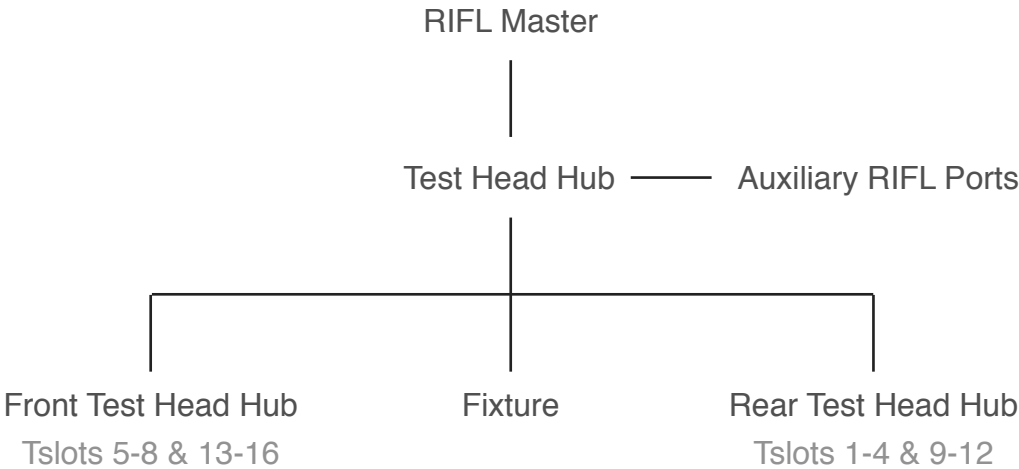

The diagram above illustrates the communication topology for Cassini’s instrument communication system called RIFL(Roos Instruments Fast Link). RIFL provides instrument communication to various instruments and peripheral equipment on Cassini as well as serving as the data bus. The design is a hybrid topology consisting of a tree-star structure. The RIFL Master is located in the RI8574 System Controller and serves as the central hub which all data and communication are relayed for processing and analysis. Control

FIGURE 1.69 ACCESSING THE EQUIPMENT POOL

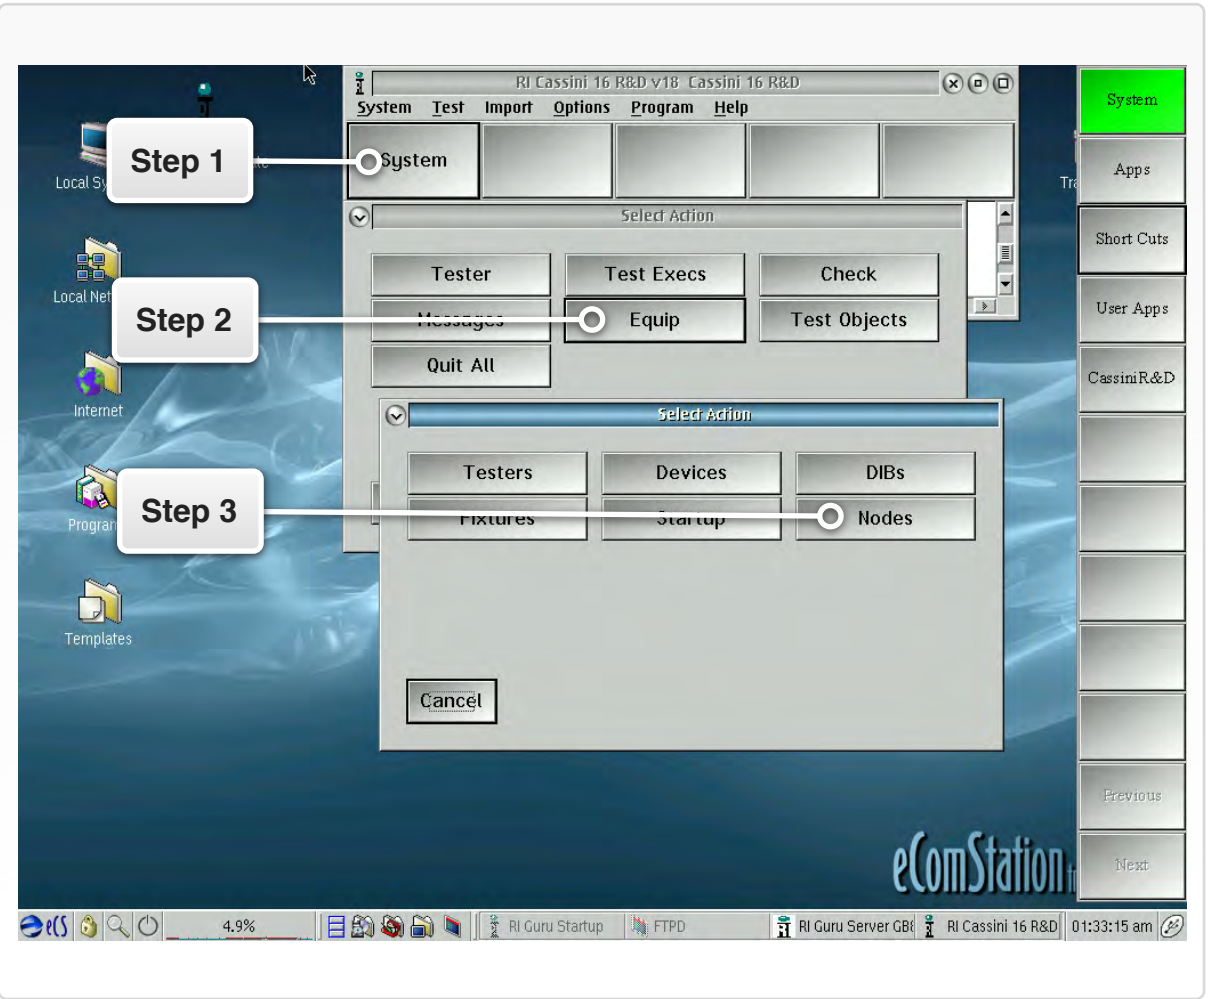

commands originating from the system controller are sent downstream to the Test Head Hub, located inside the Cassini test head. This hub provides the central point for communication with nodes on the Cassini test head. It supplies 4 auxiliary RIFL ports or nodes on the side of the test head closest to the infrastructure chassis as well as a dedicated node for fixture communication and two additional downstream hubs. The fixture RIFL port communicates with diagnostic/calibration plates and fixtures by way of an interface block on the top of the test head. The Front Test Head Hub and the Rear Test Head Hub make up two additional star topologies, providing communication nodes to each of the 16 TIM slots on the test head.


The equipment pool can be accessed through the main system panel, shown in [Figure 1.69](#), by selecting the **System > Equip > Nodes** options from the successive button windows launches the Equipment Pool.

The equipment pool window is divided into two panels. The top panel displays the hierarchical view of the RIFL nodes, hubs, and connected hardware. The panel updates with System Checks and instrument adds to the Tester Configuration window to show the current tester configuration. Selecting a node in the top panel highlights the node and displays more information in the lower panel of the equipment pool window as shown in [Figure 1.70](#). When a node with a TIM or instrument is selected the instrument name, serial number, node ID, and more are displayed in a scrollable list in the lower panel. Selecting and then right clicking on a node provides the user with several options as shown in [Figure 1.71](#).

The ‘power off’ command is an optional method for deactivating a TIM without removing it from the test head. A subsequent System Check command will bring the TIM back into the tester configuration. A System Startup command will rebuild the entire node tree from the RIFL Master and recheck in all attached TIMs in the Equipment Pool.

The ‘Flash Led’ command is used to intermittently blink the status indicator LED on the front panel of a RI7725 Source corresponding to

FIGURE 1.70 EQUIPMENT POOL FEATURES

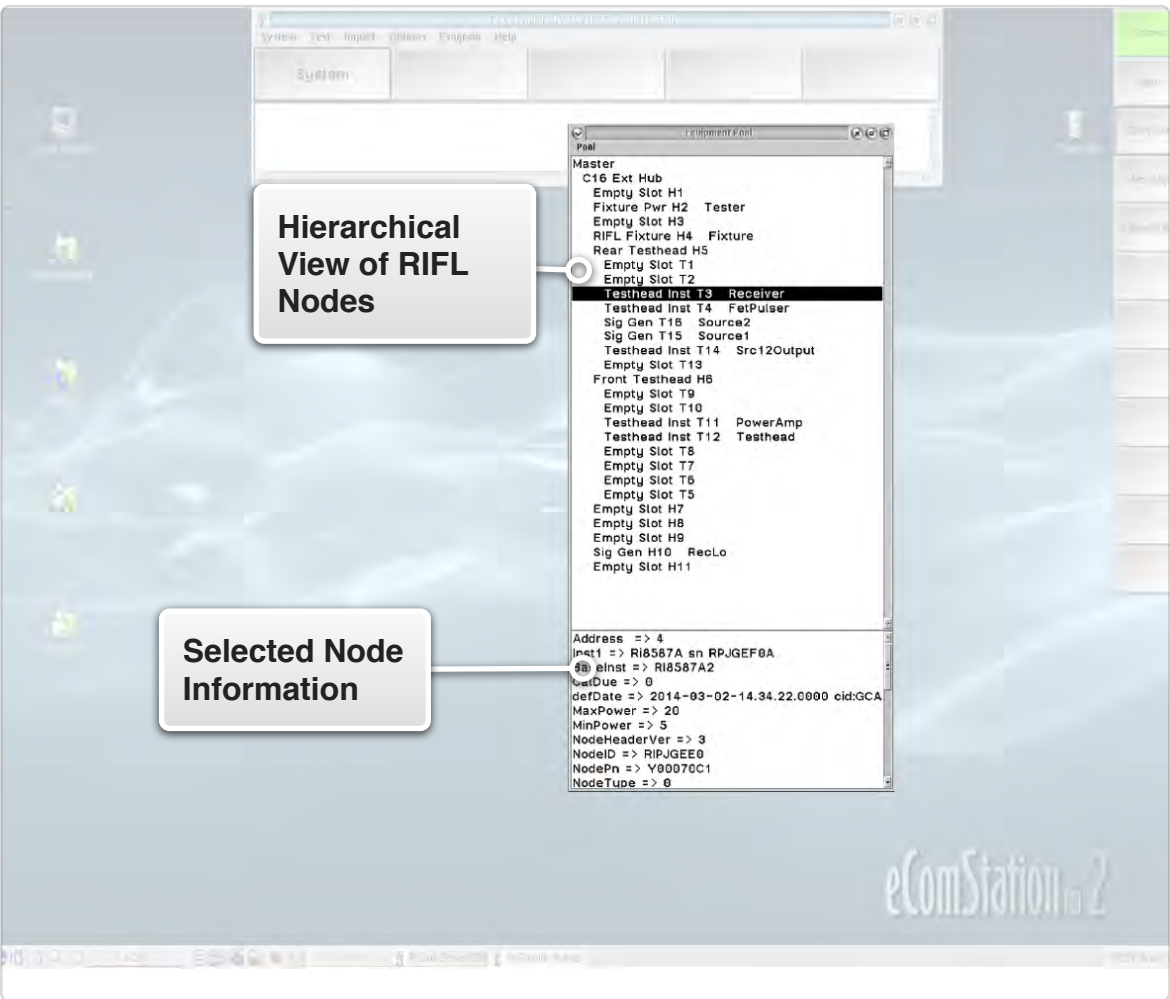


the user’s selection. This is useful for identifying individual sources in a multiple source system.

The ‘RIFL Test’ command will perform a RIFL loopback test on TIMs or instruments for the selected node or multiple nodes under a selected hub. This is useful for verifying the functionality of RIFL communication on hubs and TIMs. Loopback verification information is displayed in the System Messages Window.

CAUTION: The ‘Power on,’ ‘Enumerate,’ and ‘Inspect’ commands are for RI internal purposes only. These functions should only be used with supervision from a Roos Instrument’s service or support engineer.

FIGURE 1.71 EQUIPMENT POOL RIGHT-CLICK OPTIONS

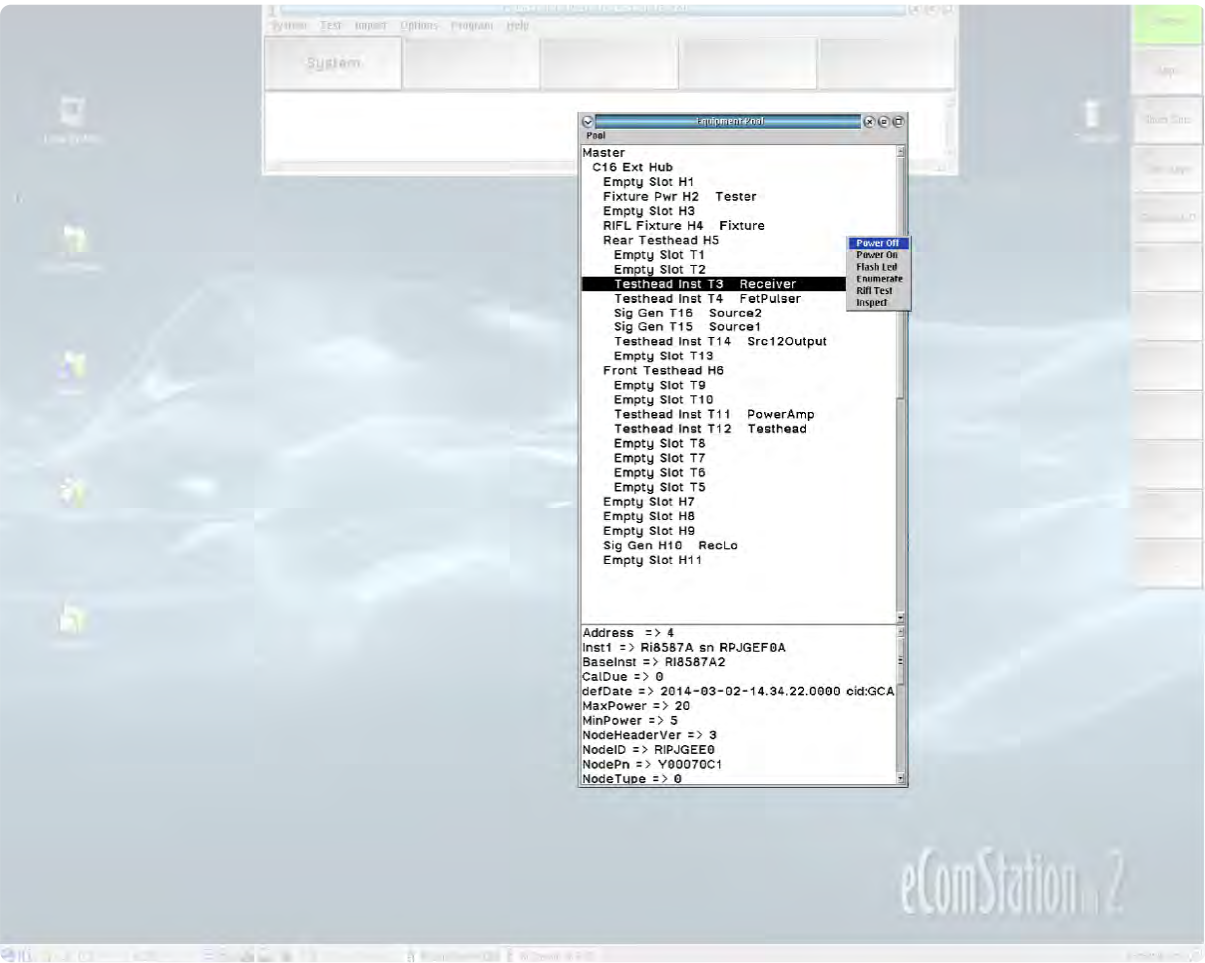

GURU

The Cassini test system manages all the test system file, software resources, and test data using a distributed, object repository called Guru. The reason for this system as opposed to a traditional file system is two-fold:

1. To enable the seamless distribution of test and software resources across multiple testers and/or facilities using traditional networking techniques
2. To provide absolute control over the test tester configuration and file resources in production test.

Along with providing internal file storage and management, Guru incorporates networking capabilities to provide database-like local and networked storage capabilities. By incorporating database capabilities with a traditional file system, Guru provides many advanced features for production test including:

- Test resource distribution and management tools
- Local & network resource management
- Automated backup and restore
- Built-in file revision view and control
- Test floor/production control

What all of this means for the end user is that the file system access and workflow on Cassini is different from most traditional file systems. Included in the following text are key concepts of the implementation and basic terminology to build a fundamental understanding of Guru. Also included are some Guru applications, their functions, and their role in day-to-day workflow.

GURU TERMINOLOGY

OBJECT

A guru object is a file that is unique and immutable in the system. No two objects in guru are alike, including copies of an object or revisions to an object.

ATTRIBUTE

An attribute of an object provides additional information about the object. Attributes form a key-value pair associated with their object that is used both for database-like indexing and queries as well for linking objects to their associated application functionality. The ‘key’ is the name of the attribute and the ‘value’ is the information. In other words, attributes provide information to the system and applications, telling them what the object contains and how to interact with it. While the number of attributes associated with a specific object depends on the object class, there are over 100 total combined attributes across all objects used for various file and resource management purposes.

EXAMPLE ATTRIBUTE KEY-VALUE PAIRS

Key	Value	Description
ri.sys.Cid	G9MG7DYAAL78EI01	Creation Identifier (Global UID)
ri.sys.Owner	G9MG7DYA	Guru Identity that Created the Object
ri.sys.CreationDate	2010-04-16-06:06:18.0000	Object Creation Date/Time in UTC
ri.sys.Name	Sample Lot 45739	Name of the Object
ri.sys.ObjClass	RiDataLog	Object Class (data structure, contents)

GURU CONCEPTS

Guru blends database-like properties with a modern file system to provide advanced file and application features specific to semiconductor production. To enable this integration, the system uses an object-oriented data paradigm. This means that every file and application resource on the test system is an object. Every object on the system contains attributes in a key-value pair. This relationship provides two main functions: 1.) It allows database-like indexing, queries, versioning, of objects and 2.) It links objects to their associated application.

OBJECT/FILE SYSTEM

Like a traditional “file” on a file system, a Guru object stores data. Unlike a traditional file, Guru objects are immutable in that they can never change. When a Guru object’s data is changed, a new copy of that object is created, generating a new creation identifier attribute

(Cid) with the same Revision ID attribute (Rid). Cassini applications use these objects to store and retrieve changes to the content, such as when saving changes to a Test Plan.

Object attributes are most commonly created and managed by Guru automatically. The object type, creation date, revision date, etc. is generated by the application that the software resource was created. Other attributes can be specified by user inputs such as the name of the file or version, typically generated during data save prompts. Access to user-created software resources or definitions can only be accessed through the appropriate system application. For example, to view device connection definitions, the user must launch the Device Connection Editor application to view, edit, and save. To access DUT control definitions, the user must launch the Device Control Editor application. To search and view all of these test objects and their attributes, similar to a file directory viewer, the user must use the Guru Browser application which functions.

What all this means to a user on Cassini, is that system manages the files and file directories in a database-like format in the background automatically. Access to user-created test resources can only be retrieved through the appropriate system application. For example, to view device connection definitions, the user must launch the Device Connection Editor application to view, edit, and save. To access DUT control definitions, the user must launch the Device Control Editor application. To search and view all of these test objects and their attributes, the user must use the Guru Browser application.

NETWORK CONNECTIVITY

A Cassini test system's Guru automatically manages its' network connection to Guru servers. The Log-In/Status button provides a visual cue to the user of the network status through real-time color-coding. A green Log-In/System button denotes the Cassini's Guru is successfully connected to a Guru server. A yellow button Log-In/System button denotes the Cassini's Guru has lost connection to an update Guru or is not connected to a Guru server. When the Cassini test system's local Guru is not connected to the network, the Guru is operating in a stand-down or local only mode. All files, resources, and data created will be stored locally on the test system only. Similarly, resources and data created on other networked test systems will not sync to Cassini when it's Guru is not connected. When the connection is reestablished, the button will change color from yellow to green signifying that the Cassini's local Guru will again backup and sync files and data to and from its' Guru server.

NOTE: If there is a loss of network connection, Guru will automatically attempt to reinitialize the connection to its' Guru server. If the Log-In/System button changes from green to yellow, check your network connection, then notify Roos Instruments support.

FILE LOCALITY & DISTRIBUTION

In the background, Guru manages the local/networked storage and backup of files, test resources, and test data. Because of Guru's database-like file structure, a Cassini test system when connected to a Guru server automatically backs-up its resources and data to the

server. This creates a local version of files and resources on the tester, and a networked copy on the server. Special key-value pairs allow Guru to manage multi-system file saves, versions, and restorations without loss of data or data collisions. This allows multiple Cassini test systems to be connected to a Guru server for shared resource distribution, back-ups, and data storage. This feature also allows new or replacement Cassini controllers to automatically download and rebuild test resources from a Guru server automatically upon installation.

FILE VERSIONING

Guru provides automatic file versioning when saving files. This means users have a comprehensive revision history of files created, edited, and saved on a Cassini test system without having to perform a 'Save as' function. The system creates a revision attribute that preserves multiple versions without overwriting any previous versions. When opening files within an application on Cassini, Guru to automatically load the latest version/revision of the requested file. In the instance of a test system not connected to a Guru server, this would load the latest local version. When connected to a Guru server, the test system's Guru will automatically retrieve the latest, most up-to-date version of a file/object found on the server. It then saves this version to the local database as well. This concept applies to files shared and/or edited on multiple Cassini test systems or virtual workstations.

OBSOLETE OBJECTS

Guru object versioning insures that the most current object is available for the requested software resource. However, in some cases it is

necessary to remove objects from selection menus and applications that are no longer needed. In Guru, objects that are no longer needed are obsoleted. Obsoleting an object in Guru does not delete the object, but creates a 'obsolete' attribute that instructs programs and applications that the resource is no longer used. This action removes the unwanted object from views and menus in applications such as the Guru Browser. This "view removal" applies to networked versions of the object, meaning once an object is obsoleted on a Cassini's local Guru, it will be obsoleted on the Guru Server and all network connected Cassini systems. Obsolete objects loose all previous revisions of that object, so only one copy of the object is retained in case it needs to be retrieved for later use.

EXPIRE ON DATE FOR TEST DATA

The large storage capacity of a networked Guru and the relatively small file size of objects allows every revision of an object to be retained. However, in some instances it is desirable to remove unwanted or extra objects from the database to free up storage. To accommodate this, objects can be assigned an "Expire On" date attribute that is set when the object is first created. Once the expiration date elapses, the Guru object will be permanently deleted from the local and all network connected Gurus and will no longer be recoverable.

NOTE: Only RiTestData objects include 'Expire On' date attributes. The default Guru expiration date for RiTestData objects is 30 days. The Expire On duration is defined in the Exec dialog by the system administrator. Contact your Cassini ATE administrator or RI support for assistance with 'Expire On' settings.

GURU BROWSER

The Guru Browser application provides a search, import, export, and revision history viewing tool for all objects and resources on a Cassini test system and networked Guru Servers. It is accessed through the Apps button found on the right side of the screen of the Cassini test system environment as shown in [Figure 1.73](#).


BROWSER

The Guru Browser window, shown in [Figure 1.72](#), displays objects in a tabulated view in the center pane. Each row represents a single object with columns representing an attribute key type. Left-clicking on an object in the tabulated view will highlight the object row and display all object key-value pairs in a list view in the pane below the tabulated view. This list of key-value pair attributes provides the user with more information about the object such as: object size, object class, the object’s creation date, Guru ID of the system that created it, and more. Left-clicking on a column heading will organize the object rows in ascending or descending order with respect to the selected key type. On the left side of the Guru browser window are drop-down lists selections of attribute key-value pairs. The drop-down selections allow the user to filter object searches against up to four key-value pair criteria. Listed along the bottom of the Guru Browser window are the function tabs. Clicking on these tabs switches between the various functions of Guru browser, providing a window layout optimized for the selected feature functionality.

GURU EXPORT LIST


The Guru Export List tab is used for exporting objects and/or groups of objects from a Guru as .gzip files. An example of the Guru export list layout is shown in [Figure 1.74](#). This tool is useful for transferring Guru objects via email or FTP other Gurus or to Roos Instruments support. Objects from the browser tab can be added to the export list by selecting them in the tabulated view and choosing the **Export >**

FIGURE 1.72 GURU BROWSER

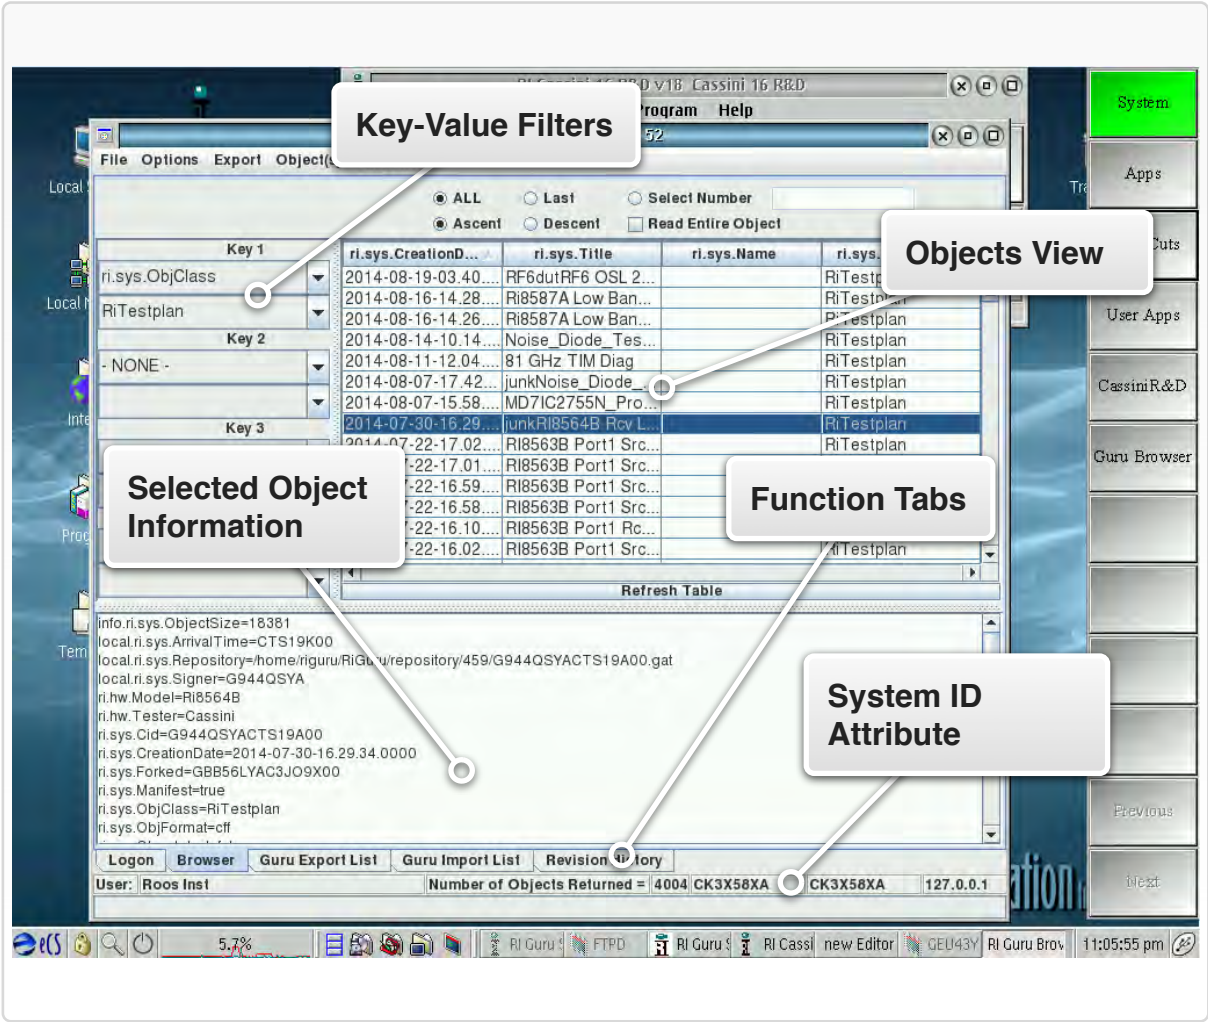

Send to Export List options from the Guru browser's top menu selections. The list of objects are displayed in their tabulated view of the export list. The various export list button options are provided on the left side of the window.

FIGURE 1.73 ACCESSING GURU BROWSER

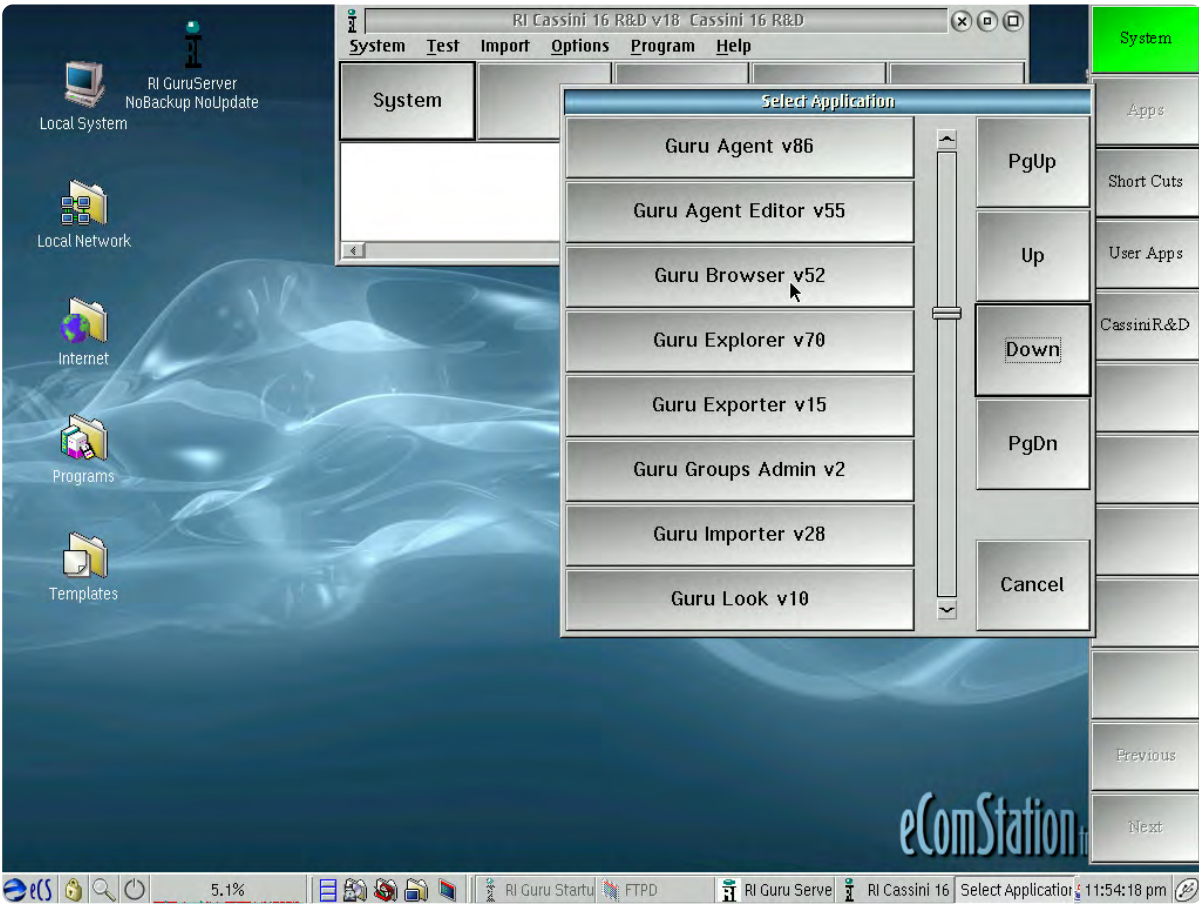


Access Guru Browser by selecting the Apps button and then selecting Guru Browser from the scroll list of applications

GURU IMPORT LIST

The Guru importer tab option is used for importing objects and/or groups of objects into Guru from a .gzp file attachment or USB key. This tool is useful for loading objects such as TIM-specific calibration data into a Cassini test system's local Guru. An example of the Guru import list tab layout is shown in [Figure 1.75](#).


FIGURE 1.74 GURU EXPORT LIST TAB VIEW

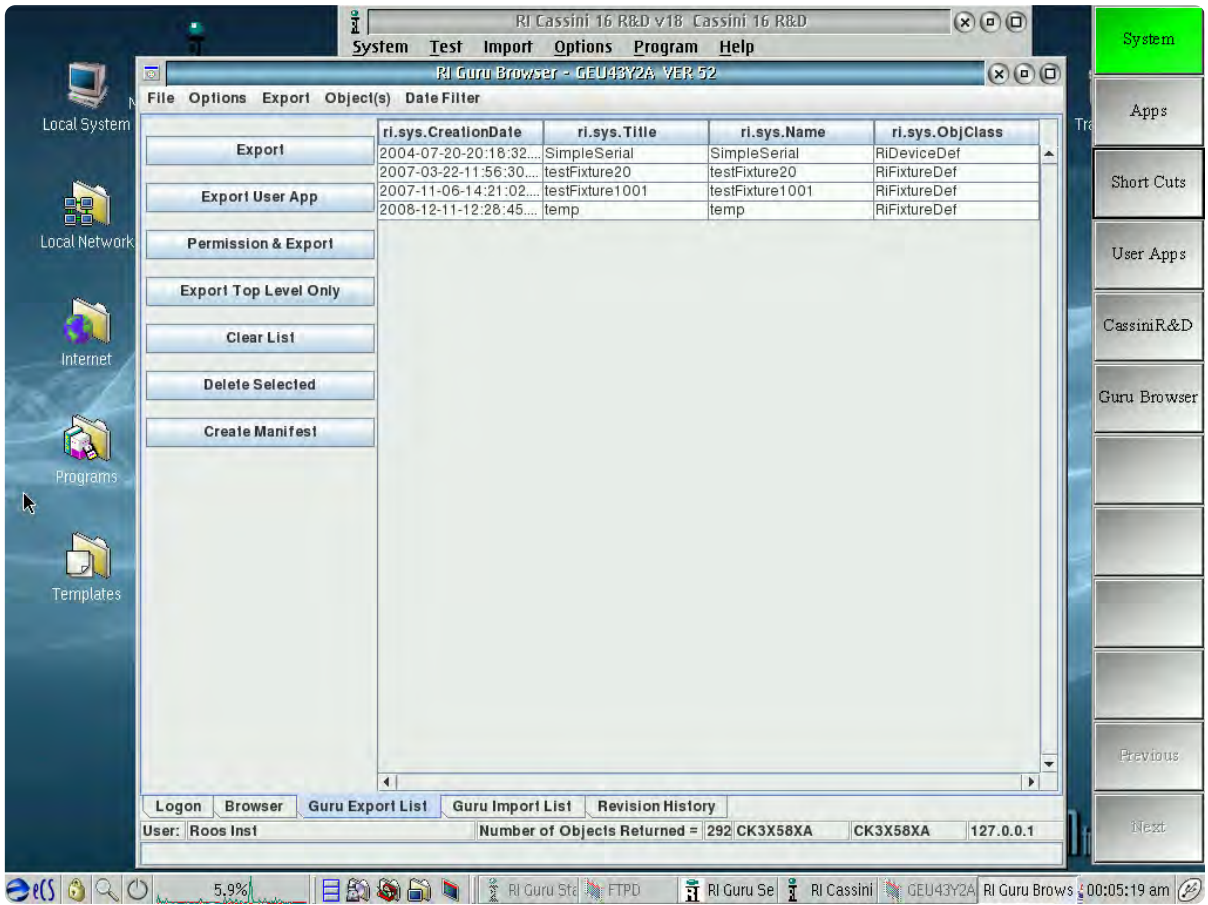

The importer tab view is divided into three panes. The bottom pane lists .gzp files to be imported into Guru. Selecting the Get Import File(s) provides a pop-up window for selecting .gzp files for import. The selected .gzp will be listed in the lower pane of the window. Selecting a .gzp in this list, and then left-clicking the upper left pane will list the contents of the .gzp file, typically objects or groups of objects as .GAT files. Highlighting these .GAT files by left-clicking on a file in this pane will display a list view of the object's attribute key-value pairs in the pane to the right. Selecting the Import button on a selected .gzp file will import it's contents in Guru. Guru will automatically resolve revision/version conflicts of imported objects with the system's local Guru. The importer GUI provides visual cues of the revision resolution actions the importer will take with individual objects within an imported file as shown in [Figure 1.75](#):

- **Green** text denotes objects that do not currently exist in the local Guru and will imported
- **Red** text denotes that object to be imported is newer than the version that exists on the local Guru. This object will be imported, and when requested by an application, the imported version will be used. The older version will be saved in the local guru's revision history.
- **Magenta** text denotes that object to be imported is older than the version that exists on the local Guru. This object will be imported, and when the object resource is requested by an application, the current version on the local Guru will be used. The imported older version will be saved in local guru's revision history.

FIGURE 1.75 GURU IMPORT LIST TAB VIEW

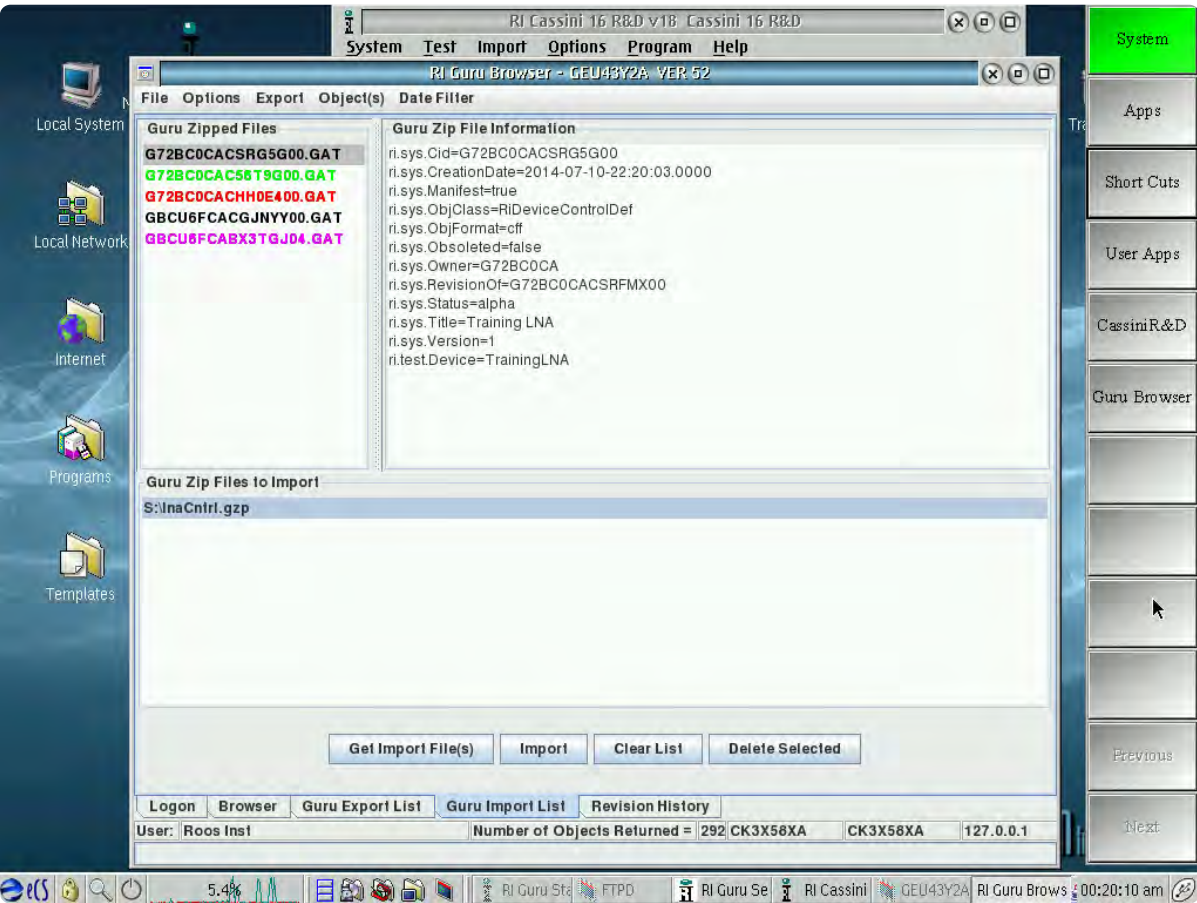

- **Black** text denotes that the object already exist in the local Guru and is the most current version and as such, the object in the import list will not be imported.


NOTE: Always save resources and close applications that may create versions of objects that are being imported.

REVISION HISTORY

The Guru revision history tab is used for viewing the revision history of an object. An example of the revision history tab layout is shown in [Figure 1.76](#). Selecting an object in the tabulated view of the Browser, and then clicking on the Revision History tab will display a table view of the selected object's file history in the top pane. The columns of the table view display the object's Name, Creation Date, and Version attribute keys. Left-clicking on the column headers will sort the table in ascending or descending order with respect to the selected key type. Left-clicking on a version in the table will highlight the row and display or refresh the object version's information in a list view in the pane below the table. Right-clicking on an object revision in the table provides a menu with options to 'Remove from local,' 'Make Last RevisionOf,' and 'Send to Export List.' The 'Remove from Local' option will remove the selected object version from the local Guru. The 'Make Last RevisionOf' option will make the currently selected version of the object into the latest version. Applications that use this object will now use this version of the object. The 'Send to Export List' option will add the selected version to the Guru Export List.

CAUTION: DO NOT remove or alter the revision version of an object without consent from authorized personnel.

FIGURE 1.76 GURU REVISION HISTORY TAB VIEW

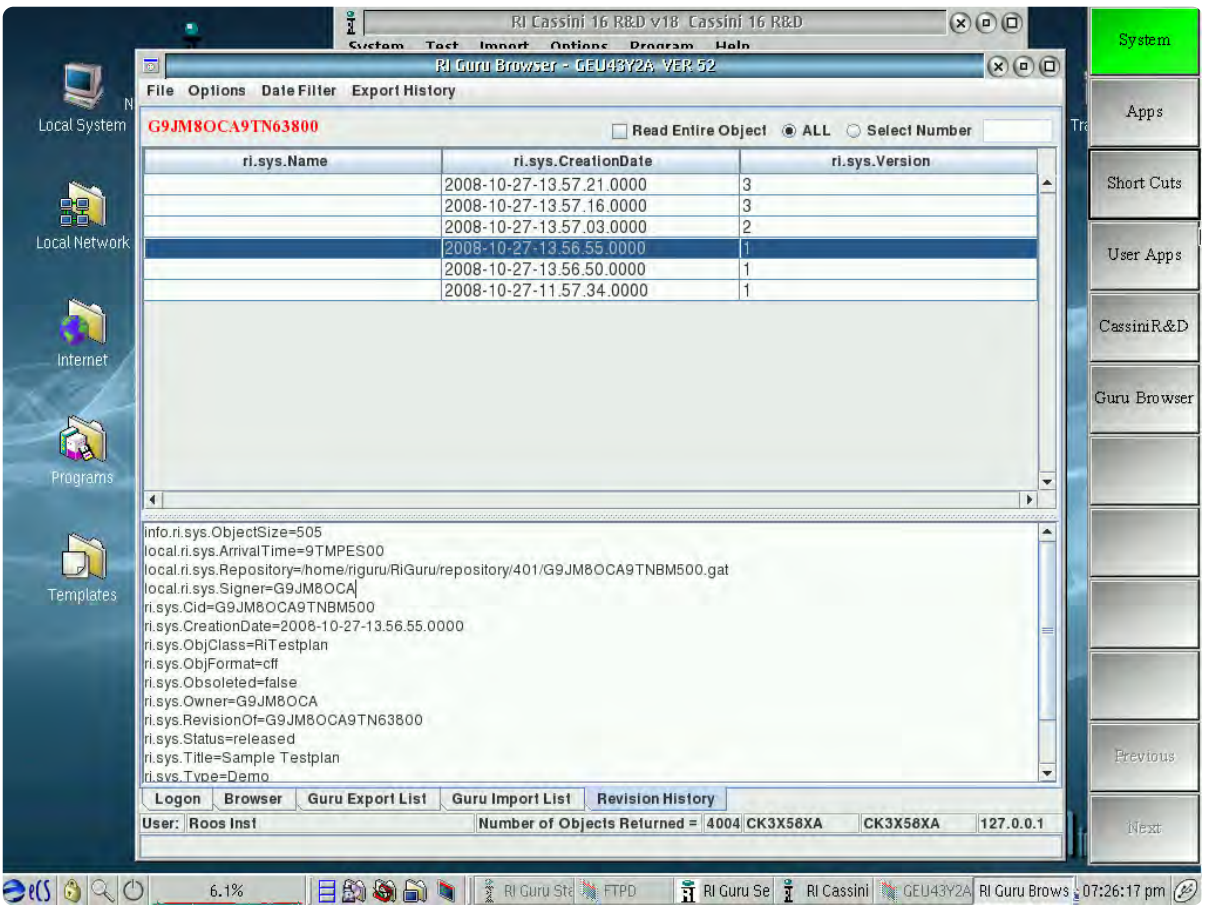


GRAPHICAL PROGRAMMING

2

The Graphical Programming Chapter provides general information about:

- Test Plan Development Environment
- Test Design
- Button/Measurement block Functions & Use

INTRODUCTION

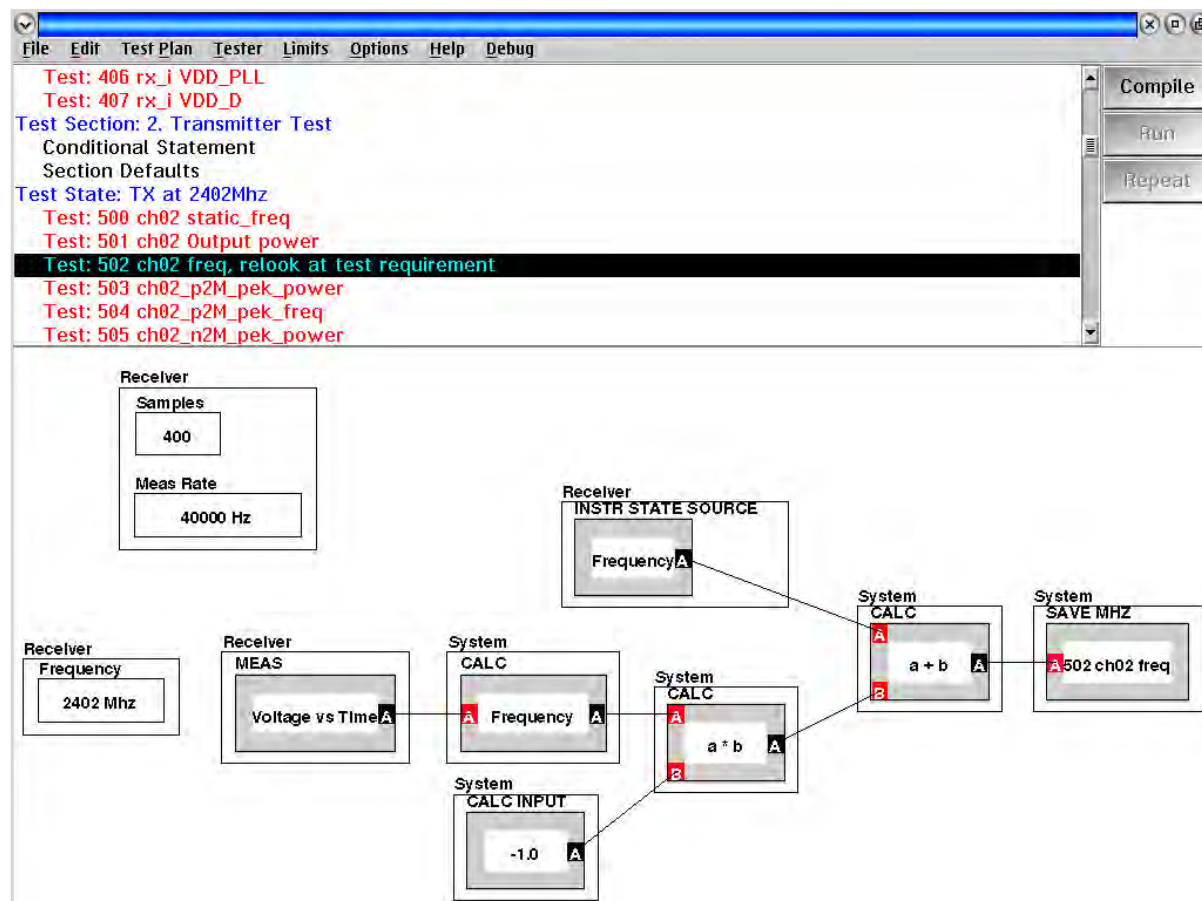

TOPICS

[Overview](#)

[State Machine Compiler](#)

[Synapse - Automated Test Optimizer](#)

[Graphical Programming User Interface](#)

[Disconnect Settings & Connect Sequence](#)

[Test Program Defaults](#)

[Test Sections & Panels](#)

[Conditional Statements](#)


[Instrument Buttons & Measurement Blocks](#)

[Grouping Buttons & Group Types](#)

OVERVIEW

Cassini was designed from the ground up to have a more comprehensive interaction of hardware and software. Using a state-based approach in the software, the measurement functions and instrument commands operate on the physical resources within the tester at a hardware-state level. What this means for a user on Cassini is that the programming interface and workflow reflect this state-based method when it comes to developing measurement algorithms and building test plans. The object-oriented programming language used to control the instruments is represented in a graphical programming environment, with instrument buttons and blocks that can be connected to control instrument states, and define arithmetic functions or measurements. The library of available instrument buttons and measurement blocks are available in the Edit Panel. These programming resources are dynamically created by the test system from test instrument modules connected to Cassini’s test head or added by a user in the simulator. The graphical state-flow abstraction simplifies test plan design with more efficient coding and faster deployment of new instrument and measurement programming elements when compared to traditional ATE programming. The following text provides a brief introduction to the state machine compiler, and graphical programming UI on the Cassini test system followed by instrument button and block descriptions, uses, and examples.

GALLERY 1 CASSINI GRAPHICAL TEST DEVELOPMENT ENVIRONMENT

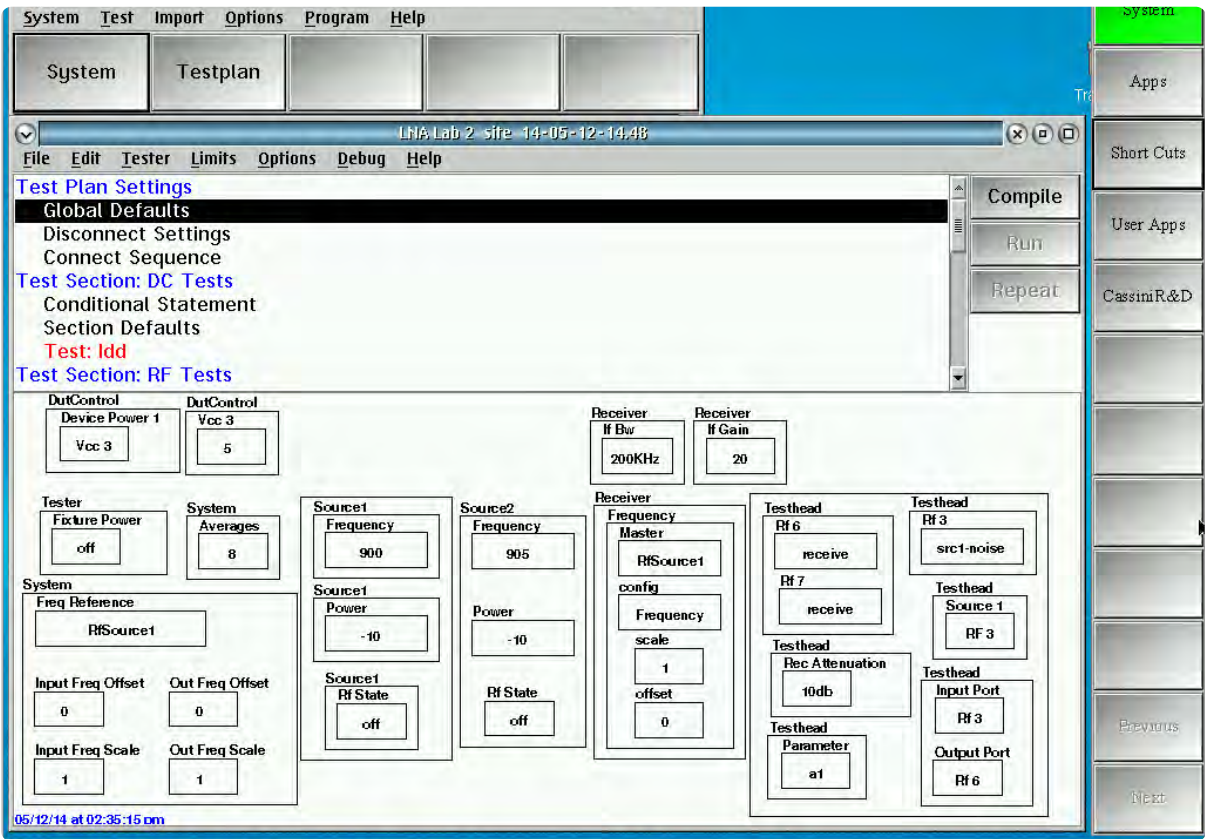

Global Defaults Example

STATE MACHINE COMPILER

Using the instrument state construct, the compiler translates instrument settings and measurement functions of each test panel in the test program into ‘instrument test states’. These states are used to generate a real-time, finite state machine that drives the hardware. Coupled with onboard FPGA based processing in the instrumentation, this enables distributed processing with several key advantages:

1. Real-time signal processing and measurements
2. Absolute instrument/measurement timing and lock-step synchronicity across instruments
3. No processor lags or interrupts from the system computer during test execution since the state machine operates independent of the system controller.
4. Ability to execute real-time instrument state halts of the test system at measurements states with active hardware for in-situ debugging of test programs with interactive instrument and measurement control.

SYNAPSE - AUTOMATED TEST OPTIMIZER

Synapse is a built-in state optimizer designed to address the two main challenges with test program design:

- 1.) Create test run-time code that eliminates redundant or superfluous instrument calls
- 2.) Create compiled code that executes the fastest and with the highest efficiency for any given hardware setup on the tester.

The optimizer uses the hardware state information of the test objects to analyze the program execution behavior and identify measurements that use shared hardware states to combine or run tasks concurrently in the hardware. As well, the optimizer has access to instrument state transition timing information, i.e - instrument switching and settling times. It uses this information to perform a time cost analysis

optimization to determine the optimum measurement order for the fastest execution. Lastly the optimizer removes redundant or superfluous test states, virtually eliminating unintentional and/or unessential test code.

In addition to the automated test program optimization, the user can view the code execution order, and control how and where optimization can be applied:


- Individual tests and measurement can be isolated from the optimizer
- Groups of sequential measurements can be excluded
- The optimizer can be completely disabled

As well, a comprehensive breakdown of the test program can be viewed through the Delta Settings panel as shown in [Example A](#). This provides test duration information including: instrument setup times, measurement computation, and overall test program time. To access the delta settings, compile an open test plan and select select 'Options' > 'Display Delta Settings' from the menu option at the top of the test plan.

USER INTERFACE

The test design environment provides both views and user control of test flow organization and test design, see [Gallery 1](#). The user interface window is divided into two sections. In the top pane is a view of the test program flow divided into different programming sections. By default this view contains the "Test Plan Settings" which contains a global default, disconnect settings, and connect sequence

EXAMPLE A DELTA SETTINGS

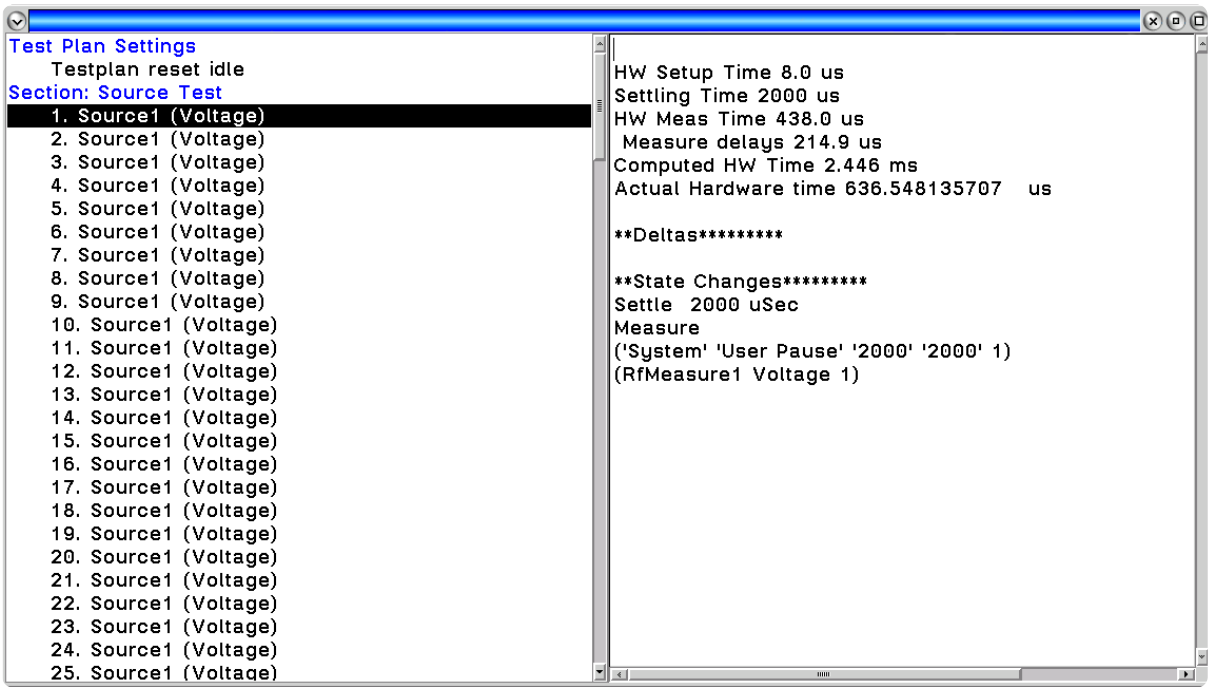

The above figure is the delta settings of a compiled test program. The left pane shows the order test panels are executed in the test program. Selecting a test panel displays the hardware setup time, instrument settling time, estimated and actual execution time of all measurements in the panel. The Deltas section below the timing information displays the order of instrument state changes in the panel.

section. The user can add a test section by right clicking within this pane and choosing “Add Test Section” from the selection menu. This test flow view allows the user to control and organize their test plans in a linear flow convention. Selecting or left clicking on any of the test flow sections on in the top pane will display the button or block contents contained within the selected section in the pane on the

bottom of the UI. The bottom pane is the test design canvas for placing the graphical instrument control buttons and measurement blocks from the library contained in the Edit Panel.

DISCONNECT SETTINGS/CONNECT SEQUENCE

The Disconnect Settings and Connect Sequence sections (see images 1 and 2 of [Gallery 1](#)) are used strictly for designating the test system’s default states before a test program starts, at the end of a test program, and the sequencing of these states when connecting or disconnecting from a device under test (DUT). The Disconnect Settings section allows the user to define application-specific instrument pin or port settings and states (that may differ from the test systems default settings or user’s global defaults) before the first device under test is placed in the socket and to define the state the tester’s instrument pin or port settings return to at the end of a test program before the DUT is removed from the socket. This is the state the system enters first, before the DUT is inserted and before the DUT is removed.

The connect sequence is a specialized section that defines application-specific sequencing of instrument pin, port settings and/or states are set before testing begins. The sequencing executes instrument state buttons in the lower pane following a left-to-right convention for first-to-last order sequencing.

NOTE: State buttons used within the Disconnect Settings, Global Defaults and Section Defaults panels do not follow a sequencing convention. The sequence is controlled by the compiler. Within test panels, the instrument state buttons are executed first, followed by

premeasure groups, measurement or function blocks, and finally postmeasure groups. Buttons and groups of buttons are executed in order from left to right in a panel.

GLOBAL DEFAULTS AND SECTION DEFAULTS

The programming environment has a tiered structure of system, global, section, and panel window defaults to help the user organize and maintain complex test plans and measurements. The System Defaults are essentially the test systems default idle or “safe” state for all of the attached instruments. These are subsequently the default values displayed in the Editor Panel for all of the attached instruments. The Global Defaults section allows the user to define the default instrument state settings that will hold true for the entire test program by placing state buttons in the lower pane. Section Defaults are located in every Test Section, allowing the user to define instrument state settings that will hold true for all test panels with the test section by placing state buttons in the lower pane. Instrument state buttons can also be placed in the test panel to apply the parameter settings for only the measurements contained therein.

The default hierarchy is enforced explicitly in the test program with the highest priority given to buttons placed in the test panel and the lowest given to the system default settings, i.e - a button placed in a test panel will override the button default placed in the test section, global, or system defaults in that order. This default hierarchy is also enforced implicitly in the test program, i.e - when a button state is not defined in a panel, the compiler will default to the value of the button

placed in the section default. If the button is not in the section default, the setting will defer to the global default settings. If the button is not placed in the global defaults, the button setting for the test panel will default to the system default settings. This default hierarchy structure gives the user the flexibility to exert control over several measurements or to individual measurements.

TEST SECTIONS & TEST PANELS

Test sections provide a test flow convention and organization for the user's test program, see image 4 of [Gallery 1](#). The user can add a test panel by right clicking on a highlighted Test Section and choosing ‘Add Test’ or ‘Add Test State’ from the selection menu.

Measurements are designed by placing instrument state buttons and measurement or function blocks in the test panel sections. The programmer connects blocks by drawing lines to create algorithmic flow. The lines propagate each block's object attribute information to the connected block to relay data, function, and calling conventions. This allows the compiler to automatically manage data type flow, measurement unit handling, and advanced multi-instrument measurement (virtual instrument) functions for the user. The graphical approach also allows programmers to build test programs and measurement flows by dropping instrument state buttons that represent instrument control states and interconnect measurement or arithmetic element blocks from editor panel library to create algorithmic flow.

CONDITIONAL STATEMENTS

The Conditional Statements section allows the user to insert control statements that can modify or alter the test program flow during run time, i.e - skip all tests in a test section or abort the test program. The logic statements are defined by the System buttons found in the 'Flow Control' panel of the Editor: **abortIfTrue**, **abortIfFalse**, **skipIfTrue**, **skipIfFalse**, **PromptIfFalse**, and **Prompt**. The first four button types when placed in the Conditional Statements section check the true/false status of conditional flag defined by the user via the **Set Flag** input block. If the conditional flag status matches the button/s in the conditional section, the test program flow is altered accordingly. See the [Flow Control edit panel button descriptions](#) in Section 11 - RI8574: System Controller (EPC) for more information.

Conditional Statement panels are located at the beginning of every test section, allowing the user to apply the test program flow changes to all test panels/measurements contained therein.

MEASUREMENT BLOCK AND BUTTON CONVENTIONS

There are two types of coding elements used to build graphical test programs: state buttons and function blocks. Both contain object oriented attributes and conventions that relay data, function, and calling conventions to the compiler. When function or measurement blocks' input/outputs are linked, the software can identify intrinsic characteristics of upstream and downstream interconnected blocks in the algorithm flow. This allows the test builder system to check

continuity of variable type, data conversion, and unit of measurement as well as automate advanced multi-instrument measurement functions. At the top left of every block or button is the 'Owner' attribute. The owner ties the block or button object to its' associated instrument.


NOTE: All buttons and blocks must contain an owner. Test Plans that contain buttons and blocks without owners or misidentified owners will fail to compile.

Within the block at the top left corner is the 'Function' attribute that defines the control or operation task. Depending on the type of button or block, the function may denote a measurement, instrument resource or operation. Within the function area are user-editable fields such as variable name, a list of options, or numerical entry.

NOTE: Buttons or Measurement blocks highlighted in red within a test panel denote the associated instrument is not present or active in the test system. Test Plans with these buttons or blocks will not compile unless the instrument is activated, the test panel or test section is de-activated, or the buttons or blocks are removed.

TYPES OF BUTTONS AND MEASUREMENT BLOCKS


Examples and descriptions of the four common button or block types found in the edit panel are given below.

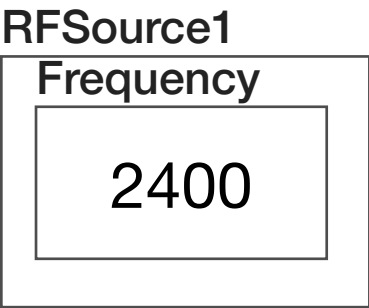

Owner: RFSource1
Function: Frequency
Parameter: 2400 (user defined in units of MHz)

State Button


Defines an instrument or device setting. These programming elements are used to create a defined instrument or device state within a test panel. They are most commonly used in conjunction with measurement blocks and are executed before any measurement functions are executed within a test panel. Values are normally floating point numbers, but can also be a string of characters or a selection from a drop down list.

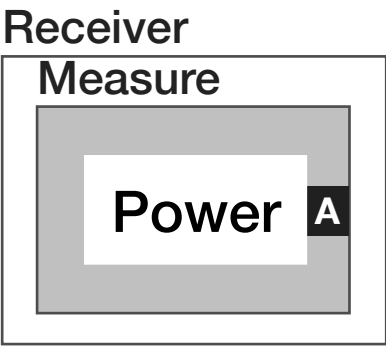

Owner: Receiver
Function: Measure
Parameter: Power

Output Measurement block

These blocks are designated with a gray region within the measurement name and provide an output value from an instrument. The black box with “A” denotes the instrument’s measurement output that can be connected to a variable or calculation block.

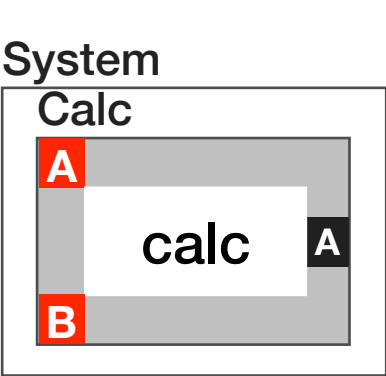


Owner: System
Function: Calc (Calculation)
Parameter: calc (a menu list of operations for 2 input, single output calculation are accessed by left clicking the center of the button)

Calculation or Function Measurement block

Calculation or function blocks are designated with a gray region within the Function area. These blocks provide one, two, or three inputs on the left side of the block designated by red squares with “A”, “B”, and “C.” The output on the right side of the block is designated with an “A” in a black square. Algorithmic flow is designed by stringing

together multiple blocks with a left-to-right flow convention to denote execution order.

System

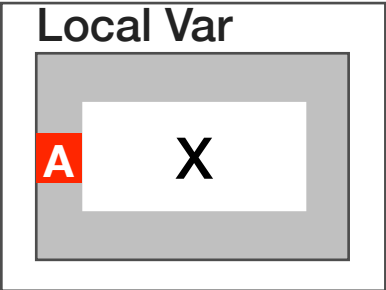

Owner: System

Function: Local Var (Local Variable)

Parameter: X (user-defined variable name)

Input Measurement block

Variables are denoted with a gray region within the Function area and provide an input designated with a red square on the left side of the block. There are two types of variables available: local variables and data saves. Local variables are used for temporary data storage, typically for use between test panels in multistage measurements or multiple step algorithms. Local variable data is discarded at the end of a test plan’s execution.


Data saves store variable information for data logs, final test results, and data reporting and are saved at the end of a Test Plan.


ADDING BUTTONS & MEASUREMENT BLOCKS

Edit panel buttons can be added to test programs by holding the Ctrl key and left mouse button clicking the button to select it. The button is inserted into a test panel by holding the Ctrl key and left mouse button clicking anywhere on the background of the panel to paste it. This can be repeated to paste multiple instances of the button. When finished, hold the Ctrl key and left mouse button click on the button selected earlier in the editor panel to unselect it. Selecting multiple buttons within an editor panel will allow the user to paste all the selected buttons as a group within a panel. To move the pasted group of buttons individually within a test panel they must first be ungrouped.

EDITING BUTTON VALUES


Left clicking on the innermost parameter region of a state button will display an option menu. Select an option from the selection choices and the button will display the selection within the parameter region to confirm the selection. The option menu type can vary depending on the type of button as seen in the examples below.

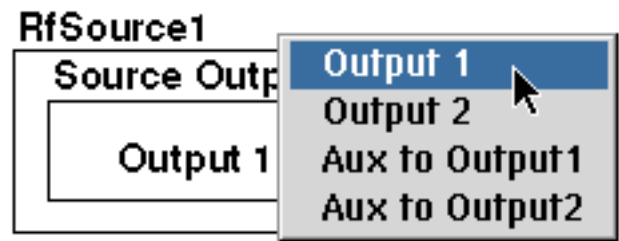

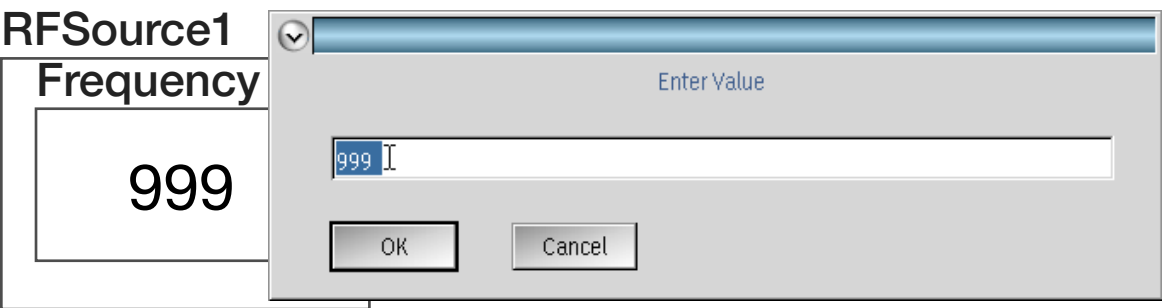

NOTE: ‘Enter Value’ dialogs allow SI units in the input field (G=Giga, Meg=Mega, k = kilo, etc.) Most parameters are displayed in standard SI units in the default value (volts, seconds, dBm, etc.). Frequency values without an SI unit in the default are in units of MHz.

CONNECTING MEASUREMENT BLOCKS

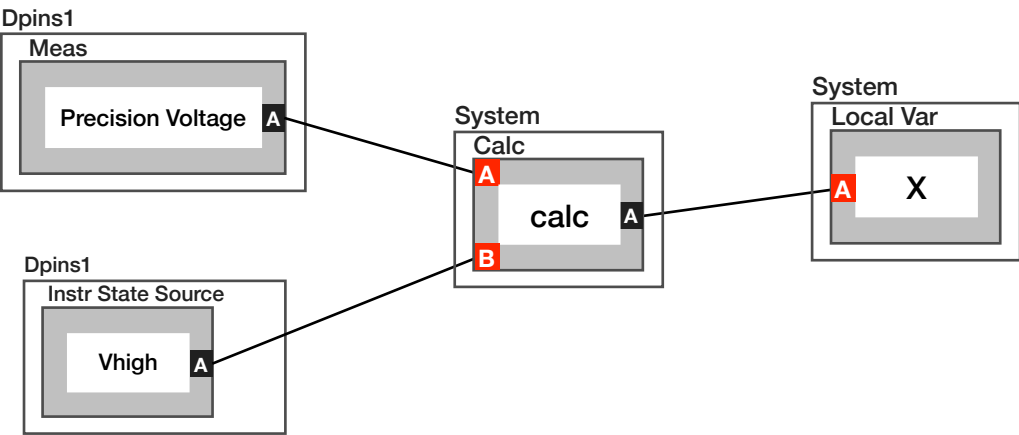

Measurement and algorithmic flow are created by linking function blocks in the test program’s graphical environment. Calculation and logic functions provide connection anchors to accommodate block connections. Inputs are denoted by red squares on the left side of the function block and outputs are denoted by black squares on the right

side of function blocks. Multiple input operands are designated with an “A”, “B”, “C” within the red squares. This convention encourages a left-to-right logic flow design that aids in function comprehension and code maintenance.

To connect blocks:


- Right click and hold the center of the block to move and organize blocks of interest relative to one another following the output to input convention of left-to-right
- To connect an input anchor to and output anchor, right mouse button click and hold within the black/red square of either block of interest.

NOTE: The cursor will change from an arrow to crosshairs to confirm the port selection.

- Drag the crosshair cursor and connection line to the input/output anchor(black/red square) of interest on the associated block, either direction works.
- Release the right mouse button to complete the connection.
- Multiple output anchor connections can be made to different function block input anchors
- Input anchors (red) support only one connection per site.

To disconnect blocks:

- Right mouse button click and hold within the black or red square of either connected blocks of interest. The cursor will change from an arrow to crosshairs to confirm the port selection.
- Drag the crosshair cursor and connection line to the origin of the input or output anchor (black or red square) of interest on the associated block to remove the connection.

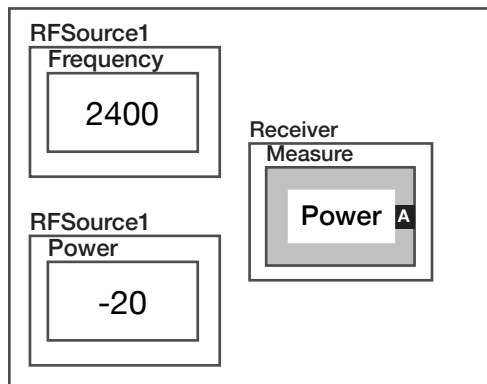GROUPING & UNGROUPING

A button group is denoted by a “grouping box” that surrounds buttons and/or blocks as shown in the example above. Grouped elements can be moved or pasted as a set. Selecting multiple buttons and/or blocks in an edit panel and pasting them in a test panel will automatically group the buttons as a set and provide a shared owner to the grouping box. Button/blocks with different button owners (example above) can be grouped with an arbitrary grouping box to help organize, move and paste them as a set.

To group a set of buttons together:

- Select the buttons of interest by holding the Ctrl key and left clicking anywhere inside the intended blocks/buttons to select them.
- Right click on one of the selected buttons to view menu options.
- Select ‘Group Selected’ to bring up the grouping options.
- From the grouping options, select ‘Group’ to place an arbitrary grouping box around the buttons/blocks.
- The elements can now be selected and/or moved as a single set.

Buttons within a group can be separated by right clicking on the background of the grouping box and selecting ‘Ungroup’ from the pop-up menu options. The ungrouped buttons can be individually moved or reorganized.

Contracting/Expanding Grouped Buttons:

A grouped set of buttons can be collapsed to form a single button. This can be used to reduce the number of buttons in a panel or complex algorithms that use multiple interconnected calculation and input/output blocks.

To contract a set of grouped button and/or blocks:

- Right click on the background of the grouping box and selecting ‘Settings...’ from the pop-up menu options.
- From the menu list select ‘Contract’.


- A pop-up prompt will allow the user to name the button or input/output block representing the collapsed group. Type a name and select 'OK'.

NOTE: The buttons and/or blocks must be grouped with a grouping box.

The box must be expanded to view or change buttons within a contracted group. To expand a contracted group:

- Right click on the contacted button/block and select 'Settings...' from the pop-up menu options.
- From the menu list select 'Expand'

MEASURE & MEASURE SEQUENCE GROUPS

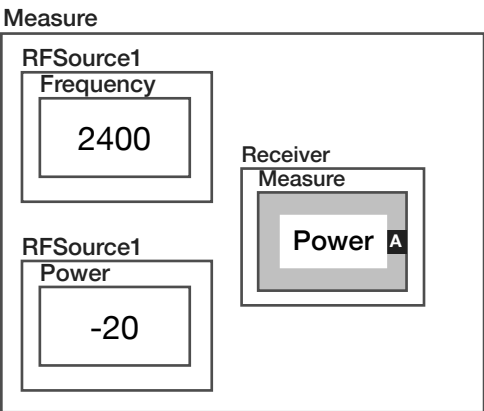


Measure groups are used in test panels to associate a button setting or multiple button settings with a single measurement. This group

type is typically used in test panels with multiple measurements to associate a particular set of button states with a measurement.

To create a Measure Group:

- Select the buttons of interest by holding the Ctrl key and left clicking anywhere inside the intended blocks/buttons to select them.
- Right click on one of the selected buttons to view menu options.
- Select 'Group Selected' to bring up the grouping options.
- From the grouping options, select 'Measure' to place the Measure grouping box around the buttons/blocks.

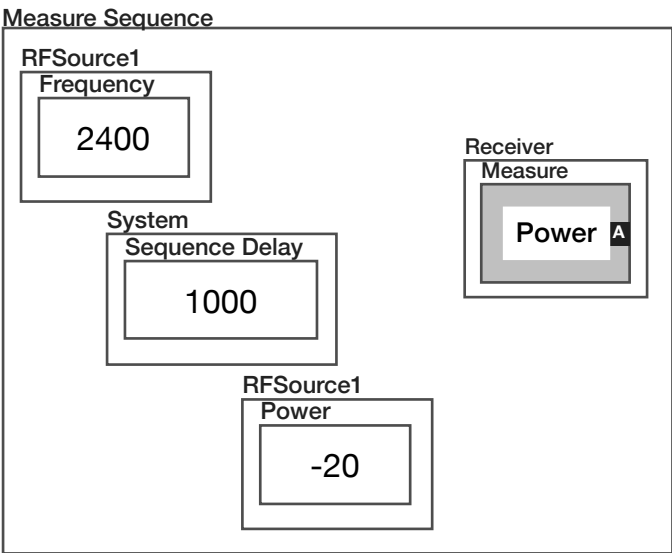

Measure Sequences, much like Measure groups, are used in test panels to associate a button setting or multiple button settings with a

measurement. Measure sequences however, include control of the order in which the button settings are executed. Button settings and measurement blocks are executed from left to right as they are placed in the test panel, using the left edge of the state buttons as the indicator of location. In the provided example, The RFSource1 **Frequency** setting is set to 2.4GHz, then the test system pauses for 1ms (**Sequence Delay**), then RFSource1's signal power is set to -20dB. This group type is typically used in test panels to define multi-step measurements or multiple measurements that require a specific order of operation.

To create a Measure Sequence Group:

- Select the buttons of interest by holding the Ctrl key and left clicking anywhere inside the intended blocks/buttons to select them.
- Right click on one of the selected buttons to view menu options.
- Select 'Group Selected' to bring up the grouping options.
- From the grouping options, select 'Measure Sequence' to place an the Measure Sequence grouping box around the buttons/blocks.

PRE MEASURE & POST MEASURE GROUPS

Pre Measure and Post Measure groups are used in test panels to define a sequence of button settings that occur directly before or after every measurement. Buttons placed within Pre Measure and Post Measure groups are executed from left to right as they are placed in the test panel, using the left edge of the state buttons as the indicator of location. If multiple measurement blocks are placed in the same test panel with Pre/Post Measure groups, the buttons within the Pre Measure are executed prior to each measurement, and the Post Measure is executed after each measurement, i.e - if there are 4 measurement blocks, the Pre/Post Measure buttons will be executed 4 times. Pre Measure and Post Measure groups enforce an explicit execution command to the compiler that overrides the test optimizer, meaning that repeated and/or redundant button state settings will be executed.

NOTE: Only state buttons (no measurement or calculation blocks) can be placed in Pre Measure and Post Measure groups. If Pre/Post Measure groups are placed in the section defaults, the button settings will be executed before every measurement in every test panel within the test section.

To create a Pre Measure or Post Measure Groups:

- Select the buttons of interest by holding the Ctrl key and left clicking anywhere inside the intended blocks/buttons to select them.
- Right click on one of the selected buttons to view menu options.
- Select 'Group Selected' to bring up the grouping options.
- From the grouping options, select 'Pre Measure' or 'Post Measure' to place the corresponding grouping box around the buttons/blocks.

LOCK STEP GROUPS

Lock Step groups are a button grouping used to link two sweep/range indices or two list indices in a fixed execution order. The lock step group is a compiler directive that overrides the test program optimizer, allowing the user to define the execution order of a specific instrument parameter in a sweep. This is typically used to control the order of operations of two or more instrument button parameter sweeps/lists or to create a user-defined index order for an instrument sweep for plots or datalog saves when used in conjunction with the **Index**, **Inner Loop**, or **Outer Loop** System buttons (reference the [System Edit button descriptions](#) for more information).

NOTE: Only instrument sweeps, ranges, lists, inner/outer loop, or Index buttons are permitted within the Lock Step group (no measurement or calculation blocks).

NOTE: The index size of the range, i.e - the number of indices, of the instrument button pairs used in the loops must match.

NOTE: The leftmost button range/sweep parameter within the Lock Step group defines the measurement index in datalog saves and plots.

To create Lock Step Groups:

- Select the buttons of interest by holding the Ctrl key and left clicking anywhere inside the intended blocks/buttons to select them.
- Right click on one of the selected buttons to view menu options.
- Select ‘Group Selected’ to bring up the grouping options.
- From the grouping options, select ‘Lock Step’ to place the Lock Step grouping box around the buttons.

NOTE: For a Lock Step with a large number of indices, the buttons within a Lock Step group can be converted into table of values.

To create a table of values:

- *Right click within the Lock Step grouping box, and choose “make CSV” from the pop-up menu.*
- *Right click within the Lock Step grouping box, select “edit CSV” from the pop-up menu to open the table edit window.*

Only the first button state is required for each button in the group.


COMBINED GROUPS

Combined groups is a button grouping used for digital communication applications such as SPI, Parallel, or I²C using the protocol aware DUT instrument methodology (reference the [Device Control description](#) found in Section 6 - RI8546: Device Power/Measure). This group type is used to force several device buttons to be executed as a single emit. This is typically used with SPI communication protocols to read or write to multiple registers using a single strobe period versus writing to each register with multiple writes and strobes.

To create a Combined Group:

- Select the buttons of interest by holding the Ctrl key and left clicking anywhere inside the intended blocks/buttons to select them.
- Right click on one of the selected buttons to view menu options.
- Select ‘Group Selected’ to bring up the grouping options.
- From the grouping options, select ‘Combined’ to place the Combined grouping box around the buttons.

RI7725:0.01 TO 20GHz MICROWAVE SOURCE

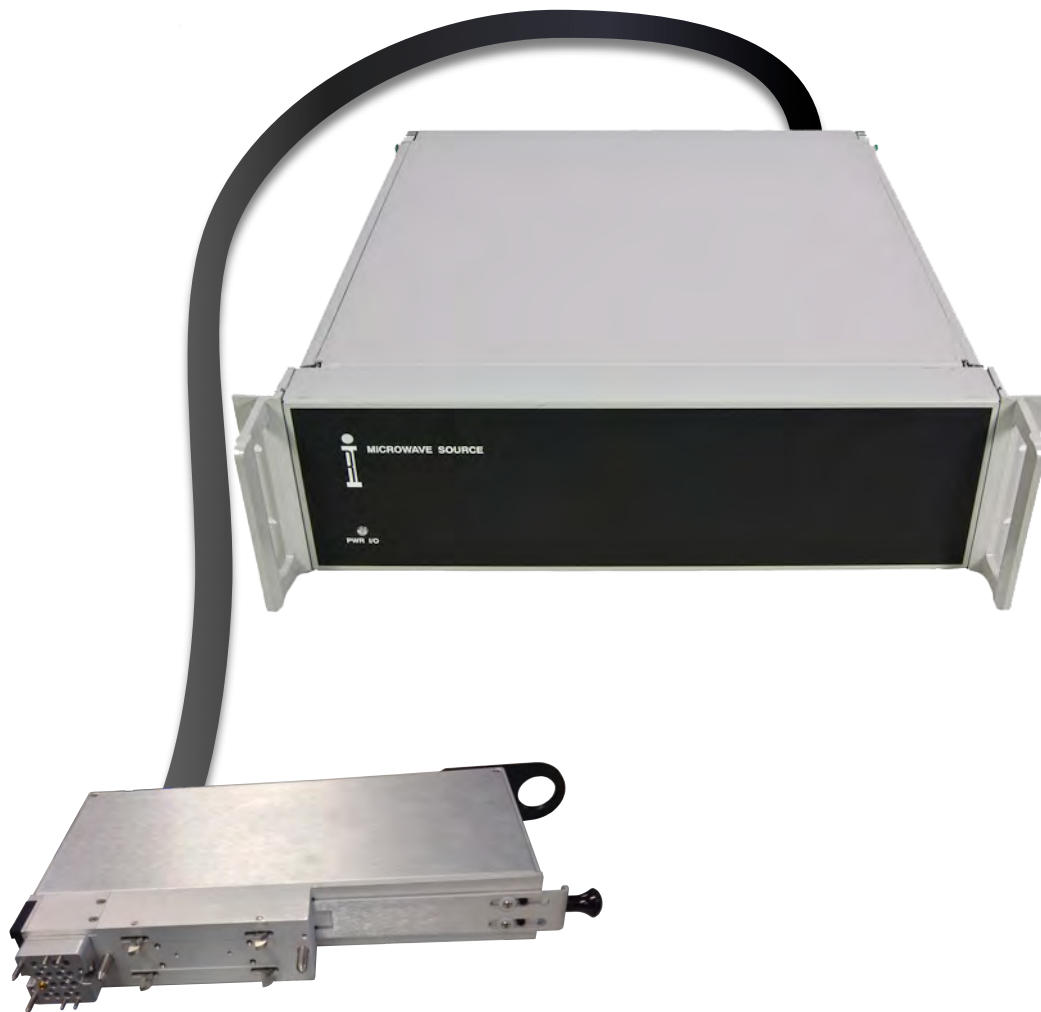

TOPICS

[Instruments provided by this TIM](#)

[Test Head Location Information](#)

[Configuration Panel](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content.

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Source1**, **Source2**, **Source3** and **RecLO** in the panel dialog windows. This instrument can also be used as the Local Oscillator (L.O.) for the system’s Receiver.

Model and Name as it appears in the Tester Configuration:

- Source1, RI7725x .01 - 20 GHz Rf source

NOTE: The “1” in Source1 represents the enumeration of the RI7725 in the system configuration. Multiple RI7725 instruments are enumerated incrementally by the system as “1”, “2”, “3”, etc., in the configuration, edit, and control panels(i.e - Source1, Source2, Source3, etc.). This instrument is named RecLo when used as a Local Oscillator for the system’s Receiver. The “x” in RI7725x denotes the model revision number.

NOTE: Always calibrate the named paths after any changes to the layout (bend) in the cables from the Source through the AUX Rack’s Remote TIM to maintain maximum signal fidelity.

TIM LOCATION

The RI7725 used in located in the Auxiliary Rack and uses an auxiliary rack TIM, also referred to as a Remote TIM, to route resources to the test head. Remote TIMs are typically placed closest to the Auxiliary Rack (slots T1, T2, T15, T16). In a typical application, the source resources are routed, via RF semi-rigid interconnect cables, on the fixture bottom plate or interface plate to Test Set and/or Receiver TIMs.


CONFIGURATION PANELS

View connection settings for the Source1 instrument.

SOURCE1


The Source1 instrument provides one setting in the configuration panel: **RF outputA** with only “none” as an option.

CONFIGURATION PANELS 1 RI7725 CONFIGURATION PANEL

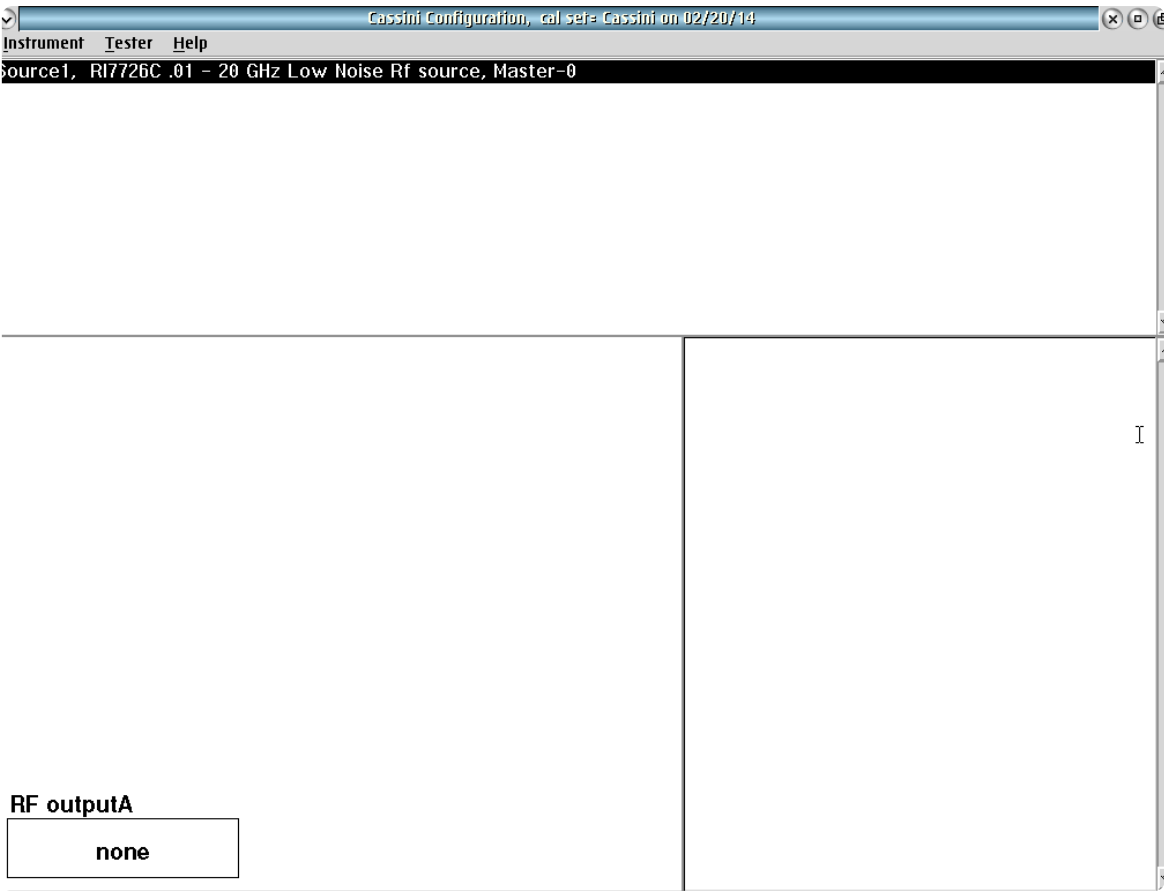

Source# configuration panel shows “none” as only connection option since the Device Connection Editor is now used to define connections.


INSTRUMENT BUTTON DIAGRAM 2.1

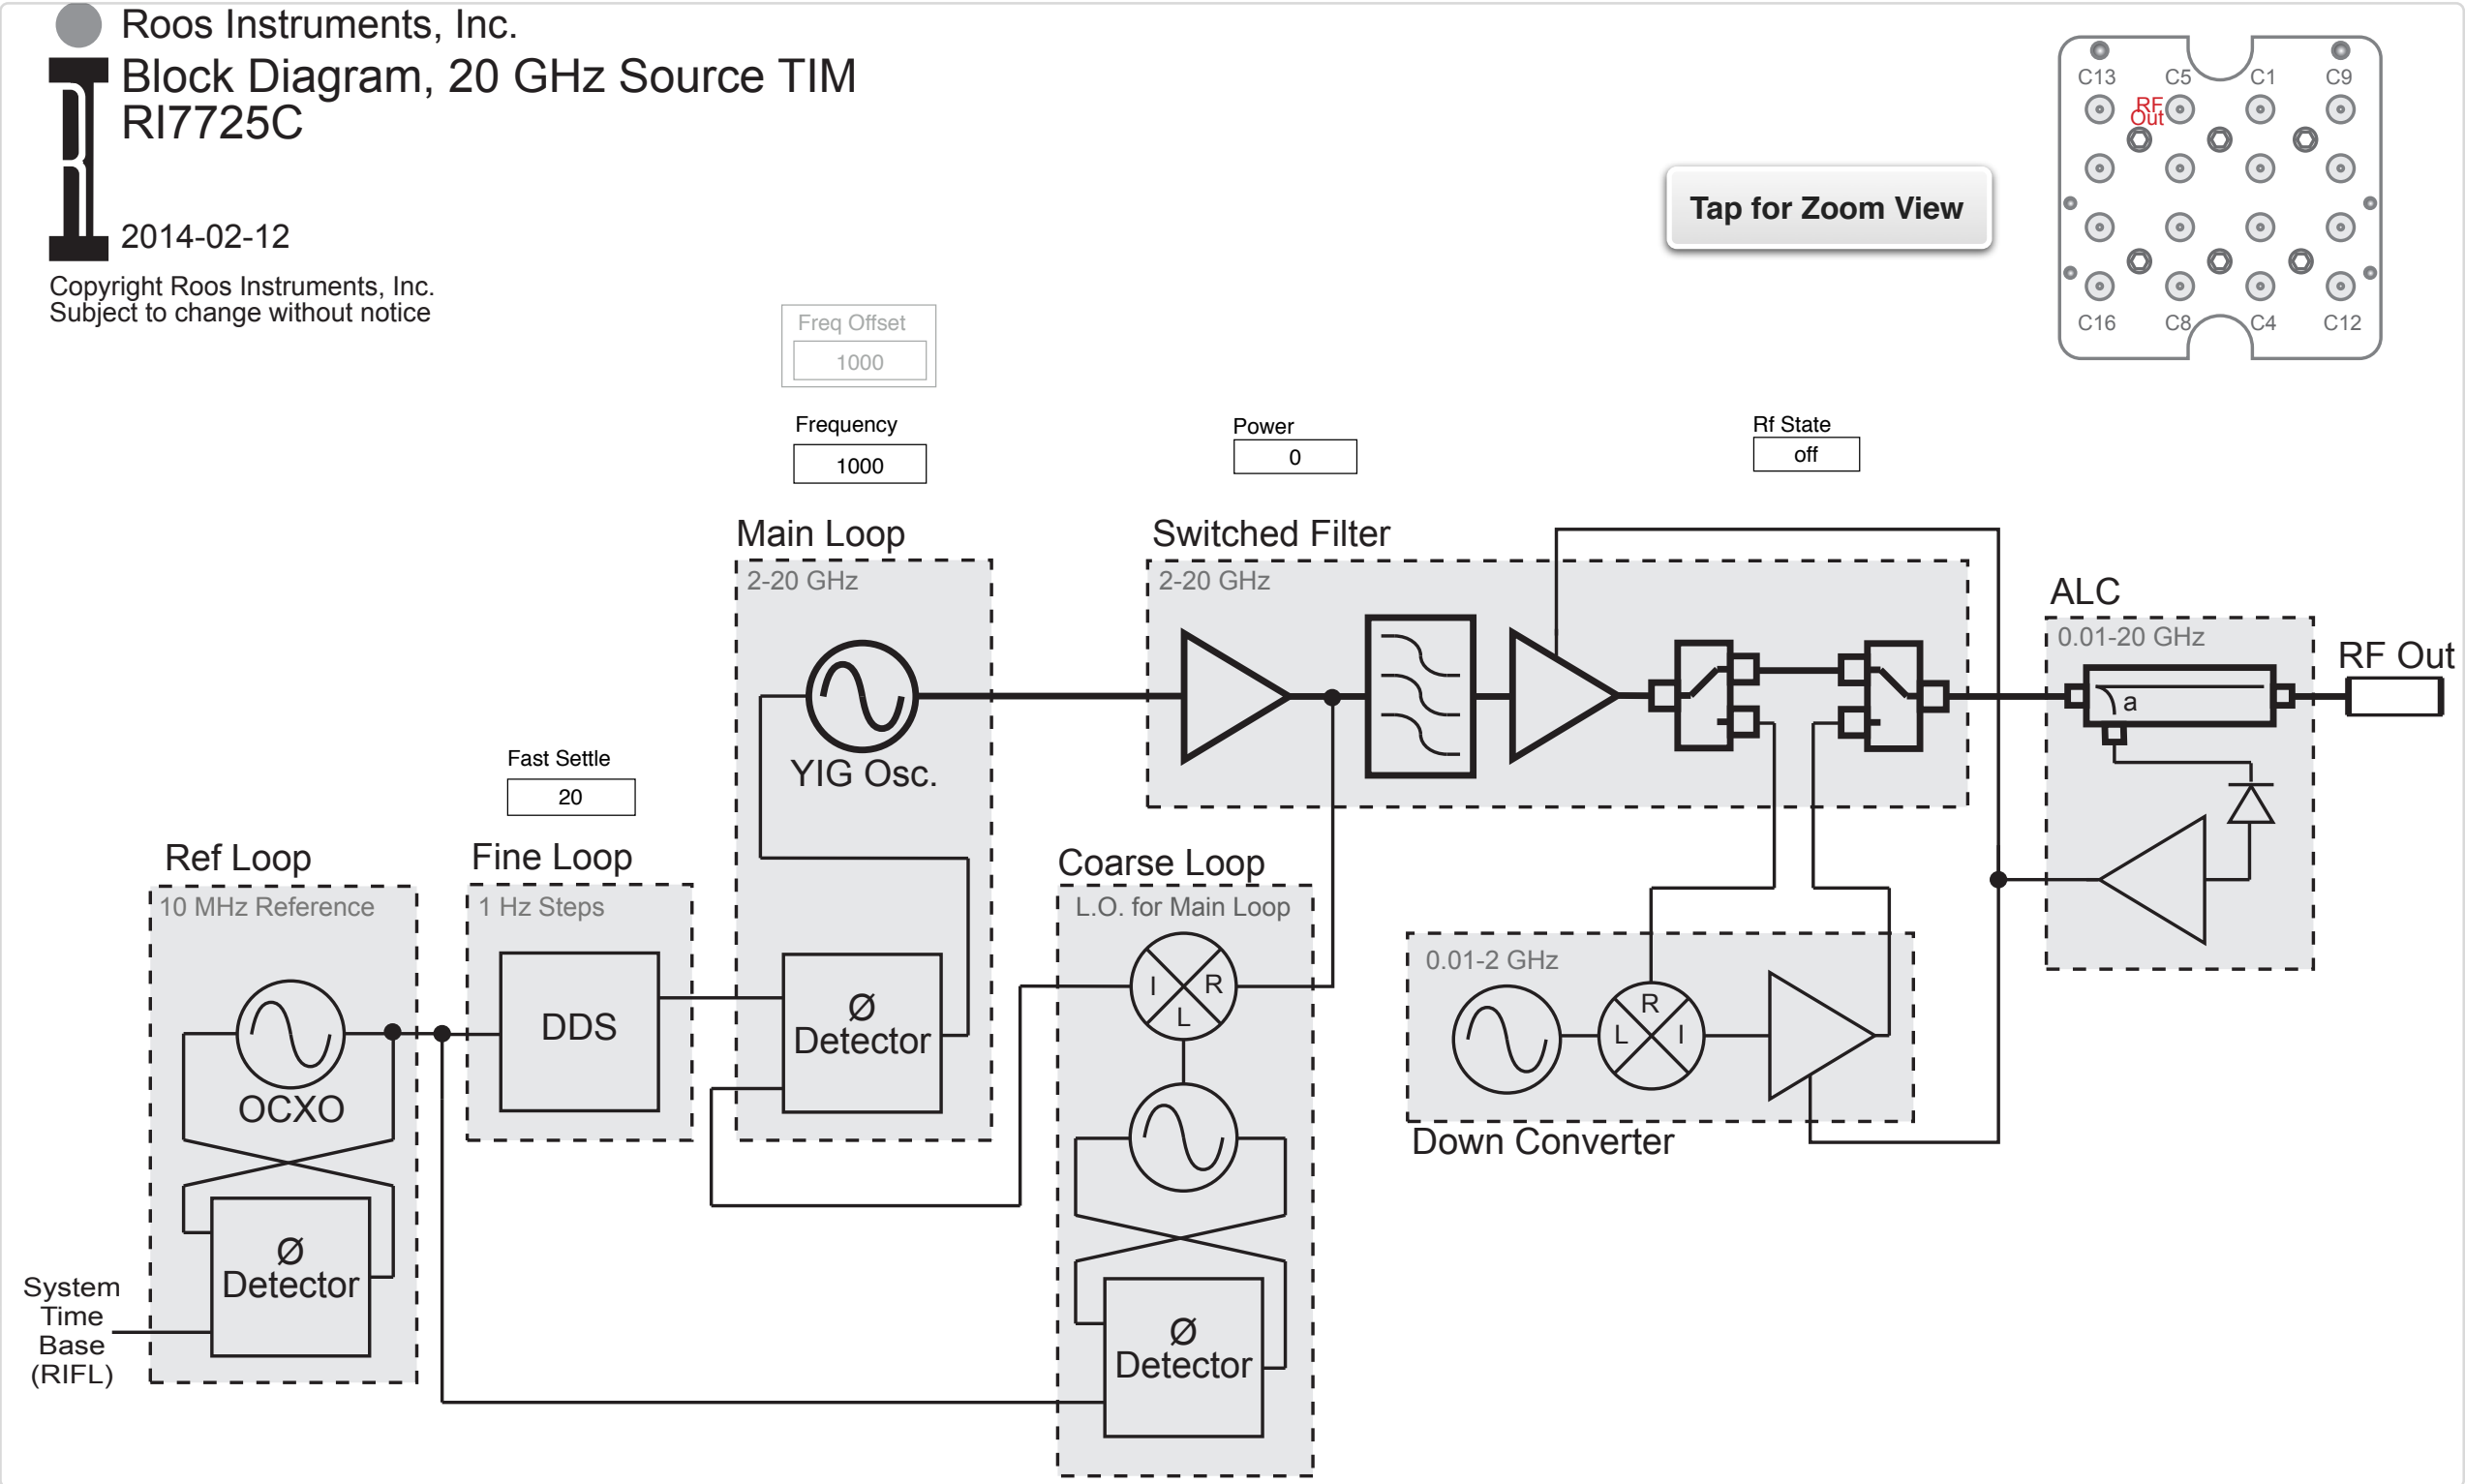

EDIT PANEL

The catalog of control buttons for this TIM to be use when building automated Test Programs. Each “Source#” instrument includes control of it’s frequency and power etc.

EDIT PANELS 1 RI7725 EDIT PANEL

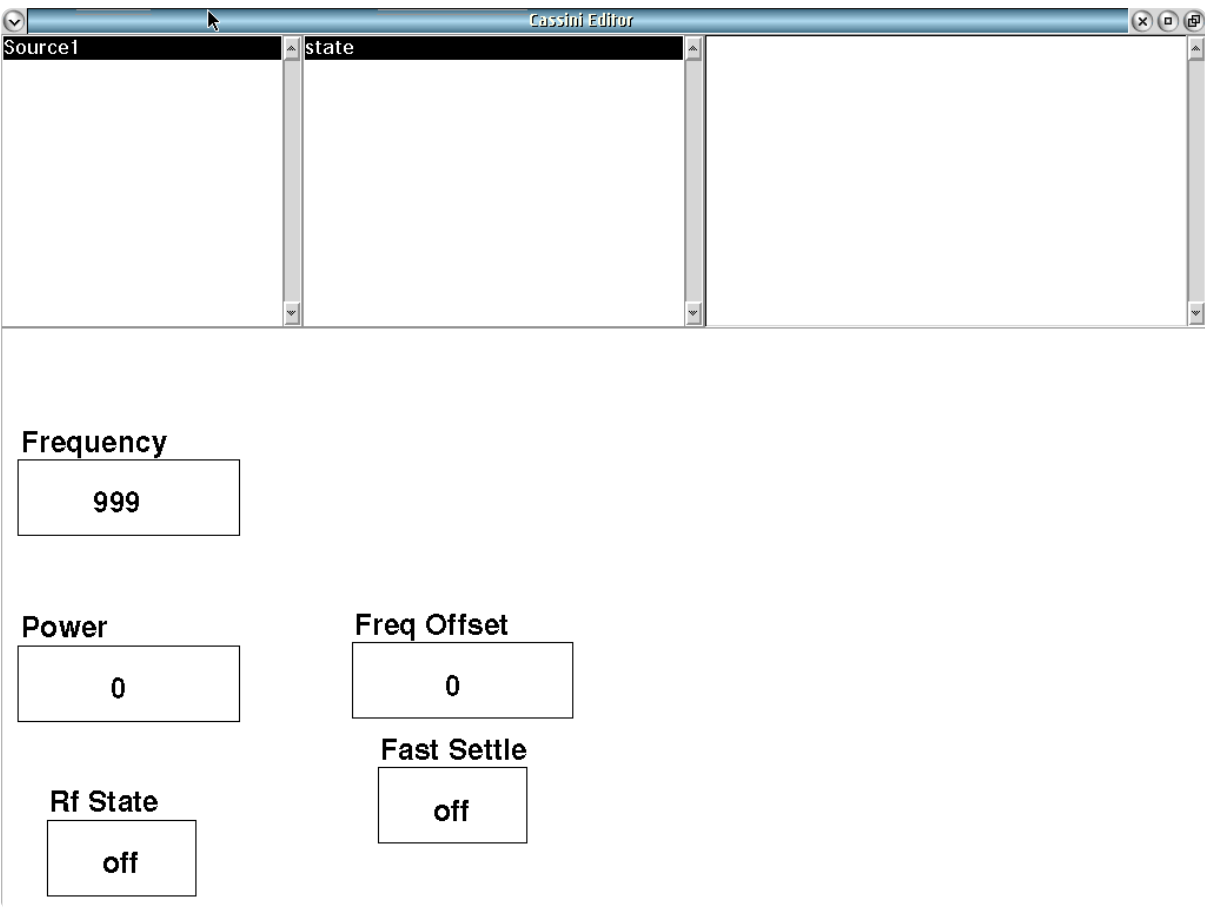

Source# edit panel only includes “state” buttons.

STATE PANEL

Frequency

999

Frequency

A decimal notation input button that sets the Phase Locked Source Output Frequency in units of MHz with 1 Hz resolution.

Power

0

Power

A decimal notation input button with units of dBm that sets the Source RF Power, taking into account all the current path losses, to deliver the desired power at the device. The hardware minimum resolution is 0.1 dBm and the actual dynamic range is a combination of the maximum available power and the current path losses including any step attenuator value. ALC dynamic range is typically <35 dB.

Rf State

off

Rf State

A drop down list button that in the “off” state sets the RF Output Power control ALC section to the lowest value (typical Range is >35 dB), but depending on the desired output power commanded, the

Source Step Attenuator setting, and fixture losses, etc., the amount of available range may vary.

NOTE: Check to see how much power is being delivered to the device in the “off” state and if it could be an issue, to completely remove the sources signal contribution, the test developer should switch the Rf signal to an unused path in the Test Head, or Fixture etc. Select one of the solid state switches if possible since anything mechanical has a finite life time.

Freq Offset

A decimal notation input button that adjusts the generators final stage Phase Lock Loop’s post lock output frequency within its ± 10 MHz range, used for fast short Frequency moves.

Freq Offset

0

Fast Settle

A drop down list button that adjust the settling time of a frequency change to either Phase Stable (the default “off” position) or Amplitude only stable (“on” position). Settings this button to “on” reduces frequency change times by more than 60%.

Fast Settle


0

CONTROL PANELS

The catalog of real-time control buttons for this RF Source TIM that produces a phase locked 10 MHz up to 20 GHz sine wave signal connected through an AUX rack to a special “Rack Connection” TIM that exposes the standard RF Ports and provides control.


Along with the realtime control buttons that look and operate the same functions as in the editor panels, an information only display button grouping provides a window into what the actual source parameters are set to independent of any system wide frequency offsets or path loss power corrections. This is extremely valuable when debugging the entire Tester, Test Fixture and Device Interface Board path.

CONTROL PANELS 1 RI7725 CONTROL PANEL

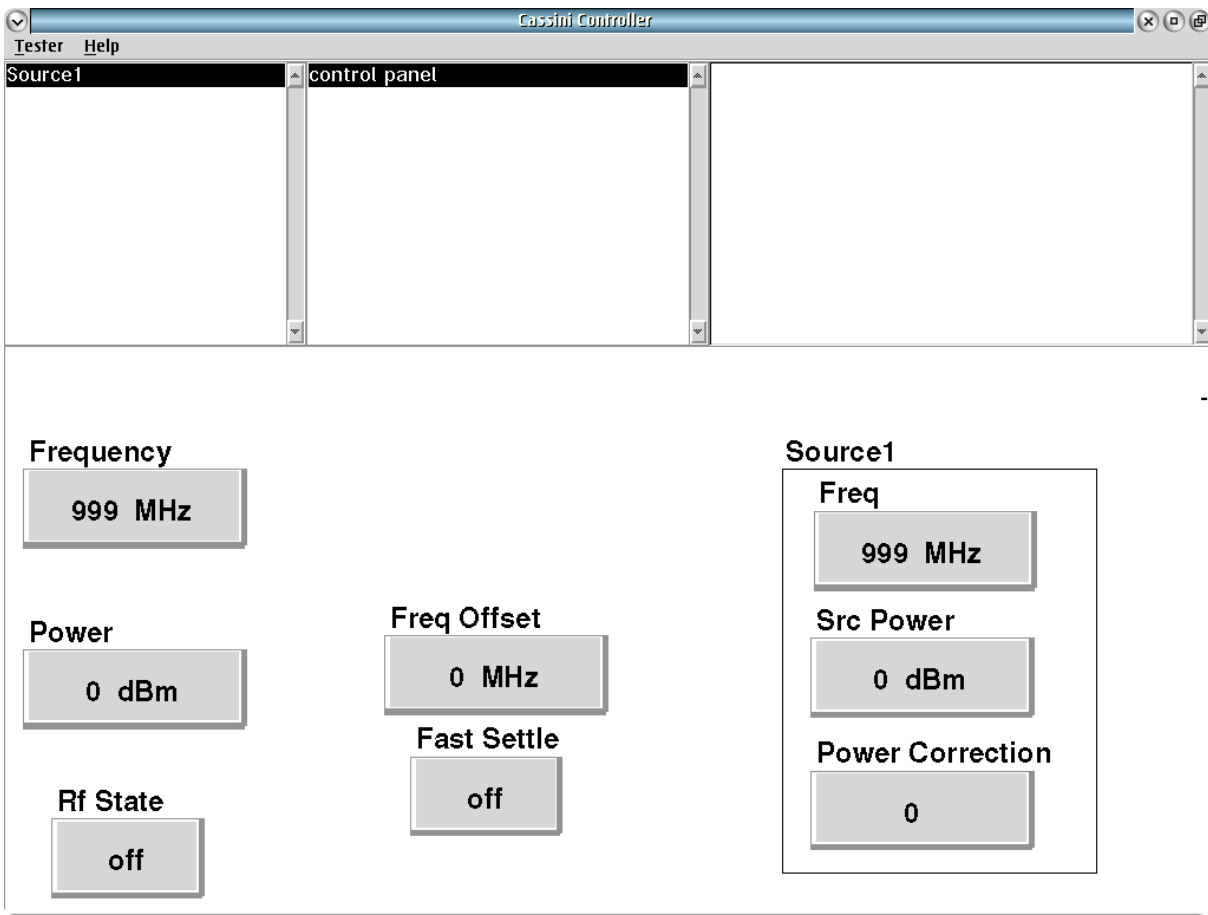

Source# control panel to change states and see power correction.

RI8508: RF MODULATED SOURCE

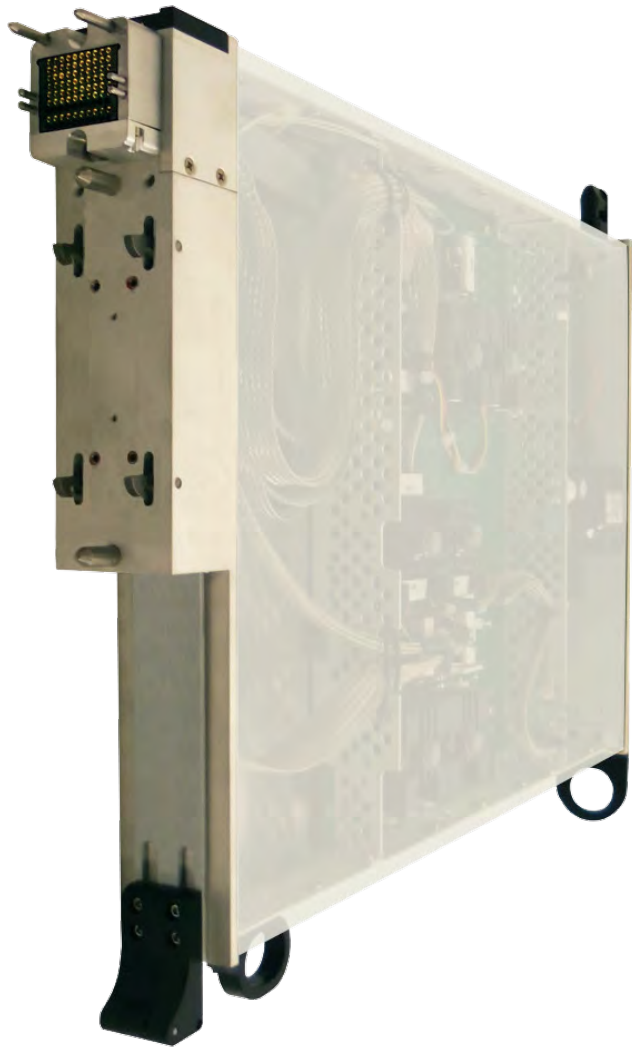

TOPICS

[Instruments provided by this TIM](#)

[Configuration Panels](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content.

INSTRUMENTS PROVIDED BY THIS TIM

The subset instruments in this TIM appear as **QamSource1** and **RFSource1** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- QAMSource1, Ri74212x QAM Generator
- RFSource1, RI8508x .1 - 6GHz Rf Source

NOTE: Multiple RI8508 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - RFsource1,QAMSource1; RFsource2,QAMSource2 ; RFSource3,QAMSource3 ; etc). The “x” in RI8508x denotes the model revision number.

CONFIGURATION PANELS

The configuration panel displays the configuration settings, diagnostics, and calibration information for the RI8508’s instruments.

CONFIGURATION PANELS 2 RI8508 CONFIGURATION PANELS

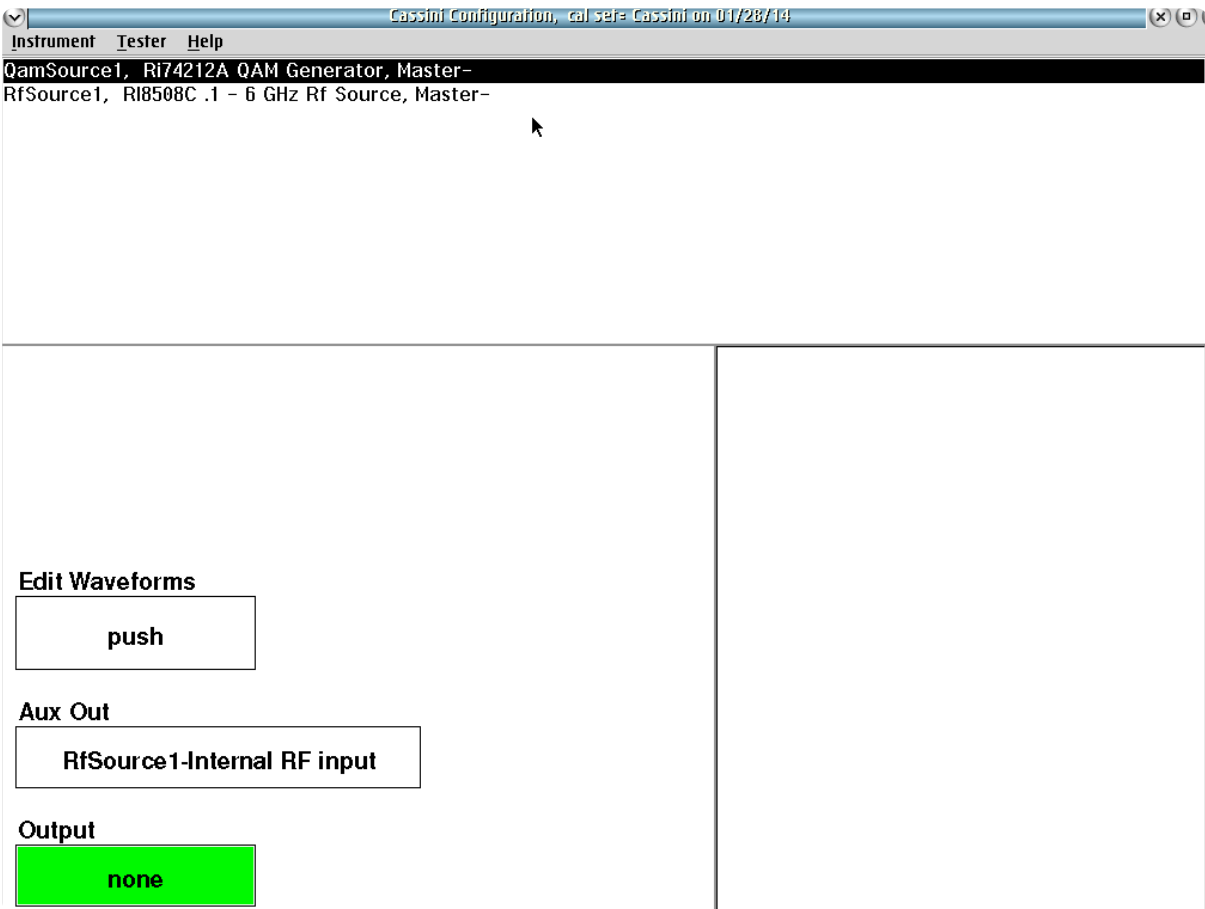

QamSource1 configurations including waveform and output configurations.



QAMSOURCE1

The QamSource instrument provides three settings in the configuration panel: Edit Waveforms, Aux Out and Output. The green Output button defines the resource connection to the fixture.

NOTE: “Output” can only be defined by a fixture definition.

EDIT WAVEFORMS

This button displays the current waveform/pattern loaded into the QamSource’s arbitrary waveform generator. Clicking on the button opens the Edit Patterns window (See [Image 2.1](#)). The left pane of the Edit Patterns window displays a list of all waveforms that have been loaded into the instruments on-board memory. Selecting any of these waveforms displays more information in the right pane: start address in memory, number of samples, sample clock rate, peak magnitude, RMS magnitude indB, and more information about the original waveform file from Guru. New waveforms can be added to the list using the Pattern pull down menu at the top left of the window and then selecting “add from Guru.” The user can specify a different pattern name from the Guru version for test program purposes.

NOTE: Waveforms are programmed into memory sequentially. While waveforms can be removed from the list view by selecting them and using the menu option “Pattern >

remove”, they are not erased from the memory. To make used memory available again, all waveforms must be purged using the “Pattern > Erase > All Patterns” menu option.


AUX OUT

This drop down list button selects the TIM’s internal resource routing to the auxiliary port. This selection will define the resource available at this port when using a state button within a test program or panel.

Example

- From : QamSource1-Internal RF output- internal:
 base name: AuxOut
 type: internal
- To : RfSource1-Internal RF input
 base name: AuxIn
- Path : QamSource1-Internal RF Output- internal:
 RfSource1-Internal RF input

IMAGE 2.1 EDIT PATTERNS DIALOG

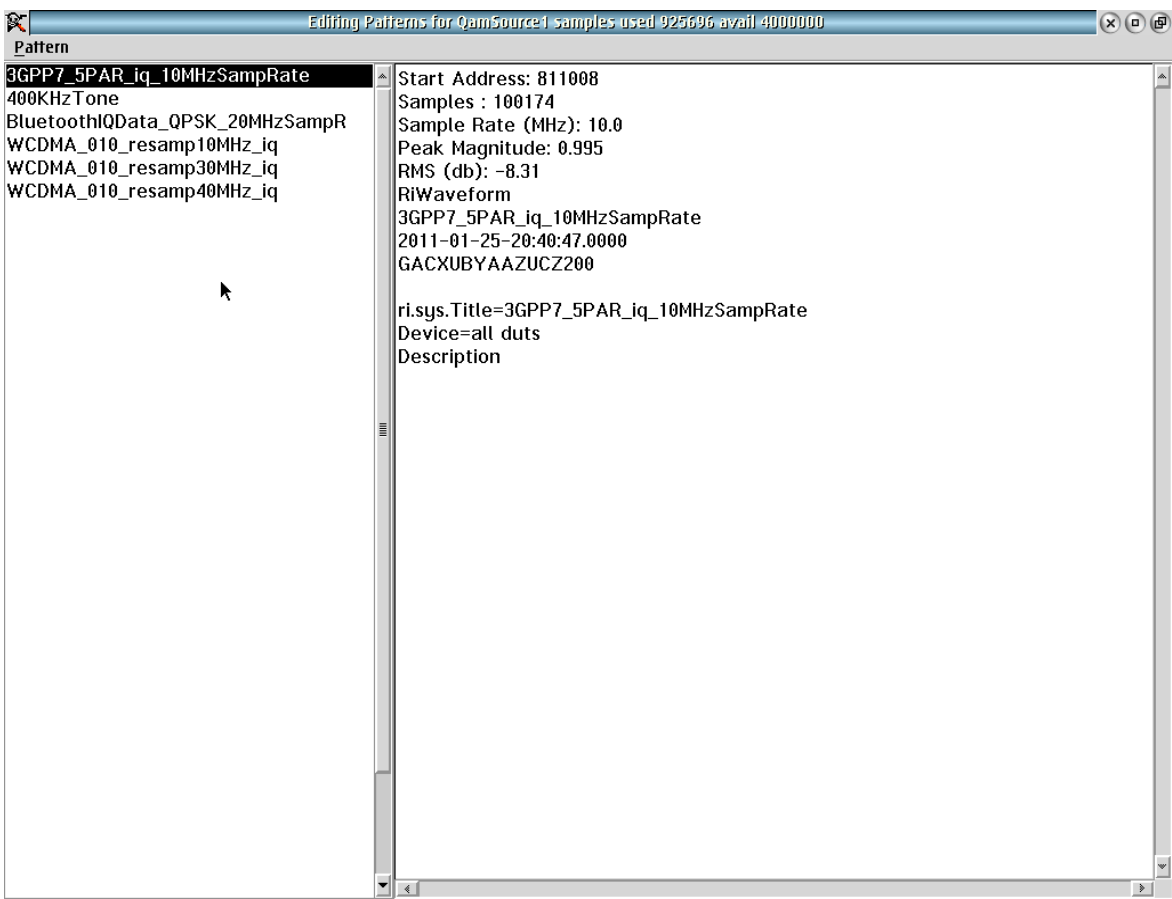


RFSOURCE1

The RfSource instrument provides five user settings in the configuration panel: Edit Patterns, aux In, Aux In, Output2, and Output1. The green Output2 and Output1 buttons define resource connections to the fixture.

NOTE: “Output1” and “Output2” can only be defined by a fixture definition.

IMAGE 2.2 EDIT PATTERNS DIALOG

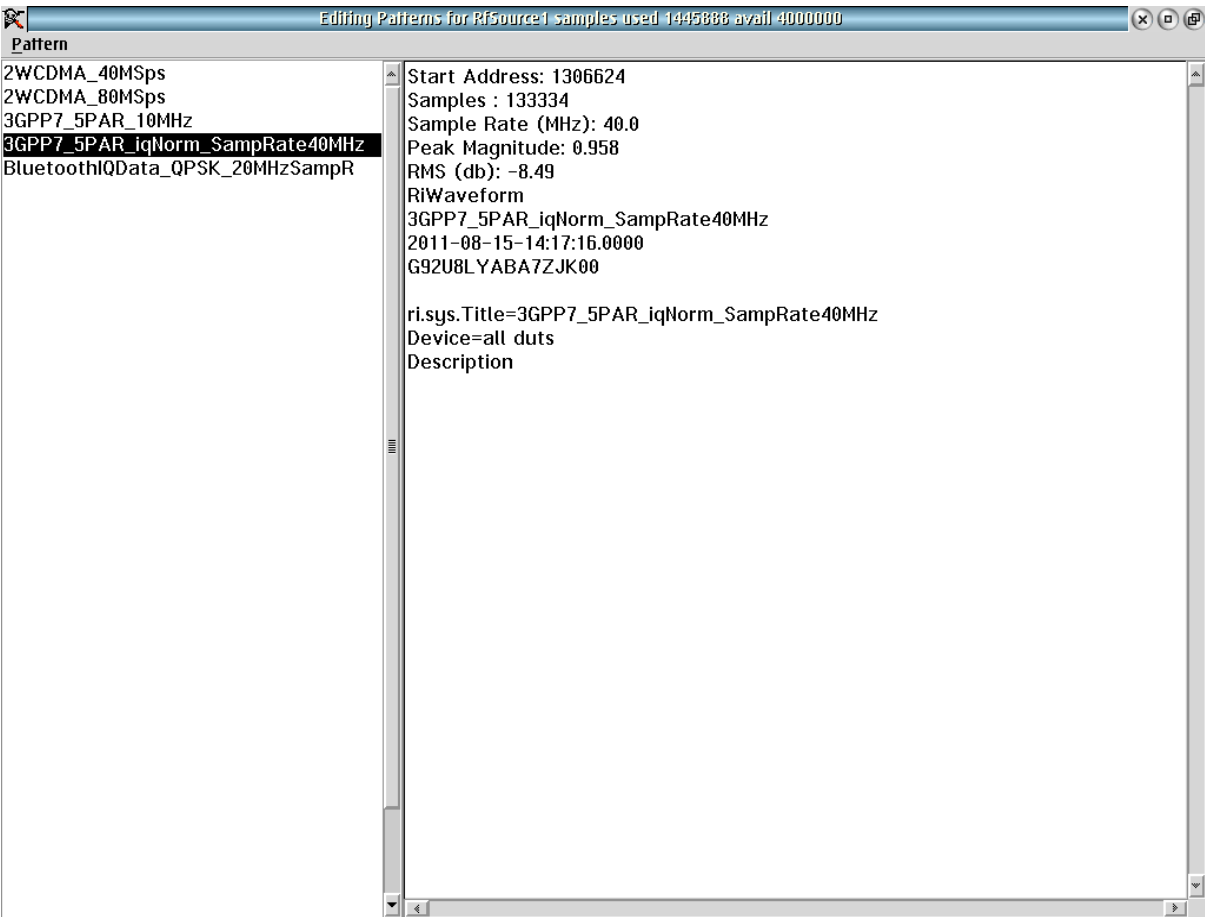

EDIT PATTERNS

This button displays the current waveform/pattern loaded into the RfSource’s complex baseband I/Q modulator. Clicking on the button opens the Edit Patterns window as shown in [Image 2.2](#). The left pane of the Edit Patterns window displays a list of all waveforms that have been loaded into the instrument’s on-board memory. Selecting any of these waveforms displays more information in the right pane: start address in memory, number of samples, sample clock rate, peak

magnitude, RMS magnitude indB, and more information about the original waveform file from Guru. New waveforms can be added to the list using the Pattern pull down menu at the top left of the window and then selecting “add from Guru.” The user can specify a different pattern name from the Guru version for test program purposes.

NOTE: Waveforms are programmed into memory sequentially. While waveforms can be removed from the list view by selecting them and using the menu option “Pattern > remove”, they are not erased from the memory. To make used memory available again, all waveforms must be purged using the “Pattern > Erase > All Patterns” menu option.

Small Cassini ONLY: The following two “aux” configurations are managed automatically when using a Cassini 16 infrastructure, but are required when using earlier versions of the Small Cassini ATE systems.

aux In

This drop down list selection button allows the user to select from predetermined routing built into the source. These connections are managed by the user by making sure both ends of a desired path are selected when use in the Test Plan.

An example is show below:

Path: RfSource1-aux In - Internal RF input
base name: auxIn

Aux In

This drop down list selection button allows the user to select from predetermined routing built into the source. These connections are managed by the user by making sure both ends of a desired path are selected when use in the Test Plan.


An example is show below:

From : RFSource1-Internal RF input
 base name: AuxIn

To : QamSource1-Internal
 RF output- internal:
 base name: AuxOut
 type: internal

Path : RfSource1-Internal
 RF input: QamSource1-Internal
 RF Output- internal


INSTRUMENT BUTTON DIAGRAM 2.2

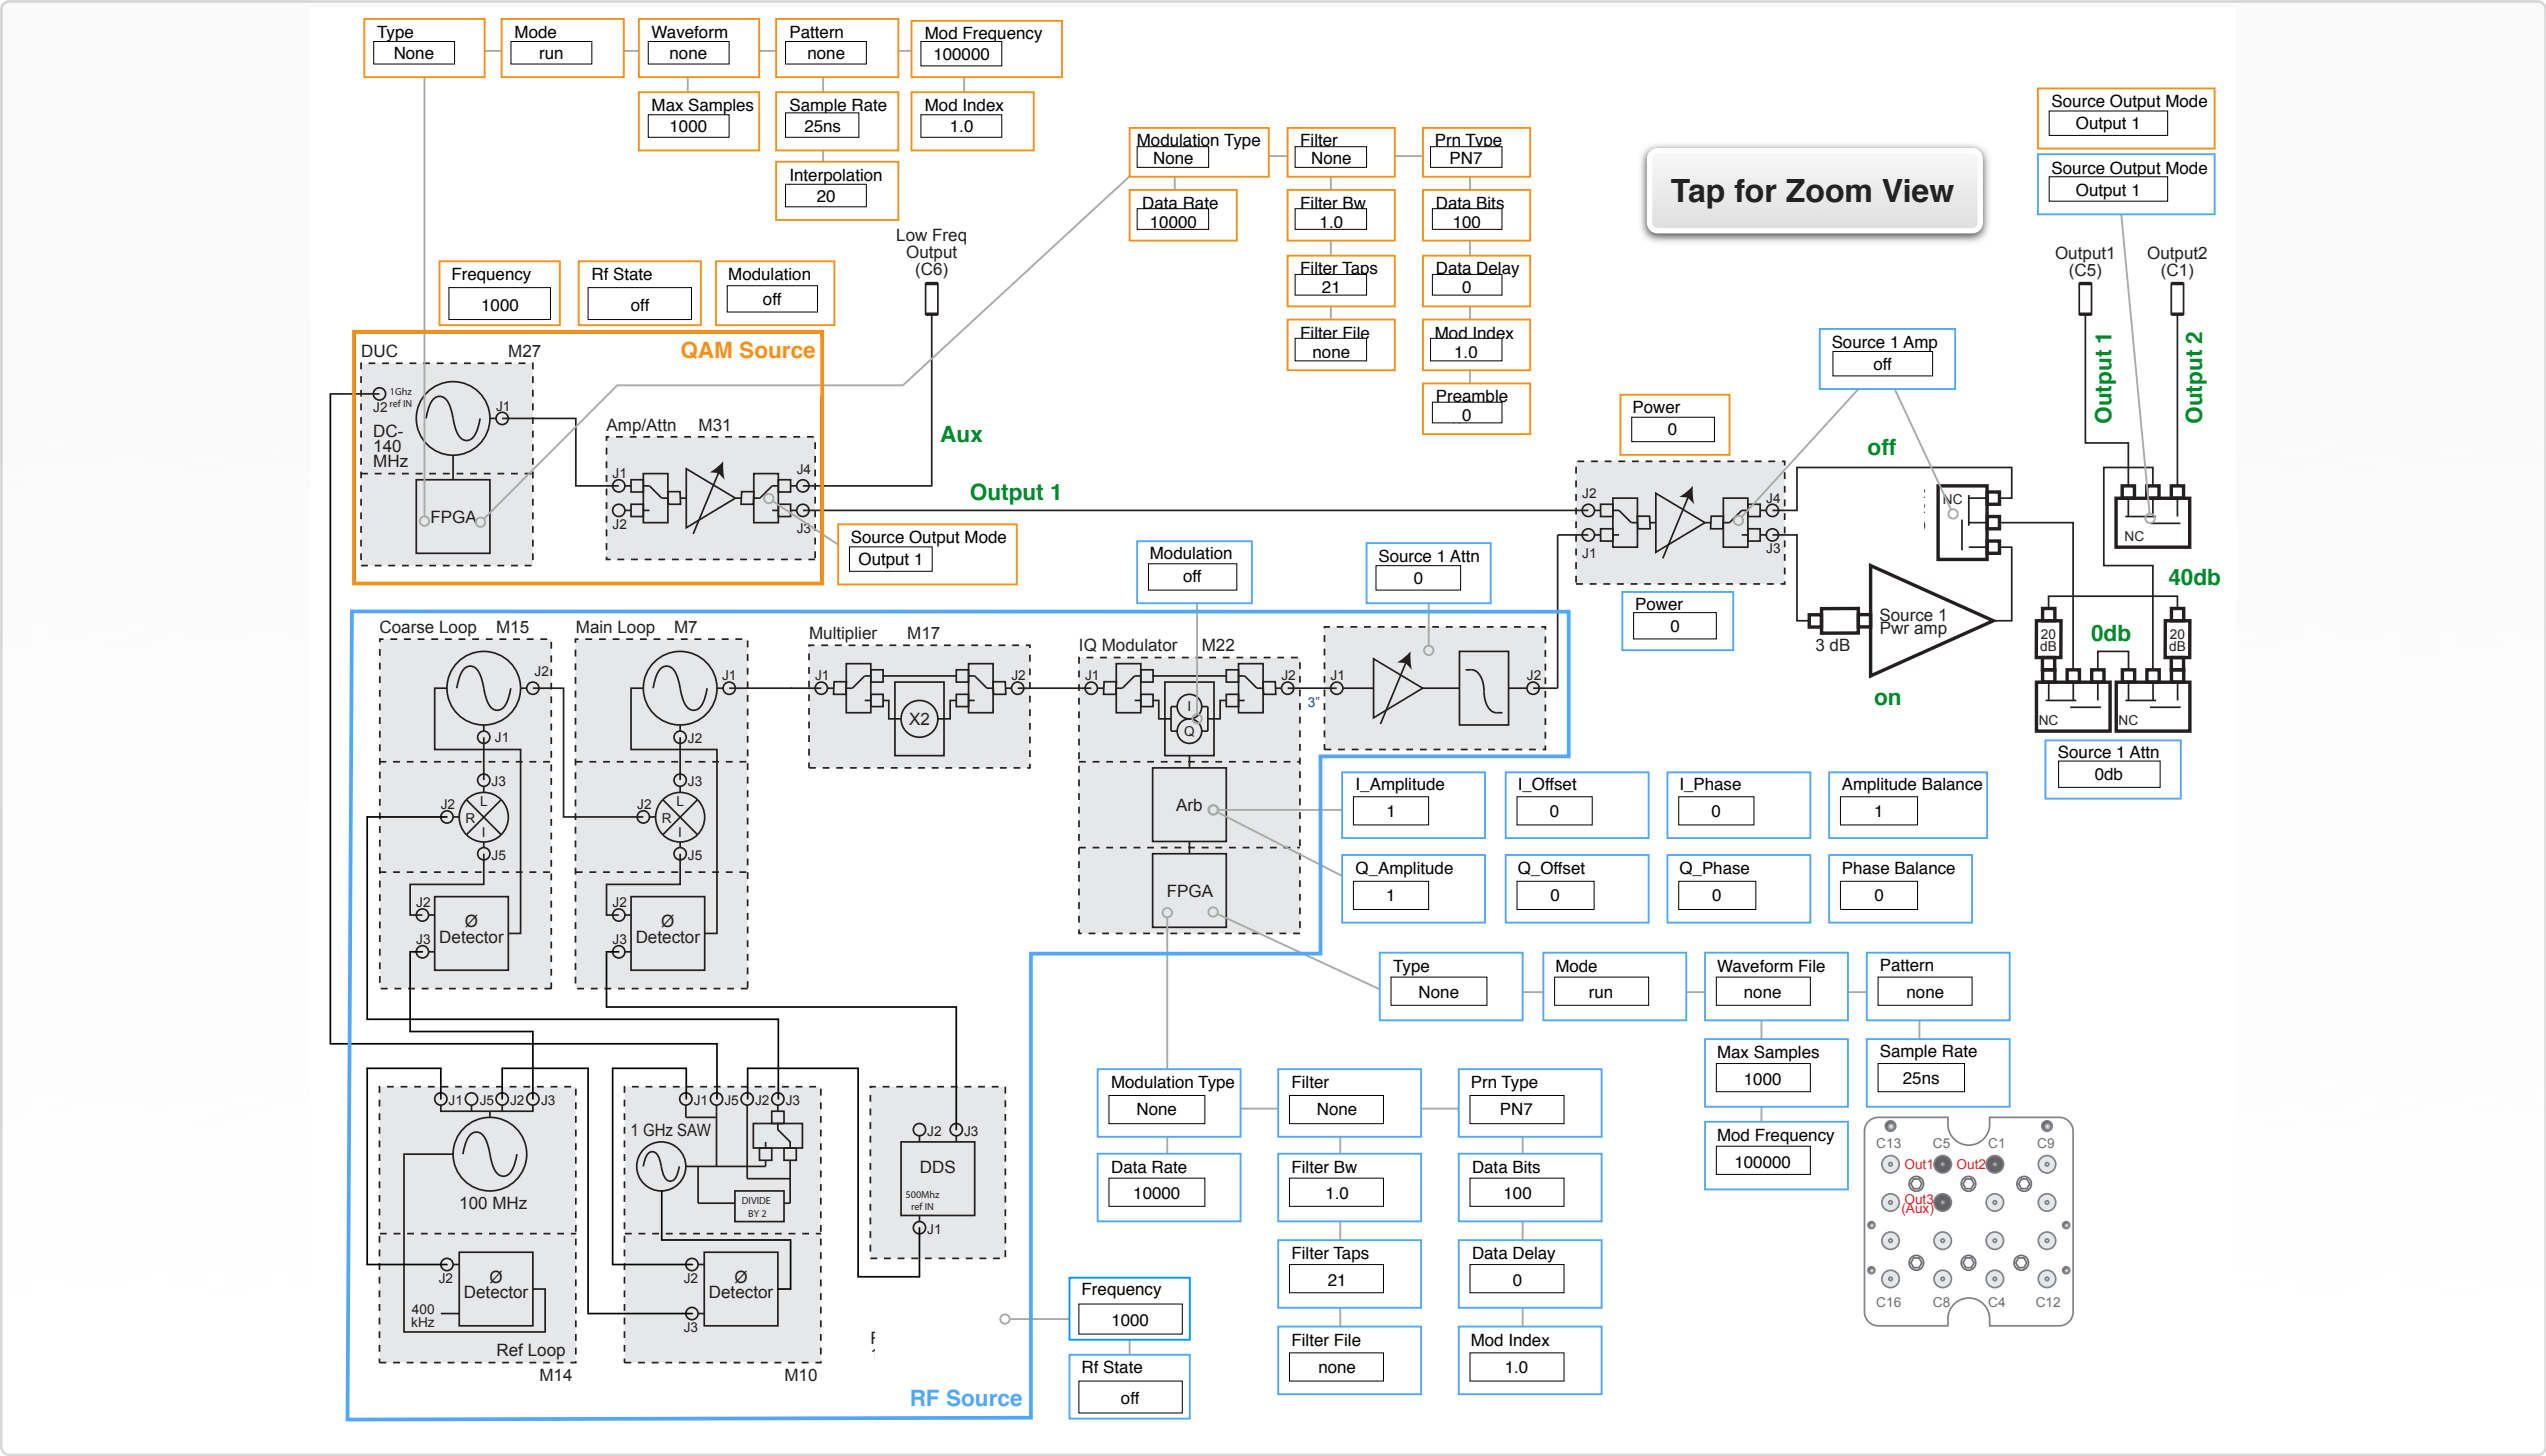

EDIT PANELS

The RI8508 edit panel or editor window provides instrument function blocks and state buttons for QamSource1 and RfSource1. These button and blocks, used in Cassini’s graphical test programming environment, are defined in the following text.

EDIT PANELS 2 RI8508: QAMSOURCE EDIT PANELS

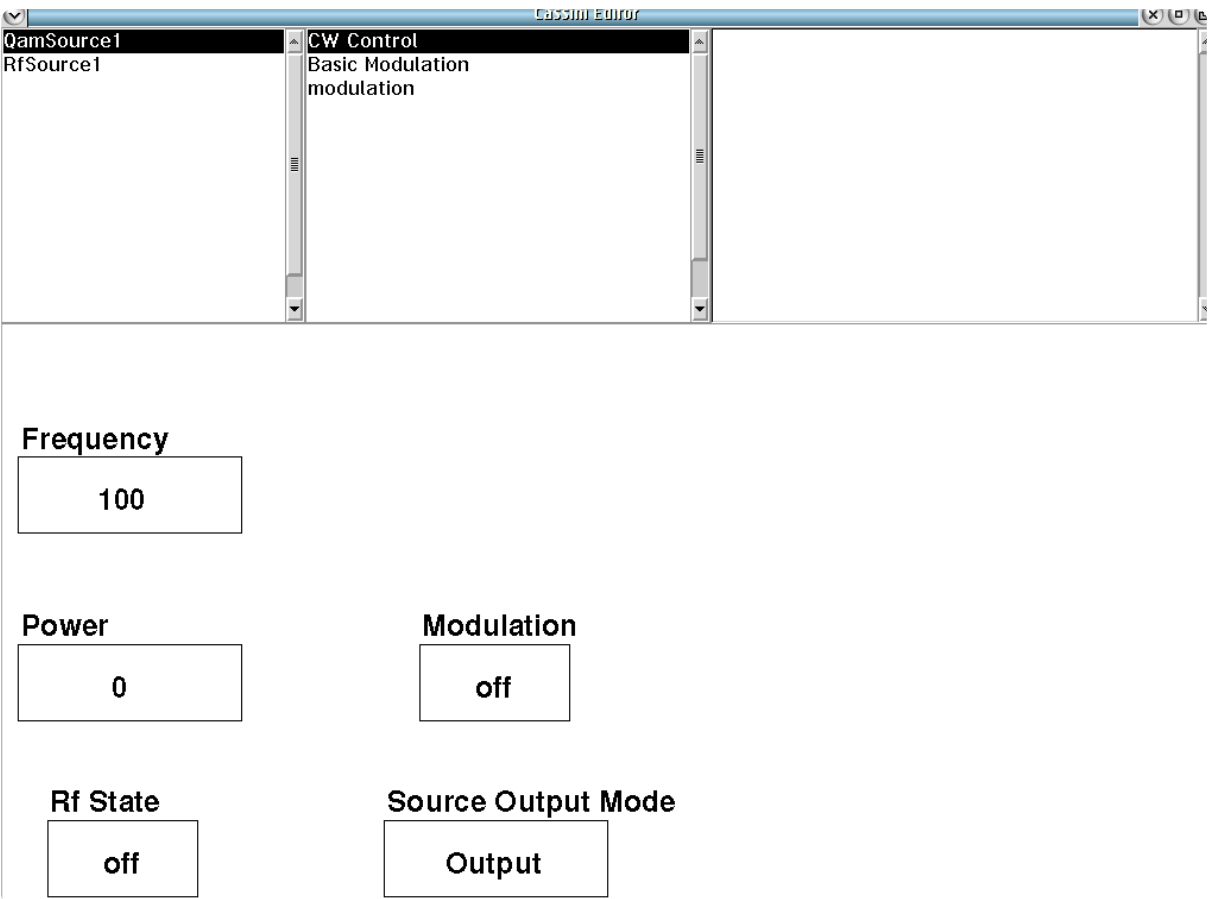

QamSource1 buttons used for Continuous Wave (CW) controls in a Test Panel.



QAMSOURCE1

QamSource1 contains CW Control, Basic Modulation and modulation subsystem panels.

CW CONTROL EDIT PANEL

Frequency

999

Frequency

A decimal notation input button in units of MHz that sets the source center frequency. Valid frequency range is from 400 MHz to 1 MHz in 1 Hz steps.

Power

0

Power

A decimal notation input button in units of dBm that set the desired power at the device. The range of values at the TIM output without any path losses is from +10 dBm to > -60 dBm.

Rf State

A drop down list button that in the “off” state sets the RF Output Power control ALC section to the lowest attenuation value (ALC Range is > 60 dB)

Rf State

off

NOTE: The amount of Attenuation in the “off” state is dependent on the signal level power programmed. i.e. if the Pout is +10 dBm then the “off” value will be >60 dB lower, but if the Pout is -50 dBm, “off” would only be >10 dB lower. Check to see how much power is being delivered to the device in the “off” state and if it could be an issue, to completely remove the sources signal contribution, the test developer should switch the Rf signal to an unused path in the Test Head, or Fixture etc. Select one of the solid state switches if possible since anything mechanical has a finite lifetime (wear).

Modulation

A drop down list button that in the “on” state switches the ARB modulation output to the main signal output.

Modulation

off

Source Output Mode

Output 1

Source Output Mode

A drop down list button that allows user control of the output switch manually. “Output” routes the source output to the TIMs output port and “Aux” connects the source output to the main RF Source internal routing switch.

BASIC MODULATION EDIT PANEL

Max Samples

1000

Max Samples

An integer value button that sets the maximum number of desired samples per computed waveform.

NOTE: Maximum number of samples is 4000.

Mod Frequency

100000

Mod Frequency

A decimal notation input button in units of Hz that sets the QamSource modulation frequency.

Mod Index

1.0

Mod Index

A decimal notation input button that sets the ratio of the excursions of the modulated signal to the level of the unmodulated carrier.

Type

None

A drop down list button that selects from the built in modulation waveform types, i.e. “Quad” for Quadrature, “FM Tone”, “FM Stereo”, “FM Stereo Left”, or tells the compiler to look for users defined modulations from either a Waveform File, Pattern, or one built with buttons from the Modulation builder.

Interpolation

20

A decimal notation input button that sets the amount of point to point data interpolation that will be performed on the modulation signal.

NOTE: The interpolation sample rate is $\frac{250\text{ MHz}}{x}$ where $3.0 \leq x \leq 63.0$.

Mode

run

Mode

A drop down list button that selects the ARB operating mode: “run” initiates the waveform in a repeating pattern, “stop” terminates the repeating pattern. Precise control over the waveform is accessible by using “pmStart”, “pmStop”, and “trigger” in a Premeasure Group to sync the waveform with an event or user start time.

Pattern

none

A drop down list button that selects the name of the desired pattern from the instrument’s preloaded internal memory.

Waveform File

none

A drop down list button the selects from built-in waveform files into the internal 4000 point buffer memory at run time.

MODULATION EDIT PANEL

Filter

A drop down list button that selects a digital filter type to be applied to the waveform. Built-in types include: “Raised Cosine”, “Gaussian”, “GMSK”, or a user-defined filter type provided with the FilterFile button.

Filter

None

Filter Shape

A decimal notation input button that sets the Filter Shape Factor.

Filter Shape

0.0

Filter Bw

A decimal notation input button that sets the desired ratio of the selected digital filter’s bandwidth to the symbol bandwidth.

Filter Bw

1.0

NOTE: This button is dependent on the filter type defined with the Filter button.

Filter Taps

A drop down list button that selects the file name of a user-defined digital filter taps or coefficients file.

Filter Taps

5.0

Data Bits

An integer value button that sets the number of data symbols per record.

Data Bits

100

Data Rate

A decimal notation input button that sets the output data rate in symbols per second.

Data Rate

100000

Modulation Type

A drop down list button that selects the type of base modulation to generate. i.e “8PSK” or 8-Symbol Phase Shift Keying

Modulation Type

none

Filter File

A drop down list button that selects the file name of a user-defined digital filter taps or coefficients file.

Filter File

none

Prn Type

A drop down list button that selects the size of the pseudo random number seed used in the sequence generator. i.e “PN5”, “PN7”, “PN9” etc.

Prn Type

PN7

Data Delay

A decimal notation input button that sets the data output delay in seconds.

Data Delay

0

Preamble Bits

An integer value button that sets the number of alternating “1’s” and “0’s” output at the beginning of a waveform.


Preamble Bits

0

RFSOURCE1

RfSource1 contains Source State, waveform and modulation panels.

EDIT PANELS 3 RI8508: RFSOURCE EDIT PANELS

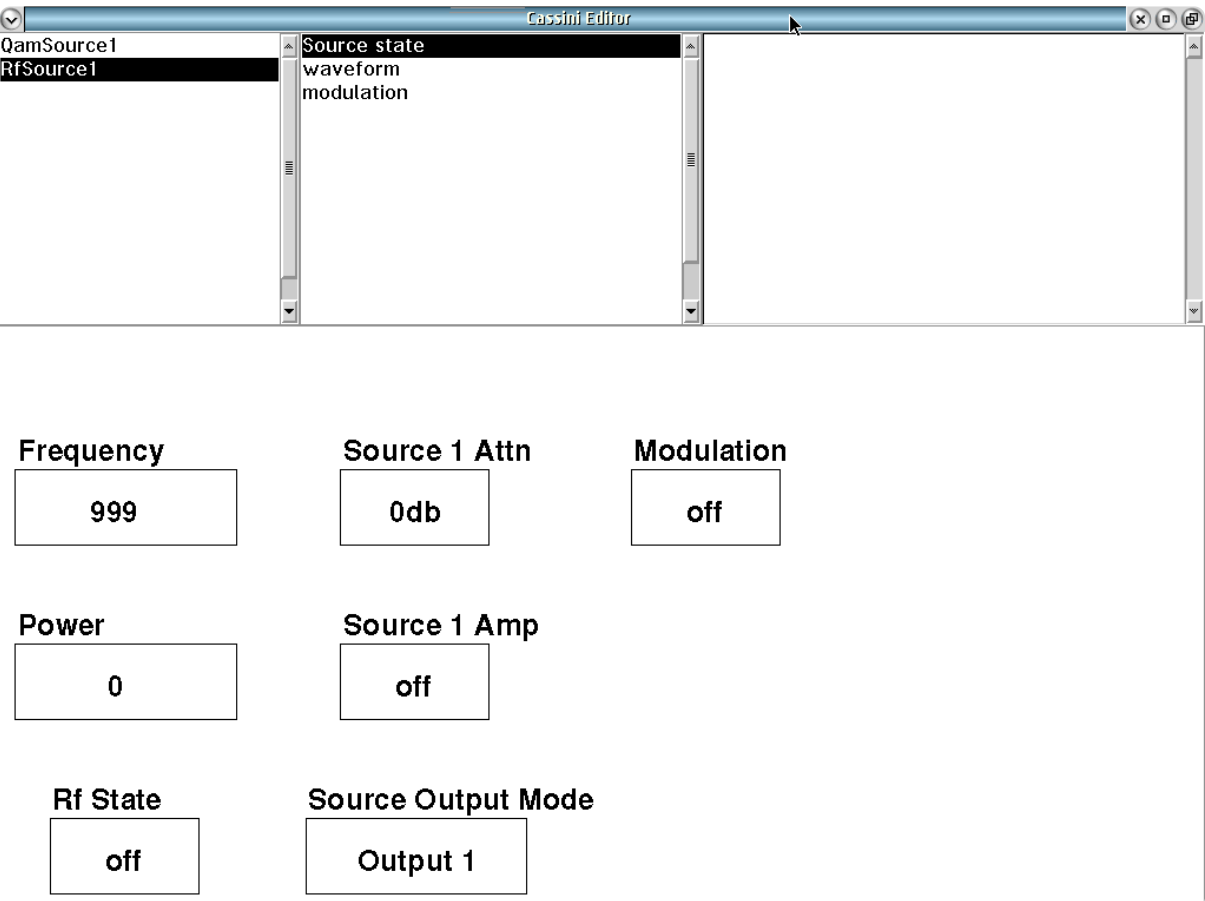

RfSource1 buttons used for basic source state control including frequency and power.

• • •

SOURCE STATE EDIT PANEL

Frequency

999

Frequency

A decimal notation input button in units of MHz that sets the source center frequency valid from 1 MHz to 6 GHz in 1 Hz steps.

Power

0

Power

A decimal notation input button in units of dBm that sets the RF power. This value is the calibrated RF power value measured at the device pin when DIB and/or fixture path calibration information is included. The range of values at the TIM output without any path losses is from +10 to > - 60dBm in 0.1dB steps. ALC range along without Step attenuators is typically >40 dB.

Rf State

off

Rf State

A drop down list button that sets the RF source output to the “on” or “off” state.

Source 1 Attn

A drop down list button that provides an option for connecting a calibrated 40 dB attenuator internally to the RF source output path.

Source 1 Attn

0db

Source 1 Amp

A drop down list button that in the “on” state connects an internal 20dB gain amplifier into the output path. Linear amplification range is between 400 MHz to 6 GHz.

Source 1 Amp

off

Source Output Mode

A drop down list button that switches the output port of the RF source between the TIMs physical output ports: “Output1”, “Output2.” The “Aux” setting switches the RF source output to an internal auxiliary port.

Source Output Mode

Output 1

Modulation

A drop down list button that in the “on” state connects the I/Q modulator into the main signal output for complex modulation of the carrier signal.

Modulation

off

WAVEFORM EDIT PANEL

I_Amplitude

A decimal notation input button in units of volts that sets the peak voltage for the in-phase component of the output waveform. Range is 0 V to 3 V peak.

I_Amplitude

1

I_Offset

A decimal notation input button in units of volts that sets the DC offset voltage for the in-phase component of the waveform. Range is ± 3 V.

I_Offset

1

I_Phase

A decimal notation input button in units of degrees that sets the phase delay of the in-phase component of the waveform.

I_Phase

0

Amplitude Balance

A decimal notation input button that sets the gain ratio between the in-phase and quadrature waveforms.

Amplitude Balance

1

Q_Amplitude

A decimal notation input button in units of volts that sets the peak voltage for the quadrature component of the out put waveform. Range is 0 V to 3 V peak.

Q_Amplitude

1

Q_Offsets

A decimal notation input button in units of volts that sets the DC offset voltage for the quadrature component of the waveform. Range is ± 3 V.

Q_Offset

1

Q_Phase

A decimal notation input button in units of degrees that sets the phase delay of the quadrature component of the waveform.

Phase Balance

A decimal notation input button that sets the phase ratio between the in-phase and quadrature waveforms.

Sample Rate

A drop down list button that sets the waveform data point output rate. Data point output sample rates options are “1 μsec”, “100 nSec”, “50 nSec”, “31.25 nSec”, “25 nSec”, and “12.5 nSec” corresponding to “1 MHz”, “10 MHz”, “20 MHz”, “32 MHz”, “40 MHz”, and “80 MHz” respectively.

NOTE: Waveform data point sample rates must comply with one of these listed sample rates. “Pattern” files have a maximum sample rate of “31.25 nSec” or “32 MHz.”

Q_Phase

0

Phase Balance

0

Sample Rate

25ns

Max Samples

1

Max Samples

An integer value button that sets the maximum number of samples per waveform.

NOTE: “Max Samples” only applies to non Waveform or Pattern type signal files. Maximum number of samples is 4000.

Mod Frequency

100000

Mod Frequency

A decimal notation input button that sets the modulation frequency for the built-in standard waveform types. This frequency is converted to the data rate.

Type

none

Type

A drop down list button that selects from the built-in modulation waveform standards: “Tone”, “Quad”, “Sine”, “Quad Mod Test”, and “Square Wave”. “File” and “Pattern” instructs the compiler to use a

user-defined modulations from either a supplied file, or one-built with buttons from the Modulation builder.

Waveform File

A drop down list button that selects a waveform from a pre-loaded file at run time.

Waveform File

none

Pattern

A drop down list button that selects the name of a user-defined pattern loaded into internal memory.

Pattern

none

Mode

A drop down list button that selects the ARB operating mode: “run” initiates the waveform in a repeating pattern, “stop” terminates the repeating pattern. Precise control over the waveform is accessible by using “pmStart” and “pmStop” in a premeasure group to sync the waveform with an event or user start time.

Mode

run

MODULATION EDIT PANEL

Filter

A drop down list button that selects a digital filter type to be applied to the waveform. Built-in types include: “Raised Cosine”, “Gaussian”, “GMSK”, or a user-defined filter type provided with the FilterFile button.

Filter

none

Filter Bw

A decimal notation input button that sets the ratio of the selected filter’s bandwidth with the symbol bandwidth.

Filter Bw

1.0

Filter Taps

Decimal notation input button that sets the total number of digital filter coefficients.

Filter Taps

5.0

Mod Index

A decimal notation input button that sets the ratio of the excursions of the modulated signal to the level of the unmodulated carrier.

Data Bits

Decimal notation input button that sets the number of data points per record.

Data Rate

Decimal notation input button that sets the output data sample rate.

Modulation Type

A drop down list button that selects a modulation from the built-in standards: “Ran FSK” - Random Frequency Shift Keying, “8PSK” - 8 Symbol Phase Shift Keying, “Edge”, “QPSK” Quadrature Phase Shift Keying, “FM Tone”, and “AM Tone”

Mod Index

1.0

Data Bits

100

Data Rate

100000

Modulation Type

none

Filter File

A drop down list button that selects the file name of a user-defined digital filter taps or coefficients file.

Prn Type

A drop down list button that selects the size of the pseudo random number seed used in the sequence generator. i.e “PN5”, “PN7”, “PN9”, etc.

Data Delay

A decimal notation input button that sets the data output delay in seconds.

Filter File

none

Prn Type

PN7


Data Delay

0


CONTROL PANELS

The control panel provides a direct view and control of RI8508 instrument settings much like the view and controls of bench-top equipment. This panel is also used for in-situ view and control of the

CONTROL PANELS 2 RI8508 CONTROL PANELS

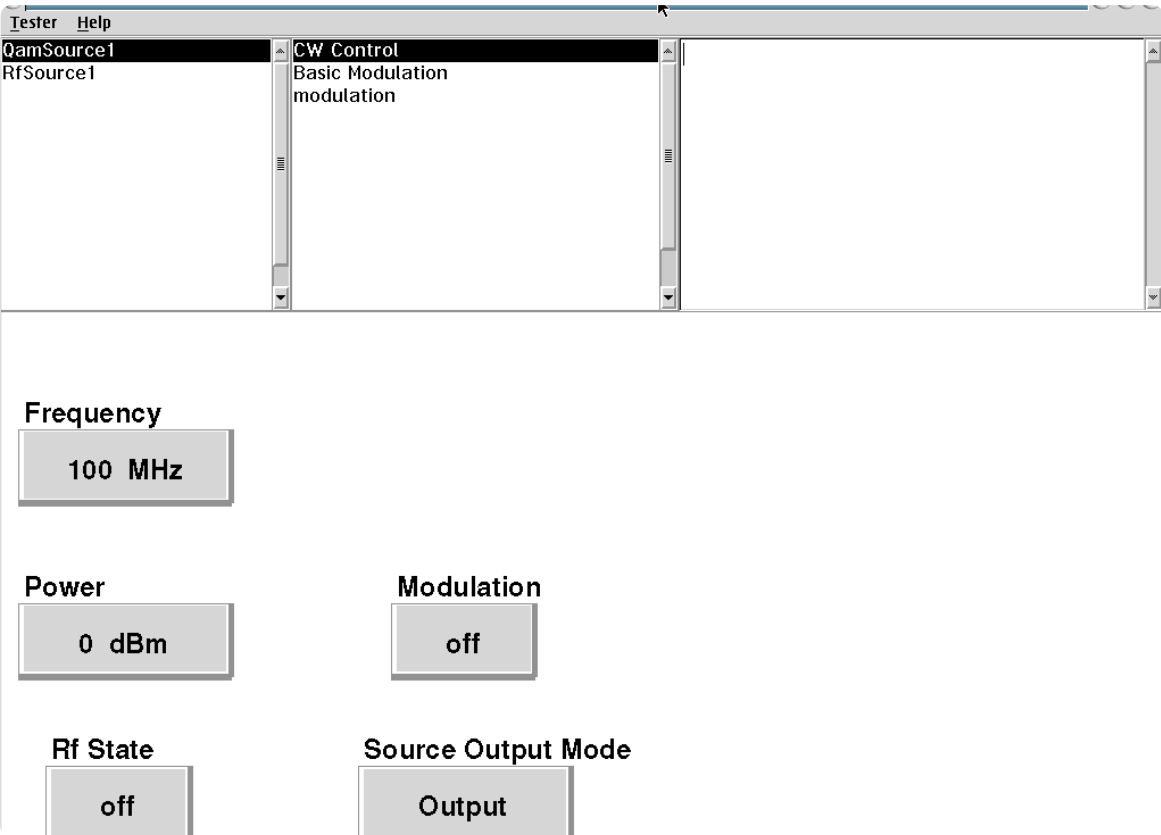

 QamSource1 provides real-time interaction with the continuous wave (CW) buttons.



instruments at a breakpoint within a running test plan or measurement.

QAMSOURCE1

QamSource1 contains CW Control, Basic Modulation and modulation panels.

BASIC MODULATION CONTROL PANEL

This adds on the right side the panel ability to control the modulation waveform voltage and delay (phase) independently to the in-phase and quadrature component signals of the modulator.

I_ Amplitude

A decimal notation input button in units of volts that sets the peak voltage for the in-phase component of the output waveform. Nominal is 1 Volt.

I_ Offset

A decimal notation input button in units of volts that sets the DC offset voltage for the in-phase component of the waveform.

I_ Phase

A decimal notation input button in units of degrees that sets the phase delay of the in-phase component of the waveform.

Q_ Amplitude

A decimal notation input button in units of volts that sets the peak voltage for the quadrature component of the output waveform. Nominal is 1 Volt.

Q_ Offset

A decimal notation input button in units of volts that sets the DC offset voltage for the quadrature component of the waveform.

Q_ Phase

A decimal notation input button in units of degrees that sets the phase delay of the quadrature component of the waveform.

RFSOURCE1

RfSource1 contains RF Control, waveform and modulation panels.

RF CONTROL PANEL

An information only display button grouping is provided.

RfSource1 Group

This group provides a view of the actual internal RfSource parameters settings, independent of any system wide frequency offsets or path loss power corrections.

NOTE: This view is useful when debugging the entire Tester, Test Fixture and Device Interface Board path.

WAVEFORM CONTROL PANEL

Offset Frequency

A decimal notation input button in units of Hz that offsets the Frequency of the waveform output.

NOTE: Amplitude values and offsets for the in-phase and quadrature voltages and phase must be set in the test plan/program. There is no real-time control available for these settings.

RI8535: UNIVERSAL DIGITAL



TOPICS

[Instruments provided by this TIM](#)

[Configuration Panels](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content.

INSTRUMENTS PROVIDED BY THIS TIM

This TIM provides digital pins in banks of 20 up to a possible 120 depending on the model. The instruments in this TIM appear as **DPins1**, **DPins2**, ... **DPins6** in the panel dialog windows. A 16 slot Cassini can hold up to 16, 120 pin RI8535 Universal Digital TIMs, providing up to 1,920 digital pins.

Additional TIMs appear as DPins1_#, where the “_#” represents the 2nd, 3rd, etc... TIM. The Owner Names will be referred to a DPins2_1, ... DPins6_16

Model and Name as it appears in the Tester Configuration:

- Dpins1, Ri8535x Cassini Digital D1


NOTE: The “1” is replaced with a “2” or “3” depending on the number of pin cards in the TIM, i.e. - a 40-pin TIM contains Dpins1 (20pins) and Dpins2 (20 pins). The maximum number of pins available in a single TIM is 120 pins(Dpins1, Dpins2, Dpins3, Dpins4, Dpins5, and Dpins6). If there are more than one digital TIM in the configuration, then an underscore followed by an enumeration is appended to the Owner Name, i.e - DPins1_2, DPins2_2, etc.

The “x” in the model number denotes the revision of the Instrument.

CONFIGURATION PANELS

Set-up the instruments in this TIM. Patterns must be loaded individually for each available Dpins# instrument.

CONFIGURATION PANELS 3 RI8535 UNIVERSAL DIGITAL

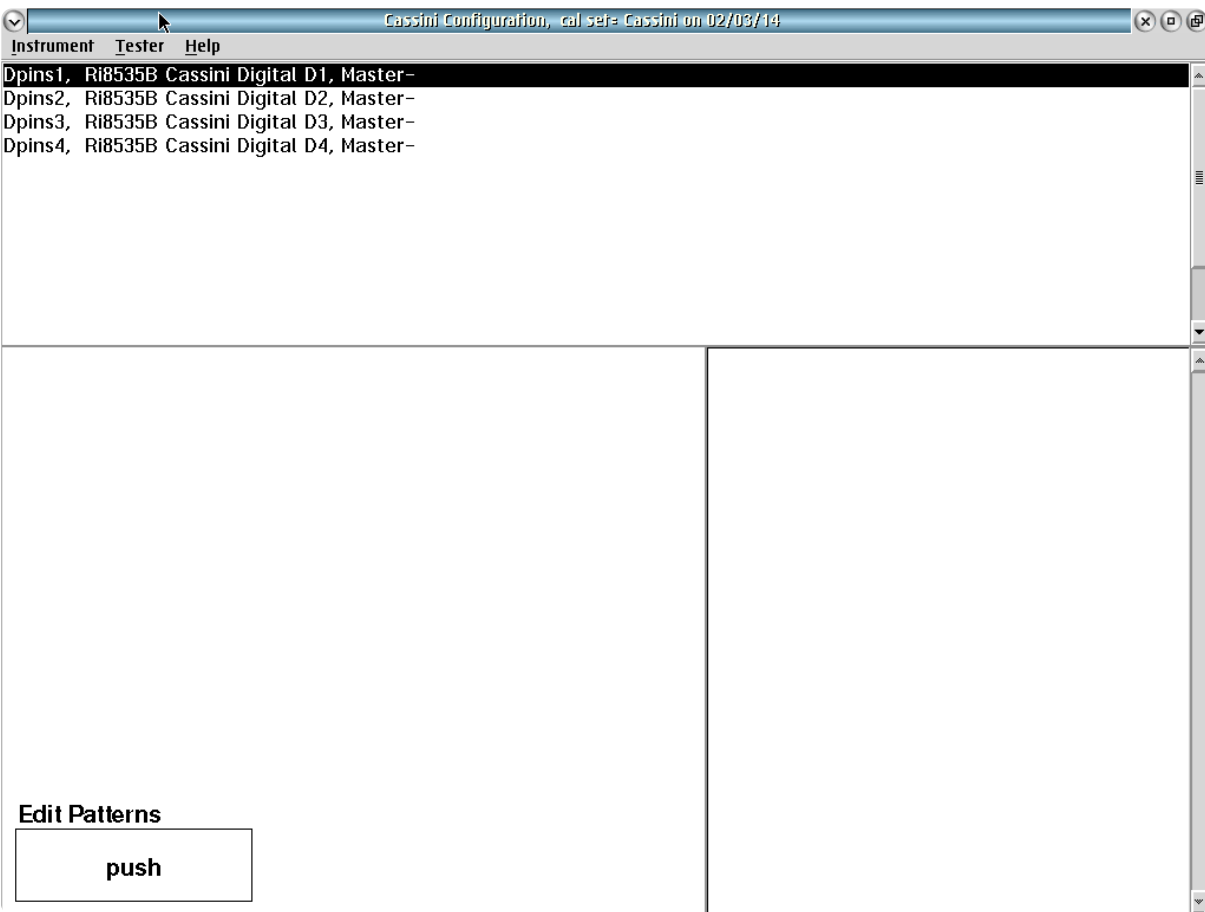

Digital patterns can be loaded for each Dpins# instrument

DPINS1

There is only one configuration option for this Instrument. The **Edit Patterns** button.

Edit Patterns

Selects and loads patterns into instrument memory.


Use the “Digital Translate” Guru App to import digital logic from a WGL (STIL), ATP or CSV file into Guru.

Click the **Edit Patterns** button, then “add from Guru” option to load the pattern into the instrument. This must be done every time the pattern changes or when the TIM is replaced.

Specify the pattern name in the Test Plan with the **Seq Pattern** button.

To add a pattern, the currently loaded DUT, DUT Pins, DIB, and Site objects are used to map the logic to the correct DUT pin. The DUT, Device Interface Board, and Fixture definitions are used to associate patterns to the device’s Pin. Use the “Device Connection Editor” Guru App to define the DUTs pin names. If any of these object are not loaded, the user will see a “Please Confirm: No device interface?” dialog.


IMAGE 2.3 EDIT PATTERNS DIALOG

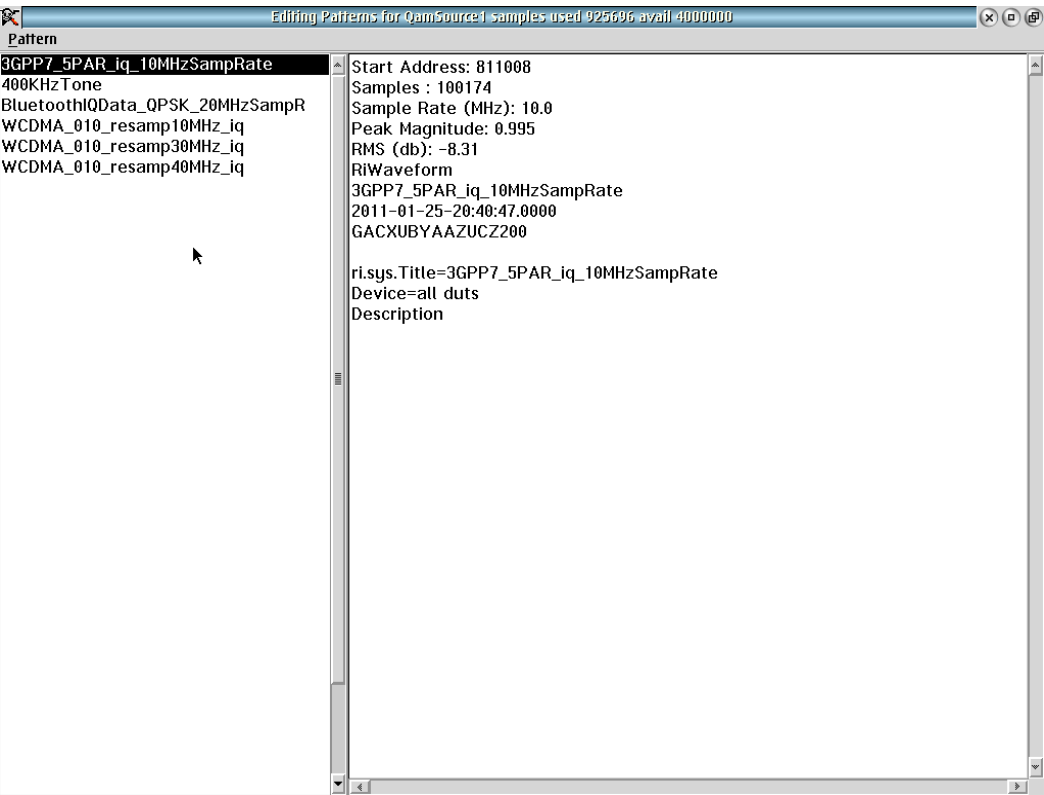

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor. All “DPins” instruments have the following panels.

EDIT PANELS 4 RI8535 UNIVERSAL DIGITAL EDIT PANELS

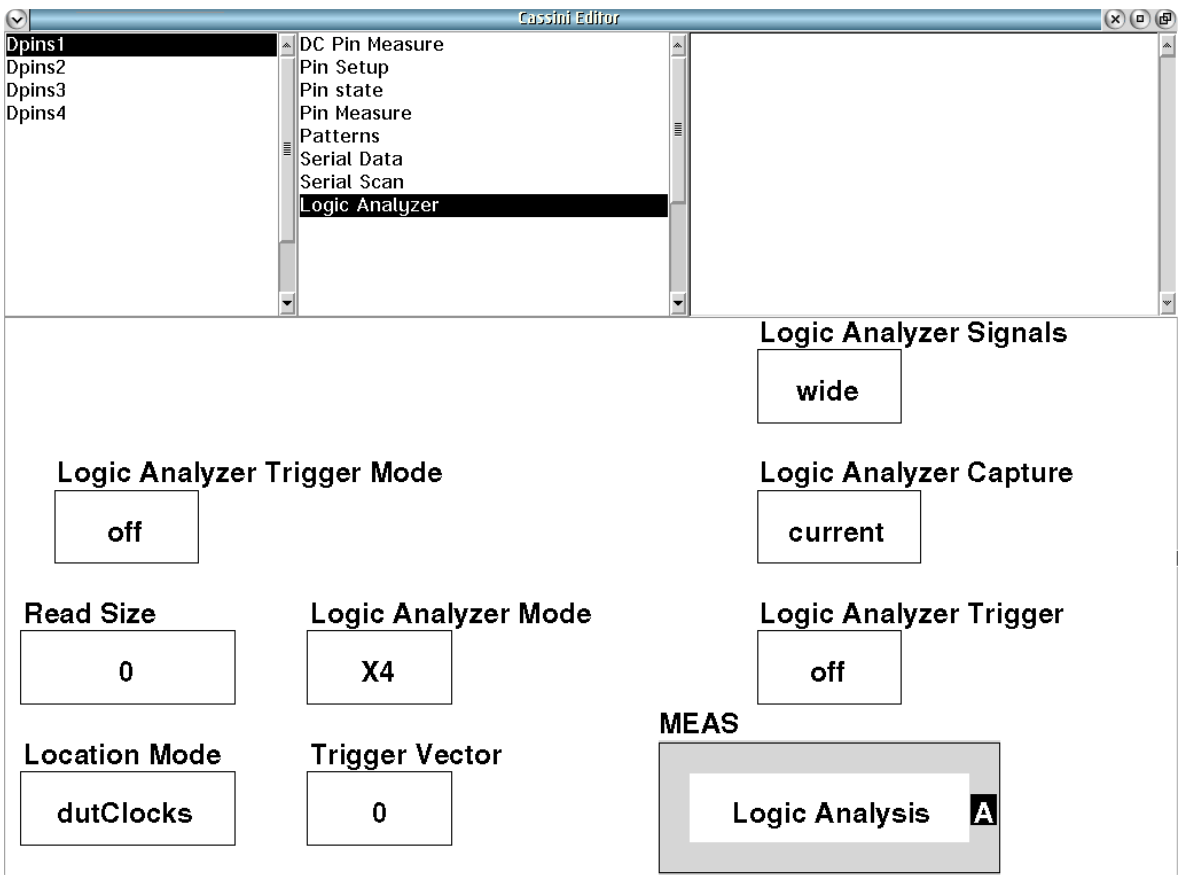

Logic Analyzer provides controls for debugging digital patterns with logic analyzer apps and graphs.

DPINS1

Each Dpins# (1 thru 6) instrument has the following 9 panels of identical buttons.

PANEL: DC PIN MEASURE

Measure Mode

none

Measure Pin

None

Measure Mode

Measure Pin

A drop down list button that sets the mode used when measuring the selected **Measure Pin**. Choices are: none, Voltmeter, lmeas, vMeas, low Current, vCal, iCal-, continuity+, continuity-.

A drop down list button that selects the Digital Output pin to be connected to the measure system (PMU)

Pin Mode

normal

Pin Mode

A drop down list button that when set to “Continuity”, tells the system to use the data comparator on each pin to check for connection continuity by measuring the pin voltage compliance anywhere form +3 V to -1.5 V.

NOTE: The pins to be included in the continuity check must be pre defined in the continuity grouping of the Device Pins file.

Measure V Force

0

Measure V Force

A decimal notation input button that sets the voltage that will be applied when in current measure modes.

Measure I Force

0

Measure I Force

A decimal notation input button that sets the amount of current that the system will attempt to force when in voltage measure modes.

© Roos Instruments Inc.

184

Continuity

A drop down list button that selects the pin group used for continuity checking.

Continuity

none

Current Meas Max

A decimal notation input button that sets the maximum expected current for the measurement.

Current Meas Max

1000 u

Measure V Limit

A decimal notation input button that sets the Voltage limit when in iMeas mode.

Measure V Limit

0

Measure I Limit

A decimal notation input button that sets the Current limit in voltage measure modes.

Measure Type

counter

Meas: Precision Current

Measurement block that computes the current at the pin selected by the **Measure Pin** button. (Max is 2 mA.)

MEAS

Precision Current

A

Meas: Precision Voltage

Measurement block that computes the voltage at the pin selected by the measure Pin button. (Max is ±10 vdc.)

MEAS

Precision Voltage

A

Meas: Read Continuity

Measurement block that computes the result of a continuity test. Result is a vector by pin where 0 is “good”, 1 is “short” and 2 is “open.”

MEAS

Read Continuity

A

PANEL: PIN SETUP

Vhigh

A decimal notation input button to set the logic high voltage for all banks. (0-4 volts)

Vhigh

0

Vlow

A decimal notation input button to set the logic low voltage for all banks. (0-4 volts)

Vlow

0

Vcompare

A decimal notation input button to set the compare voltage for all banks. (0-4 volts)

Vcompare

4

Vterm

A decimal notation input button to set the termination voltage for all banks. (0-4 volts)

Vterm

0

Vector Period

A decimal notation input button to set the vector period in seconds. See Scan Timing in [Diagram 1](#) (Appendix: Section 3).

Vector Period

25 n

Clock Mode

A drop down list button that selects which pin or pins are used as clocks.

Clock Mode

normal

NOTE: Only pins D#-5, D#-10, D#-15, D#-20(where # is the bank of DPins#) can be used as clocks.

Data Stb

A decimal notation input button to set the leading edge location in seconds. Clock active is the 0 reference. For entries >0.01 the setting is the period * the entry

Data Stb

-0.4

Read Stb

A decimal notation input button to set the strobe location in seconds. Clock active is the 0 reference. For entries >0.01, the setting is the period * the entry.

Read Stb

-0.1

Clock Width

A drop down list button that sets the clock width from the active edge in seconds. For entries >0.01, the setting is the period * the entry

Clock Width

normal

PANEL: PIN STATE

Similar buttons appear for each pin denoted with a range in parenthesis. For example “(2...20)” means buttons exist for every value in the range: D 1-1, D 1-2, D 1-3, D 1-4... D 1-20. Additional buttons exist for additional banks of 2- pins (D 2, D 3, etc...).

D 1-1 (2...20)

A drop down list button that sets the state for pin “1-1”.

D 1-1

open

Pin State

A drop down list button that selects a pin group to preset with a single state.


Pin State

none

PANEL: PIN MEASURE


Meas: Pin Frequency

Measurement block that computes the frequency at the pin selected by **read pin** button.

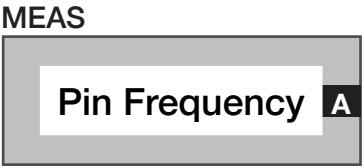

Measure Time

A decimal notation input button that sets the desired gate time in seconds.

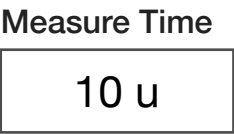


Meas: Read Pin State

Measurement block that computes the state of the pin selected by current read pin.



Read Pin

A drop down list button that sets the pin for **Read Pin State** measurement and **Pin Frequency** measurement blocks.

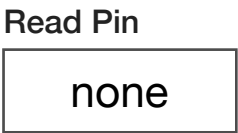

PANEL: PATTERNS

Seq Pattern

A drop down list button used to specify the pattern name used in the **Pattern Fail** measurement button. Only valid in a pre/post measure group. Follow with a **SeqRepeat** button in a test panel to execute.

Pattern Mode

A drop down list button that controls the pattern sequence in a pre/post/sequence button group only.

begin - sets up pattern engine for runSeq

beginStep - When OuterLoop = 1 loads the pattern

run - starts the pattern engine, waits after for pattern

nextStep - restarts pattern

stop - hard stop on the engine

Seq Pattern

none

Pattern Mode

idle

Seq Repeat

An integer data entry button to specify the number of times to repeat prior pattern. (0 repeats forever)

Seq Repeat

1

Meas: Read Special

Measurement block that uses a special 4 bit capture buffer on pins D #-16 to D #-19 with device provided clock on D #-20 (# is a bank of 20 pins). The result is a vector vs time with a size set by **ReadSize** button.

MEAS

Read SpecialA

Meas: Pattern Fail

After a pattern, measure the bit location of the first failure (first bit starts at 1) or 0 if no fails.

MEAS

Pattern FailA

PANEL: SERIAL DATA

Serial Idle

Data input button that determines the idle state for clock, strobe, data and aux pins. String values of 'C','S','D', and 'A' all set the value high.

Serial Data

Data input button that creates a pattern for the serial data output.

WriteData is binary and readMask is Xs and 1s. Both fill from left to right. Spaces are ignored. A digit from 2 to 9 fills the next n locations with the next character. Pattern can be formatted using SPI or JTAG standard syntax.

Format - Example:

spi:size:writeData:readMask - spi:16:0000111101011010:8X81

jtag:SDR 16:1101:readMask - jtag:SDR 16:8081:8X8X

Serial Idle

Serial Data

Read Polarity

Drop down list button that sets the polarity for the read path. Choices are 'normal' or 'inverted'. Inverted will swap 0 for 1 and vice versa.

Read Polarity

Read Pin

Drop down list button that sets the pin for serial reads and logic analyzer status. Values are D1-1 thru D1-20.

Read Pin

Read Delay

Drop down list button that sets the delay in Vector Clock periods to align the read with the expect. Values can be -1, 0, 1, or 2.

Read Delay

Read Size

Decimal notation input button that sets the delay in Vector Clock periods to align the read with the expect.

Read Size

Read Mode

Drop down list button used in premeasure group or measure sequence to delimit read actions. Values are start, pause, resume, stop.

Read Mode

stop

Serial Lv Write

Decimal notation input button used as the target of an **LV write** button. This only works when placed in a pre- or post- button group. Uses **SerialData** button as a template.

Serial Lv Write

0.0

Meas: Serial Read

Measurement block that reads the contents of the serial buffer and convert to a floating point number.

MEAS

Serial ReadA

Serial Type

Drop down list button used to select the serial type. 'Local' or 'Dut-format'. Use the Device Control Editor Guru Application to create custom 'Dut Format' Serial types.

Serial Type

manual

Serial Group

A decimal notation input button used to select a pin group which defines which pins to use. Pin groups are configured with the Device Connection Editor Guru application.

Serial Group

none

PANEL: SERIAL SCAN

Read Polarity

Drop down list button that sets the polarity for the read path. Choices are ‘normal’ or ‘inverted’. Inverted will swap 0 for 1 and vice versa.

Read Polarity

normal

Read Pin

Drop down list button that sets the pin for serial reads and logic analyzer status. Values are D1-1 thru D1-20.

Read Pin

none

Read Delay

Drop down list button that sets the delay in Vector Clock periods to align the read with the expect. Values can be -1, 0, 1, or 2.

Read Delay

0

Seq Pattern

A text entry box to specify the pattern name. Used only in pre/post groups. Follow with a **Seq Repeat** button to execute.

Seq Pattern

none

Seq Repeat

An integer value button to specify the number of times to repeat prior pattern. For scan this should be 1.

Seq Repeat

1

Pattern Mode

Drop down list button that controls a pattern sequence in a pre/post/seq button group only.

The ‘begin’ option sets up pattern engine for runSeq.

The ‘run’ option starts the pattern engine.

The ‘stop’ option hard stops the pattern engine

Pattern Mode

idle


Meas: Pattern Fail

Measurement block that when set after a pattern run, returns the location of the first failure as a floating point number or 0 if no fails were encountered.



Serial Group


A floating point button that is used to select a pin group which defines which pins to use.

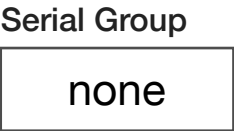

PANEL: LOGIC ANALYZER


Logic Analyzer Trigger

Drop down list button used to trigger the analyzer in a pre-measure group or measure sequence group.

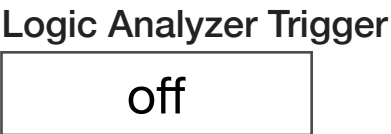


Logic Analyzer Capture

Drop down list button that selects the data to be captured. ‘Current’ selects the enabled pins of the current pattern. ‘All’ selects all 20 pins. ‘Serial’ selects the pins used for serial I/O. ‘Other’ selections are custom defined pin groups.

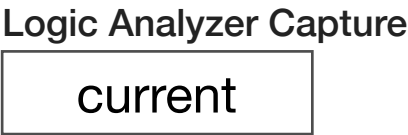

Logic Analyzer Signals

Drop down list button that selects the additional signals captured during logic analysis.

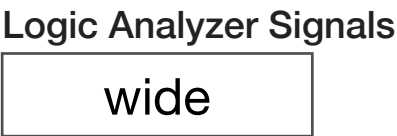

Trigger Vector

Integer button to identify the trigger location in number of bits.

Meas: Logic Analyzer Read

Read the capture bits D1-20. 4 status bits from the compare engine: (21 = fail, 22 = expect, 23 = comparator on the read pin, 24 = read enable)

Location Mode

Drop down list button to select how vectors are counted. Vector counting can be clocks to the device ('dutClocks') or total vectors.

Trigger Vector

0

MEAS

Logic Analyzer Read A

Location Mode

dutClocks

Logic Analyzer Mode

X4

Logic Analyzer Mode

Drop down list button to select the number of sample clocks per vector period. Choices are X1 (one sample), X2 (oversample 2 times), or X4 (oversample 4 times).

Read Size

Integer data button to determine the number of samples to capture. When **Logic Analyzer Trigger Mode** is 'external,' this sets the maximum size to read.

NOTE: Maximum value is 1000

Read Size

0

Logic Analyzer Trigger Mode

off

Logic Analyzer Trigger Mode

Drop down list button to select the event to trigger on.

If 'off' is selected, a trigger is not set and no data is read.

If 'external' is selected, the logic analyzer is controlled via the digital logic analyzer application.

If 'onFail' is selected, the read will begin immediately following a failing bit.

If 'onRead' is selected, all bits specified by the **Read Size** button are collected.

If 'atVector' is selected, all bits after the **Trigger Vector** button value are read.


If "patternStart" is selected, then all bits in the pattern are read.

If 'serial' is selected, then the DUT Serial controls the read timing.

CONTROL PANELS

Real-time control of the instruments in this TIM. Refer to the Edit Panels for help with buttons contained in both “Edit” and “Control” panels. Click white buttons (read only) to refresh the values.

CONTROL PANELS 3 RI8535 UNIVERSAL DIGITAL

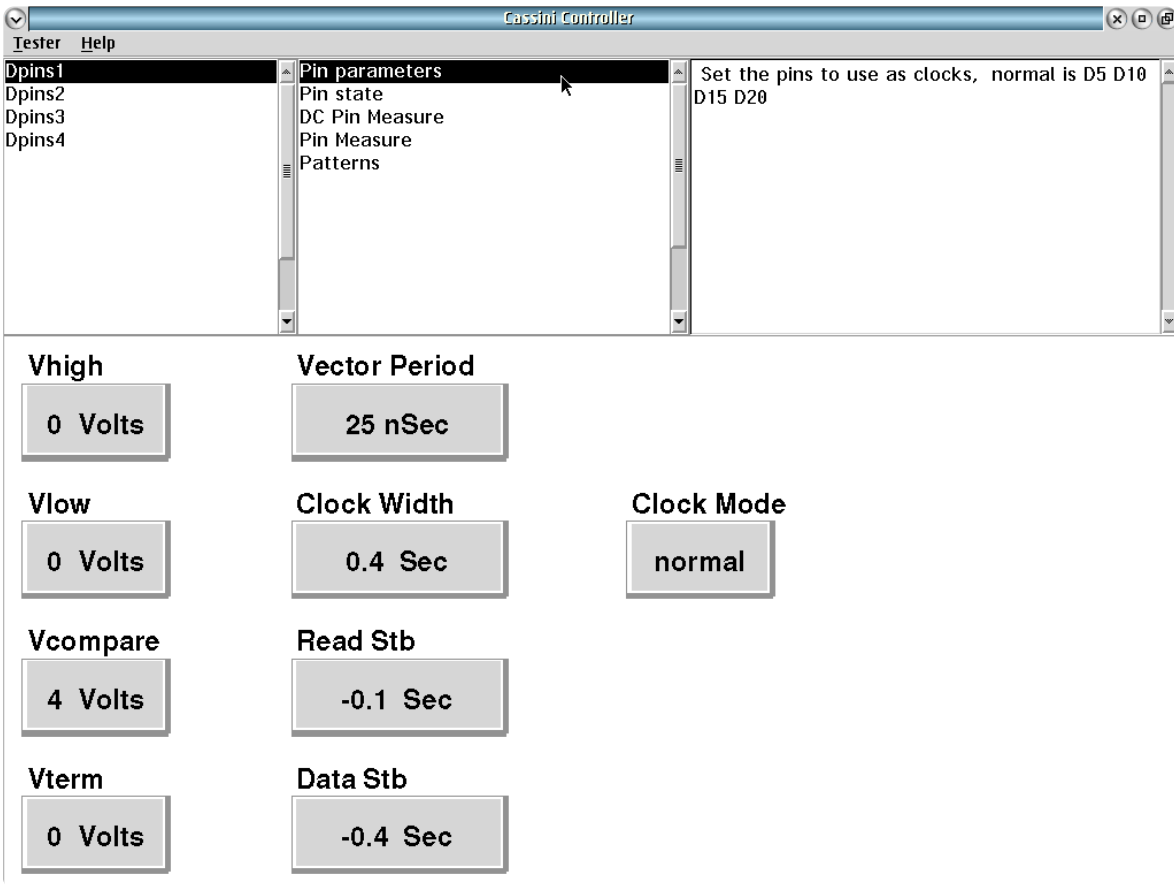

Pin parameters set the configuration for all serial and pattern measurements.



DPINS#

DPins1 has **Pin parameters**, **Pin state**, **DC Pin Measure**, **Pin Measure**, and **Patterns panels**. Most Panels correspond with the same name in the Edit Panel.

PIN PARAMETERS CONTROL PANEL

Corresponds to Pin Setup Edit Panel.

PIN STATE CONTROL PANEL

Corresponds to Pin State Edit Panel.

DC PIN MEASURE CONTROL PANEL

Corresponds to DC Pin Measure Edit Panel.

Voltage

Displays Voltage (mAmps) in real-time.

Current

Displays Current (Volts) in real-time.

PIN MEASURE CONTROL PANEL

Corresponds to Pin Setup Edit Panel.

Frequency

Displays the Frequency (Hz) in real-time.


PATTERNS CONTROL PANEL

Corresponds to Pattern and Serial Data Edit Panels.

Serial Read

Press to read serial buffer.

RI8545: 0.1 TO 20 GHz TESTSET

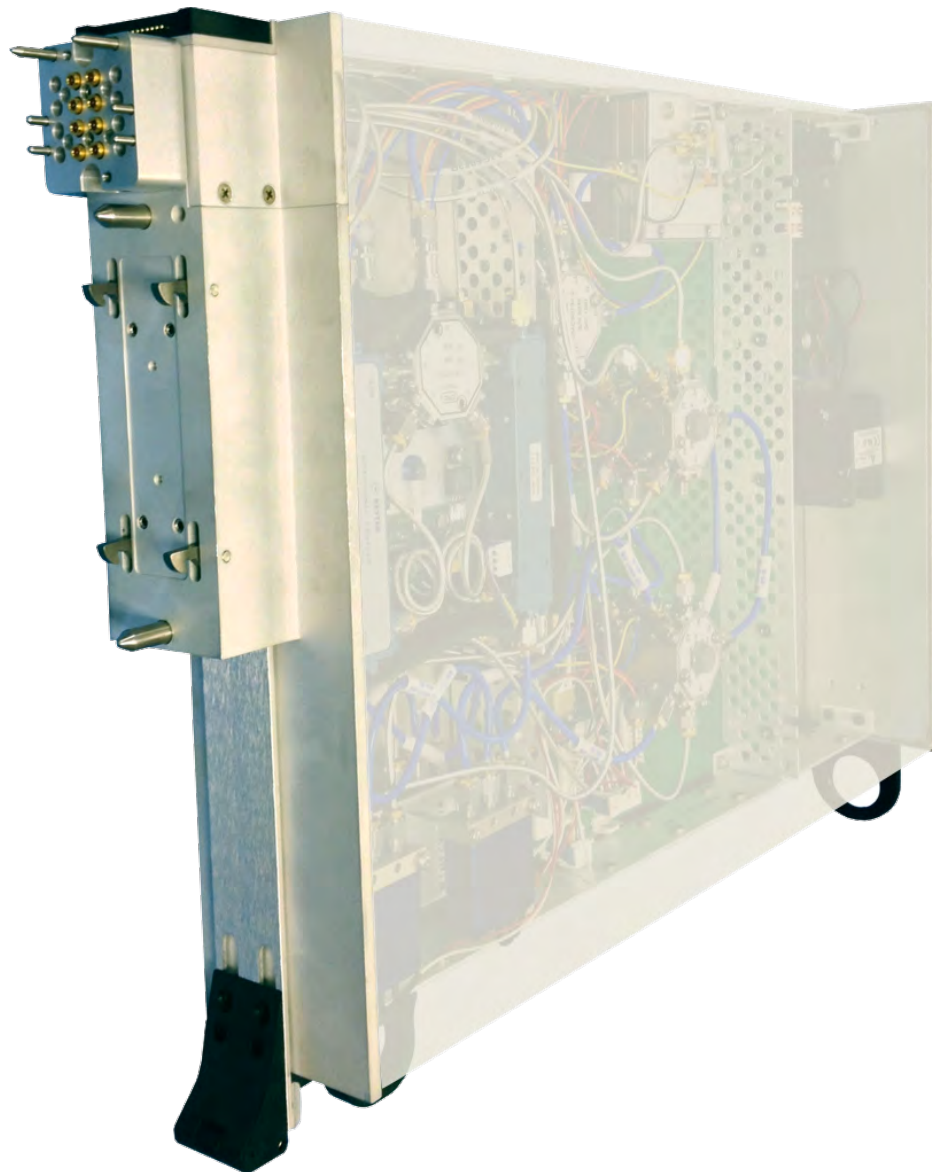

TOPICS

[Instruments provided by this TIM](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content.

INSTRUMENTS PROVIDED BY THIS TIM


The instrument in this TIM appear as **Test Head** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Test Head, RI8545x 4 port Testset

NOTE: Multiple RI8545 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head, Test Head2, Test Head3, etc). The “x” in RI8564x denotes the model revision number.

INSTRUMENT BUTTON DIAGRAM 2.3

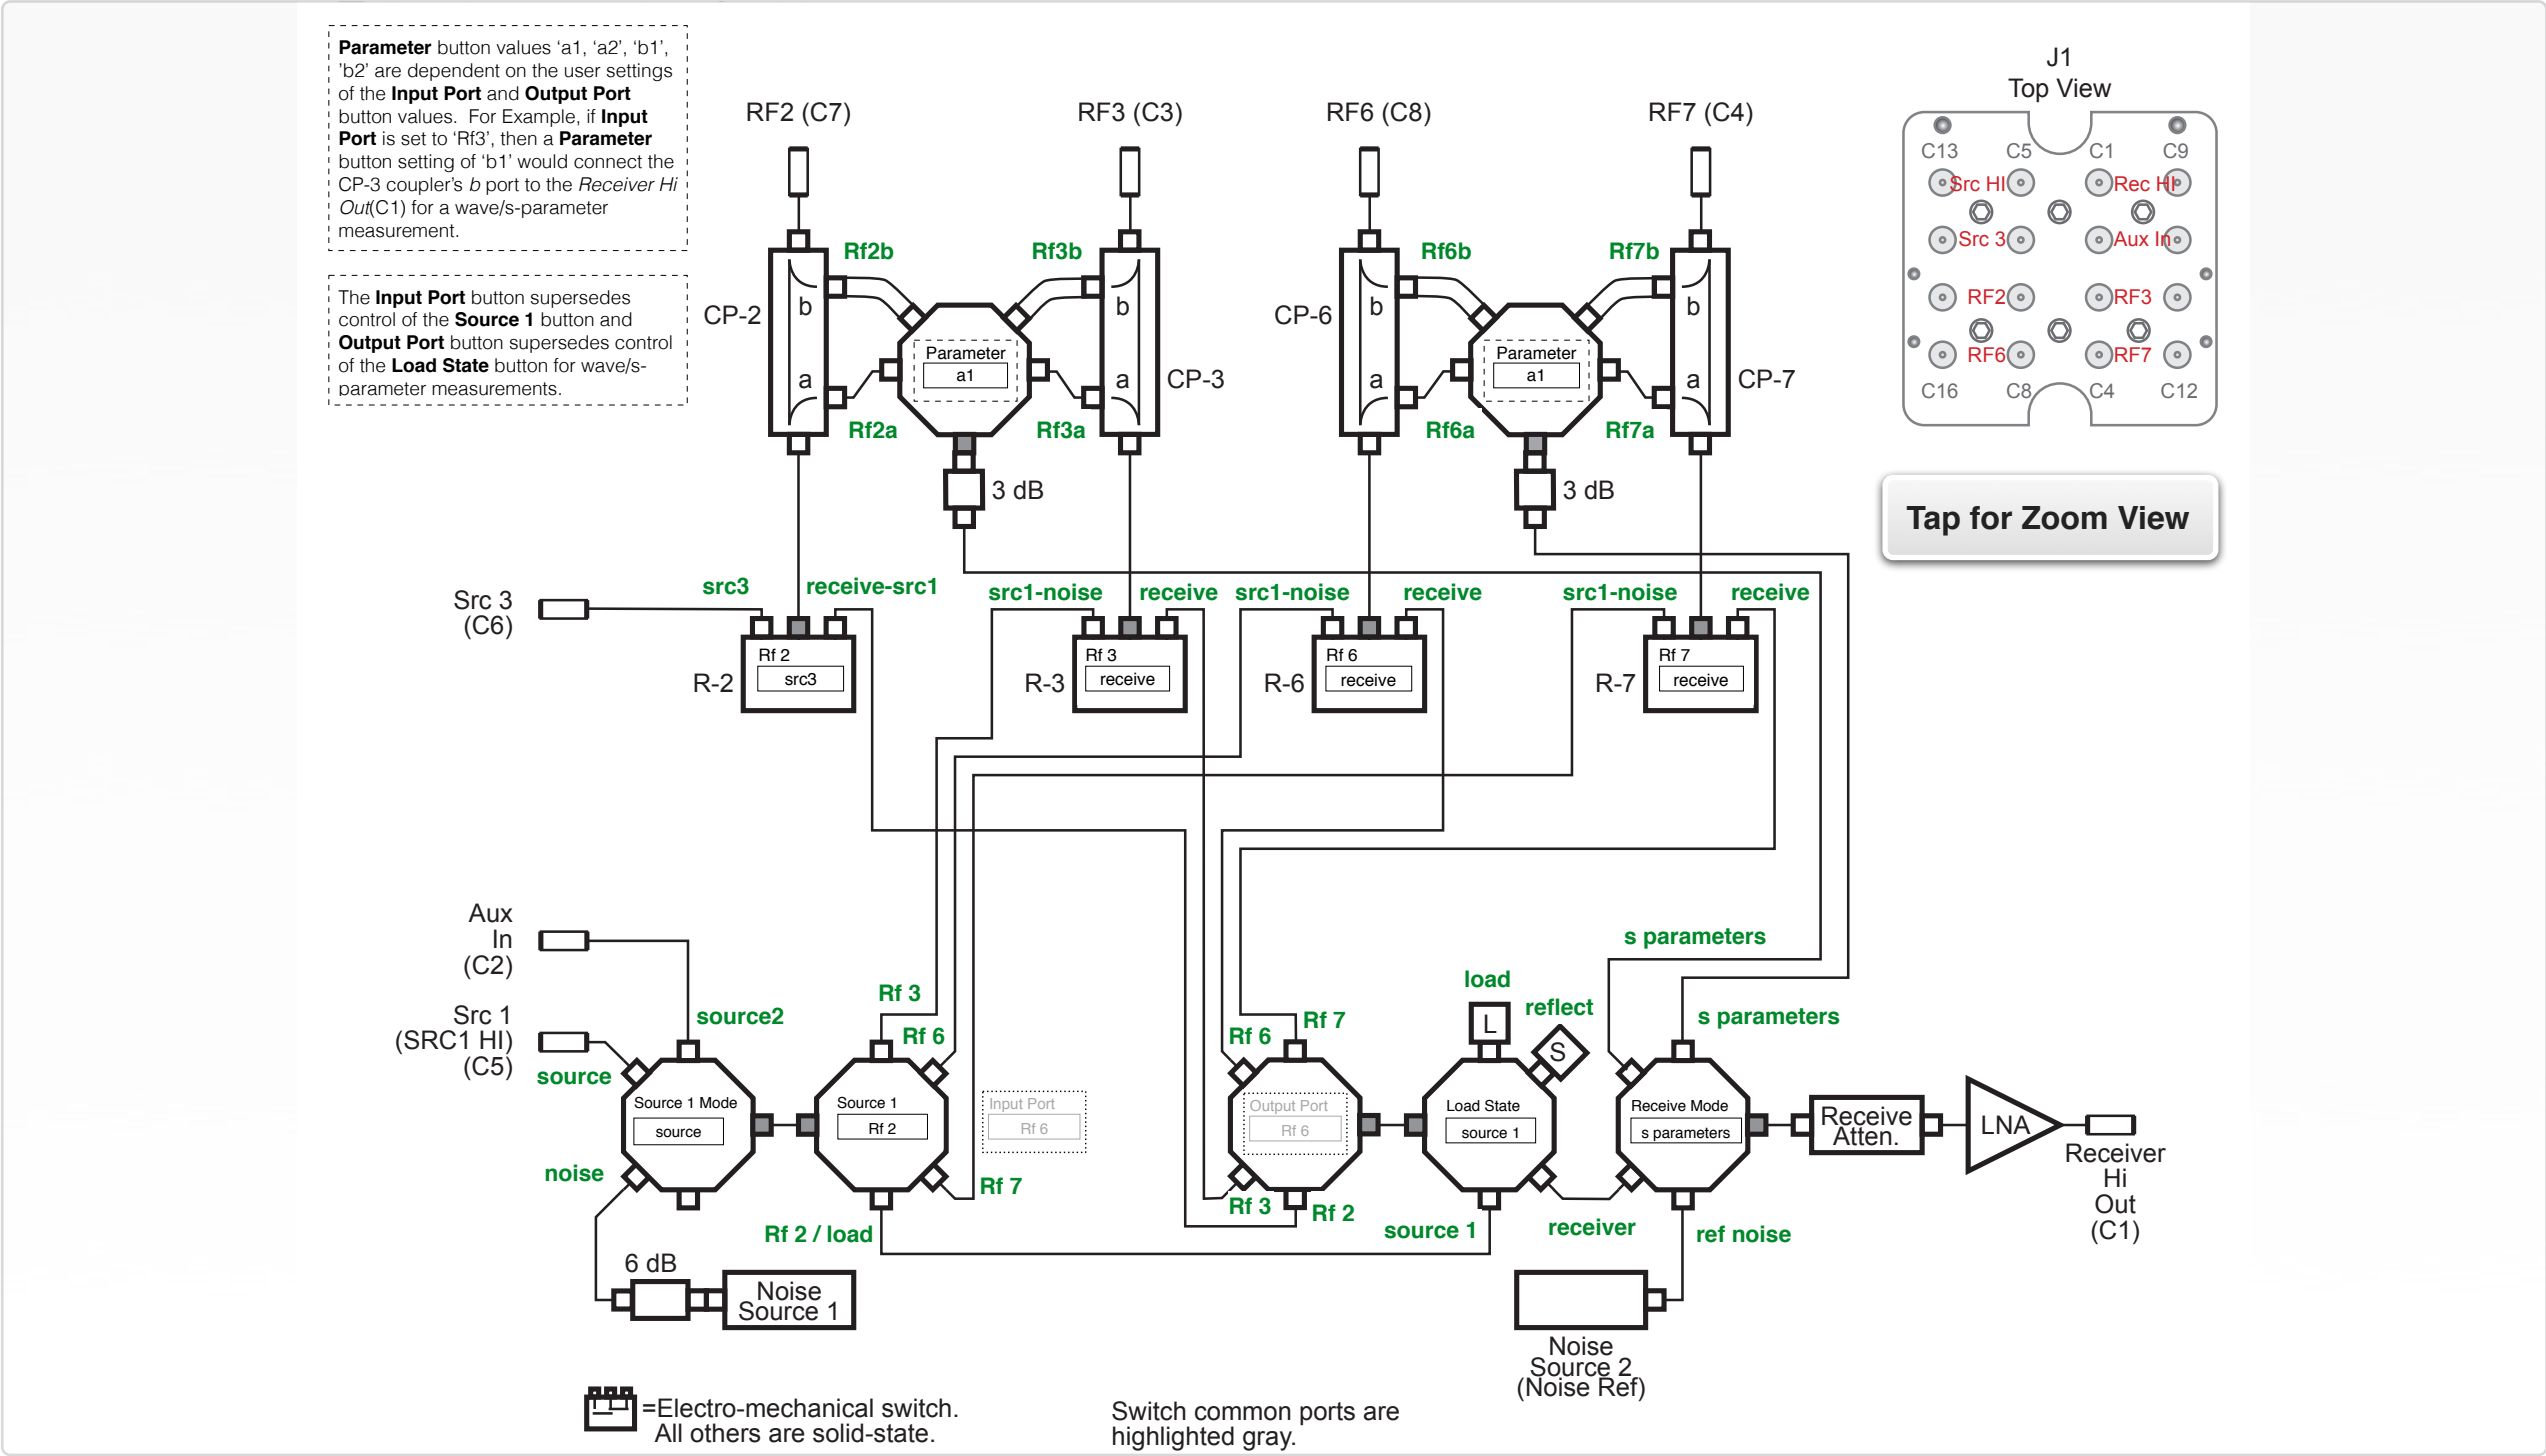


Button modes are shown in green text next to their associated function or signal path designation.

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.


EDIT PANELS 5 RI8545 4 PORT TESTSET

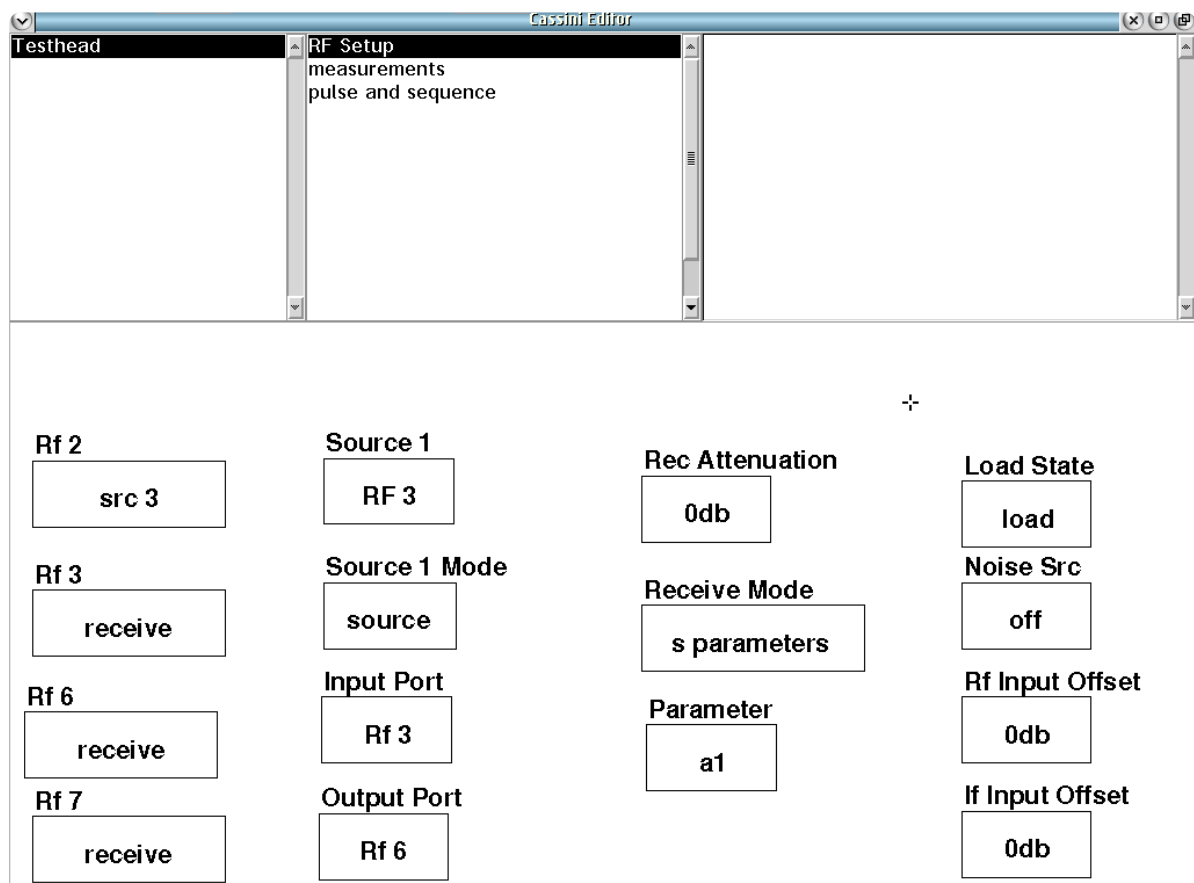

RF Setup controls instrument resource routing.



PANEL: RF SETUP

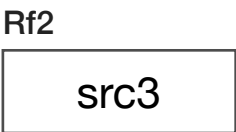

Rf 2

Drop down list button that controls the resource connections to the *RF2* (C7) coupled input/output port. The button configures the mechanical relay *R-2* to connect RF2 to various internal resources or input/output ports.

This button in combination with the **Source 1**, **Source 1 Mode**, **Receive Mode**, and **Load State** buttons set the signal path routing through the TIM’s internal mechanical relay connections.

‘src3’ selection connects *RF2* (C7) as an output port driven by the resource connected to *Src 3* (C6)

‘receive-src1’ connects *RF2* (C7) to the internal set of solid state switches: M26-B(controlled by **Output Port**), M11-B(controlled by **Load State**, M14-B(controlled by **Receive Mode**), M26-T (controlled by **Input Port**, and M11-T (controlled by **Source 1 Mode**). This selection is used to connect *RF2* (C7) to the *Receiver Hi Out* (C1), the internal RF 50Ω load or short termination, Src 1 (C5), Aux In (C2) or *Noise Source 1*.

Rf3

receive

Rf 3

Drop down list button that controls the resource connections to the *RF3* (C3) coupled input/output port. The button configures the mechanical relay *R-3* to connect *RF3* to various internal resources or input/output ports.

‘src1-noise’ connects *RF3* (C3) to the internal set of solid state switches: M26-T (controlled by **Input Port**), M11-T (controlled by **Source 1 Mode**). This selection is used to connect *RF3* (C7) to *Src 1* (C5), *Aux In* (C2) or *Noise Source 1*.

‘receive’ connects the input port to the internal set of solid state switches: M26-B(controlled by **Output Port**), M11-B(controlled by **Load State**, M14-B(controlled by **Receive Mode**). This mode is typically used to connect *RF3* (C3) to *Receiver Hi Out* (C1) for receiver type measurements: **Output Port**: ‘Rf 3’, **Load State**: ‘receiver’, **Receive Mode**: ‘receiver’.

NOTE: The ‘receive’ mode can also access *Src 1* (C5) for s-parameter measurements. This “back-door” mode is useful for reducing wear of electro-mechanical switches *R-3*, *R-6*, and *R-7*, helping to extend their lifecycle and reducing settling times in measurements. Reference [Gallery 2](#) for example and suggested setups.1

Rf6

receive

Rf 6

Drop down list button that controls the resource connections to the *RF6* (C8) coupled input/output port. The button configures the mechanical relay *R-6* to connect *RF6* to various internal resources or input/output ports.

‘src1-noise’ connects *RF6* (C8) to the internal set of solid state switches: M26-T (controlled by **Input Port**), M11-T (controlled by **Source 1 Mode**). This selection is used to connect *RF6* (C8) to *Src 1* (C5), *Aux In* (C2) or *Noise Source 1*.

‘receive’ connects the input port to the internal set of solid state switches: M26-B(controlled by **Output Port**), M11-B(controlled by **Load State**, M14-B(controlled by **Receive Mode**). This mode is typically used to connect *RF6* (C8) to *Receiver Hi Out* (C1) for receiver type measurements: **Output Port**: ‘Rf 6’, **Load State**: ‘receiver’, **Receive Mode**: ‘receiver’.

NOTE: The ‘receive’ mode can also access *Src 1* (C5) for s-parameter measurements. This “back-door” mode is useful for reducing wear of electro-mechanical switches *R-3*, *R-6*, and *R-7*, helping to extend their lifecycle and reducing settling times in measurements. Reference [Gallery 2](#) for example and suggested setups.

Rf 7

Rf7

receive

Drop down list button that controls the resource connections to the *RF7* (C4) coupled input/output port. The button configures the mechanical relay *R-7* to connect *RF7* to various internal resources or input/output ports.

‘src1-noise’ connects *RF7* (C4) to the internal set of solid state switches: M26-T (controlled by **Input Port**), M11-T (controlled by **Source 1 Mode**). This selection is used to connect *RF6* (C8) to *Src 1* (C5), *Aux In* (C2) or *Noise Source 1*.

‘receive’ connects the input port to the internal set of solid state switches: M26-B (controlled by **Output Port**), M11-B (controlled by **Load State**, M14-B (controlled by **Receive Mode**). This mode is typically used to connect *RF7* (C4) to *Receiver Hi Out* (C1) for receiver type measurements: **Output Port**: ‘Rf 7’, **Load State**: ‘receiver’, **Receive Mode**: ‘receiver’.

NOTE: The ‘receive’ mode can also access Src 1 (C5) for s-parameter measurements. This “back-door” mode is useful for reducing wear of electro-mechanical switches R-3, R-6, and R-7, helping to extend their lifecycle and reducing settling times in measurements. Reference [Gallery 2](#) for example and suggested setups.

Source 1

Source 1

RF 3


Drop down list button that controls the solid state switch M26-T in the block diagram.

‘Rf 2’, ‘Rf 3’, ‘Rf 6’, and ‘Rf 7’ values provides intermediary path routing control between resources set by **Source 1 Mode**: *Src 1* (C5), *Aux In* (C2) or *Noise Source 1* and the electro-mechanical relays R-2, R-3, R-6, and R-7. In typically applications, this button is used with **Rf 2** set to ‘receive-src1’, and **Rf 3**, **Rf 6** or **Rf 7** buttons are set to ‘src1-noise’ when routing source resources to the coupled ports.

The ‘load’ selection provides intermediary path routing control between resources set by **Source 1 Mode**: *Src 1* (C5), *Aux In* (C2) or *Noise Source 1* and the solid-state switch M26-T that is controlled by the **Load State** button. This setting has the same function as the ‘Rf 2’ selection.


NOTE: When Receiver Mode is set to ‘s-parameter’, the Input Port button supersedes the Source 1 button for control of the M26-T switch position, thus the Source 1 button is not required in the test panels for this function.

BLOCK DIAGRAM 2.1 RI8545 BUTTON CONTROL

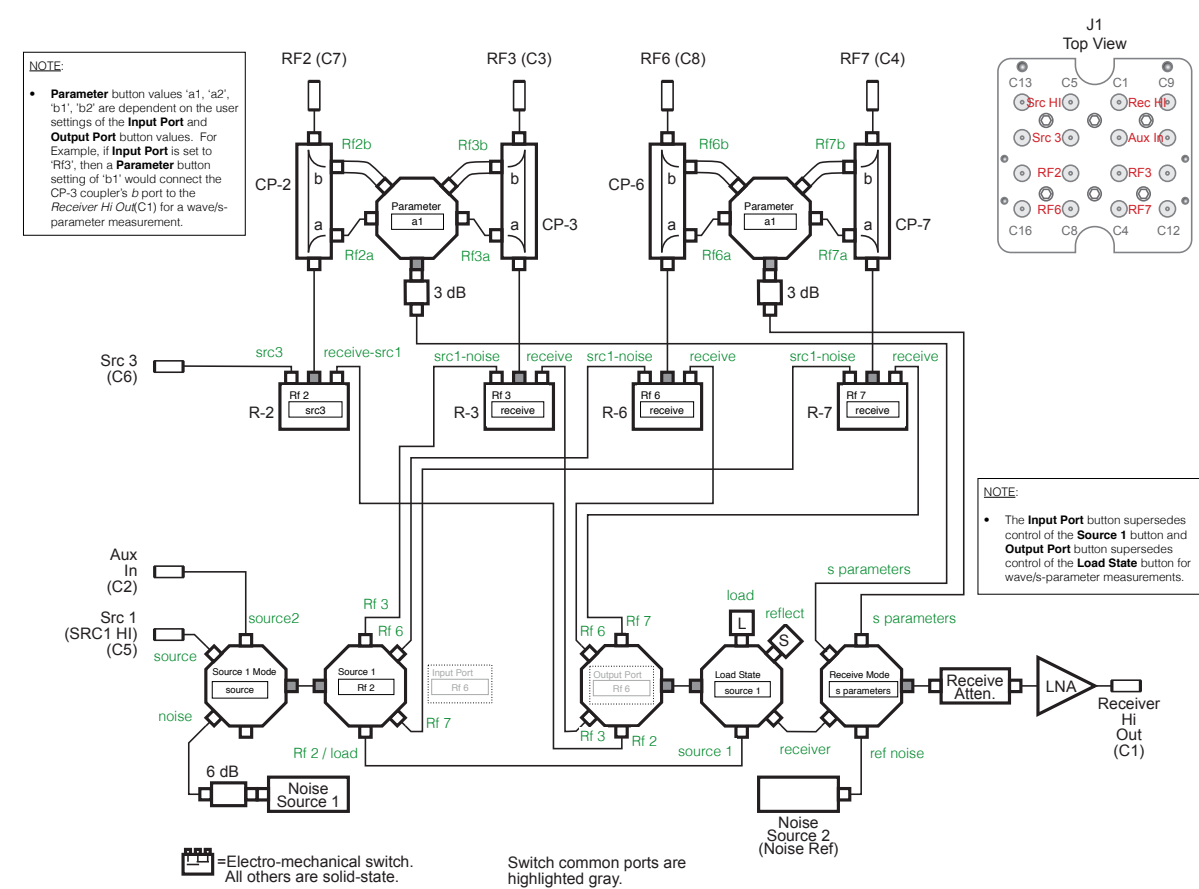

The diagram displays edit buttons within the instrument resource they control. Green text denotes user selectable button values and their corresponding path selection. The Input Port and Output Port buttons activate multi-switch control, protocol-aware wave/s-parameter measurements. Reference their button definitions for more information about functionality.

GALLERY 2 RI8545 EXAMPLE TOPOLOGIES

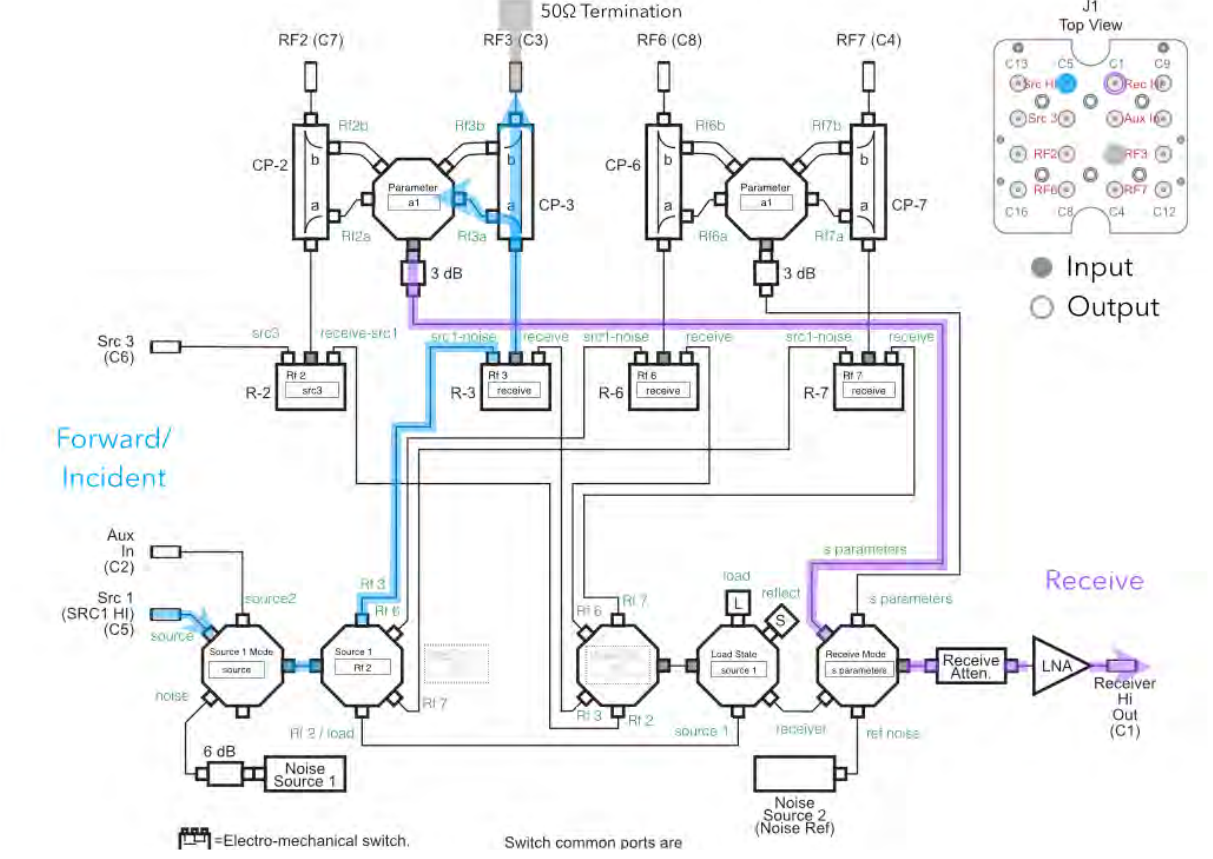

Measuring Src 1 with the Receiver (Thru Measurement)

Example: The signal at Src 1 (C5) is routed to the receiver. This is a common diagnostic setup used to confirm test plans route the source/receive paths as expected. The RF3 (C3) port is terminated with a standard 50Ω termination to reduce signal ripple and using a VNA type or s-parameter measurement provides the signal at Src1 (C5) via the the a₁ term (incident wave).

Source 1 Mode

source

Source 1 Mode

This list select button directly controls the solid state switch *M11-T*. It is used to connect *Src 1* (C5), *Aux In* (C2) or *Noise Source 1* to the internal switching network and used in conjunction with the **Source 1**, **Rf 2**: ‘receive-src1’, and **Rf 3**: ‘src1-noise’, **Rf 6**: ‘src1-noise’ or **Rf 7**: ‘src1-noise’ button settings to route signals to the coupled ports *RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4)

‘source’ connects the input port *Src 1* (C5) to the M26-T switch to route a stimuli signal to output ports.

‘noise’ connects the internal noise diode *Noise Source 1* to the M26-T switch. This button setting is used in conjunction with the **Noise Src** button to activate/deactivate the noise reference standard.

‘source2’ mode connects the *Aux In* (C2) to the internal switching network for utilizing a second external source; to to drive RF output ports selected by the **Source 1**, **Rf 2**: ‘receive-src1’ or **Rf 3/Rf 6/Rf 7**: ‘receive-src1’ buttons.

Input Port

Rf 3

Input Port

This drop down list selection button that designates which of the RF input/output ports [*RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4)] will be defined as the input port to the Device Under Test for protocol-aware s/wave parameter measurements. This button activates the compiler’s expert system mode to control and orchestrate the entire internal switch network for all wave parameters measurements automatically. This programming approach allows the user to avoid having to setup the switching network for each load condition and forward/incident wave measurement. The compiler also automatically computes error-corrected s11, s12, s21, and s22. The **Output Port** button, and corresponding source/receive mode settings for **Rf 2**, **Rf 3**, **Rf 6** and/or **Rf 7** buttons are used with the **Input Port** button.

NOTE: The ‘Rf 4’ selection is a Small Cassini mode that is not supported in Cassini 16.

Output Port

Rf 6

Output Port

This drop down list selection button that designates which of the input/output ports [*RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4)] will be defined as the output port from the Device Under Test for protocol-

aware s/wave parameter measurements. This button activates the compiler’s expert system mode to control and orchestrate the entire internal switch network for all wave parameters measurements automatically. This programming approach allows the user to avoid having to setup the switching network for each load condition and forward/incident wave measurement. The compiler also automatically computes error-corrected s11, s12, s21, and s22. The **Input Port** button, and corresponding source/receive mode settings for **Rf 2**, **Rf 3**, **Rf 6** and/or **Rf 7** buttons are used with the **Output Port** button.

NOTE: The ‘Rf 5’ selection is a Small Cassini mode that is not supported in Cassini 16.

Rec Attenuation

This drop down list selection button configures the receive attenuator found at the common port output of the M14-B switch. The solid-state attenuator has calibrated attenuation steps of 0 dB, 10 dB, 20 dB, or 30 dB. This button is commonly used in s-parameter and power measurement receive measurements to prevent overdriving/saturating the downstream receiver’s RF front-end or optimizing the RF input signal power for best dynamic range with the receiver.

Rec Attenuation

0db

Receive Mode

s-parameters

Receive Mode

This drop down list selection button selects which resource is routed to the output port *Receiver Hi Out* (C1) by directly setting the solid state switch position of *M14-B*.

‘s-parameters’ connects *Receiver Hi Out* (C1) to the coupled ports pairs *RF2/RF3* (M14-B: Position 3) or *RF6/RF7* (M14-B: Position 4) depending on the settings of the **Input Port**, **Output Port** and the **Parameter** buttons. For example, setting **Output Port** to ‘RF2’, **Input Port** to ‘RF3’ and **Parameter** to ‘a1’ would route the incident signal on the CP-2 coupler’s ‘a’ port to *Receiver Hi Out* (C1).

‘ref noise’ connects the *Receiver Hi Out* (C1) output port to the internal noise reference standard(M14-B: Position 2).

NOTE: This noise reference is used as a stable power reference strictly for the instrument’s internal self-check.

‘receiver’ connects the the *Receiver Hi Out* (C1) output port as a direct receive path (M14-B: Position 1) typically for *RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4). Resource routing to the direct receive path is dependent on the **Load State** button (controls M11-B), **Input Port** button (controls M26-T), and by setting the **Rf 2/Rf 3**, **Rf 6** or **Rf 7** button to their receive mode setting.

Parameter

a1

Parameter

Drop down list button that designates which of the coupler ports [CP-2 (RF2), CP-3 (RF3), CP-6 (RF6), CP-7 (RF7)] will be routed to the switching network. It is typically used for routing incident/reflected wave signals to the receiver for wave/s-parameter measurements.

The ‘a1’, ‘b1’. ‘a2’, and ‘b2’ selections uses the compiler’s expert system to automatically select the correct switch routing. These selections require an RF port to be set by **Input Port** and **Output Port** buttons and corresponding **Rf 2/Rf 3**, **Rf 6** or **Rf 7** button selections.

The ‘rf2a’, ‘rf2b’, ‘rf3a’, ‘rf3b’, ‘rf6a’, ‘rf6b’, ‘rf7a’, or ‘rf7b’ selections allow the user to explicitly control the port selection of switches *B Top* and *D Bottom* shown at the top of the block diagram.

NOTE:

- a1 is the incident wave to the input port of the device under test.
- b1 is the reflected wave from the input port of the device under test.
- a2 is the incident wave to the output port of the device under test.
- b2 is the reflected wave from the output port of the device under test.

Load State

load

Load State

Drop down list button that directly controls the solid state switch *M11-B*.

The ‘source1’ selection is used to connect *Src 1* (C5), *Aux In* (C2) or *Noise Source 1* to *M11-B* for routing these resources to *RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4) using the “back-door” switching route. The buttons **Source 1**: ‘Rf 2’ or ‘load’ | **Source 1 Mode**: ‘source’, ‘source2’, or ‘noise’ | **Rf 2**: ‘receive-src1’, and **Rf 3**: ‘src1-noise’, **Rf 6**: ‘src1-noise’ or **Rf 7**: ‘src1-noise’ are used with this **Load State** selection.

NOTE: The “backdoor” signal routing technique exploits the switching topology of the solid-state switches to reduce settling times in measurements and wear of electromechanical switches R-3, R-6, and R-7, helping to extend their lifecycle. Reference [Gallery 2](#) for example and suggested configurations.

“reflect” is used to connect a 50Ω “short” standard to *RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4). This provides a controlled RF reflection condition for unidirectional s-parameter measurements. This button selection commonly uses the **Spar Mode**: ‘unidirectional’, **Input Port**, **Output Port** buttons and corresponding **Rf 2/Rf 3**, **Rf 6** or **Rf 7** buttons.

“load” is used to connect a 50Ω standard load to *RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4). This provides a controlled RF matching condition for s-parameter measurements. This button selection commonly uses the **Spar Mode**, **Input Port**, **Output Port** buttons and corresponding **Rf 2/Rf 3**, **Rf 6** or **Rf 7** buttons.

‘receive’ is used to connect the intermediary signal route from *RF2* (C7), *RF3* (C3), *RF6* (C8), or *RF7* (C4) to the *Receiver Hi Out* (C1) output port for receiver type measurements. This button selection commonly uses the **Receive Mode**: ‘receiver’, **Rf 2**: ‘receive-src1’, **Rf 3**: ‘receive’, **Rf 6**: ‘receive’, or **Rf 7**: ‘receive’ button settings in test panels.

Noise Src

Drop down list button that controls the state of the internal noise source standard *Noise Source 1*.

The ‘On’ selection powers the noise source, producing an RF calibrated “Hot” noise power.

The ‘Off’ selection deactivates power from the noise diode. This mode can be used for so called “cold” noise power measurements.

NOTE: The calibration factors for Noise Source 1 are frequency dependent and are selected by the compiler based on the Frequency button definition found in the System instrument of the Edit Panel.

Noise Src

off

Rf Input Offset

0db

Rf Input Offset

This list select button directly controls the receive attenuator and *LNA* for the *Receive Hi Out* (C1) port. They are located between the last solid state switch (M14-B) and the *Receive Hi Out* (C1) port in the block diagram. The receive attenuator and LNA allow the user to optimize incoming signal power levels typically to prevent saturation of the receiver’s RF mixers. This is useful for compensating for the gain of active device, or losses from passive components for s-parameter/ receiver type measurements.

The list options ‘-30’, ‘-20’, ‘-10’, ‘0’, ‘10’, ‘20’, ‘30’ are displayed in units of dB.

NOTE: Saturation of the downstream RF mixers in the receiver TIM will cause nonlinear behavior in the form of signal harmonics at the downconverter’s output and unstable measurements.

If Input Offset

0db

If Input Offset

This list select button is a modifier of the **If Gain** button value found in the RI8587 or RI8581 Receiver TIM. It provides relative IF gain modification, i.e **If Gain**: '38' and **If Input Offset**: '-30' would result in an actual IF Gain in the receiver of '8'. This button is typically used to offset output signals from high-gain devices or losses from passive DUTs to maintain consistent signal power into the receiver.

The list options '-36', '-30', '-24', '-18', '-12', '-6', '0', '6', '12', '18', '24', '30' and '36') are in units of dB.

PANEL: MEASUREMENTS

Average Mode

std

Average Mode

A drop down list button that is associated with the higher-level macro measurement buttons that sets the method of averaging used.

The “std” mode uses the number of Averages set by the System Button when measuring and completes all the averages of each of the parameters in a high-level macro button before moving to the next parameter. For example, on an S11 measurement with 4 averages, the tester would measure a₁, a₁, a₁, a₁, then b₁, b₁, b₁, b₁. This is the fastest averaging mode, but if the signal drifts while the a₁ measurements are being made, the measurement can be less accurate.

The “adjacent” mode uses the number of **Averages** set by the System Button as above, but when measuring to satisfy a high-level macro button, it takes data from each of the parameters needed one at a time, before completing another round of measurements for the average. For example, on an S₁₁ measurement with 4 averages, the tester would measure a₁, b₁, a₁, b₁, a₁, b₁, a₁, b₁. This makes the a₁ and b₁ measurements virtually simultaneous. The “adjacent averaging” mode is slightly slower than the “std” mode, but can minimize the effects of any signal drift especially for large number of averages.

NOTE: At higher frequencies and with averages greater than 8 to 16, some improvement in accuracy and repeatability are often achieved using the adjacent averaging mode.

Spar Mode

This list select button defines the calculation mode for two-port, vector error-corrected scattering parameters. The mode selection affects the compiler’s decisions for load and source routing schemes in the TIM and the subsequent calculation methods for s/wave parameter measurements.

The ‘unidirectional’ mode computes s-parameters by only applying the source to the input of the DUT and using a bi-state, load pull condition on the output port to compute the a_1 , b_1 , and b_2 wave parameters. This mode infers the a_2 wave parameter and thus S_{22} , and is faster than the bidirectional mode. Unidirectional mode is optimal for unilateral active devices (essentially zero reverse transmission coefficient, i.e. $S_{12}=0$) such as power amplifiers.


The ‘bidirectional’ mode computes s-parameters using the traditional switched source methodology for measuring all eight transmission parameters and then computing scattering parameters. This selection executes all four source/load conditions on the DUT, providing the most accurate s/wave parameters possible. The bidirectional mode is optimal for passive, low-gain, or low-loss devices.

Spar Mode

unidirectional

This button is commonly used with the **Input Port**, **Output Port**, **Parameter**, **Receive Mode**: ‘s-parameter’ and corresponding **Rf 2**, **Rf 3**, **Rf 6** or **Rf 7** button designations.


Meas: Wave Param at Input Freq

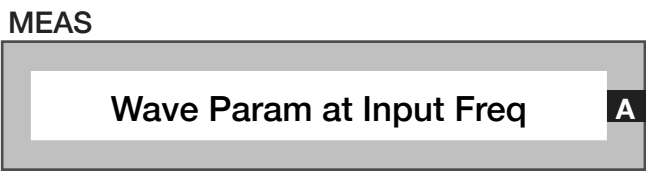

Measurement block performs a two-port, error-corrected wave parameter measurement resulting in all 8 transmission parameters: a_{11} , a_{12} , a_{21} , a_{22} , b_{11} , b_{12} , b_{21} , b_{22} for a given device input frequency. It uses the bi-state load pull method with the result in absolute voltage. The receiver’s tuned frequency for this button is defined by the **Freq Reference**, **Input Freq Offset**, and/or **Input Freq Scale** buttons found in the System instrument panel. This block is typically used for user-custom s/wave parameter-like calculations.

NOTE: The frequency control button set is typically used for measuring frequency converting devices.


Meas: Wave Param at Output Freq

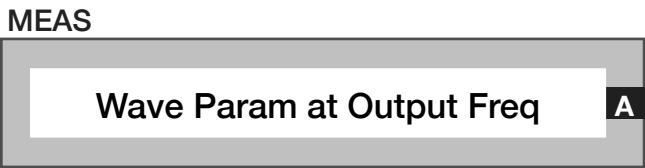

Measurement block performs a two-port, error-corrected wave parameter measurement resulting in all 8 transmission parameters: a_{11} , a_{12} , a_{21} , a_{22} , b_{11} , b_{12} , b_{21} , b_{22} for a given device output frequency. It uses the bi-state load pull method with the result in absolute voltage. The receiver’s tuned frequency for this button is defined by the **Freq Reference**, **Output Freq Offset**, and/or **Out Freq Scale** buttons found in the System instrument panel. This block is typically used for user-custom s/wave parameter-like calculations.

NOTE: The frequency control button set is typically used for measuring frequency converting devices.

Meas: Wave Param at Receive Freq

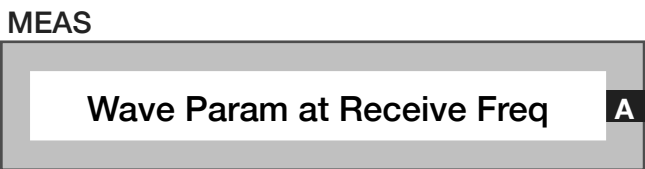


Measurement block performs a two-port, error-corrected wave parameter measurement resulting in all 8 transmission parameters: a_{11} , a_{12} , a_{21} , a_{22} , b_{11} , b_{12} , b_{21} , b_{22} for a given frequency. It uses the bi-state load pull method with the result in absolute voltage. The

receiver’s tuned frequency for this button is defined by the **Frequency**, and/or **Freq Offset** buttons found in the Receiver’s instrument panel. This block is typically used for user-custom s/wave parameter-like calculations.

NOTE: The phase is only defined within a set and not with any other readings.


Meas: InputPower at Input Freq

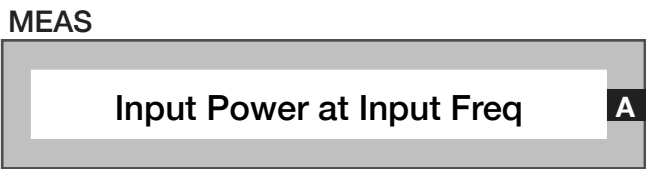

Measurement block performs an error-corrected a_{11} (forward or incident wave at input with output terminated) measurement with the receiver set to measure at the frequency defined by the Freq Reference, Input Freq Offset, and/or Input Freq Scale buttons found in the System instrument panel. The resulting data is corrected absolute power, with default units of Watts

NOTE: Units can be changed to dBm using the Convert button found in System > General Calculation panel.

Meas: Thru Measurement at Input Freq

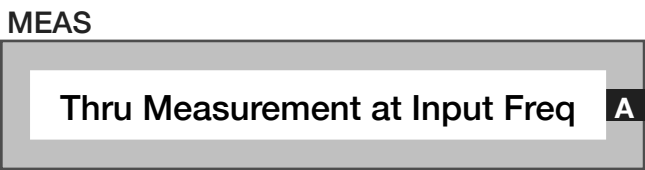


Performs an error-corrected a_{11} (forward or incident wave at input with output terminated) and b_{21} (wave at terminated output with source at input) measurement with the receiver frequency defined by defined by the **Freq Reference**, **Input Freq Offset**, and/or **Input Freq Scale** buttons found in the System instrument panel. The resulting data is corrected absolute power, with default units of Watts.

NOTE: The phase is only defined within a set and not with any other readings.

PANEL: PULSE AND SEQUENCE

Pulse Width

Decimal notation input button in units of μs used in premeasure groups to generate a narrow RF pulse by switching the Source 1 Mode solid-state switch ($M11-T$ in the block diagram) from the *Src 1* (C1) port to the internal *Noise Source 1* port. This button is commonly used with the **Measure Mode** button.

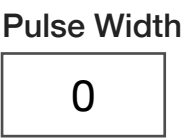

Src 1 Seq



Src 1 Seq

This drop down list selection button is used strictly in premeasure groups to temporarily override buttons that control the routing of the $M26-T$ solid state switch in s/wave parameter measurements for custom RF pulse applications.

The ‘restore’ selection reverts the switch settings and control back to the last panel, section default, or global defaults set by the buttons found in the RF Setup panel.

The ‘pulse on’ selection activates the RF pulse signal defined by the **Pulse Width** button.

The ‘pulse off’ selection deactivates the RF pulse signal defined by the **Pulse Width** button.

The ‘Rf 3’ selection sets the $M26-T$ switch to route the RF pulse signal to the ‘src1-noise’ port of the $R-3$ relay.

The ‘Rf 6’ selection sets the $M26-T$ switch to route the RF pulse signal to the ‘src1-noise’ port of the $R-6$ relay.

The ‘Rf 7’ selection sets the $M26-T$ switch to route the RF pulse signal to the ‘src1-noise’ port of the $R-7$ relay.


Measure Mode

CW

Measure Mode

This drop down list selection button is used in test panels or section

CONTROL PANELS 4 RI8545 4 PORT TESTSET

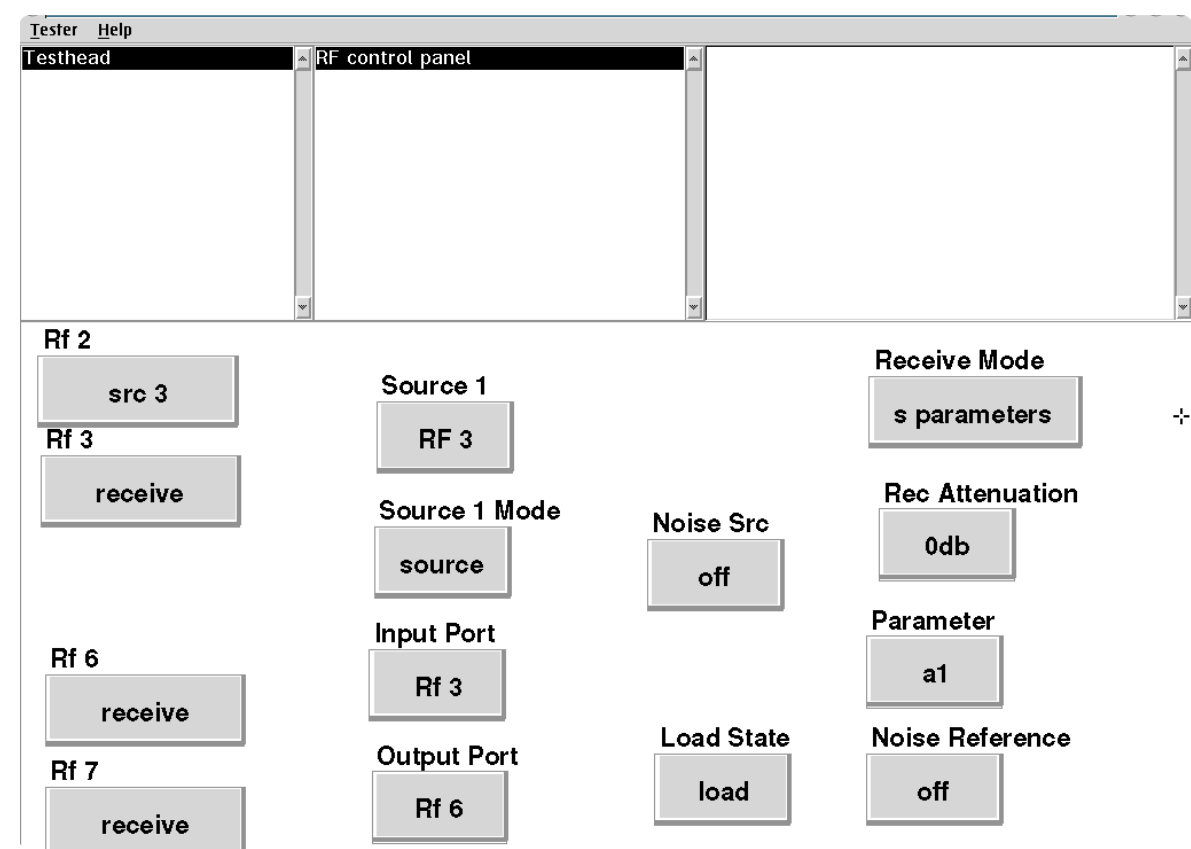

RF Control Panel provides real time control of routing through the Testset.

defaults to control the state of the RF pulse width function. The

default start position is the *Noise Source 1* path (effectively disconnected from *Src 1* (C5) input).

The 'cw' selection enables normal operation in test panels/sections.

The 'pulse' selection enables pulse mode operation in test panels/sections.

CONTROL PANELS

Real-time control of the routing of instruments through this TIM.

Rf 2

Configure the connections to this RF port. Either a connection to Source1 or to Source3.

Rf 3

Configure the connections to this RF port. Either a connection to Source1-Noise source or the receive path.

Rf 6

Configure the connections to this RF port. Either a connection to Source1-Noise source or the receive path.

Rf 7

Configure the connections to this RF port. Either a connection to Source1-Noise source or the receive path.

Source 1

Sets the port which is connected to Source1.

Source 1 Mode

Set the Source1 mode to be either the RF source or a noise source.

Input Port

Select the input port for measurement. Independent of the “Rf” port connections, this button selects which port to measure as the input.

Output Port

Select the output port for measurement. Independent of the “Rf” port connections, this button selects which port to measure as the input.

Noise Src

Turn the noise source used for noise figure on and off.

Load State

Sets the state for the output port to load.

Receive Mode

Sets the receive path to receive using the noise detector (scalar) or s-parameter detector (vector with phase and magnitude).

Rec Attenuation

Set the attenuation in the s-parameter and power measurement paths.


Parameters-parameter

Select the wave parameter for measurement, a_1 is incident.

Noise Reference

Turn the noise source used for drift calibration on and off.

RI8546: DEVICE POWER/ MEASURE

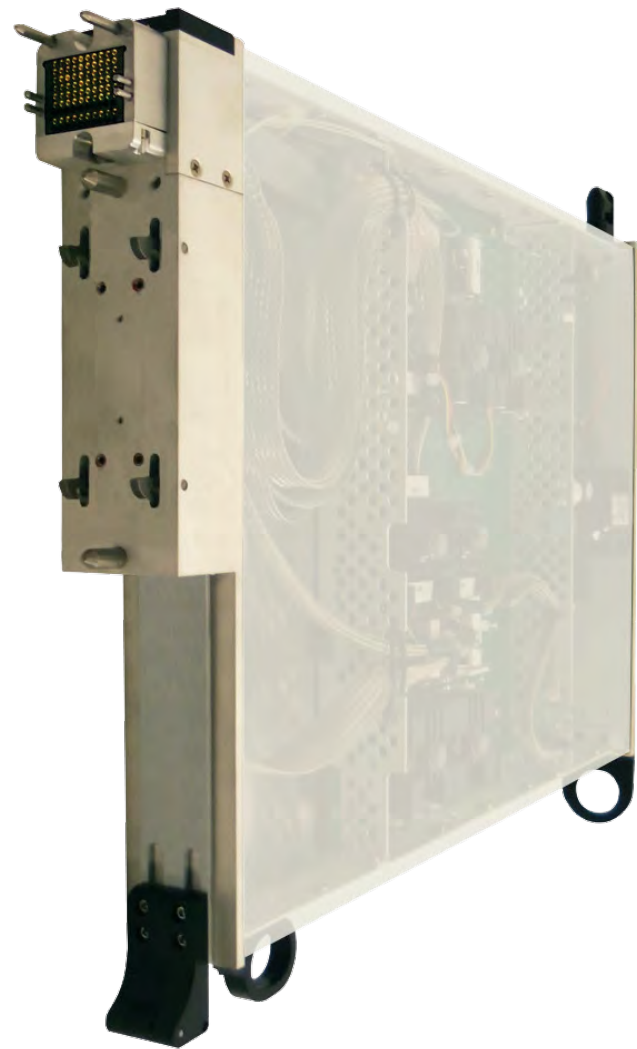

TOPICS

[Instruments provided by this TIM](#)

[Edit Panel Button Descriptions](#)

[Static Digital Button Modes](#)

[Control Panel](#)

[DUT Control](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **DutControl, PowerVI, StaticDigital** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- DutControl, Ri7421x Dut Control
- PowerVI, RI7431x High Current Supplies
- StaticDigital, RI74311x 16-bit Device Digital Controller

NOTE: Multiple RI8546 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels (i.e. - DutControl, PowerVI, StaticDigital ; DutControl2, PowerVI2, StaticDigital2; DutControl3, PowerVI3, StaticDigital3 ; etc.).

The “x” in the instrument names denotes the model revision number.

DIAGRAM 1 RI8546 DEVICE POWER - INSTRUMENTS

► Device Power Block Diagram

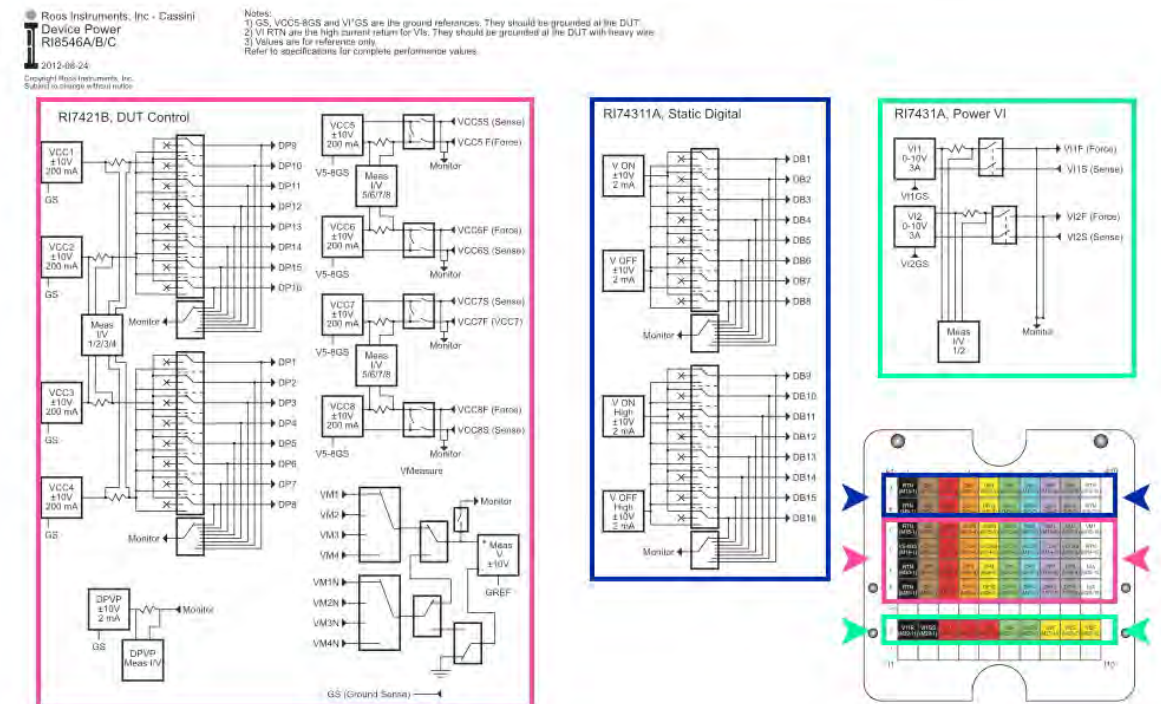


DUT Control, Static Digital, and Power VI instruments with the RI8546

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 6 RI8546 DEVICE POWER

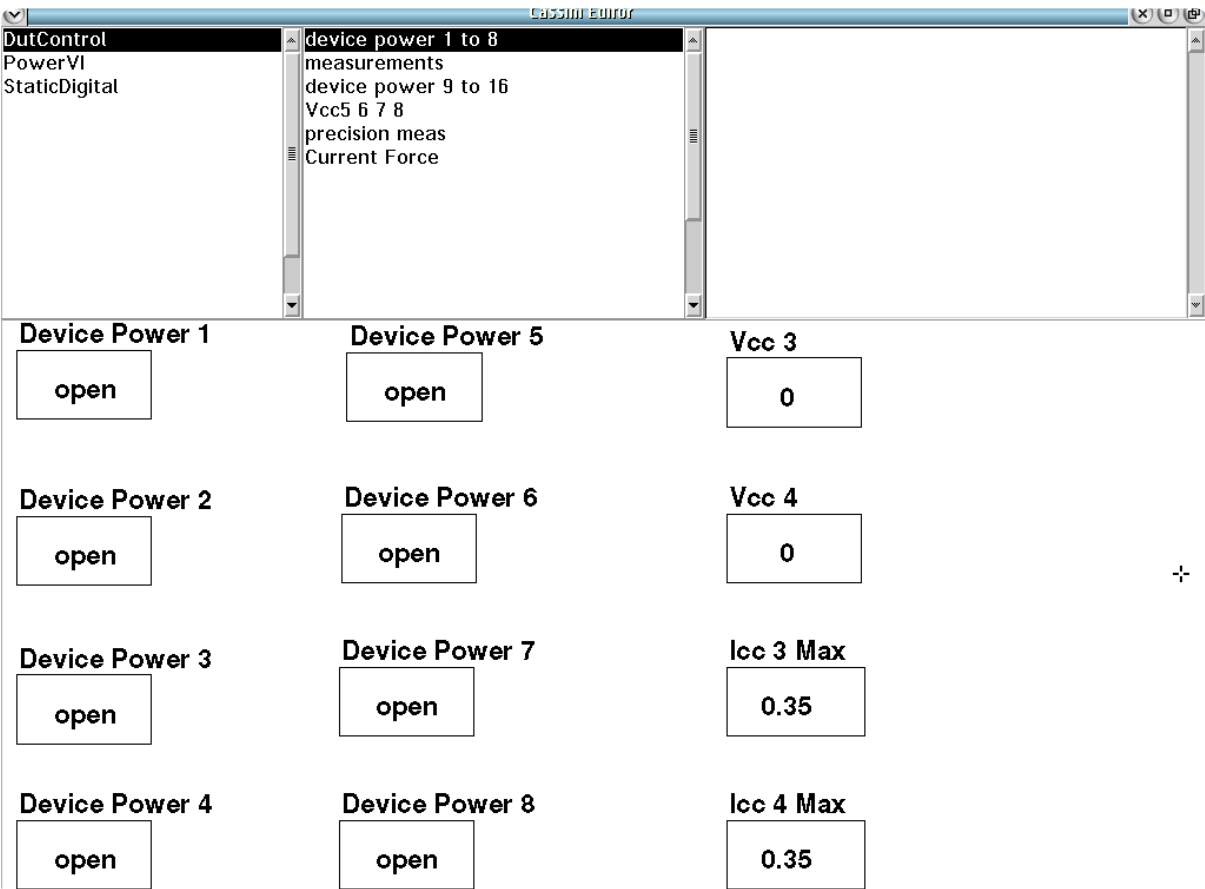

DUTControl **device power 1 to 8** provide access to individual pin states and shared control of Voltage and Current.

DUTCONTROL

PANEL: DEVICE POWER 1 TO 8

See [Example B](#) at the end of the Edit Panels section for example measurements using the device power pins.



Device Power 1..8

Drop down list buttons that individually control the state of each of the power supply pins independently. This bank of 8 device power pins can be connected to a voltage or current resource (*Meas I/V 1/2/3/4*), a precision voltage measure resource (*Monitor→DPVP Meas I/V*), or power supplies *VCC3* and/or *VCC4* via a switching network in the DUT Control subsystem, see [Diagram 1](#).

The default ‘open’ selection disconnects the designated Device Power pin from all instrument resources by setting the switch state to the “open” position, leaving the pin in a DC floating state.

The ‘Vcc3’ selection connects the designated Device Power pin to the *VCC3 ±10 V, 200 mA* power supply for sourcing DC voltage. This setting is used with the **Vcc3** and **Icc3 Max** buttons.

The ‘Vcc4’ selection connects the designated Device Power pin to the $VCC4 \pm 10\text{ V}$, 200 mA power supply for sourcing DC voltage. This setting is used with the **Vcc4** and **Icc4 Max** buttons.

The ‘both’ selection connects $VCC3 \pm 10\text{ V}$, 200 mA and $VCC4 \pm 10\text{ V}$, 200 mA power supplies in parallel to the designated Device Power pin for sourcing DC voltage. This mode is used for supplying drive currents up to 450 mA with Device Power pins. This setting is used with the **Vcc3**, **Icc3 Max**, **Vcc4**, and **Icc4 Max** buttons.

NOTE: The Vcc3 and Vcc4 buttons must be set to the same voltage and the Icc3 Max/Icc4 Max buttons must be set to the same expected current value for proper function.

The ‘precision’ selection connects the designated Device Power pin to the precision voltage measure instrument *DPVP Meas I/V* via the *monitor* multiplexer. This mode is used for measuring currents in the μA range and for force voltage or current and measure current/voltage measurements.

Vcc 3

Vcc 3

0

Decimal notation input button that sets the voltage for the $VCC3 \pm 10\text{ V}$, 200 mA power supply that services Device Power pins 1-8. The input is in units of volts with a resolution of 0.3 mV and a voltage accuracy of $\pm 10\text{ mV}$.

Vcc 4

Vcc 4

0

Decimal notation input button that sets the voltage for the $VCC4 \pm 10\text{ V}$, 200 mA power supply that services Device Power pins 1-8. The input is in units of volts with a resolution of 0.3 mV and a voltage accuracy of $\pm 10\text{ mV}$.

Icc 3 Max

Icc 3 Max

0.35

Decimal notation input button that sets the maximum current limit for $VCC3 \pm 10\text{ V}$, 200 mA power supply that services Device Power pins 1-8. This is used to prevent excessive current from damaging DUT pins in the event of DC shorts or DUT failures. The input is in units of amps with a resolution of $10\mu\text{A}$. A negative current value will sink the specified current value from the Device Power pin/s connected to VCC3.

NOTE: Clamping the current value for VCC3 below the required drive voltage can result in insufficient voltage at the designated Device Power pin.

Icc 4 Max

Decimal notation input button that sets the maximum current limit for $VCC4 \pm 10\text{ V}$, 200 mA power supply that services Device Power pins 1-8. This is used to prevent excessive current from damaging DUT pins in the event of DC shorts or DUT failures. The input is in units of amps with a resolution of $10\mu\text{A}$. A negative current value will sink the specified current value from the Device Power pin/s connected to $VCC4$.

NOTE: Clamping the current value for $VCC4$ below the required drive voltage can result in insufficient voltage at the designated Device Power pin.

Icc 4 Max

0.35

PANEL: MEASUREMENTS

See [Example B](#) at the end of the Edit Panels section for example measurements using the Vmeasure pins.

Voltage Meas Max

Decimal notation input button that sets the maximum expected voltage amplitude for DC voltage measurements using the *Meas I/V 1/2/3/4* ($VCC1/VCC2/VCC3/VCC4$), *Meas I/V 5/6/7/8* ($VCC5/VCC6/VCC7/VCC8$), or *VMeasure* resources ($VM1-VM4/VM1N-VM4N$). The setting optimizes the dynamic range of the internal ADC's input to within one of four voltage ranges: $<10\text{ V}$, $<1\text{ V}$, $<100\text{ mV}$, and $<10\text{ mV}$ (i.e - a button value of 150 mV will select the input range to $<1\text{ V}$ for the ADC). Input values are in units of volts with a maximum value of 10 V . Input values are in units of volts with a maximum value of 10 V . This button is commonly used with the **Vmeasure** and/or **Voltage Meas Mode** buttons and paired with a **Voltage** measurement block.

Voltage Meas Max

10

Current Meas Max

Decimal notation input button that sets the maximum expected current amplitude for DC current measurements using the *Meas I/V*

Current Meas Max

1

1/2/3/4 (VCC1/VCC2/VCC3/VCC4), Meas I/V 5/6/7/8 (VCC5/VCC6/VCC7/VCC8), or VMeasure resources (VM1-VM4/VM1N-VM4N). The setting optimizes the dynamic range of the internal ADC's input to within one of four sense resistor ranges: <250 mA, <25 mA, <2.5 mA, and <250 µA (i.e - a button value of 10 mA will select the dynamic range to <25 mA for the ADC). Input values are in units of amps with an effective maximum value of 250 mA. This button is commonly used with the **Imeasure** and/or **Imeasure Bw** buttons and paired with a **Current** measurement block.

Samples

Floating point-value button that sets the total number of samples in a voltage versus time measurement. This button is commonly used with the **Meas Rate** button and **Voltage Vs Time** measurement block.

NOTE: Maximum number of samples is 100.

Voltage Meas Mode

Drop down list button that sets the mode of the Vmeasure resources (VM1-VM4/VM1N-VM4N). This button is commonly used with the **Vmeasure** and **Voltage Meas Max** buttons.

Samples

21

Voltage Meas Mode

single

The 'single' selection measures voltages on VM1-VM4 or VM1N-VM4N pins individually as single-ended or ground-referenced voltage measures.

The 'single-Hi Res' selection measures voltages on VM1-VM4 or VM1N-VM4N pins individually as single-ended or ground-referenced voltage measures using the precision voltage measure resource (Monitor→DPVP Meas I/V). This selection uses button and block resources found in the 'precision meas' panel.

The 'diff' selection measures differential voltages on VM1-VM4 and VM1N-VM4N pin pairs (i.e. - the voltage across pins VM1 and VM1N or VM4 and VM4N).

The 'diff-Hi Res' selection measures differential voltages on VM1-VM4 and VM1N-VM4N pin pairs using the precision voltage measure resource (Monitor→DPVP Meas I/V). This selection uses button/block resources found in the 'precision meas' panel.

Imeasure

Drop down list button that chooses the resource pin for a current measurement. The list options are any of the Device Power supplies (VCC1, VCC2, ..VCC8). This button is paired with a **Current** measurement block.

Imeasure

Vcc1

Meas Rate

20000

Meas Rate

Decimal notation input button that sets the measure sample rate for a voltage versus time measurement. The sample rate is in units of Hz with a maximum value of 50 kHz. This button is paired with a **Voltage Vs Time** button within a test panel and is commonly used with a **Samples**, **Voltage Meas Max**, and **Vmeas** button within a test panel/section default.

Vmeasure

Vm1

Vmeasure

Drop down list button that chooses the resource pin for a voltage measurement. The list options are any *Vmeasure* resource pin (VM1-VM4/VM1N-VM4N) or one of the *Device Power* supplies (VCC1, VCC2, ..VCC8). This button is paired with a **Voltage** measurement block.

Imeasure Bw

fast

Imeasure Bw

Drop down list button that sets the bandwidth of the current measurement resource within *Meas I/V 1/2/3/4* and/or *Meas I/V 5/6/7/8*.


The ‘fast’ selection is the default mode.

The ‘slow’ selection is used to reduce noise for sensitivity and/or low-current (<2.5mA) measurements.

Meas: Voltage

Measurement block that evaluates the voltage at a resource pin selected by the **Vmeasure** button. The measurement result is in units of volts, with a maximum measure value of ±10V DC.


MEAS

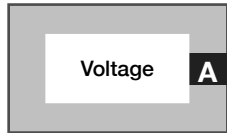

Meas: Current

Measurement block that evaluates the current at a resource pin selected by the **Imeasure** button. The measurement result is in units of amps.


MEAS

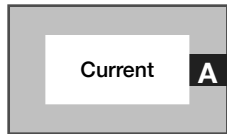

Meas: Voltage Vs Time

Measurement block that evaluates the voltage relative to time at pin selected by the **Vmeasure** button. This button uses the **Samples**

MEAS

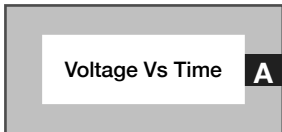

and **Meas Rate** to configure the measurement parameters. Results are output in RiVoltageVsTimeInt data type.

PANEL: DEVICE POWER 9 TO 16

See [Example B](#) at the end of the section for example measurements using the Device Power pins.

Device Power 9

open

Device Power 9..16

Drop down list buttons that individually control the state of each of the power supply pins independently. This bank of 8 device power pins can be connected to a voltage or current resource (*Meas I/V 1/2/3/4*), a precision voltage measure resource (*Monitor→DPVP Meas I/V*), or power supplies *VCC1* and/or *VCC2* via a switching network in the DUT Control subsystem, see [Interactive 8](#).

The default ‘open’ selection disconnects the designated Device Power pin from all instrument resources by setting the switch state to the “open” position, leaving the pin in a DC floating state.

The ‘Vcc1’ selection connects the designated Device Power pin to the *VCC1 ±10V, 200mA* power supply for sourcing DC voltage. This setting is used with the **Vcc1** and **Icc1 Max** buttons.

The ‘Vcc2’ selection connects the designated Device Power pin to the *VCC2 ±10V, 200mA* power supply for sourcing DC voltage. This setting is used with the **Vcc2** and **Icc2 Max** buttons.

The ‘both’ selection connects $VCC1 \pm 10V, 200mA$ and $VCC2 \pm 10V, 200mA$ power supplies in parallel to the designated Device Power pin for sourcing DC voltage. This mode is used for supplying drive currents up to 450mA with Device Power pins 9 through 16. This setting is used with the **Vcc1**, **Icc1 Max**, **Vcc2**, and **Icc2 Max** buttons.

NOTE: The Vcc1 and Vcc2 buttons must be set to the same voltage and the Icc1 Max/Icc2 Max buttons must be set to the same expected current value for proper function.

The ‘precision’ selection connects the designated Device Power pin to the precision voltage measure instrument *DPVP Meas I/V* via the *Monitor* multiplexer. This mode is used for measuring currents in the pA range and for force voltage or current and measure current/voltage measurements.

Vcc 1

Decimal notation input button that sets the voltage for the $VCC3 \pm 10V, 200mA$ power supply that services Device Power pins 9-16. The input is in units of volts with a resolution of 0.3mV with a voltage accuracy of $\pm 10mV$.

Vcc 1

0

Vcc 2

Decimal notation input button that sets the voltage for the $VCC2 \pm 10V, 200mA$ power supply that services Device Power pins 9-16. The input is in units of volts with a resolution of 0.3mV and a voltage accuracy of $\pm 10mV$.

Vcc 2

0

Icc 1 Max

Decimal notation input button that sets the maximum current limit for $VCC1 \pm 10V, 200mA$ power supply that services Device Power pins 9-16. This is used to prevent excessive current from damaging DUT pins in the event of DC shorts or DUT failures. The input is in units of amps with a resolution of 10 μA . A negative current value will sink the specified current value from the Device Power pin/s connected to VCC1.

Icc 1 Max

0.35

NOTE: Clamping the current value for VCC1 below the required drive voltage can result in insufficient voltage at the designated Device Power pin.

Icc 2 Max

Decimal notation input button that sets the maximum current limit for $VCC2 \pm 10V$, 200mA power supply that services Device Power pins 9-16. This is used to prevent excessive current from damaging DUT pins in the event of DC shorts or DUT failures. The input is in units of amps with a resolution of 10µA. A negative current value will sink the specified current value from the Device Power pin/s connected to VCC2.

NOTE: Clamping the current value for VCC2 below the required drive voltage can result in insufficient voltage at the designated Device Power pin.

Icc 2 Max

0.35

PANEL: VCC5 6 7 8

See [Example B](#) at the end of the Edit Panels section for example measurements using the VCC pins.

Vcc 5..8

Decimal notation input buttons that set the individual voltage for the associated, independent power supplies ($VCC5$, $VCC6$, $VCC7$, $VCC8$). The input is in units of volts with a resolution of 0.3mV and a voltage accuracy of $\pm 10mV$.

Vcc 5

0

Vcc 5 Sense (6,7,8)

Drop down list buttons that sets the feedback voltage sense mode for the associated independent power supplies ($VCC5$, $VCC6$, $VCC7$, $VCC8$). The voltage sense feedback system regulates the voltage value of the supply/pin.

The ‘internal’ selection sets the voltage feedback mode to use the internal sense resistor and *Meas I/V 5/6/7/8* resource connected between the power supply the associated VCC pin. For example, between the $VCC6 \pm 10V$, 200mA power supply and $VCC6F$ (Force) pin.

Vcc 5 Sense

internal

The ‘external’ selection sets the voltage feedback mode to use the sense line (i.e. - for *VCC6F*, the *VCC6S* pin would be used to provide voltage feedback regulation. This mode is used to compensate for ohmic losses in the device interface between the resource output pin on the TIM and the device under test. The *VCC#S (Sense)* pin is connected in near the device pin using the associated *VCC#F (Force)* pin, providing a low-loss DC feedback path to compensate for voltage loss and ensure accurate voltage at the device pin.

Vcc 5..8 Output

Drop down list buttons that control the individual relays between the power supplies (*VCC5 ±10V, 200 mA; VCC6 ±10V, 200 mA; VCC7 ±10V, 200 mA; VCC8 ±10V, 200 mA* and the *VCC# force/sense* resource pins).

The ‘on’ selection connects the supply to its associated resource pins.

The ‘off’ selection disconnects the supply from its associated resource pins.

Vcc 5 Output

off

Icc 5 Max

0.35

Icc 5..8 Max

Decimal notation input buttons that set the individual maximum current limit for the independent power supplies (*VCC5 ±10 V, 200 mA; VCC6 ±10 V, 200 mA; VCC7 ±10 V, 200 mA; VCC8 ±10 V, 200 mA*). This is used to prevent excessive current from damaging DUT pins in the event of DC shorts or DUT failures. The input is in units of amps with a resolution of 10 µA. A negative current value will sink the specified current value from the associated *VCC#F (Force)* pin/s.

NOTE: Clamping the current value for VCCs below the required drive voltage can result in insufficient voltage at the resource pin.

PANEL: PRECISION MEAS

See [Example B](#) at the end of the Edit Panels section for example measurements using the precision measure resource.

Measure Mode

none

Measure Mode

Drop down list button that sets the mode of the precision measure instrument (*DPVP Meas I/V*).

The ‘none’ selection disconnects the precision measure resource from the *monitor* line.

The ‘vm’ selection is the volt meter mode. This provides precision voltage measure with an extremely high series resistance (1MΩ) much the same as a standard volt meter.

The ‘lmeas’ selection forces a voltage defined by the **Measure V Force** button and measures the resulting current for the selected resource using the **Measure Pin**. The **Measure I Limit** button restricts the maximum amount of current delivered by the supply(*DPVP ±10 V, 2 mA*) during the measurement to avoid damaging the device pin if there is a DUT failure.

The ‘vMeas’ selection forces a current defined by the **Measure I Force** button and measures the resulting voltage for the selected resource using the **Measure Pin**. The **Measure V Limit** button

restricts the maximum voltage applied by *DPVP ±10V, 2 mA* during the measurement. Typically the **Measure V Limit** button is set to the DUT’s supply rail or ground depending on the polarity of the **Measure I Force** button to avoid damaging the device pin.

NOTE: This mode is typically used for continuity tests or testing protection diodes on DUT pins.

The ‘low Current’ selection measures the current for a selected resource defined by the **Measure Pin**. This mode sets the precision measure’s sense resistor to it’s lowest current measurement range and incorporates a built-in, recursive averaging method to measure DC currents in the pA range.

The ‘vCal’ selection is the same mode as the ‘vMeas’ mode with the exception that the current limit settings are deactivated. The value set with the **Measure I Limit** is ignored, and the supply(*DPVP ±10V, 2 mA*) will push as much available current as possible to force the voltage defined by the **Measure V Force** button.

NOTE: This mode is typically used in continuity tests for device pins with large in-rush currents or long duration time constants during power up.

The ‘iCal’ selection is the same mode as the ‘lmeas’ mode with the exception that the voltage limit settings are deactivated. The value set with the **Measure V Limit** is ignored, and the supply(*DPVP ±10V, 2*

mA) will provide as much available voltage as possible to force the current condition defined by the **Measure I Force** button.

NOTE: Use caution with this mode, as pin voltages can exceed the rail voltages of the device under test.

Vcc Measure Pin

Drop down list button that chooses which of the independent VCC supplies ($VCC5 \pm 10V, 200\text{ mA}$; $VCC6 \pm 10V, 200\text{ mA}$; $VCC7 \pm 10V, 200\text{ mA}$; $VCC8 \pm 10V, 200\text{ mA}$) to measure with the precision measure instrument (*DPVP Meas I/V*) via the *Monitor* connection.

Measure V Force

Floating point button that sets the value of the voltage force condition for the **Measure Mode**: ‘vMeas’ setting. The condition is applied to the resource designated by the **Vcc Measure Pin** or **Measure Pin** button. The values are input in units of volts.

Vcc Measure Pin

None

Measure V Force

0

Measure I Force

0

Measure I Force

Floating point button that sets the value of the current force condition for the **Measure Mode**: ‘I meas’ setting. The condition is applied to the resource designated by the **Vcc Measure Pin** or **Measure Pin** button. The values are input in units of amps.

NOTE: Setting a value of 0 can cause unexpected or irregular current or voltage measurement conditions at the device pin.

Measure V Limit

0

Measure V Limit

Decimal notation input button that sets the maximum voltage amplitude for the **Measure Mode**: ‘I meas’ button setting.. This setting enables internal voltage-limiting in the precision measure supply($DPVP \pm 10V, 2\text{ mA}$) to prevent damaging a DUT pin from unwanted and/or excessive voltage caused by the **Measure I Force** button current criterion.

Measure I Limit

Decimal notation input button that sets the maximum current amplitude for the **Measure Mode**: ‘vMeas’ button setting.. This setting enables internal current-limiting diodes in the precision measure’s supply($DPVP \pm 10V, 2\text{ mA}$) to prevent damaging a DUT pin from unwanted and/or excessive current caused by the the **Measure V Force** button voltage criterion.

NOTE: Setting a value of 0 can cause unexpected or irregular current/voltage measurement conditions at the device pin.

Current Meas Max

The Decimal notation input button optimizes the dynamic range of the internal ADC’s input to within one of four sense resistor ranges: <2 mA, <200 μA , <20 μA , and <2 μA (i.e. a button value of 500 mA will select the dynamic range to <2 mA for the ADC). This button is used with the **Measure Mode**: ‘lmeas’, ‘iCal’, or ‘low Current’, **Measure Pin**, and or **Vcc Measure Pin** buttons.

Measure I Limit

0

Current Meas Max

1

Measure Pin

Drop down list button that choose the pin resource to be measured. This button is used with the **Measure Mode** button and associated measurement parameter buttons defined therein.

Measure Pin

none

Measure Time

Decimal notation input button that sets the measurement span in units of seconds for the **Precision VoltageVsTime** and **Precision CurrentVsTime** measurement blocks. This button is used with the **Meas Rate** button, where the total number of samples (i.e **Meas Rate** * **Measure Time** values) must not exceed 2000.

Measure Time

0


Meas Rate

Decimal notation input button used with the **Measure Time** button that defines the sample rate for **Precision VoltageVsTime** and **Precision CurrentVsTime** measurement blocks. The button value is listed in units of Hz with a maximum sample rate of 50 kHz.

Measure Rate

20000

Meas: Precision Current

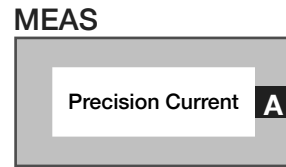

Measurement block that computes the current at a resource pin via the *Monitor*→*DPVP Meas I/V*. The maximum measurable current is 2 mA. A resource to measure is selected by one of the following buttons or groups of buttons:


Measure Pin button found in the “precision meas” instrument panel of the DutControl for one for one of the device power buttons: DP1..DP16

Measure Pin: ‘Vm’ button found in the “precision meas” panel of the DutControl instrument, **Vmeasure** (to select which Vmeasure pin: VM1..4 or VM1N..VM4N), and **Voltage Meas Mode:** ‘single-Hi Res’ buttons found in the “measurements” instrument panel of the DutControl.

Measure Pin button found in the “measure” panel of the StaticDigital instrument for DB1..DB16.

Measure Pin button found in the “measurements” panel of the PowerVI instrument for V1 or V2.

Meas: Precision Voltage

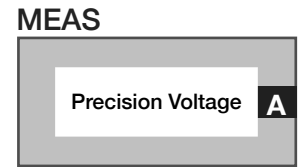

Measurement block that computes the voltage at a resource pin via the *Monitor*→*DPVP Meas I/V*. The maximum measurable voltage is ± 10 V. A resource to measure is selected by one of the following buttons or groups of buttons:


Measure Pin button found in the “precision meas” panel of the DutControl instrument for one for one of the device power buttons: DP1..DP16

Measure Pin: ‘Vm’ button found in the “precision meas” panel of the DutControl instrument, **Vmeasure** (to select which Vmeasure pin: VM1..4 or VM1N..VM4N), and **Voltage Meas Mode:** ‘single-Hi Res’ buttons found in the “measurements” instrument panel of the DutControl.

Measure Pin button found in the “measure” panel of the StaticDigital instrument for DB1..DB16.

Measure Pin button found in the “measurements” panel of the PowerVI instrument for V1 or V2.

Meas: Precision VoltageVsTime

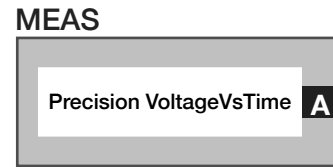

Measurement block that computes sampled voltage over time at a resource pin via the *Monitor*→*DPVP Meas I/V*. This block uses the **Measure Time** and **Meas Rate** buttons to define the sampling parameters. The maximum measurable voltage is ± 10 V. A resource to measure is selected by one of the following buttons or groups of buttons:


Measure Pin button found in the “precision meas” panel of the DutControl instrument for one for one of the device power buttons: DP1..DP16

Measure Pin: ‘Vm’ button found in the “precision meas” pane of the DutControl instrument, **Vmeasure** (to select which Vmeasure pin: VM1..4 or VM1N..VM4N), and **Voltage Meas Mode:** ‘single-Hi Res’ buttons found in the “measurements” instrument panel of the DutControl.

Measure Pin button found in the “measure” panel of the StaticDigital instrument for DB1..DB16.

Measure Pin button found in the “measurements” panel of the PowerVI instrument for V1 or V2.

Meas: Precision CurrentVsTime

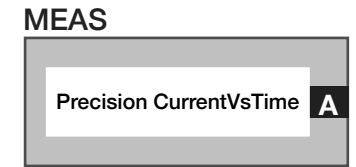

Measurement block that outputs sampled current over time at a resource pin via the *Monitor*→*DPVP Meas I/V*. This block uses the **Measure Time** and **Meas Rate** buttons to define the sampling parameters. The maximum measurable current is 2 mA. A resource to measure is selected by one of the following buttons or groups of buttons:

Measure Pin button found in the “precision meas” panel of the DutControl instrument for one for one of the device power buttons: DP1..DP16

Measure Pin: ‘Vm’ button found in the “precision meas” panel of the DutControl instrument, **Vmeasure** (to select which Vmeasure pin: VM1..4 or VM1N..VM4N), and **Voltage Meas Mode:** ‘single-Hi Res’ buttons found in the “measurements” instrument panel of the DutControl.

Measure Pin button found in the “measure” panel of the StaticDigital instrument for DB1..DB16.

Measure Pin button found in the “measurements” panel of the PowerVI instrument for V1 or V2.

PANEL: CURRENT FORCE

See [Example B](#) at the end of the Edit Panels section for example measurements using the current force modes.

Vcc 1/3/5/7 Mode

Drop down list buttons that individually set the modes of the independent supplies $VCC1 \pm 10\text{ V}$, 200 mA , $VCC3 \pm 10\text{ V}$, 200 mA , $VCC5 \pm 10\text{ V}$, 200 mA , or $VCC7 \pm 10\text{ V}$, 200 mA .

The ‘voltage’ selection sets the associated supply to operate as a voltage source, maintaining a fixed voltage value specified by the **Vcc 1**, **Icc 3**, **Icc 5**, or **Vcc 7** buttons, independent of the load resistance or output current (up to ~230 mA) on the designated supply pin.

The ‘current’ selection sets the associated supply to operate as a current source, delivering or absorbing a current specified by the **Icc 1**, **Icc 3**, **Icc 5**, or **Icc 7** buttons, independent of voltage on the designated supply pin. The **Vcc 1/3/5/7 Max** and **Vcc 1/3/5/7 Min** buttons clamp the voltage swing range within a user-specified range for this mode.

The ‘vExtS’ selection sets the supply to operate as a voltage source, using the external sense pin resource as a feedback loop to force a “calibrated” voltage value specified by the **Vcc 1**, **Icc 3**, **Icc 5**, or **Vcc**

Vcc 1 Mode
voltage

7 buttons. The sense feedback corrects for ohmic losses through the device interface, providing a corrected voltage value at the DUT pin that is independent of the load resistance or output current (up to ~230 mA) on the designated supply pin.

NOTE: The sense resource pin must be connected to the supply resource pin close to the DUT to provide accurate voltage-sense feedback correction. It is recommended to use low-loss wire.

Icc 1/3/5/7

Decimal notation input buttons that define the independent forcing current conditions for $VCC1 \pm 10\text{ V}$, 200 mA , $VCC3 \pm 10\text{ V}$, 200 mA , $VCC5 \pm 10\text{ V}$, 200 mA , or $VCC7 \pm 10\text{ V}$, 200 mA supplies. The range of valid input values is $\pm 200\text{ mA}$ with a resolution of $10\text{ }\mu\text{A}$. This button is used with it’s associated **Vcc 1/3/5/7 Mode**: ‘current’ button, and **Vcc 1/3/5/7 Min/Max** buttons.

NOTE: Only VCC1, VCC3, VCC5, and VCC7 supplies are capable of functioning as current sources. Setting a value of 0 can cause unexpected or irregular current or voltage measurement conditions at the device pin.

Icc 1
0

Vcc 1/3/5/7 Max

Decimal notation input buttons that define the independent maximum voltage condition for $VCC1 \pm 10\text{ V}$, 200 mA , $VCC3 \pm 10\text{ V}$, 200 mA , $VCC5 \pm 10\text{ V}$, 200 mA , or $VCC7 \pm 10\text{ V}$, 200 mA supplies when in current mode. The setting switches in clamping diodes to define an upper voltage limit that is used to prevent a resource voltage pin from exceeding a DUT's rail voltage. This button is used with the **Vcc 1/3/5/7 Mode**: 'current' button, and **Vcc 1/3/5/7 Min** buttons.

Vcc 1/3/5/7 Min

Decimal notation input buttons that define the independent minimum voltage condition for $VCC1 \pm 10\text{ V}$, 200 mA , $VCC3 \pm 10\text{ V}$, 200 mA , $VCC5 \pm 10\text{ V}$, 200 mA , or $VCC7 \pm 10\text{ V}$, 200 mA supplies when in current mode. This button switches in clamping diodes to define the lower voltage limit used to prevent a resource voltage pin from exceeding a DUT's rail or ground voltage. This button is used with the **Vcc 1/3/5/7 Mode**: 'current' button, and **Vcc 1/3/5/7 Max** buttons.

Vcc 1 Max

15

Vcc 1 Min

-15

POWERVI

PANEL: HI CURRENT POWER SUPPLIES

See [Example B](#) at the end of the Edit Panels section for example measurements using the Power VI pins.

Power V 1

0

Power V 1

Decimal notation input button that sets the voltage value for the Power VI's $VI1\ 0\text{-}10\text{ V}$, 3 A high-current supply. Range of valid input values are 0 to 10 in units of volts. This button is used with the **Power I 1** and **V1 Output** buttons.

Power V 2

0

Power V 2

Decimal notation input button that sets the voltage value for the Power VI's $VI2\ 0\text{-}10\text{ V}$, 3 A high-current supply. Range of valid input values are 0 to 10 in units of volts. This button is used with the **Power I 2** and **V2 Output** buttons.

Power I 1

Decimal notation input button that sets the maximum current limit value for the Power VI's *VI1 0-10 V, 3 A* high-current supply. Input values are in units of amps with a range of 0 to 3 amps and 11 bits of resolution (~1.5 mA). This button is used with the **Power V 1** and **V1 Output** buttons.

Power I 2

Decimal notation input button that sets the maximum current limit value for the Power VI's *VI2 0-10 V, 3 A* high-current supply. Input values are in units of amps with a range of 0 to 3 amps and 11 bits of resolution (~1.5 mA). This button is used with the **Power V 2** and **V2 Output** buttons.

V 1 Output

Drop down list button that controls the output relay between the VI1F pins and the *VI1 0-10 V, 3 A* supply.

The 'on' connects the *VI1 0-10 V, 3 A* supply outputs to the VI1F pins.

Power I 1

0

Power I 2

0

V 1 Output

off

The 'off' disconnects the *VI1 0-10 V, 3 A* supply outputs from the VI1F pins.

V 2 Output

Drop down list button that controls the output relay between the VI2F pins and the *VI2 0-10 V, 3 A* supply.

The 'on' connects the *VI2 0-10 V, 3 A* supply outputs to the VI2F pins.

The 'off' disconnects the *VI2 0-10 V, 3 A* supply outputs from the VI2F pins.

V 2 Output

off

PANEL: MEASUREMENTS

See [Example B](#) at the end of the this section for example measurements using the static digital measurements.

Voltage Meas Max

Set the max magnitude for voltage measurement for the Power VI instrument’s internal voltage or current measure resource *Meas I/V, 1/2*. This picks the range used.

Current Meas Max

The Decimal notation input button that optimizes the dynamic range of the *Meas I/V, 1/2* resource’s internal sense resistor and ADC input. This button is used with the **Imeasure** button, **Current Vs Time** and/or **Current** measurement blocks.

Vmeasure

Drop down list button that connects the PowerVI’s internal measure resource (*Meas I/V, 1/2*) to the selected high-current power supply for

Voltage Meas Max

10

Current Meas Max

1

Vmeasure

V1

voltage measurements. This button is used with the **Voltage Meas Max** button and **Voltage** measurement block or the **Meas Rate** and **Samples** buttons with the **Voltage Vs Time** measure block.

The ‘V1’ selection connects the *Meas I/V, 1/2* resource to the *VI1 0-10 V, 3 A* supply output for effectively measuring the VI1F pins.

The ‘V2’ selection connects the *Meas I/V, 1/2* resource to the *VI2 0-10 V, 3 A* supply outputs, for effectively measuring the VI2F pins.

Imeasure

Drop down list button that connects the PowerVI’s internal measure resource (*Meas I/V, 1/2*) to the selected high-current power supply for current measurements. This button is used with the **Current Meas Max** button and **Current** measurement block or the **Meas Rate** and **Samples** buttons with the **Current Vs Time** measure block.

Meas Rate

Decimal notation input button used with the **Samples** button that defines the sample rate for **Voltage Vs Time** and **Current Vs Time** measurement blocks in the Power VI instrument. The button value is listed in units of Hz with a maximum sample rate of 50 kHz.

Imeasure

V1

Meas Rate

20000

Samples

Decimal notation input button that sets the measurement span in units of seconds for the **Voltage Vs Time** and **Current Vs Time** measurement blocks. This button is used with the **Meas Rate** button. The measurement window is the values of **Meas Rate** * **Sample**.

NOTE: Maximum number of samples is 2000.

Measure Pin

Drop down list button that chooses the pin resource to be measured with the precision measure resource via the Monitor . This button is used with the **Measure Mode** button and associated measurement parameter buttons defined therein.

The ‘V1’ selection measures *V1 0-10 V, 3 A* supply with the internal *Meas I/V, 1/2* resource.

The ‘V2’ selection measures *V2 0-10 V, 3 A* supply with the internal *Meas I/V, 1/2* resource.

Samples

21

Measure Pin

None

MEAS

Voltage Vs TimeA

Meas: Voltage Vs Time

Measurement block that computes sampled voltage over time at a PowerVI resource pin (designated by the **Vmeasure** button) via the internal *Meas I/V, 1/2* resource. This block uses the **Voltage Meas Max**, **Measure Rate**, and **Samples** buttons to define the sampling parameters. The maximum measurable voltage is $\pm 10V$.

MEAS


Current Vs TimeA

Meas: Current Vs Time

Measurement block that outputs sampled current over time at a resource pin (designated by the **Imeasure** button via the *DPVP Meas I/V*). This block uses the **Current Meas Max**, **Measure Time**, and **Meas Rate** buttons to define the sampling parameters.


Meas: Voltage

Measurement block that measures voltage at a PowerVI resource pin (designated by the **Vmeasure** button) via the internal *Meas I/V, 1/2* resource. This block uses the **Voltage Meas Max** button to optimize the internal ADC's dynamic range. The maximum measurable voltage is $\pm 10V$.

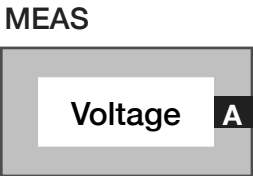


Meas: Current

Measurement block that outputs sampled current over time at a resource pin (designated by the **Imeasure** button via the *DPVP Meas I/V*). This block uses the **Current Meas Max** button to optimize the internal ADC's sense resistors for maximum dynamic range.

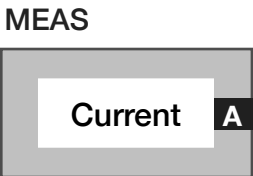

EXAMPLE B RI8546 DEVICE POWER MEASUREMENTS

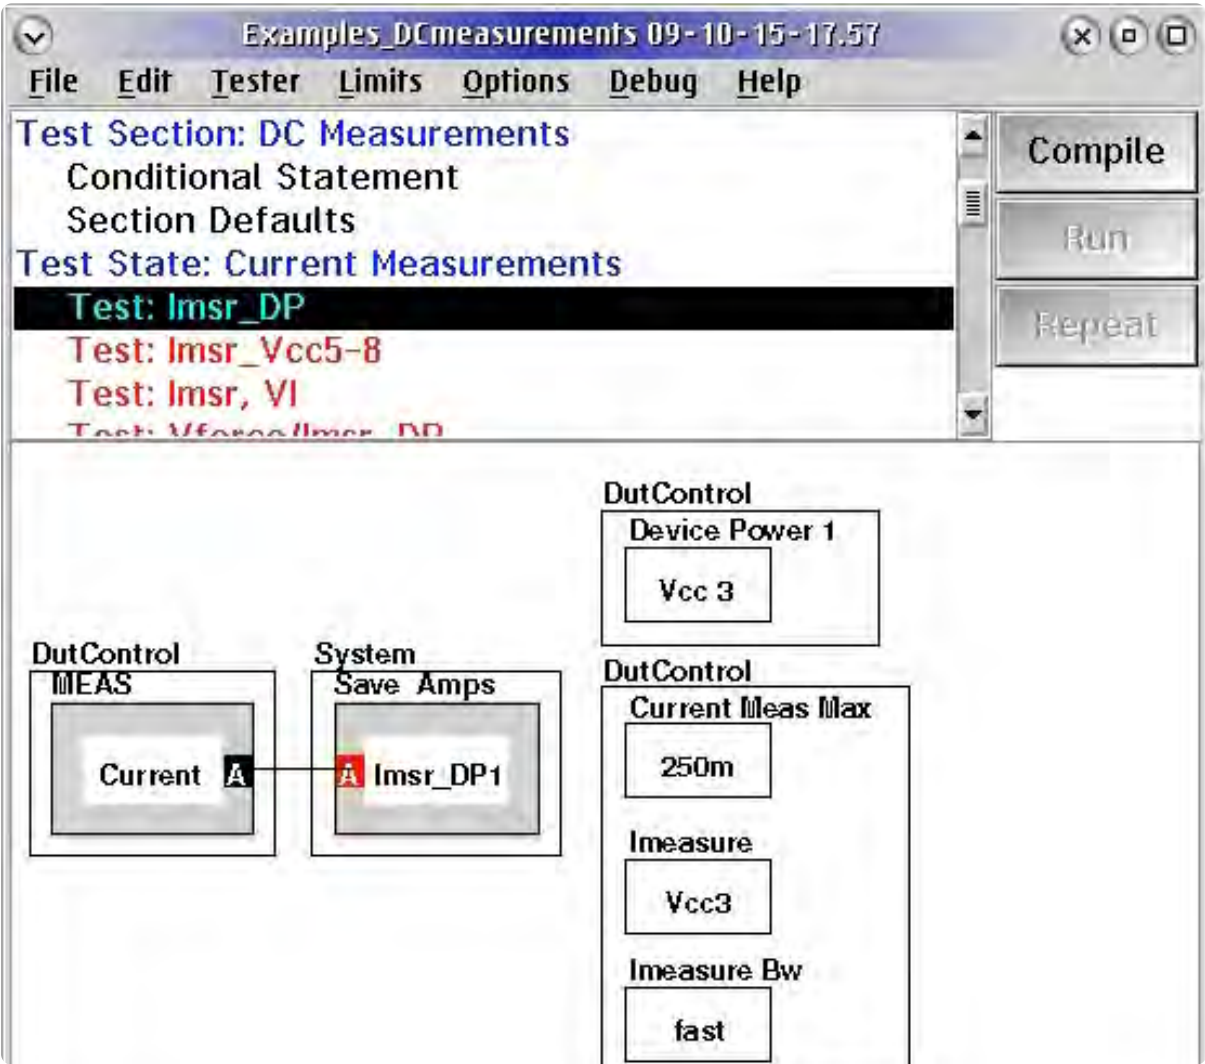

Current Measurement with a Device Power(DP) Pin

STATICDIGITAL

PANEL: DEVICE DB

See [Diagram 2](#) at the end of the Edit Panels section for a timing diagram when using the Device Serial modes.

Von

0

Von

Decimal notation input button that sets the fixed voltage level for the logic “on” state for the 8 Device Bit pins DB1 to DB8. The valid input range is ±10 volts.

Voff

0

Voff

Decimal notation input button that sets the fixed voltage level for the logic “off” state for the 8 Device Bit pins DB1 to DB8. The valid input range is ±10 volts.

Db 1

open

Db 1..16

Drop down list buttons that individually control the Device Bit line states. When the associated DB resource is used for serial communication, this button value defines the voltage or logical state of the pin before and after serial communication emits.

NOTE: DB pins used for communication must be set to ‘on’, ‘off’, or ‘openCol’ (DB2 and DB10 only) within the bit stream emit test panel, section defaults, or global defaults.

The ‘open’ selection disconnects the associated device bit pin from all internal resources, leaving it as a floating pin.

The ‘on’ selection connects the associated device bit pin to the V ON ±10V, 2 mA resource (Logic state “on”/high voltage value).

The ‘off’ selection connects the associated device bit pin to the V OFF ±10V, 2 mA resource (Logic state “off”/low voltage value).

The ‘openCol’ selection, which is only available on DB2 and DB10 configures these device bit pins as open collector. This mode requires the addition of a pull-up/pulldown resistor on DB2/DB11 either on the device interface board or within the fixture. It is typically used with I2C communication. See the **Serial Type: ‘I2C’** button mode for more details.

Von High Byte

Decimal notation input button that sets the fixed voltage level for the logic “on” state for the 8 Device Bit pins DB9 to DB16 (high byte). The valid input range is ±10 volts.

Von High Byte

0

Voff High Byte

Decimal notation input button that sets the fixed voltage level for the logic “off” state for the 8 Device Bit pins DB9 to DB16 (high byte). The valid input range is ±10 volts.

Voff High Byte

0

PANEL: DEVICE SERIAL PORT

See [Diagram 2](#) at the end of the Edit Panels section for a timing diagram when using the Device Serial modes.

Data Read

Drop down list button that configures the appointed device bit pin (DB1..DB16) to acts as the serial read data pin. The DB line that is designated as the data read line is connected to the DUT’s data output pin to support data reads with speeds to 250 kHz. The **Serial Data Read** button defines the total number of bits to read from a bit stream.

Data Read

None

NOTE: The device bit lines DB1/DB9 (selection ‘Db1’ or ‘Db9’) support faster read speeds up to 1 MHz (with Data: ‘Db2’ or ‘Db10’ and Clock: ‘Db3’ or ‘Db11’ buttons).

Clock

Drop down list button that configures which DB pin acts as the serial clock pin. An arbitrary pin selection can support a maximum of 250 kHz. The **Serial Clock Period** button controls the clock speed and

Clock

None

the **Serial Clock Polarity** button controls the polarity of the clock rise/fall edges relative to the data stream.

See [Diagram 2](#) for a timing diagram of strobe parameters.

NOTE: The device bit lines DB3/DB11 (selection ‘Db3’ or ‘Db11’) support faster clock speeds up to 1 MHz (with Data Read: ‘Db1’ or ‘Db9’ and Data Read: ‘Db2’ or ‘Db10’ buttons).

Data

Drop down list button that configures which DB pin acts as the serial data write pin to the device under test. The DB line that is designated as the data line is connected to the DUT’s data output pin to support data reads with speeds to 250 kHz. The **Serial Direction** button sets the emit order of the bit stream, i.e. most significant bit first or least significant bit first. The **Serial Size** button defines the total number of bits in a single emit stream.

NOTE: The device bit lines DB2/DB10 (selection ‘Db2’ or ‘Db10’) support faster write speeds up to 1 MHz (with Data Read: ‘Db1’ or ‘Db9’ and Clock: ‘Db3’ or ‘Db11’ buttons).

Data

None

Strobe 1

Drop down list button that configures which DB pin acts as a serial strobe or read/write/enable pin to the DUT. The DB line that is designated as the data line is connected to the DUT’s strobe or enable pin (s) support for speeds up to 250 kHz.

Strobe 1

None

Strobe 2

Drop down list button that configures which DB pin acts as a serial strobe or read/write/latch enable pin to the device under test. The DB line that is designated as the data line is connected to the DUT’s strobe or enable pin (s) support speeds up to 250 kHz.

Strobe 2

None

Serial Type

Drop down list button that defines the serial communication protocol for the selected device bit lines. The selection type inherits and enforces protocol timing behavior on the designated read data, data, clock, and strobe lines.

Serial Type

DUT Defined

The 'DUT Defined' selection uses the communication parameters defined in the Device Control Editor under the Formats tab to enable protocol-aware communication with a DUT. It is typically used with DUTs that contain multiple registers with complex programmable functions. This button selection will override the settings for the **Clock Polarity, Serial Direction, Strobe Length, and Strobe Polarity** buttons found in the 'device serial port' panel. See the DUT instrument note at the end of the RI8546 TIM section for more details.

The 'Local' selection is no longer supported.

The 'None' selection does not enforce any protocol timing behavior on the **Serial Data** button emits. Use the **Serial Clock Polarity, Serial Strobe Polarity, Serial Clock Period, Serial Direction, Serial Read Size**, and **Serial Strobe Length** to define the Clock, Data, Read, and Strobe Characteristics.

The 'Read' selection is no longer supported.

The 'I2C' selection applies clock and data timing conventions used in the two bidirectional open-drain lines of the I²C protocol. The bidirectional Serial Data Line or SDA is defined by the **Data** and **Data Read** buttons. This bidirectional pin is created by tying the user-designated Data and Data Read DB resources to pull-up/pulldown resistors on the Device Interface board or within the fixture.

IMPORTANT: The **Data** button must be set to DB2 or DB10, and the **DB2/DB10** state button used must be set to 'openCol' to prevent data or logic collisions between the Data and Data Read DB resources. The Serial Clock Line or SCL (defined by **Clock** button)

must include pull-up resistors on the DB resource selected by the **Clock** button on the Device Interface board or within the fixture. Data writes are set in a test panel using the **I2C Address, I2C Register, I2C Write** buttons found under the I2C Measure Panel of the Static Digital instrument. Bits are captured using the **I2Cbyte** block also found in the I2C Measure Panel of the Static Digital instrument.

NOTE: The I²C standard typically uses +5 V or +3.3 V logic voltages although other voltages are permitted. The design has a 7-bit or a 10-bit (depending on the device used) address space and common I²C bus speeds are 100 kbit/s standard mode and 10 kbit/s low-speed mode, but arbitrary clock frequencies are allowed.

The 'I3C' selection is no longer supported.

The 'SPI' selection will enforce a reduced duty cycle on the designated clock resource of ~30%. This allows relaxed hold conditions for writing data to the DUT and capturing read data from the DUT.

The 'Generic' selection provides basic serial bit stream capability via the **Serial Data** button. This mode, like the 'generic' mode, is used for arbitrary serial communication. Use the **Serial Clock Polarity, Serial Strobe Polarity, Serial Clock Period, Serial Direction, Serial Read Size**, and **Serial Strobe Length** to define the Clock, Data, Read, and Strobe Characteristics.

The 'Generic Read' selection is no longer supported.

Serial Size

Floating point-value button that defines the number of bits in the serial output word and sets the number of clock edges to correspond with the serial size value. If a strobe condition is defined, this button configures the strobe length to comply with the number of bits within the valid strobe criteria. A value of zero will default to the automatic read size defaults designated in the various **Serial Type** button value's configuration settings (bit length may vary by type). The maximum value is 1000 bits for a single read/write operation.

Serial Size

0

NOTE: The serial write size can be different from the serial read size. See Serial Read Size button description.

Serial Data

Data input button that defines a bit pattern for the serial data output from the specified data pin to the DUT. The write data is input in binary. A read operation is input as a mask with X's for 'don't cares' and 1's for bit reads. Spaces in pattern are ignored.

Serial Data

NOTE: If the Serial Auto Init button in the device serial port panel is set to 'off', then this button will only function within premeasure and postmeasure button groups.

Serial Clock Polarity

positive

Serial Clock Polarity

Drop down list button that defines the signal polarity of the user-designated clock pin. When the **Serial Type** button is set to 'DUT Defined', this button's setting is overridden by the settings defined by the user for the DUT in the Device Control Editor under the Formats tab.

The 'positive' selection sets the base value of the clock to binary 'zero' / voltage value of the **Voff** or **Voff Low Byte** buttons. This is typically used when the data is to be captured on the clock's rising edge (low→high transition) and data is propagated on a falling edge (high→low clock transition).

The 'negative' selection selection sets the base value of the clock to binary 'one' / voltage value of the **Von** or **Von High Byte** buttons. This is typically used when the data is to be captured on the clock's falling edge (high→low clock transition) and data is propagated on a rising edge (low→high transition).

See [Diagram 2](#) for a timing diagram of clock parameters.

Serial Strobe Polarity

positive

Serial Strobe Polarity

Drop down list button that defines the signal polarity of the user-designated strobe/enable/activation pin with respect to the clock/data. When the **Serial Type** button is set to 'DUT Defined', this button's setting is overridden by the settings defined by the user for the DUT in the Device Control Editor under the Formats tab.

The 'positive' selection sets the base value of the strobe to zero. This is typically used to designate valid data to be captured after the rising edge and during a high value of the strobe pin (low→high transition) of the designated pin and data is invalid after the falling edge (high→low clock transition) and low value of the strobe pin.

The 'negative' selection sets the base value of the strobe to one. This is typically used to designate valid data to be captured after the falling edge (high→low clock transition) and low value of the strobe pin and data is invalid after the rising edge and during a high value of the strobe pin (low→high transition) of the designated pin.

See [Diagram 2](#) for a timing diagram of strobe parameters.

Serial Clock Period

20 u

Serial Clock Period

Floating point-value button that sets the period of the serial data rate. For periods less than 10µs (higher than 100 kHz), the fast-mode pins must be used for the data read (DB1/DB9), data (DB2/DB10), and clock pins (DB3/DB11). The maximum clock speed for the fast-mode pins is 1 MHz.

See [Diagram 2](#) for a timing diagram of clock period parameter.

Serial Direction

msb first

Serial Direction

Drop down list button that designates the order the serial bits within a bit stream are emitted. Setting the Serial Type to 'DUT Defined' overrides this buttons setting.

The 'msb first' selection configures the serial data stream to output the most significant bit first from the tester to the DUT.

The 'lsb first' selection configures the serial data stream to output the least significant bit first from the tester to the DUT.

Serial Auto Init

Serial Auto Init

on

Drop down list button that provides serial communication initialization. The button is designed to automate the initialization of communication with the DUT when the supply's (V_{ON}/V_{OFF}) driving the device bits (DB1..16) are activated in a test panel, section default, or global default. The concept is to set the device under test into a known state. This would be used when the DUT is powered up the first time: Apply rail voltage (typically using DUT Control lines - DPs), power up the communication subsystem (using the Static Digital lines - DBs), and then set the DUT into a known default state. It is also used to reset the part into a default state after a test or measurement without powering down the DUT: V_{ON} set to 0 V(off) - no clock, DUT registers are now in an unknown state, V_{ON} set to >0 V(on), the DUT's registers unknown state is invalidated by an automatic serial initialization into a default state defined by the user.

The default 'on' selection will automatically send the default serial initialization conditions to the DUT's serial registers when the voltage level of the Static Digital's supply V_{ON} exceeds 0 V. This mode is used with the **Serial Type** button set to 'DUT Defined' and the default register parameters are set by the user using the **Active** button within the DUT instrument (see note below).

NOTE: The default serial state conditions are defined by the user in the Device Control Editor. This creates a 'DUT Instrument' that can be added to the Editor Panel. Within the 'DUT' instrument is a list-select 'State' button with several default states the user can

use to define the initialization state of the device under test. Placing this button in a test panel, section default or global default defines the default register conditions sent to the device when a serial auto-initialization event occurs (V_{ON} is powered up).

The 'off' selection disables auto-initialization. In this mode, serial register emits using the **Serial Data** and **I2C Write** buttons will only execute within a premeasure/postmeasure group.

Serial Read Size

0

Serial Read Size

Decimal notation input button that defines the number of bits to read from a serial stream and sets the number of clock edges to correspond with the serial read size value. If a strobe condition is defined, this button configures the strobe length to comply with the number of bits within the valid strobe criteria. A value of zero will default to the automatic read size defaults designated in the various **Serial Type** button value's configuration settings (bit length may vary by type). The maximum value is 1000 bits for a single read or write operation.

NOTE: The serial read size can be different from the serial write size. See Serial Size button description.

Serial Strobe Length

Drop down list button that defines the strobe length type. When the **Serial Type** button is set to 'DUT Defined', this button is overridden by the settings defined by the user for the DUT in the Device Control Editor under the Formats tab.

The 'short' selection is the default strobe length condition that extends from the first rising or falling (**Serial Clock Polarity** button) edge of the valid data bit stream, to the last rising or falling edge of the valid data bit stream.

The 'long' selection extends the strobe length condition by one clock period beyond the last valid data bit. This mode is typically used with communication that include bus buffers requiring an extra clock cycle to latch the valid data from the buffer into the device's logic. See [Diagram 2](#) for a timing diagram of strobe parameters.

Meas: SerialRead

Measurement block that captures a serial data stream and returns the binary values as a float data type value. This block uses the **Serial Read Size** button to define the number of bits to be read.

Serial Strobe Length


short

MEAS

Serial Data

A

DIAGRAM 2 SERIAL DIGITAL SETTINGS & TIMING DIAGRAM

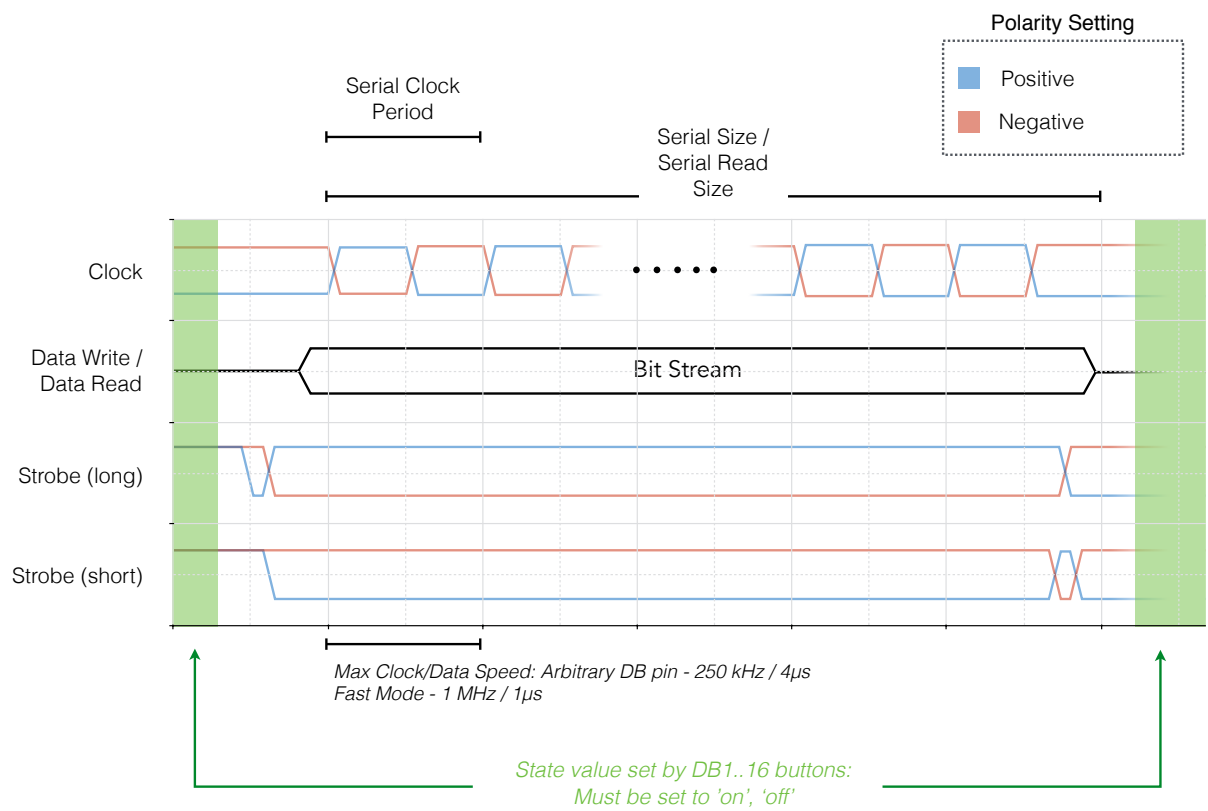

The above timing diagram shows the behavior of the clock, strobe, and data pins regarding the parameter buttons found in the Device Serial Port pane of the Static Digital Instrument.

PANEL: MEASURE

Measure Pin

Drop down list button that defines the data bit pin (DB1..16) that will be used for a precision current/voltage measurement via the *Monitor→DPVP Meas I/V*.

Measure Pin

None

Sync

Drop down list button that is used to synchronize measurements based on the specified logic condition set. This button is used strictly in a premeasure group that causes the test/measurement start to hold until the button value is true. The maximum wait time is 100 ms.

The ‘off’ selection is the default state of the button, which enforces no measurement/test synchronization.

The ‘Db1High’ selection forces the start of a test/measurement in the panel to wait until the logic value on the DB1 pin is above the voltage value specified by the **Von** button.

Sync

off

The ‘Db1Low’ selection forces the start of a test/measurement in the panel to wait until the logic value on the DB1 pin is below the voltage value specified by the **Voff** button.

The ‘Db9High’ selection forces the start of a test measurement in the panel to wait until the logic value on the DB9 pin is above the voltage value specified by the **Von** button.

The ‘Db9Low’ selection forces the start of a test measurement in the panel to wait until the logic value on the DB9 pin is below the voltage value specified by the **Voff** button.

PANEL: I2C SERIAL

I2C Address

Data input button that defines a binary address value of arbitrary bit length for I²C communications using the values ‘1’ and ‘0’ (Spaces are ignored).

I 2 C Address

11000000

I2C Register

Data input button that defines a binary register value of arbitrary length for I²C communications using the values ‘1’ and ‘0’ (Spaces are ignored).

I 2 C Register

10110000

I2C Write

Data input button that defines a binary data output pattern of arbitrary length for I²C communications using the values ‘1’ and ‘0’ (Spaces are ignored).


I 2 C Write

11000000

NOTE: If the Serial Auto Init button in the device serial port panel is set to ‘off’, then this button will only function within premeasure and postmeasure button groups.

Meas: IC byte


Measurement block that captures an I²C byte/s and returns the binary value as a float data type value. This block uses the **Serial Read Size** button (in the device serial port panel) to define the number of bits to be read and the **I2C Address** button to define the address space within the device under test from which to capture the data bits/bytes.

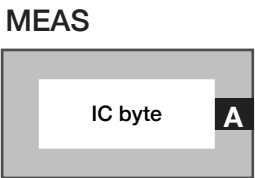

CONTROL PANELS

Real-time control of the instruments in this TIM. Only lists buttons not already described in the Edit Panel.

CONTROL PANELS 5 RI8546 DEVICE POWER

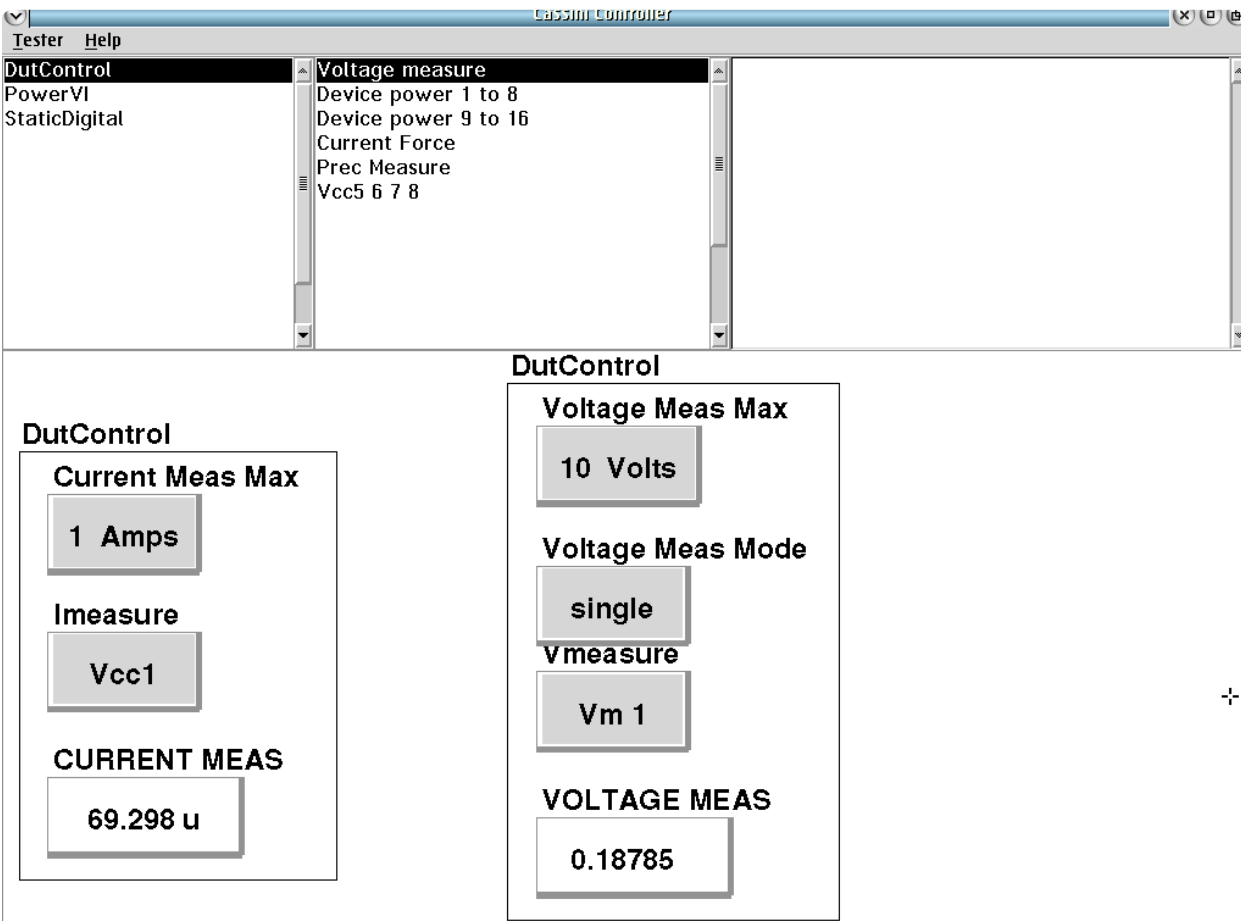

DUTControl Voltage measure controls Current and Voltage measurements.

DUTCONTROL

VOLTAGE MEASURE

DutControl Group

Control with 'Current Meas Max' and 'Imeasure'.

CURRENT MEAS displays measurement value when clicked (Amps)

DutControl

Control with 'Voltage Meas Max', 'Voltage Meas Mode', and 'Vmeasure'.

VOLTAGE MEAS displays measurement value when clicked. (Volts)

DEVICE POWER 1 TO 8 (9 TO 16)

'Device Power #', 'Vcc #', "Icc # Max" allows independent control of those resources.

DutControl Group

Control with 'Current Meas Max', 'Imeasure', 'Imeasure Bw'.

CURRENT MEAS displays measurement value when clicked (Amp)

DUT INSTRUMENT


The DUT (Device Under Test) instrument is a virtual instrument created by the user using the Device Control Editor. This “virtual instrument” provides protocol-aware device control(read/writes) buttons in the Editor Panel for use in a user’s test plan. The underlying bit emits to read/write bits, groups of bits, registers, or multiple registers are displayed as command/control buttons with user-defined naming conventions for better readability and code maintenance. They are also available within the Control Panel for interactively controlling the DUT settings at a breakpoint.

DUT Control definitions allow the user to create and edit device control registers and register commands separate from the test plan development environment. This is useful when developing and maintaining device controls for a family of similar parts or successive generations as new control features, registers, or control bits can be added or modified by iterating the original DUT control definition to create a new one. The DUT control virtual instruments can be changed quickly by simply changing the active definition from the user’s test plan.


The DUT virtual instrument is created using the Device Control Editor. Reference [Gallery 3](#), [Gallery 4](#), and [Gallery 5](#) for tips on creating and using a DUT virtual instrument.

NOTE: A fixture is required before a DUT Control instrument can be created and used in a test plan. When creating a new device control definition, the ‘Device Family’ field drop down list selection in the Device Control Editor must match the ‘Device Family’ of the user’s fixture.


GALLERY 3 DEVICE CONTROL EDITOR

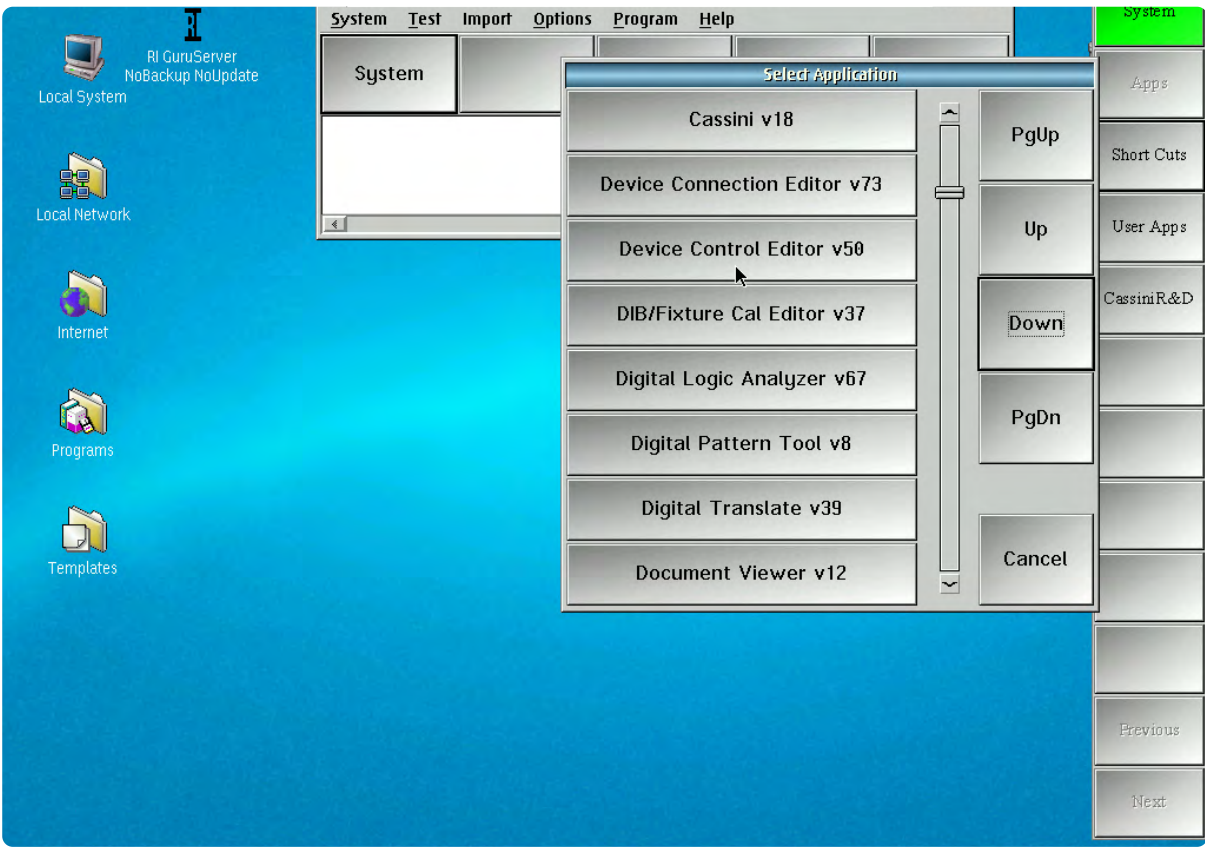

 The Device Control Editor can be found in the Cassini Apps list.




GALLERY 4 ADDING A DUT INSTRUMENT

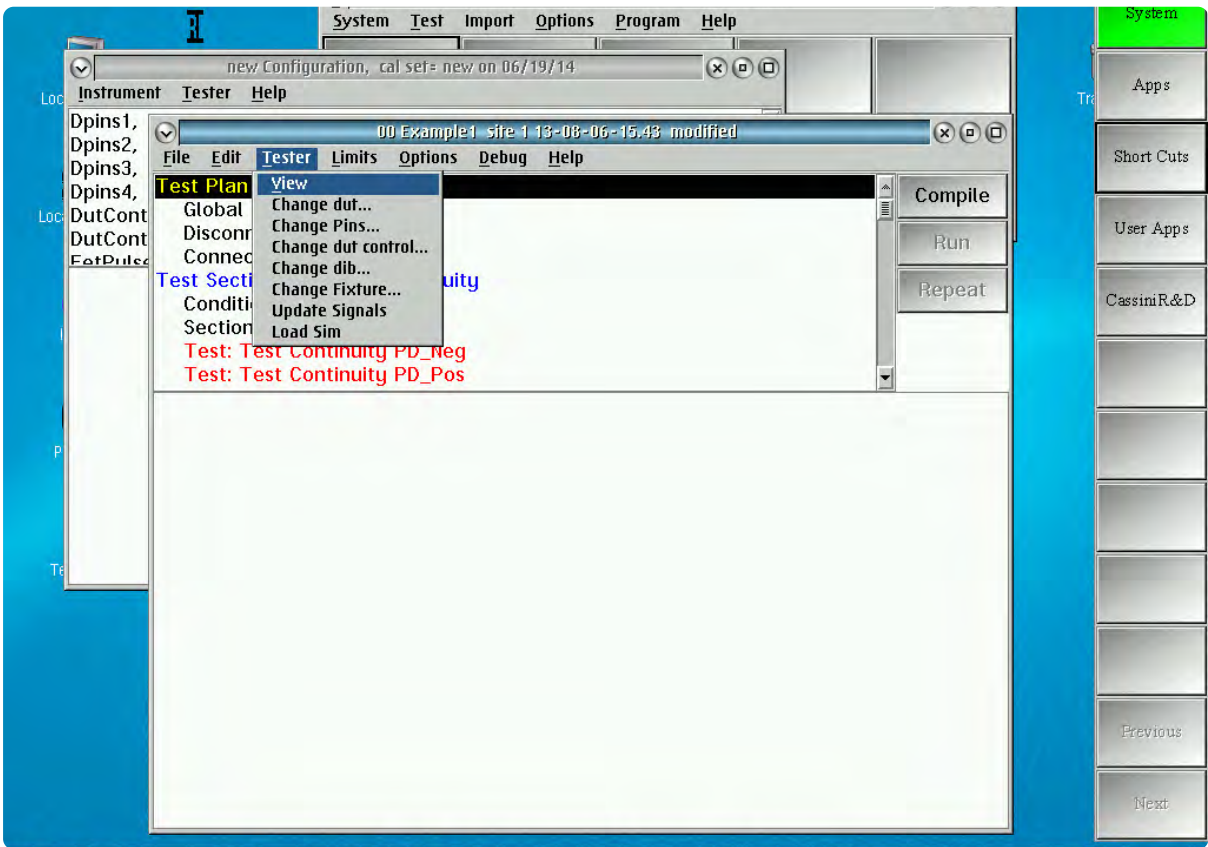


From an open test plan, select the 'Tester' menu and 'Change DUT control...' from the list to add or change a DUT instrument.




GALLERY 5 USING DUT CONTROL BUTTONS

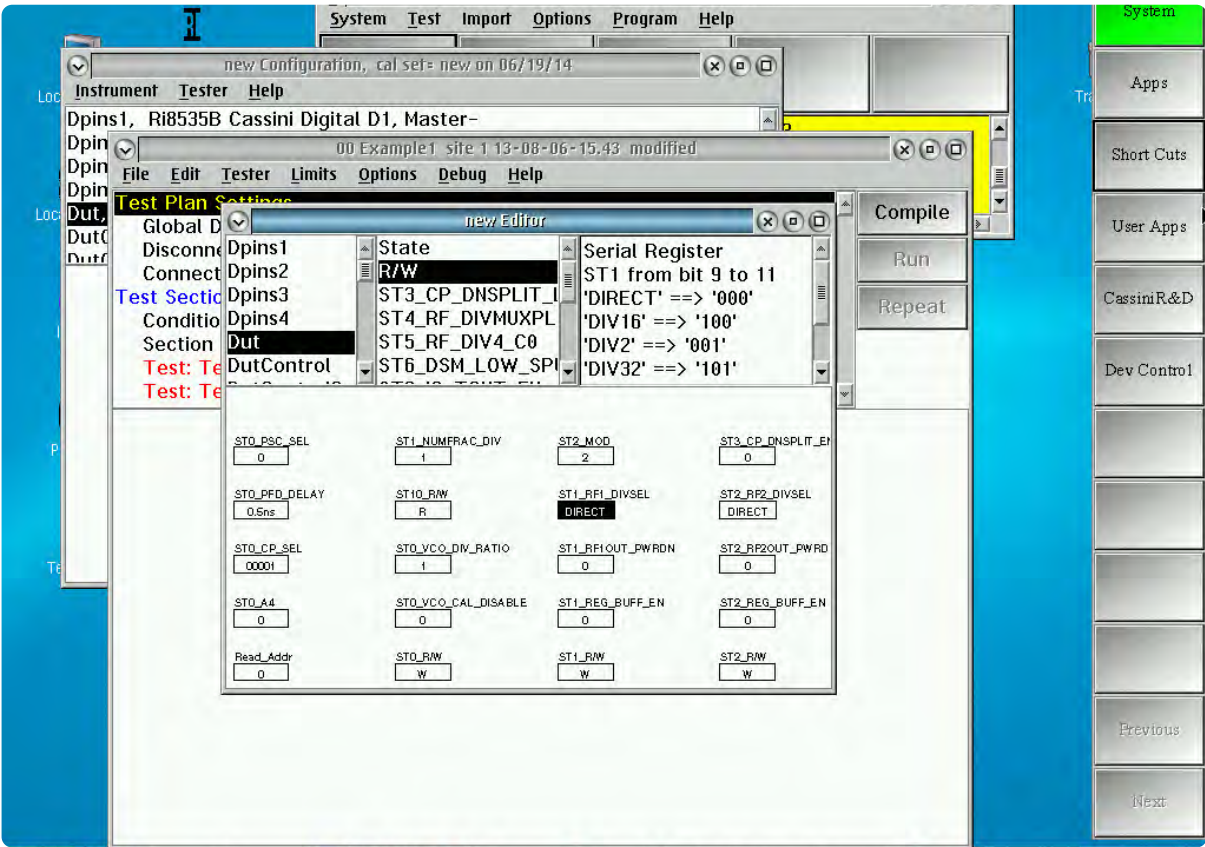

 After the DUT virtual instrument has been added, a 'DUT' instrument appears in the list of instruments available in the Editor Panel. The middle pane provides windows with 20 buttons in each for all of the protocol-aware controls. Selecting a button from the lower pane provides information about the button's bit parameters in the upper right pane.



RI8563: 4GHz TO 40.5GHz TESTSET

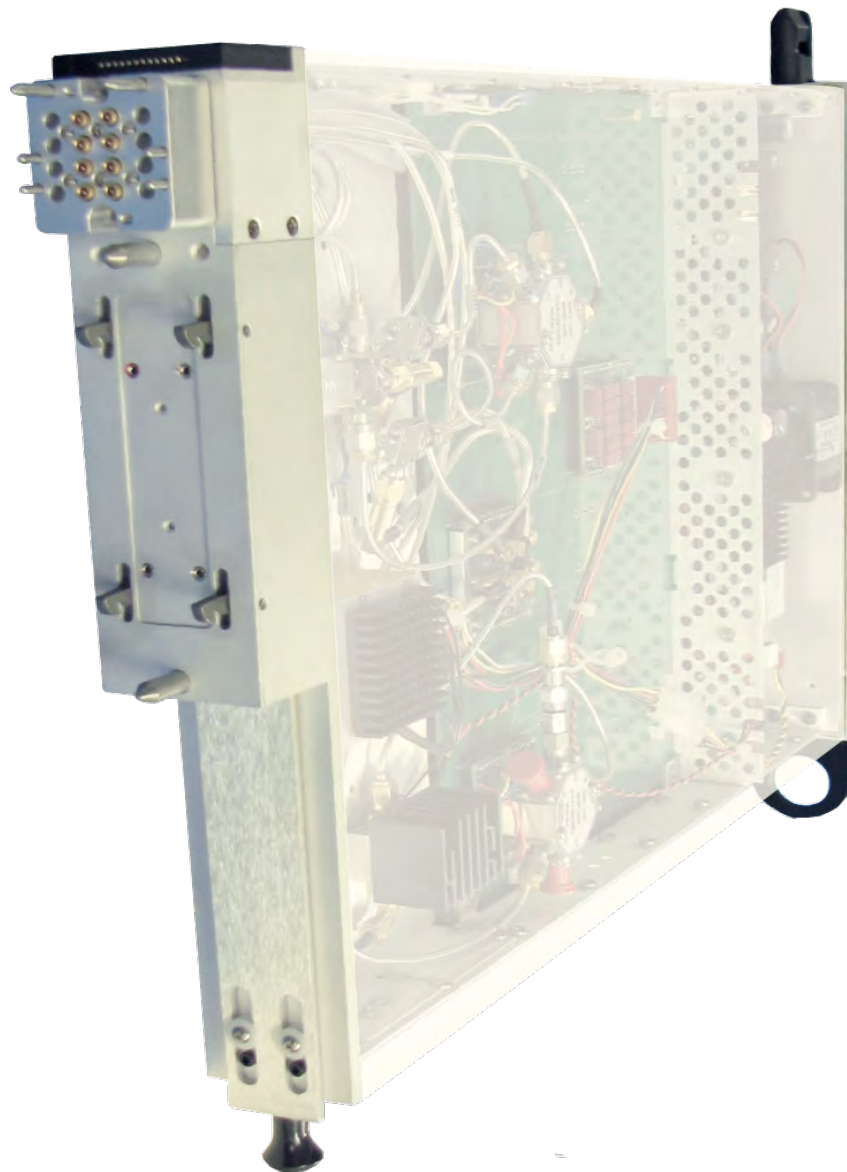

TOPICS

[Instruments provided by this TIM](#)

[Configuration Panels](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Test Head40** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Test Head40, Ri8563x 4-40.5 GHz Test Set

NOTE: Multiple RI8563 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head40, Test Head402, Test Head403, etc). The “x” in RI8563x denotes the model revision number.

CONFIGURATION PANELS


There are two versions of the RI8563 TIM. The Earlier RI8563B version also contains a Receiver and does not require and the use of the main system receiver. The Ri8563C streamlined design and requires a system receiver that is connected through the Test Fixture’s interface.

All of the connection path buttons **Lo Input, High Band Input, Lo Band Input, Aux IF Output, Aux RF Output, Second Aux RF Output, External Mixer IF Input #1, 2, and 3, and External Mixer Lo Output #1, 2, and 3** are green as in all the instruments that provide connections to the Test Fixture interface. This means they must be defined by the connections that are listed in the Test Fixture definition, but are still displayed here.

EDIT PANELS

The catalog of control buttons for this TIM to be use when building automated Test Programs. These next few panels are common to


EDIT PANELS 7 RI8563 4-40 GHZ TEST SET

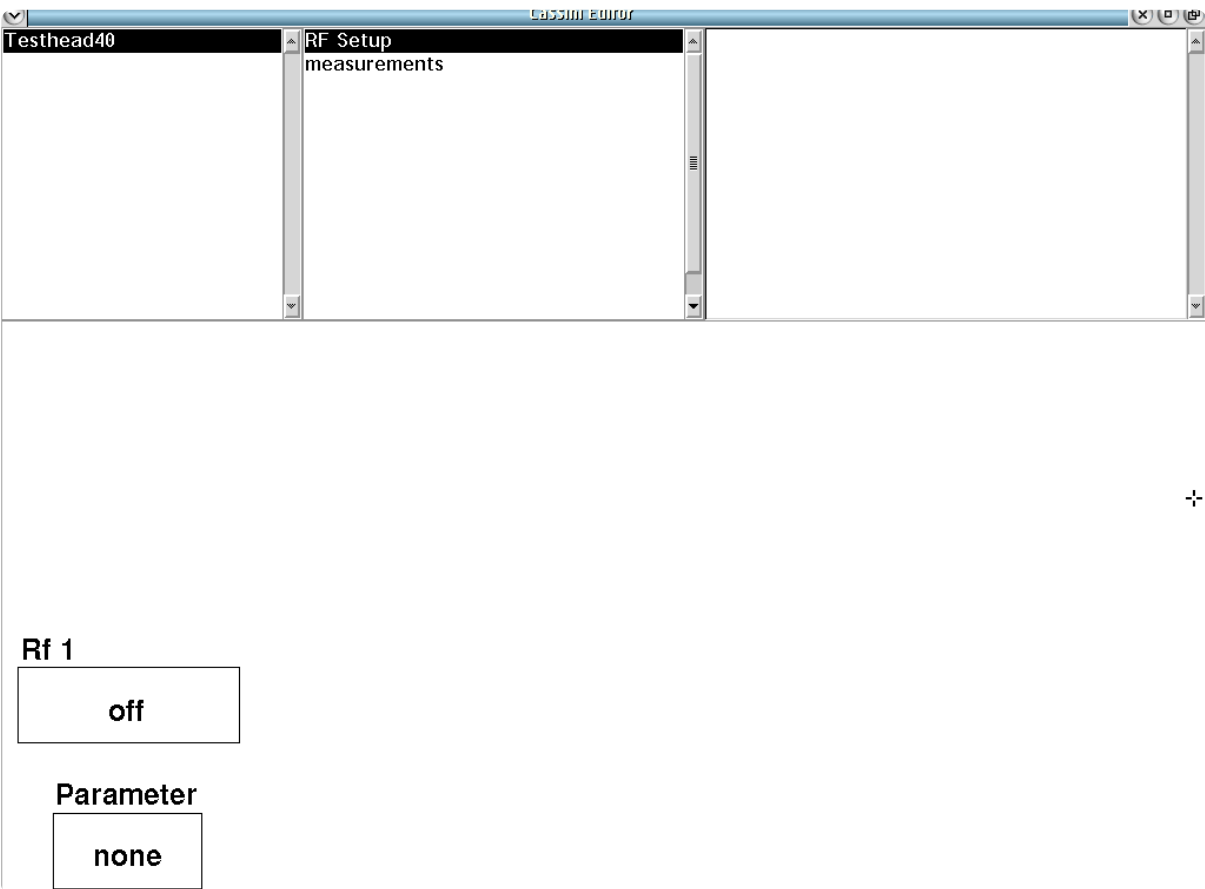

Testhead40 RF Setup panel controls RF 1 and Parameter switching of the TIM.

both the Ri8563B and Ri8563C models.

PANEL: RF SETUP

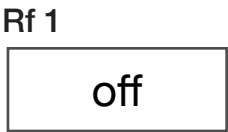

Rf 1


A list-select toggle button that is either “on” or “off” to define the source path of RF1 through the TIM.

The “off” mode sets the source path into the 'pass through' mode, where signal applied to the 'RF In' port is passed through to the 'RF Out' port. This allows TIMs to be connected using the same RF Source.

The “on” mode allows the system to automatically determine the sub-range used, based on the desired source frequency. Some previous versions of the TIM also have selections of “2-20 GHz”, “20-25 GHz”, “25-32 GHz”, or “32-40 GHz”, However, Any of these choices has the same effect of turning the TIM's source path to on.

NOTE: The Rf1 frequency and power are controlled by the driving source. For example, if Source1 is driving the 'RF In' port, then Source1's frequency and power buttons will define the frequency and power out of this TIM. The frequency is entered as the desired output frequency and the tester automatically determines the multiplication factor and sub-bands to provide the correct frequency.

INSTRUMENT BUTTON DIAGRAM 2.4

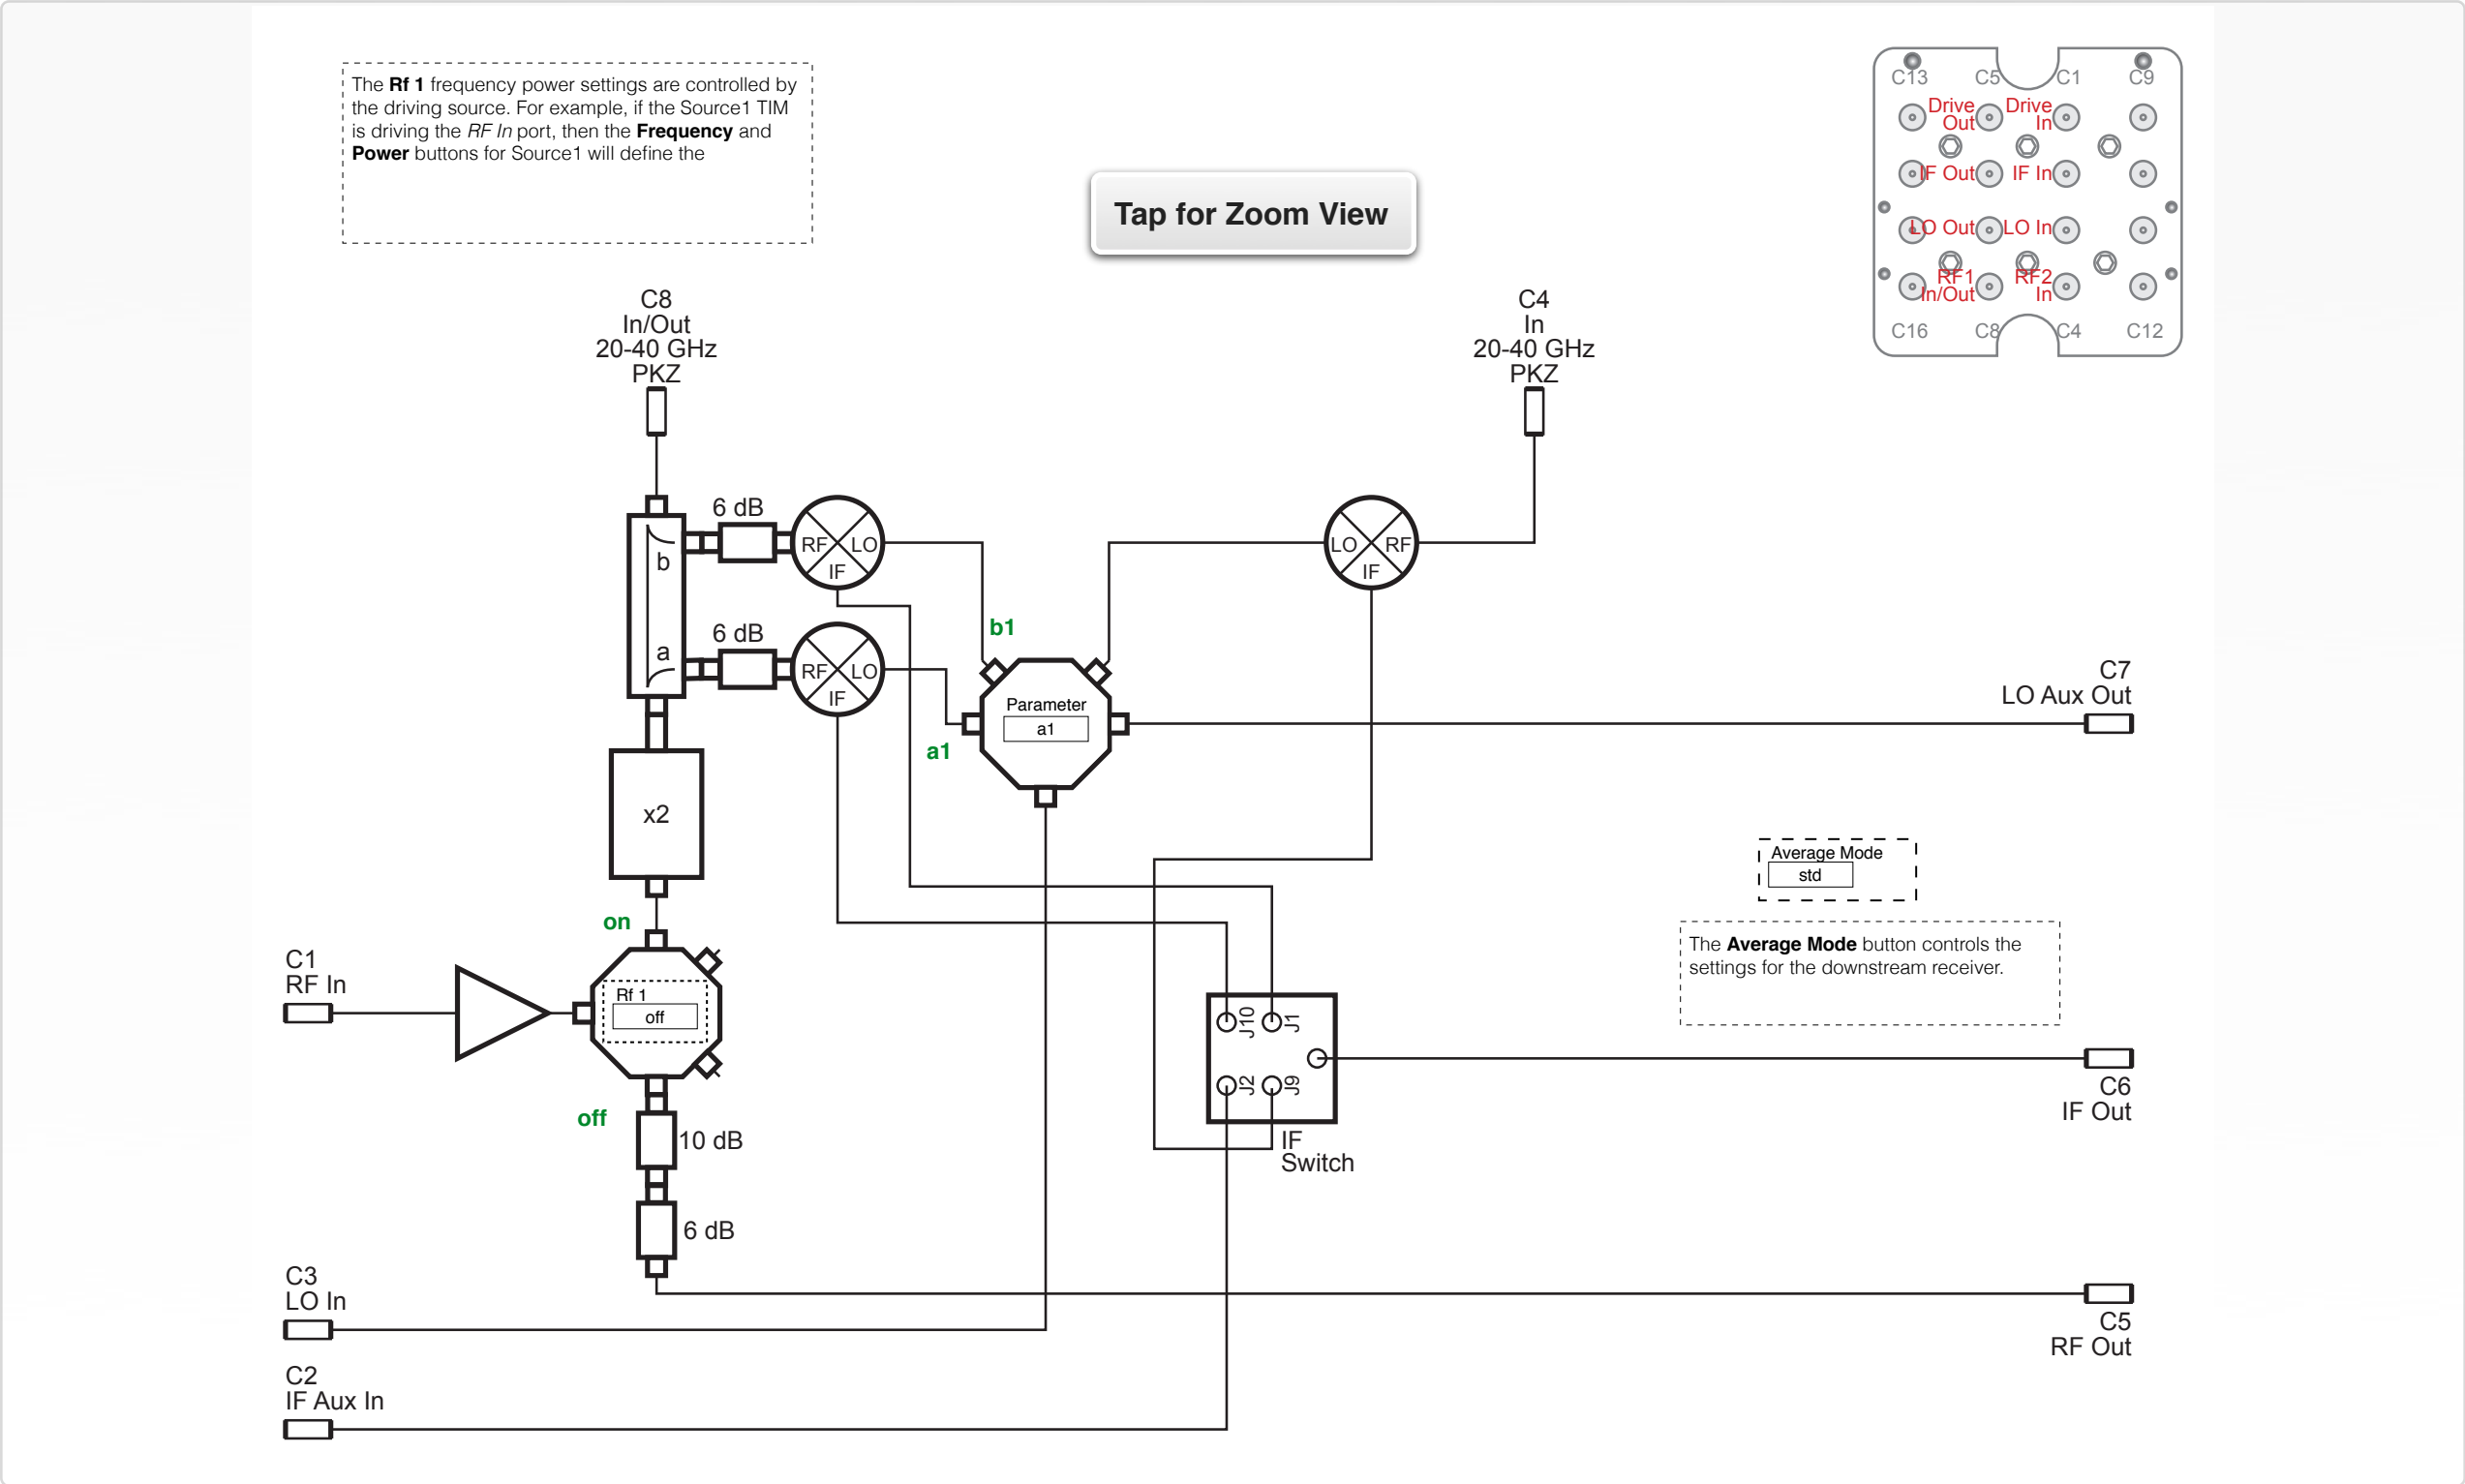

Parameter

A drop down list button that controls the internal switches to selects which wave parameter signal is connected to the path for measurement. “a1” is the incident signal, “b1” is the reflected signal, while “b2” is the output signal from the device.

NOTE: The “b2” port measurement is sensitive since it connects directly to the mmWave mixer input port without any attenuation or coupling to control the match.

Parameter

none

PANEL: MEASUREMENTS

Parameter

std


Average Mode

A drop down list button that is associated with the higher-level macro measurement buttons that sets the method of averaging used.

The “std” mode uses the number of Averages set by the System Button when measuring and completes all the averages of each of the parameters in a high-level macro button before moving to the next parameter. For example, on an S11 measurement with 4 averages, the tester would measure a1, a1, a1, a1, then b1, b1, b1, b1. This is the fastest averaging mode, but if the signal drifts while the a1 measurements are being made, the measurement can be less accurate.

The “adjacent” mode uses the number of **Averages** set by the System Button as above, but when measuring to satisfy a high-level macro button, it takes data from each of the parameters needed one at a time, before completing another round of measurements for the average. For example, on an S11 measurement with 4 averages, the tester would measure a1, b1, a1, b1, a1, b1, a1, b1. This makes the a1 and b1 measurements virtually simultaneous. The “adjacent averaging” mode is slightly slower than the “std” mode, but can minimize the effects of any signal drift especially for large number of averages.

NOTE: At higher frequencies and with averages greater than 8 to 16, some improvement in accuracy and repeatability are often achieved using the adjacent averaging mode.

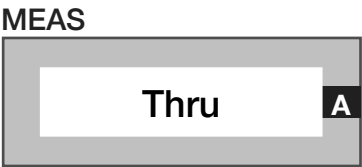

Meas: Thru


A data output button that is a high-level macro object which measures the incident (a_{11}) signal and thru (b_{21}) signals.

The output data type is a complex thru wave format. From the thru, the user can use Calc buttons to individually extract a_{11} or b_{21} as complex voltages, or S_{21} as an s-parameter.

This Thru measurement button uses scalar error correction. It is essentially a concatenation of a receiver measure voltage for a_1 and a receiver measure voltage for b_2 . Performs a_{11} and b_{21} measurement at the input frequency. The result is corrected to be absolute voltage.

NOTE: The phase of the signal is only defined within a test and not regarding any other readings.


Meas: InputWave

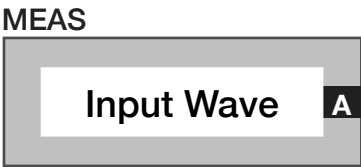

A data output button that is a high-level macro object which measures the incident and reflected waves as a_{11} (the signal out of port 1, measured on port 1) and b_{11} (the signal into port 1, measured on port 1).

The output data type is two complex voltages, a_{11} and b_{11} . They can then be individually extracted using a single-input Calc button.

This button uses scalar error correction. It is essentially a concatenation of a receiver measure voltage for a_1 and a receiver measure voltage for b_1 .

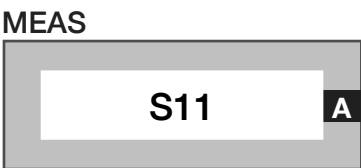

Meas: S11


A data output button that is a high-level macro object which performs a series of wave parameter measurements sufficient to calculate a vector error-corrected S_{11} measurement. The 'Parameter' button does not need to be defined for S_{11} ; the tester automatically switches between a_1 and b_1 parameters to get the measurement.

The output data type of the S_{11} measurement is a ratio expressed as a complex voltage.

CONTROL PANELS


Provides real-time control of the instruments in this TIM. Please refer to the Edit Panels for help with buttons contained in both “Edit” and “Control” panels. RF control panel

CONTROL PANELS 6 RI8563 4-40 GHZ TEST SET

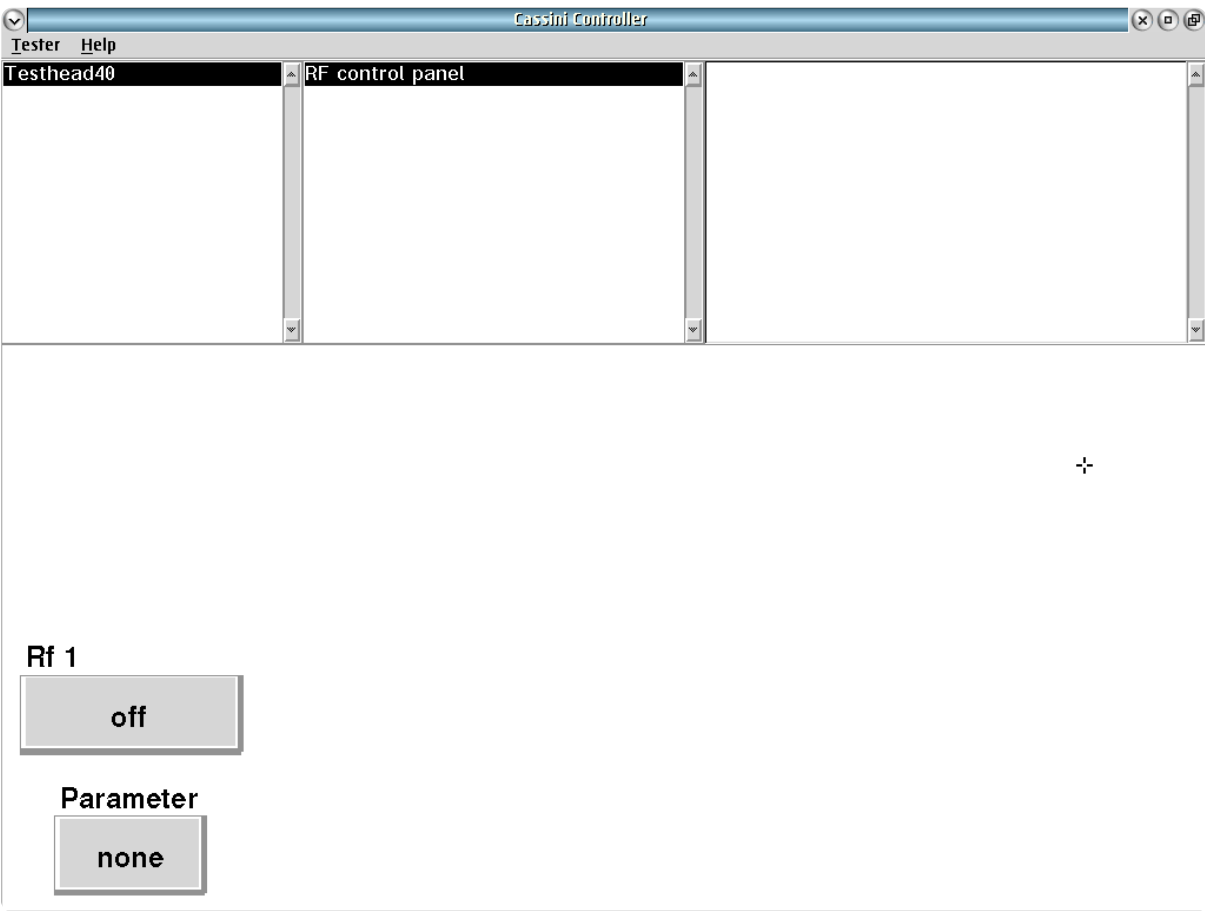

Testhead40 **RF control panel** provides real time access to switching the 40GHz instrument.

RI8564: 71GHz TO 86GHz TESTSET

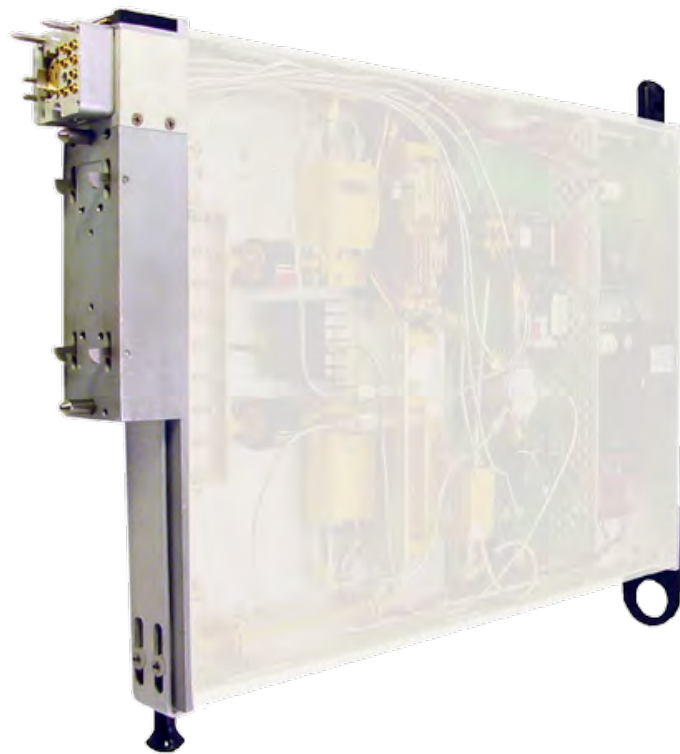

TOPICS

[Instruments provided by this TIM](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Test Head77** in the panel dialog windows. Model and Name as it appears in the Tester Configuration:



- Test Head77, RI8564x 81 GHz Test Set

NOTE: Multiple RI8564 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head77, Test Head772, Test Head773, etc). The “x” in RI8564x denotes the model revision number.


INSTRUMENT BUTTON DIAGRAM 2.5: RI8564B VERSION

The **Rf 1** frequency power settings are controlled by the driving source. For example, if the Source1 TIM is driving the *RF In* port, then the **Frequency** and **Power** buttons for Source1 will define the settings.

Tap for Zoom View

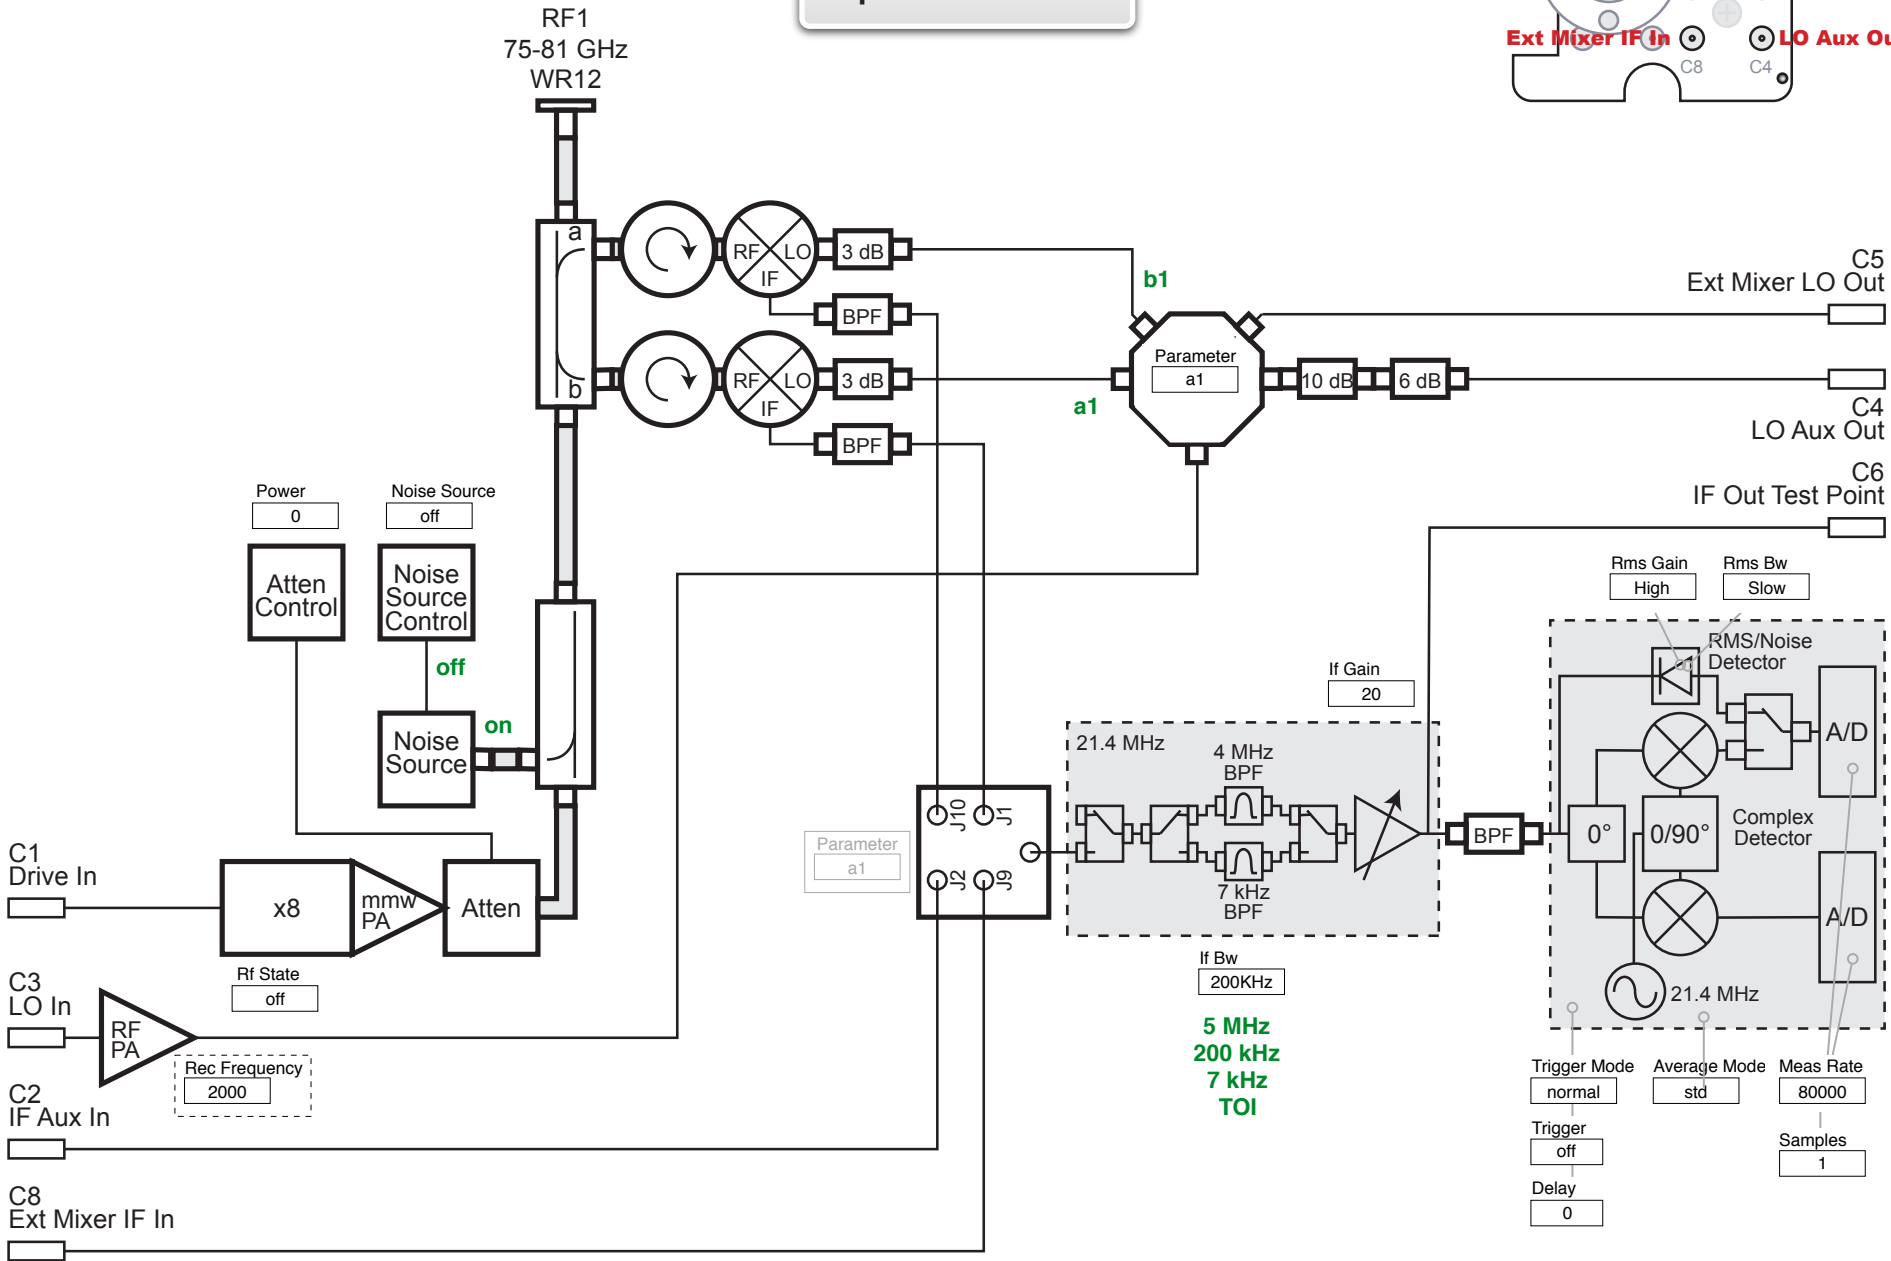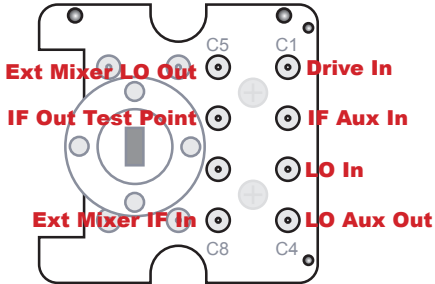


INSTRUMENT BUTTON DIAGRAM 2.6: RI8564C VERSION

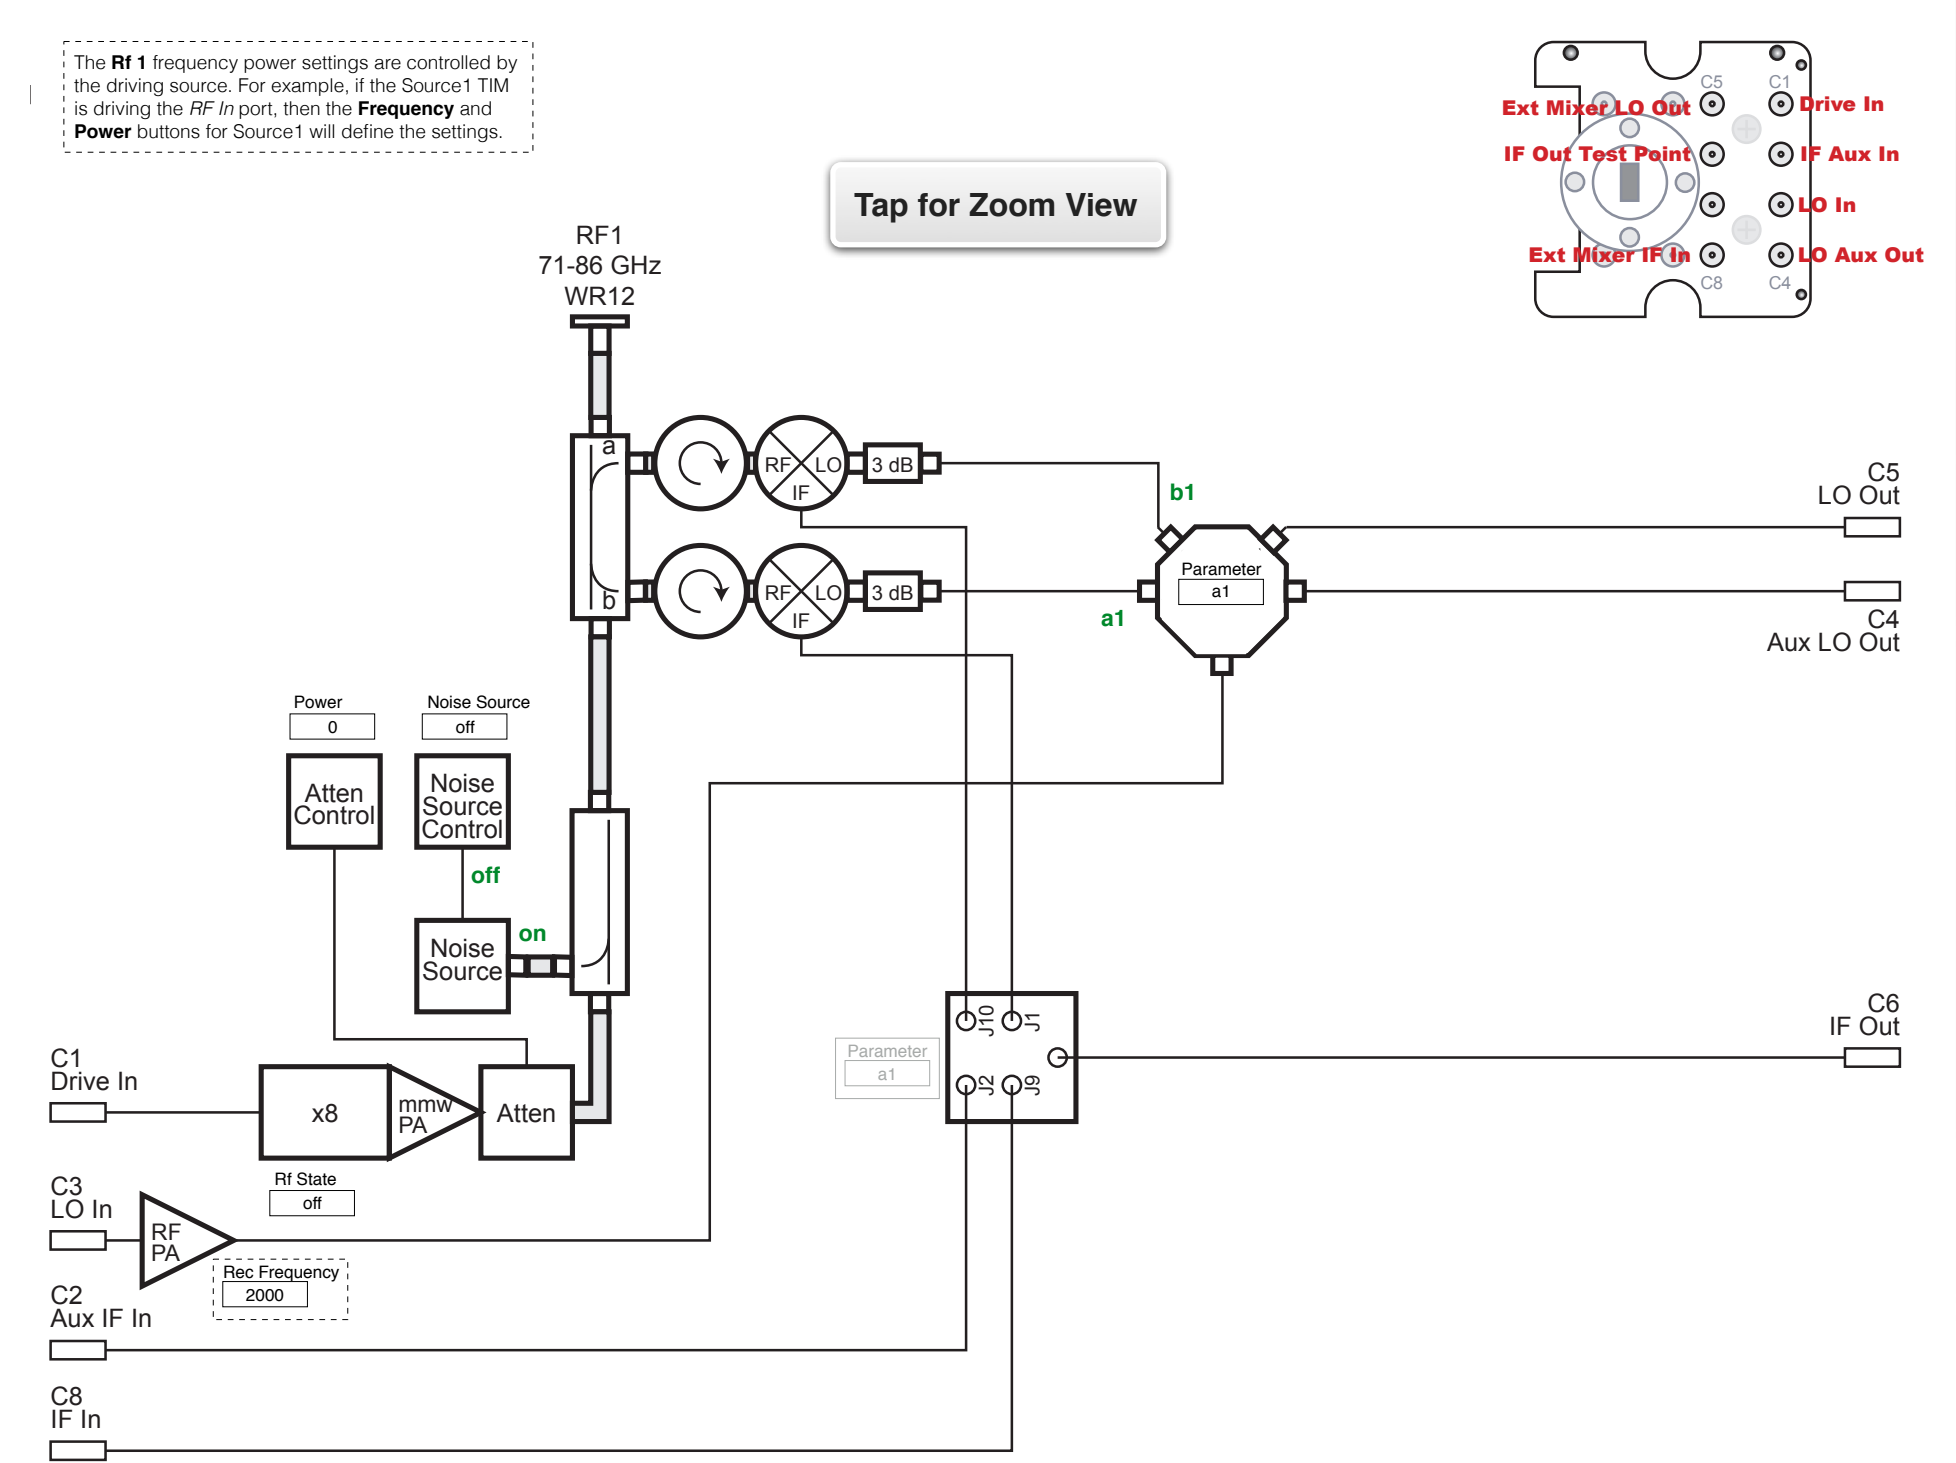

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 8 RI8564: 71-86GHz TEST SET

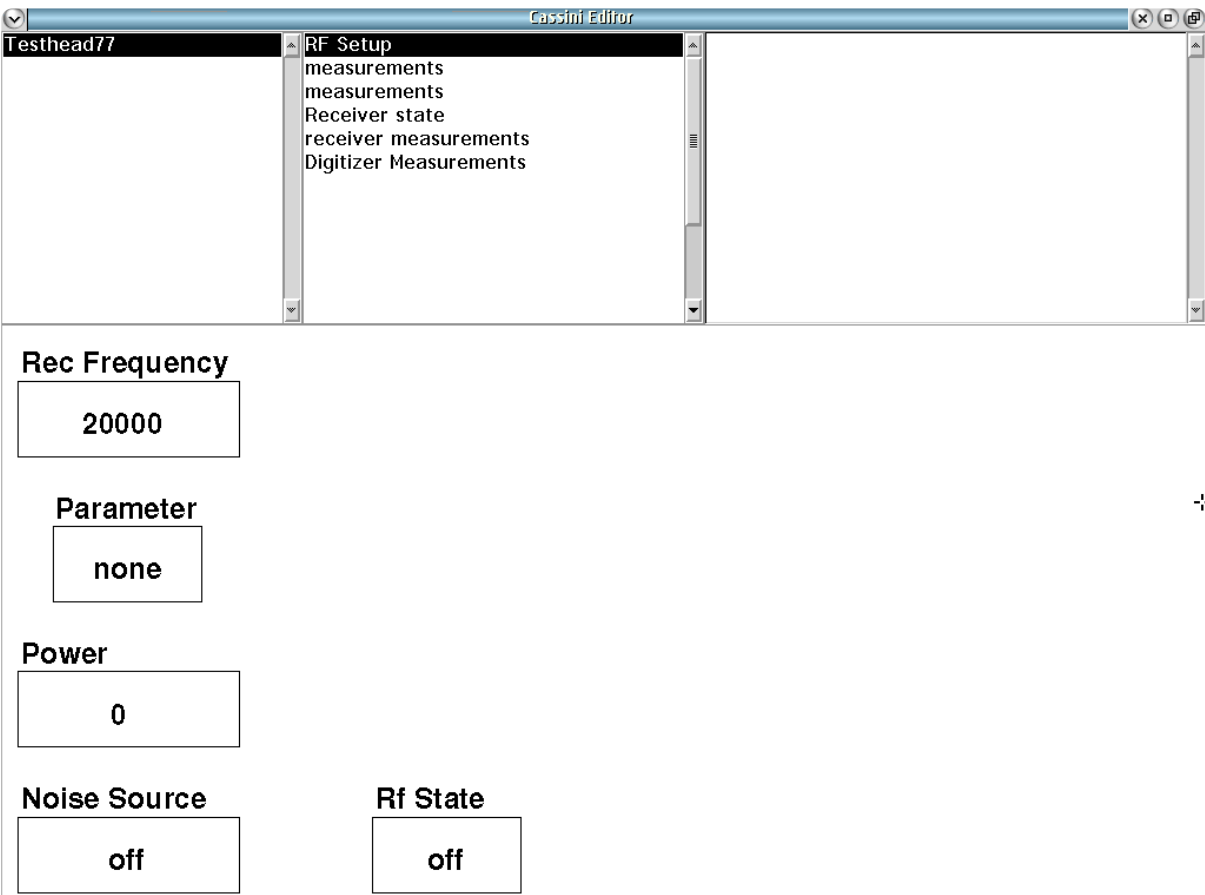

Testhead77 RF Setup panel sets the instrument states for all measurements.



PANEL: RF SETUP

Parameter

none

Parameter

Drop down list button that designates which of the coupler ports will be routed to the switching network. It is typically used for routing incident/reflected wave signals to the receiver for wave/s-parameter measurements.

The ‘a1’ selection configures the internal switches to route the incident signal from the coupler arm closets to the source signal to the downstream receiver chain.

The ‘b1’ selection configures the internal switches to route the coupled arm closest to RF waveguide port to the downstream receiver chain.

The ‘Rf4’ selection is no longer supported on the test set with built-in complex detector and receiver.

NOTE:

a1 is the incident wave to the input port of the device under test.

b1 is the reflected wave from the input port of the device under test.

Noise Source

Drop down list button that sets the Noise Source on or off.

Noise Source

off

Power

Decimal notation input button that sets the signal power at the device to a dBm value. Resolution is 0.1 dBm.

Power

0

Rec Frequency

Decimal notation input button that sets the receiver frequency in MHz.

Rec Frequency

20000

Rf State

A drop down list button that sets the multiplied RF source signal state. The ‘on’ selection sets the source path from the *Drive in (C1)* port into “pass through mode” to the microwave multiplier and out of the *RF1 71-86GHz WR12* output port.

Rf State

off

The ‘off’ selection disconnects the RF source from the multiplier chain.

PANEL: MEASUREMENTS

Meas: Input Wave at Input Freq

Measurement block that performs power corrected one port wave parameters at the receive frequency.

MEAS

Input Wave at Input FreqA

Meas: S11

Measurement block that performs a corrected S11 parameter measurement.

MEAS

S11A

Average Mode

A drop down list button that is associated with the higher-level macro measurement buttons that sets the method of averaging used.

Average Mode

std

The “std” mode uses the number of Averages set by the System Button when measuring and completes all the averages of each of the parameters in a high-level macro button before moving to the next parameter. For example, on an S11 measurement with 4 averages, the tester would measure a₁, a₁, a₁, a₁, then b₁, b₁, b₁, b₁. This is the fastest averaging mode, but if the signal drifts while the a₁ measurements are being made, the measurement can be less accurate.


The “adjacent” mode uses the number of **Averages** set by the System Button as above, but when measuring to satisfy a high-level macro button, it takes data from each of the parameters needed one at a time, before completing another round of measurements for the average. For example, on an S₁₁ measurement with 4 averages, the tester would measure a₁, b₁, a₁, b₁, a₁, b₁, a₁, b₁. This makes the a₁ and b₁ measurements virtually simultaneous. The “adjacent averaging” mode is slightly slower than the “std” mode, but can minimize the effects of any signal drift especially for large number of averages.

NOTE: At higher frequencies and with averages greater than 8 to 16, some improvement in accuracy and repeatability are often achieved using the adjacent averaging mode.

PANEL: MEASUREMENTS

Meas: Thru Measurement at Input Freq

MEAS

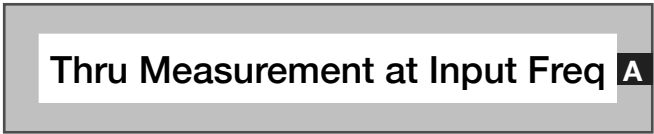

Measurement block that performs ‘a₁₁’ and ‘b₂₁’ measurement at the input frequency. The result is corrected to be absolute voltage.

NOTE: The phase is only defined within a test and not with any other readings.

MEAS




Meas: Input Wave

Measurement block that performs a power corrected wave measurement.

Meas: S11

Measurement block that performs a corrected S11 parameter calculation.

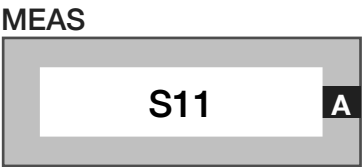

PANEL: RECEIVER STATE

If Bw

200 kHz

If Bw

Drop down list select button that sets the receiver’s analog detection bandwidth within the “IF Board, 21.4MHz” in the block diagram. The ‘5MHz’ option is the full bandwidth of the receiver’s front-end.

The ‘7KHz’ value is a bandpass filter applied before the IF signal is converted to zero IF/baseband.

The ‘200 kHz’ is a low pass filter applied after IF conversion to zero IF.

The ‘TOI’ value activates a filtering/gain/attenuator mode that selects the ‘7kHz’ IF filter and optimizes the IF and baseband gain/attenuator scheme for third order intercept measurements. In ‘TOI’ mode the **If Gain** button is limited to values of ‘8’ and ‘14’.

If Gain

20

If Gain

Set the IF gain for best dynamic range. IF gain can be increased until overflow messages appear in the message window while testing.

Meas Rate

Decimal notation input button that sets the measure rate in units of Hz. The fastest sample rate is 200 kHz.

Rms Bw

Drop down list select button that sets the post-detection bandwidth for Root Mean Squared (RMS) measurements. This button is used to optimize the settling speed of the detectors lock and measure speed. It is commonly used with the **RMS Power**, **RMS Voltage**, and **Delayed RMS Power** measurement blocks.

NOTE: The ‘Fast’ setting can be susceptible to increased measurement instability due to DUT and fixture path dependent settling times.

An RMS measurement overrides the **If Bw** button and uses a 10 MHz IF bandwidth.

NOTE: The RMS detector receive path is automatically selected when an RMS Power, RMS Voltage, or Delayed RMS Power measurement block is used.

If Bw

80000

Rms Bw

Slow

Rms Gain

High

Rms Gain

Drop down list button that sets the post-detection gain. This button is commonly used with the **RMS Power**, **RMS Voltage**, and **Delayed RMS Power** measurement blocks.

The ‘High’ setting is approximately 0dB.

The ‘Low’ setting is approximately -20dB.

NOTE: The RMS detector receive path is automatically selected when an RMS Power, RMS Voltage, or Delayed RMS Power measurement block is used.

Samples

Integer value button that sets the number of samples per measurement block.

NOTE: Maximum number of samples is 2000.


Samples

1

PANEL: RECEIVER MEASUREMENTS


Meas: Noise Power

Measurement block that performs a noise power measurement for the current path.

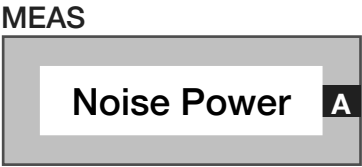


Meas: Voltage

Measurement block that performs a complex voltage measurement for the current path.

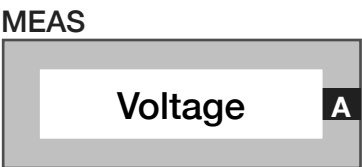


Meas: Power

Measurement block that measures error-corrected (calibrated) power for the current path. It converts voltage measurements to power and then averages the result.

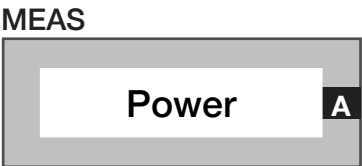

Meas: Phase Noise (watts/hz)


MEAS

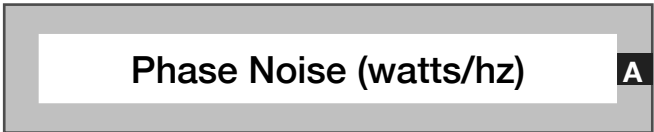

Measurement block that calculates the noise power in a 1 Hz bandwidth using the configured setup. Uses the Noise Power measurement as its base.

Meas: Voltage Vs Time


Measurement block that stores complex voltage measurements versus time as a vector.

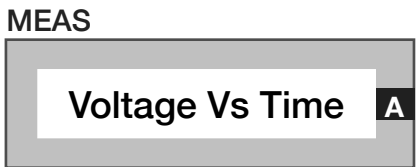

NOTE: A vector is a complex data type.


Meas: RMS Power Vs Time

Measurement block that performs a vector of RMS Power measurement vs. Time.

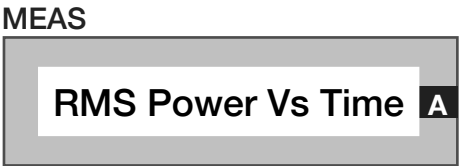


Meas: RMS Power

Measurement block that performs a RMS power measurement for current path using the RMS/Noise detector.

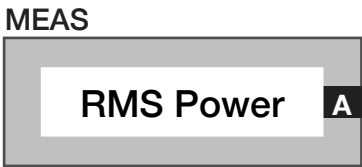

Meas: RMS Voltage


Measurement block that performs a RMS voltage measurement using hardware RMS dBm calculation.

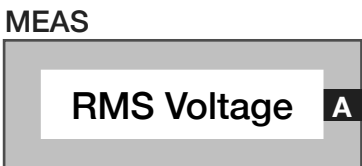

PANEL: DIGITIZER MEASUREMENTS

Trigger

Drop down list button that is used in a pre/post measure groups to activate ('on') or deactivate ('off') triggered receiver measurements. This button is commonly used with the **Delay** button in the pre/post measure group and the **Trigger Mode** button in the test panel or section default.

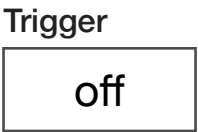


Trigger Mode

Drop down list button that configures the receiver's detector hardware for different trigger/pulse type measurements. This button is commonly used in test panels with the **Trigger** and **Delay** buttons placed in pre/post measure groups.

The 'normal' selection uses the receiver's voltage detector for triggered measurements.

The 'voltage' selection performs the same function as the 'normal' mode.

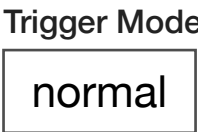

The ‘power’ selection uses the RMS detector for triggered measurements.



The ‘V vs T’ selection uses the voltage detector for triggered **Voltage vs Time** block measurements.

Delay

Decimal notation input button used within pre/post measure groups to delay the start of a triggered measurement with a user-defined duration. The value is in units of seconds with a maximum value of 0.01 seconds and a resolution of 1µs. This button is commonly used with the **Trigger** button.


Meas: Delayed RMS Power

Measurement block that performs a RMS power calculation after a the time specified in the **Delay** button.

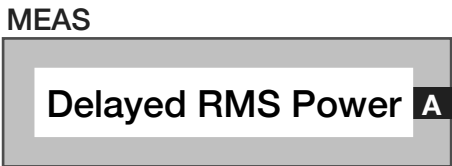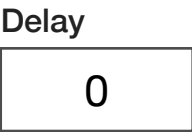


Meas: Delayed Voltage

Measurement block that performs a complex voltage calculation after the time specified in the **Delay** button.

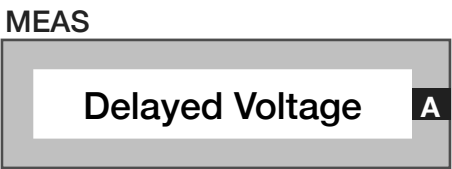

Meas: Triggered Digitizer


Measurement block that performs a complex voltage vs time calculation relative to the specified **Trigger Mode** and **Trigger** buttons in the premeasure group.

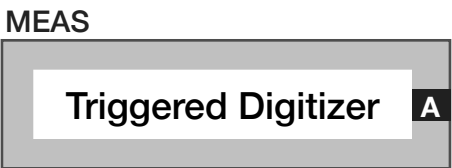

CONTROL PANELS

Real-time control of the instruments in this TIM.

CONTROL PANELS 7 RI8564 75-81GHz TEST SET

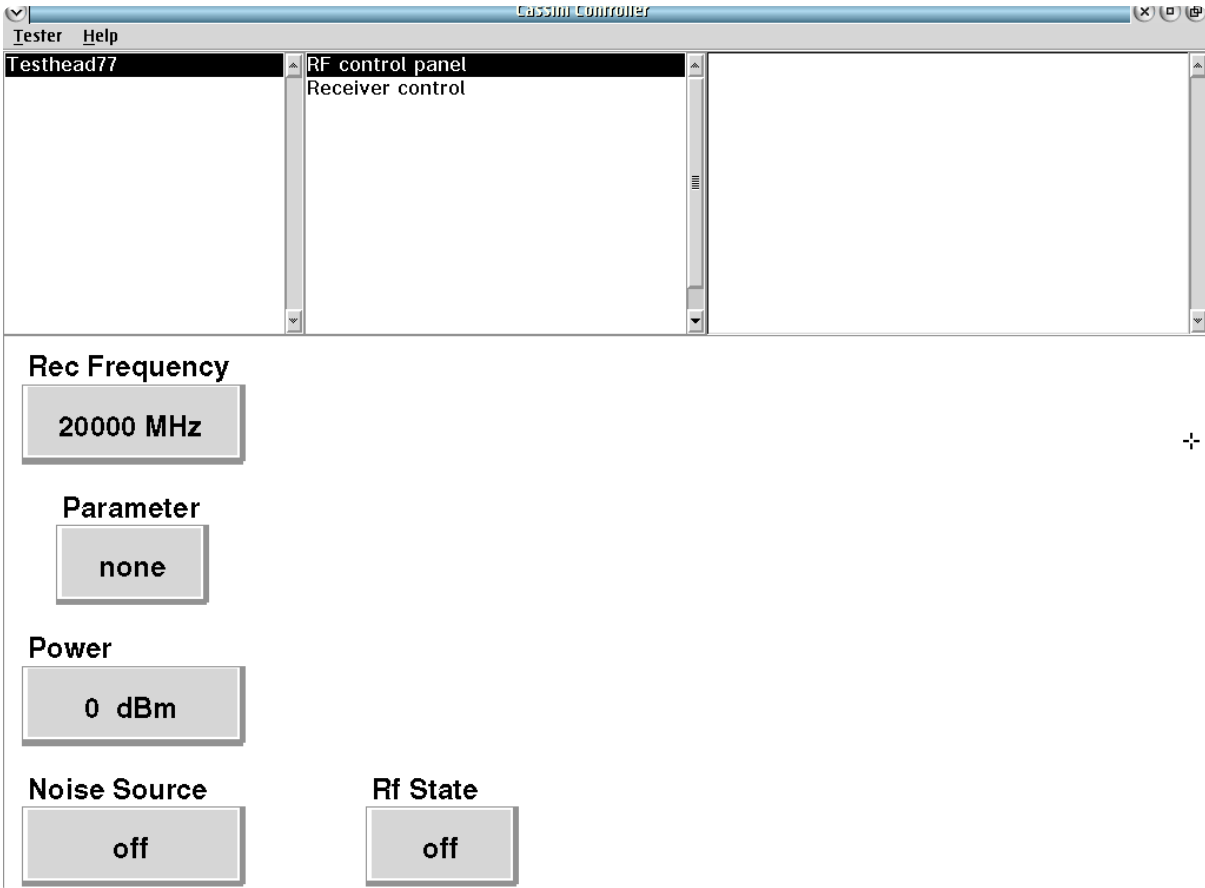

Testhead77 **RF control panel** provides real-time control of the switched instruments in this TIM.



RECEIVER CONTROL

POWER DBM, VOLTAGE DBM, NOISE DBM/HZ, RMSDBM

The above values are live and refresh when the button is LMB clicked.

RI8567: 0.01 TO 12GHz TESTSET



TOPICS

[Instruments provided by this TIM](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM


The instrument in this TIM appear as **RFMeasure1** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- RfMeasure1, RI8567x 2 port Testset+Receiver

NOTE: Multiple RI8567 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - RFMeasure1, RFMeasure2, RFMeasure3, etc). The “x” in RI8567x denotes the model revision number.


INSTRUMENT BUTTON DIAGRAM 2.7 RI8567

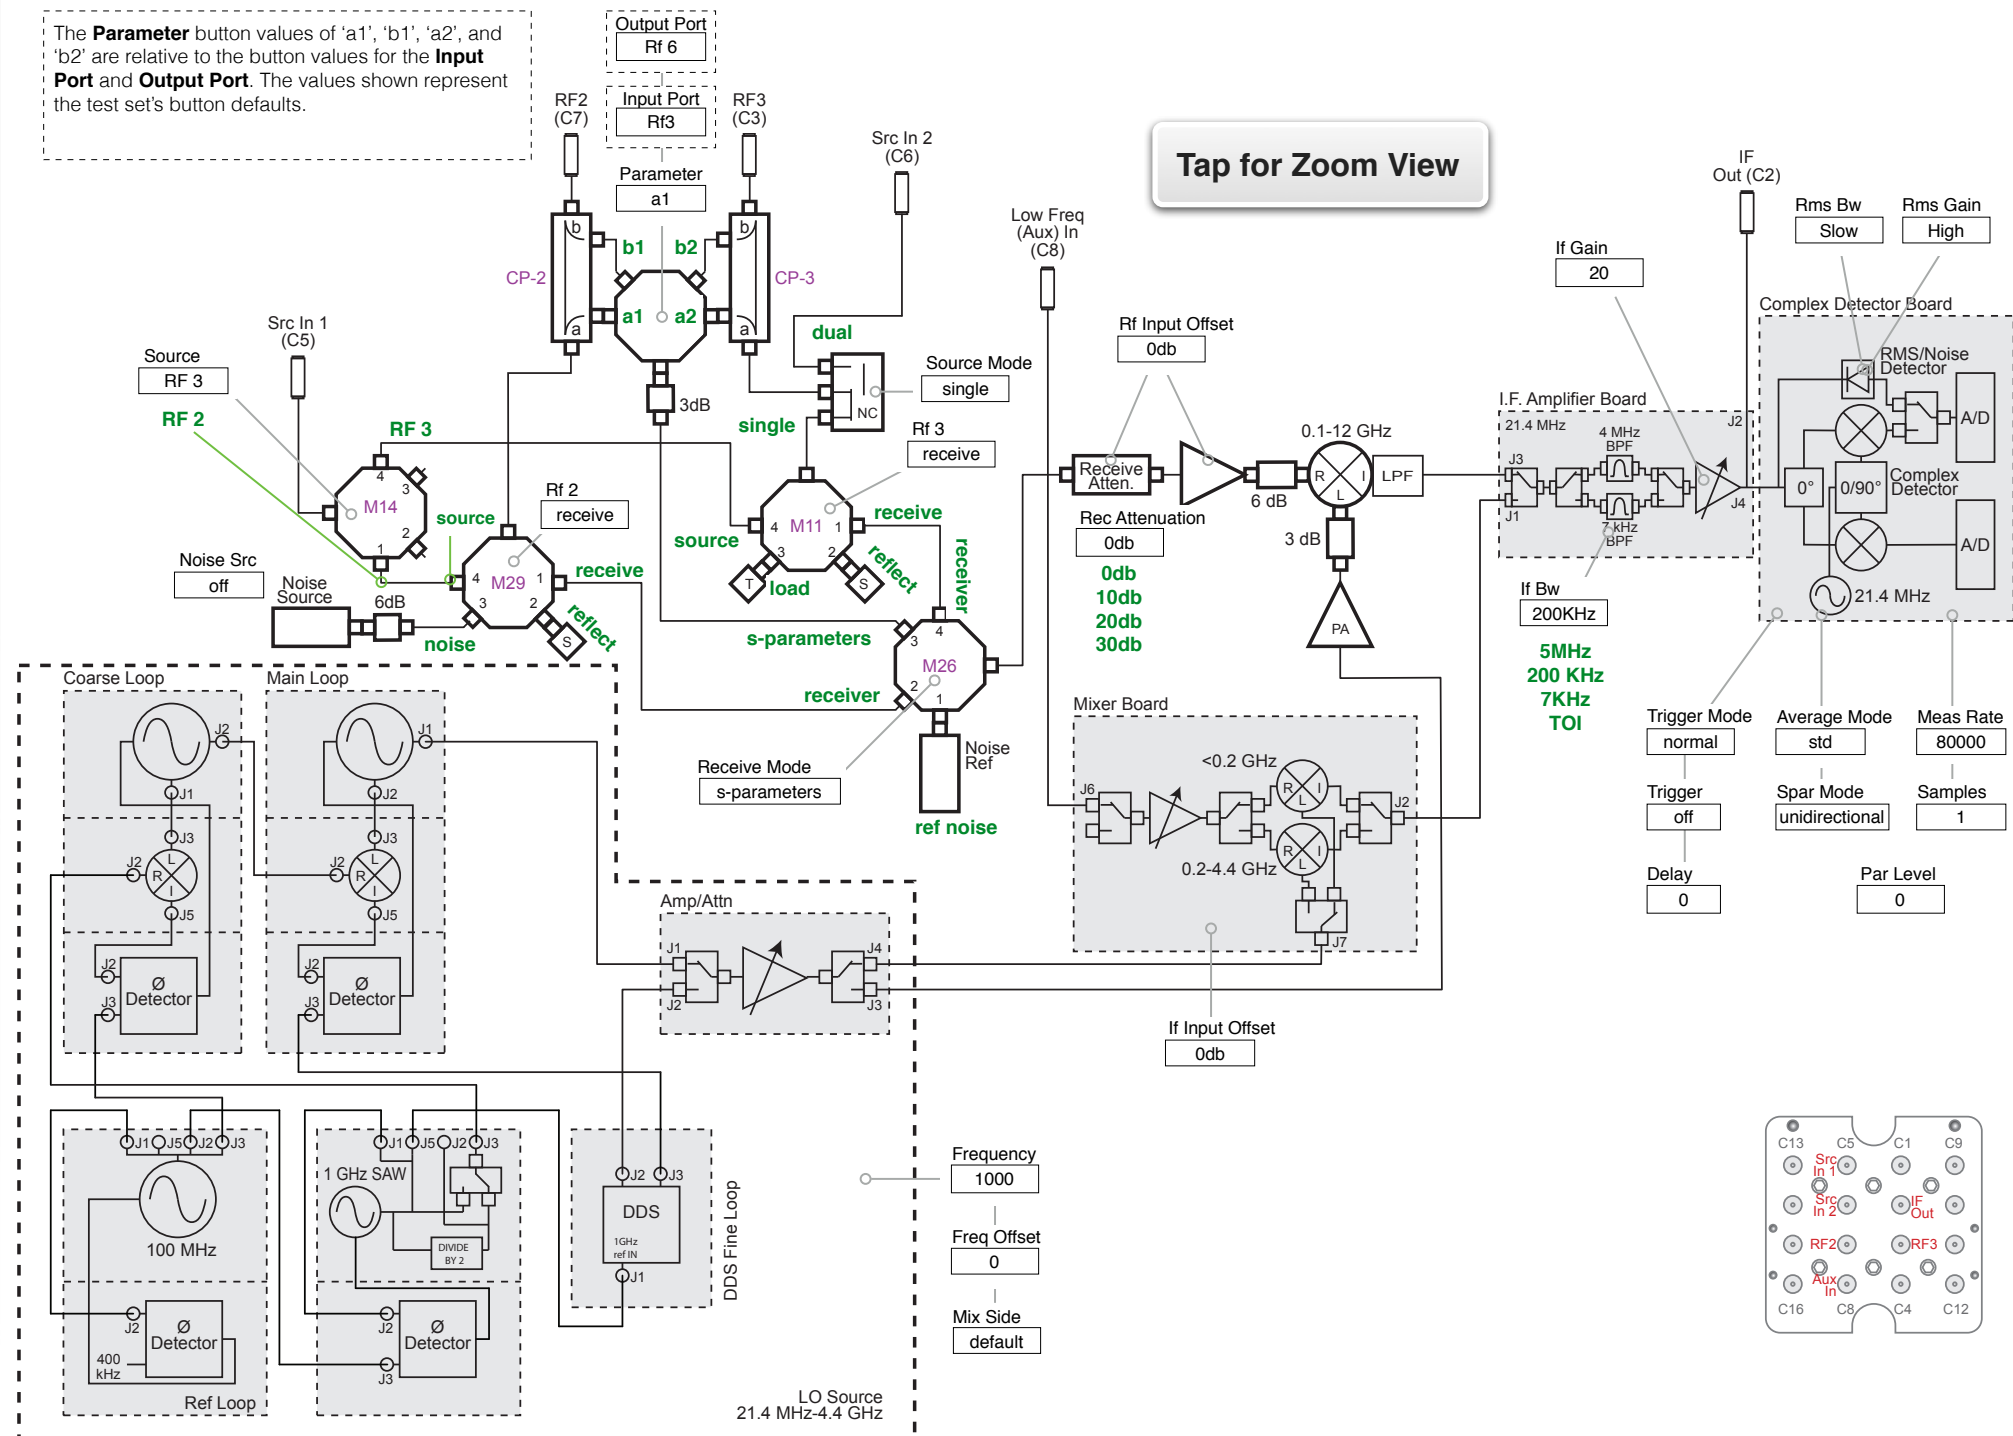

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.


EDIT PANELS 9 RI8567: 100 kHz - 12GHz TEST SET

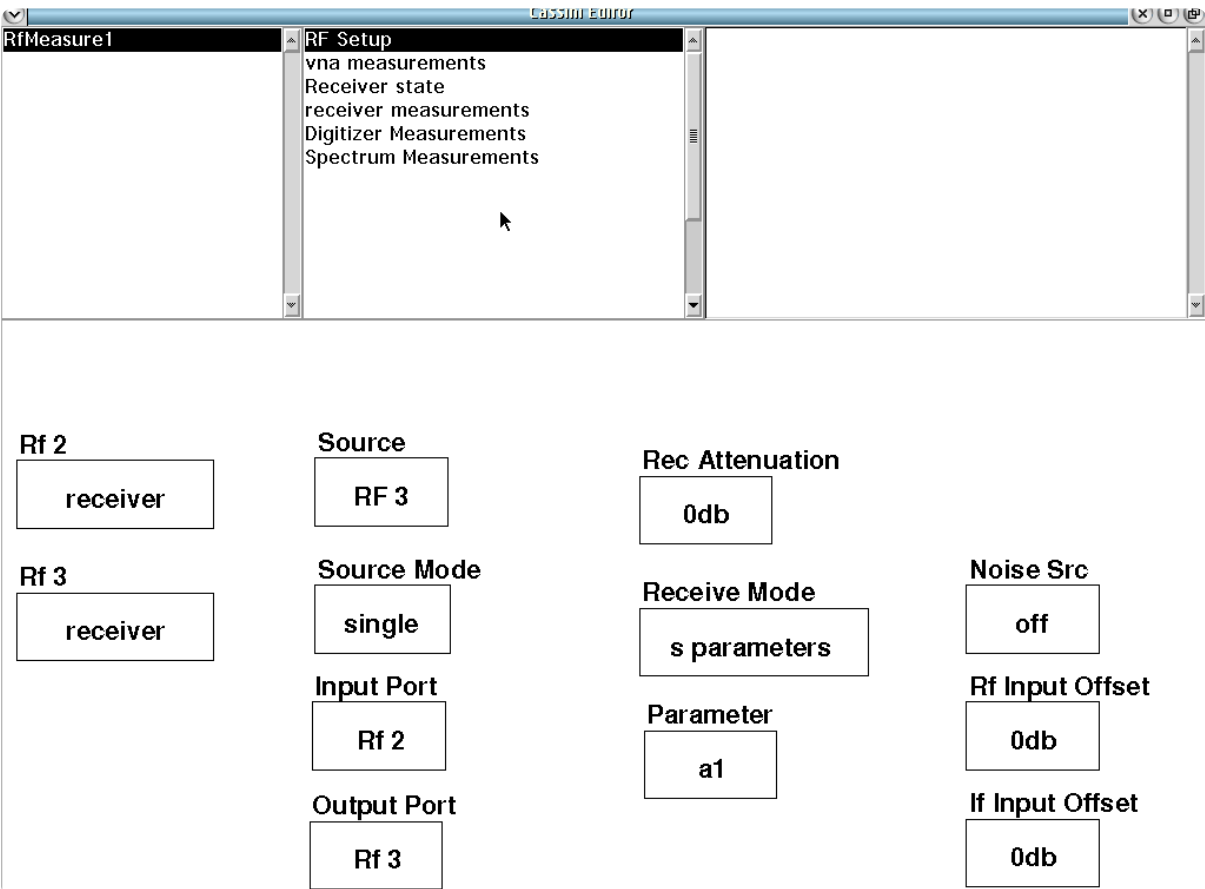

RFMeasurement# RF Setup panel provides switched resource control for instruments in this TIM.

• • • • •

PANEL: RF SETUP

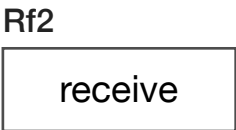

Rf 2

Drop down list button that controls the resource connections to the *RF2* (C7) coupled input/output port. The button configures the *M29* solid-state switch (reference the [Instrument Button Diagram 2.7](#) to connect RF2 to various resources).

This button in combination with the **Source** and **Receive Mode** buttons set the signal path routing through the TIM’s internal mechanical relay connections.

The ‘source’ selection connects *RF2* (C7) to the *M14* solid-state switch controlled by the **Source** button for using *RF2* (C7) as an output port driven by a signal from *Src In 1* (C5).

The ‘receive’ selection connects *RF2* (C7) to the internal solid-state switch *M26* controlled by **Input Port**, **Output Port**, and **Receive Mode** buttons for using *RF2* (C7) as an input for s-parameter or direct receiver measurements.

The ‘reflect’ selection connects *RF2* (C7) to the internal “short” termination on the *M11* solid-state switch at port position 2.

The ‘noise’ selection connects *RF2* (C7) as an output port driven by the noise source at port position 3 on the *M29* solid-state switch.

Rf 3

Drop down list button that controls the resource connections to the *RF3* (C3) coupled input/output port. The button configures the mechanical relay and solid-state switch *M11* (reference the [Instrument Button Diagram 2.7](#) to connect RF3 to various resources).


This button in combination with the **Source**, **Source Mode**, and **Receive Mode** buttons set the signal path routing through the TIM’s internal mechanical relay connections.

The ‘source’ selection connects *RF3* (C3) to the *M14* solid-state switch controlled by the **Source** button for using *RF3* (C3) as an output port driven by a signal from *Src In 1* (C5).

The ‘receive’ selection connects *RF3* (C3) to the internal solid-state switch *M26* controlled by **Input Port, Output Port, and Receive Mode buttons** for using *RF3* (C3) as an input for s-parameter or direct receiver measurements.

The ‘reflect’ selection connects *RF3* (C3) to the internal “short” termination on the *M11* solid-state switch at port position 2.

The ‘load’ selection connects *RF3* (C3) to the internal 50Ω “load” termination on the *M11* solid-state switch at port position 3.

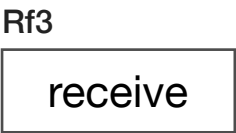


Source

Drop down list button that controls the solid-state switch *M14* (reference the [Instrument Button Diagram 2.7](#)) for routing the *Src In 1* (C5) resource to the specified port.

The ‘RF 2’ selection connects *Src In 1* (C5) to switch position 1 of *M14* for routing to *RF2* (C7).

The ‘RF 3’ selection connects *Src In 1* (C5) to switch position 4 of *M14* for routing to *RF3* (C3).

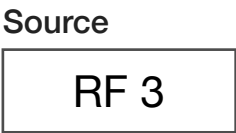


Source Mode

Drop down list button provides resource routing for *Src In 2* (C6) and *Src In 1* (C5) to *RF3* (C3) by directly controlling the mechanical relay attached to the CP-3 coupler.

The ‘single’ sets the relay in the “normally closed” position, to connect *Src In 1* (C5) to RF3 (C3). Use **Rf 3** and **Source** buttons to route signals through to RF3 (C3).

‘dual’ sets the relay in the “normally open” position, to connect *Src In 2* (C6) to RF3 (C3), bypassing the switches controlled by **Rf 3** and **Source** buttons.

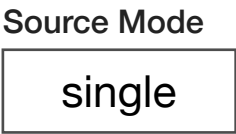

Input Port

This drop down list selection button that designates which of the RF coupled ports *RF2* (C7), *RF3* (C3) will be defined as the input port to the Device Under Test for protocol-aware s-parameter wave parameter measurements. This button activates the compiler’s expert system mode to control and orchestrate the entire internal switch network for all wave parameters measurements automatically. This programming approach allows the user to avoid having to setup the switching network for each load condition and forward/incident wave measurement, and allows the compiler to automatically compute error-corrected s11, s12, s21, and s22. The **Output Port** and **Receive Mode** buttons are used with the **Input Port** button.

Input Port

Rf 3

Output Port

This drop down list selection button that designates which of the RF coupled ports *RF2* (C7), *RF3* (C3) will be defined as the output port to the Device Under Test for protocol-aware s/wave parameter measurements. This button activates the compiler’s expert system mode to control and orchestrate the entire internal switch network for all wave parameters measurements automatically. This programming approach allows the user to avoid having to setup the switching network for each load condition and forward/incident wave

Output Port

Rf 6

measurement, and allows the compiler to automatically compute error-corrected s11, s12, s21, and s22. The **Input Port** and **Receive Mode** buttons are used with the **Output Port** button.

Rec Attenuation

This drop down list selection button configures the receive attenuator found at the common port output of the *M26* switch (reference the block diagram in the [Appendix](#)). The solid-state attenuator has calibrated attenuation steps of 0 dB, 10 dB, 20 dB, or 30 dB. This button is commonly used in s-parameter and power measurement receive measurements to prevent overdriving/saturating the downstream receiver’s RF front-end or optimizing the RF input signal power for best dynamic range with the receiver.

Rec Attenuation

0db

Receive Mode

This drop down list selection button selects which resource is routed to the internal receiver by directly setting the solid-state switch position of *M26* (reference the block diagram in the [Appendix](#)).

The ‘s-parameters’ selection connects the receiver to the coupled ports pairs *RF2/RF3* depending on the settings of the **Input Port**, **Output Port** and the **Parameter** buttons. For example, setting **Input**

Receive Mode

s-parameters

Port to ‘RF2’, **Output Port** to ‘RF3’ and **Parameter** to ‘a1’ would route the incident signal on the CP-2 coupler’s ‘a’ port to the receiver via switch *M26:Position 3*.

‘ref noise’ connects the the internal noise reference located on switch *M26: Position 1* to the receiver.

NOTE: This noise reference is used as a stable power reference strictly for the instrument’s internal self-check.

‘receiver’ connects RF2/RF3 as input ports to the receiver via *M26: Position 2* or *M26: Position 4*. This mode is used with the **Rf 2:**‘receiver’ or **Rf 3:**‘receiver’ button settings.

The ‘Aux Input’ routes the *Low Freq (Aux) In* (C8) input port to the receiver. This mode is used for measuring signals from baseband to 4.4GHz with the receiver through the auxiliary port.

Parameter

Drop down list button that designates which of the coupler ports [CP-2 (RF2), CP-3 (RF3), CP-6 (RF6), CP-7 (RF7)] will be routed to the switching network. It is typically used for routing incident/reflected wave signals to the receiver for wave/s-parameter measurements.

Parameter

a1

The ‘a1’, ‘b1’. ‘a2’, and ‘b2’ selections use the compiler’s expert system to automatically select the correct switch routing. These selections require an RF port to be set by **Input Port**, **Output Port**, and **Receive Mode:**‘s-parameters’ buttons.

NOTE:

- a1 is the incident wave to the input port of the device under test.*
- b1 is the reflected wave from the input port of the device under test.*
- a2 is the incident wave to the output port of the device under test.*
- b2 is the reflected wave from the output port of the device under test.*

Noise Src

off

Noise Src

Drop down list button that controls the state of the internal noise source standard *Noise Source 1*.

The ‘on’ selection powers the noise source, producing an RF calibrated “Hot” noise power.

The ‘Off’ selection deactivates power from the noise diode. This mode can be used for so called “cold” noise power measurements.

NOTE: The calibration factors for Noise Source 1 are frequency dependent and are selected by the compiler based on the Frequency button definition found in the System instrument of the Edit Panel.

Rf Input Offset

This drop down list select button directly controls the receive attenuator and *LNA* for the receiver. They are located between the last solid state switch *M26* and the receiver’s mixer (reference the block diagram in the [Appendix](#)). The receive attenuator and LNA allow the user to optimize incoming signal power levels typically to prevent saturation of the receiver’s RF mixers. This is useful for compensating for the gain of active device, or losses from passive components for s-parameter/receiver type measurements.

The list options ‘-30’, ‘-20’, ‘-10’, ‘0’, ‘10’, ‘20’, ‘30’ are displayed in units of dB.

NOTE: Saturation of the downstream RF mixers in the receiver TIM will cause nonlinear behavior in the form of signal harmonics at the downconverter’s output and subsequent measurement instability.

Rf Input Offset

0db

If Input Offset

This drop down list select button is a modifier of the **If Gain** button value found in the RI8587 or RI8581 Receiver TIM. It provides relative IF gain modification, i.e **If Gain**: ‘44’ and **If Input Offset**: ‘-12’ would result in an actual IF Gain in the receiver of ‘32’. This button is typically used to offset output signals from high-gain devices or losses from passive DUTs to maintain consistent signal power into the receiver.

The list options ‘-12’, ‘-6’, ‘0’, ‘6’, ‘12’, ‘18’, ‘24’) are in units of dB.

If Input Offset

0db

PANEL: VNA MEASUREMENTS

Average Mode
std

Average Mode

A drop down list button that is associated with the higher-level macro measurement buttons that sets the method of averaging used.

The “std” mode uses the number of Averages set by the System Button when measuring and completes all the averages of each of the parameters in a high-level macro button before moving to the next parameter. For example, on an S11 measurement with 4 averages, the tester would measure a₁, a₁, a₁, a₁, then b₁, b₁, b₁, b₁. This is the fastest averaging mode, but if the signal drifts while the a₁ measurements are being made, the measurement can be less accurate.

The “adjacent” mode uses the number of **Averages** set by the System Button as above, but when measuring to satisfy a high-level macro button, it takes data from each of the parameters needed one at a time, before completing another round of measurements for the average. For example, on an S₁₁ measurement with 4 averages, the tester would measure a₁, b₁, a₁, b₁, a₁, b₁, a₁, b₁. This makes the a₁ and b₁ measurements virtually simultaneous. The “adjacent averaging” mode is slightly slower than the “std” mode, but can minimize the effects of any signal drift especially for large number of averages.

NOTE: At higher frequencies and with averages greater than 8 to 16, some improvement in accuracy and repeatability are often achieved using the adjacent averaging mode.

Spar Mode
unidirectional

Spar Mode

This list select button defines the calculation mode for two-port, vector error-corrected scattering parameters. The mode selection affects the compiler’s decisions for load and source routing schemes in the TIM and the subsequent calculation methods for s/wave parameter measurements.

The ‘unidirectional’ mode computes s-parameters by only applying the source to the input of the DUT and using a bi-state, load pull condition on the output port to compute the a₁, b₁, and b₂ wave parameters. This mode infers the a₂ wave parameter and thus S₂₂, and is faster than the bidirectional mode. Unidirectional mode is optimal for unilateral active devices (essentially zero reverse transmission coefficient, i.e. S₁₂=0) such as power amplifiers.


The ‘bidirectional’ mode computes s-parameters using the traditional switched source methodology for measuring all eight transmission parameters and then computing scattering parameters. This selection executes all four source/load conditions on the DUT, providing the most accurate s/wave parameters possible. The bidirectional mode is optimal for passive, low-gain, or low-loss devices.

This button is commonly used with the **Input Port**, **Output Port**, **Parameter**, **Receive Mode**: ‘s-parameter’ and corresponding **Rf 2** and **Rf 3** button designations.

Meas: Wave Param at Input Freq


Measurement block performs a two-port, error-corrected wave parameter measurement resulting in all 8 transmission parameters: a_{11} , a_{12} , a_{21} , a_{22} , b_{11} , b_{12} , b_{21} , b_{22} for a given device input frequency. It uses the bi-state load pull method with the result in absolute voltage. The receiver’s tuned frequency for this button is defined by the **Freq Reference**, **Input Freq Offset**, and/or **Input Freq Scale** buttons found in the System instrument panel. This block is typically used for user-custom s/wave parameter-like calculations.

NOTE: The frequency control button set is typically used for measuring frequency converting devices.

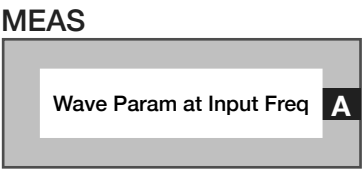

Meas: Wave Param at Output Freq

Measurement block performs a two-port, error-corrected wave parameter measurement resulting in all 8 transmission parameters:

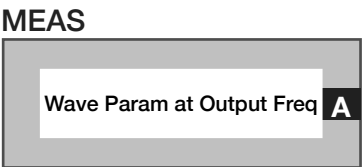


a_{11} , a_{12} , a_{21} , a_{22} , b_{11} , b_{12} , b_{21} , b_{22} for a given device output frequency. It uses the bi-state load pull method with the result in absolute voltage. The receiver’s tuned frequency for this button is defined by the **Freq Reference**, **Output Freq Offset**, and/or **Out Freq Scale** buttons found in the System instrument panel. This block is typically used for user-custom s/wave parameter-like calculations.

NOTE: The frequency control button set is typically used for measuring frequency converting devices.


Meas: Wave Param at Receive Freq

Measurement block performs a two-port, error-corrected wave parameter measurement resulting in all 8 transmission parameters: a_{11} , a_{12} , a_{21} , a_{22} , b_{11} , b_{12} , b_{21} , b_{22} for a given frequency. It uses the bi-state load pull method with the result in absolute voltage. The receiver’s tuned frequency for this button is defined by the **Frequency**, and/or **Freq Offset** buttons found in the Receiver’s instrument panel. This block is typically used for user-custom s/wave parameter-like calculations.

NOTE: The phase is only defined within a set and not with any other readings.

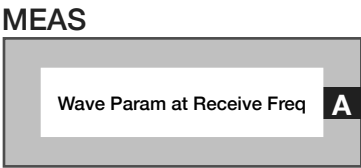


Meas: Input power at Input Freq

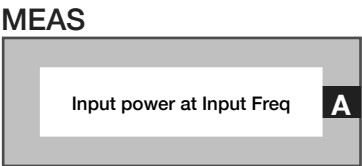

Measurement block performs an error-corrected a_{11} (forward/incident wave at input with output terminated) measurement with the receiver set to measure at the frequency defined by the **Freq Reference**, **Input Freq Offset**, and/or **Input Freq Scale** buttons found in the System instrument panel. The resulting data is corrected absolute power, with default units of Watts

NOTE: Units can be changed to dBm using the Convert button found in System > General Calculation panel.

Meas: Thru Measurement at Input Freq

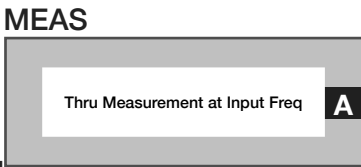

Performs an error-corrected a_{11} (forward/incident wave at input with output terminated) and b_{21} (wave at terminated output with source at input) measurement with the receiver frequency defined by defined by the **Freq Reference**, **Input Freq Offset**, and/or **Input Freq Scale** buttons found in the System instrument panel. The resulting data is corrected absolute power, with default units of Watts.

NOTE: The phase is only defined within a set and not with any other readings.

PANEL: RECEIVER STATE

Frequency

Decimal notation input button that sets the tuned frequency of the receiver in MHz. This frequency value is set by the system reference button when using a virtual instrument such as: VNA, noise figure, or other multi-TIM measurement.

NOTE: This button is only used for measurements defined by the receiver instrument such as a power or vector voltage measurement.

Freq Offset

Decimal notation input button that sets the receiver output offset frequency in MHz. Typical offset range is ± 5 MHz.

NOTE: A maximum offset range of ± 10 MHz is possible within certain frequency ranges. Consult the message window during compile to ensure offset compliance for a given center frequency.

Frequency

1000

Freq Offset

0

Mix Side

default

Mix Side

Drop down list select button that selects the ‘High’(upper) or ‘Low’(lower) sideband of the down converted signal image to be digitized by the receiver. ‘Default’ allows the compiler to select the optimal value.

NOTE: This button should only be used if the device has unexpected or undesirable spectral content in upper or lower sideband which interfere with the measurement.

Samples

Decimal notation input button that sets the total number of measurement samples.

Samples

1

If Bw

Drop down list select button that sets the receiver’s analog detection bandwidth within the “IF Board, 21.4MHz” in the block diagram. The ‘5MHz’ option is the full bandwidth of the receiver’s front-end.

The ‘7KHz’ value is a bandpass filter applied before the IF signal is converted to zero IF/baseband.

The ‘200 kHz’ is a low pass filter applied after IF conversion to zero IF.

The ‘TOI’ value activates a filtering/gain/attenuator mode that selects the ‘7kHz’ IF filter and optimizes the IF and baseband gain/attenuator scheme for third order intercept measurements. In ‘TOI’ mode the **If Gain** button is limited to values of ‘8’ and ‘14’.

If Gain

Drop down list select button that sets the gain of an amplifier in units of dB within the “IF Board, 21.4MHz” shown in the block diagram. This value should be optimized for best dynamic range. The selection options of ‘8’, ‘14’, ‘20’, ‘26’, ‘32’, ‘38’, ‘44’, ‘50’, ‘56’, ‘62’, and ‘68’ are in units of dB.

If Bw

200 kHz

If Gain

20

NOTE: Optimal settings are achieved by increasing the value until an overflow messages appears in the message window during test compile or run and then selecting the value below the setting that causes an overflow warnings.

Meas Rate

Decimal notation input button that sets the sample rate of the receiver’s digitizer in units of Hz. The maximum sample rate is 200 kHz.

Meas Rate

80000

Rms Bw

Drop down list select button that sets the post-detection bandwidth when the **If BW** button is set to ‘RMS’. This button is used to optimize the settling speed of the detectors lock and measure speed.

Rms Bw

slow

NOTE: The ‘Fast’ option setting can be susceptible to increased measurement instability due to DUT and fixture path dependent settling times.

Rms Gain


Drop down list button that sets the post-detection gain. ‘Low’ is approximately -20dB.

Rms Gain



PANEL: RECEIVER MEASUREMENTS

MEAS

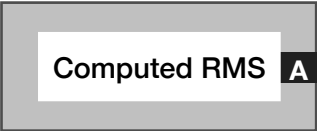

Meas: Computed RMS

Measurement block computes an RF signals RMS power using the complex voltage detector in the receiver.

NOTE: The Average button found in the System instrument is commonly used with this measurement block.

MEAS




Meas: CCDF

This measure block computes the Complex Cumulative Distribution Function (CCDF). Measure the CCDF at the given Par Level measureRate and samples. Result is ratio of samples above the PAR level to total samples


Meas: PAR 0.01%

Measure and compute the power at a PAR of 0.01%. Par Level is set to peak power expected. Use averages to determine average power and samples for how many points to use for peak

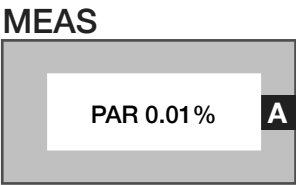

Meas: Voltage

Measures an RF signals complex voltage amplitude for the selected port. The input signal is mixed with the receiver’s orthogonal tuning signals, providing input signal phase and amplitude represented as a complex voltage value or voltage vector.

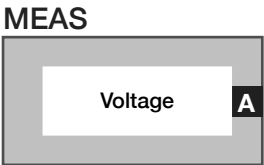


NOTE: The Average button found in the System instrument is commonly used with this measurement block.

Meas: RMS Power


Measurement block computes the RMS power for the selected port using the RMS/Noise detector. The **Rf 2:**‘receive’ and/or **Rf 3:**‘receive’ buttons settings are used to select the measurement port for this block.

NOTE: The Average button found in the System instrument is commonly used with this measurement block.

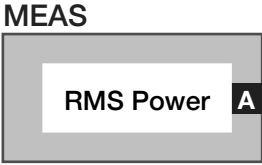


Meas: Voltage vs Time

Measures an RF signal complex voltage amplitude/voltage vector and records the value with it’s corresponding measurement time.

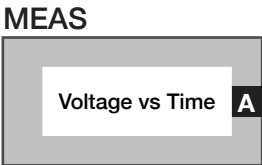


Meas: RMS Power vs Time

Measures RMS power for the selected port using the dedicated RMS/ Noise detector path and records the corresponding measurement time.

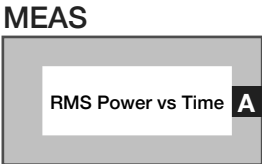


Meas: Phase Noise (watts/hz)

Measure the noise power in units of Watts/Hz in a 1 Hz bandwidth with the user-defined setup. Uses the Noise Power measurement as its base.

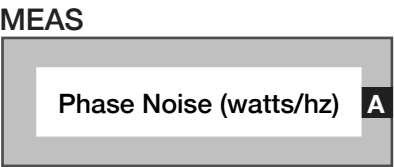


Meas: Power

Measures the corrected signal power for the selected port and path. The block converts complex voltage to a scalar power value.

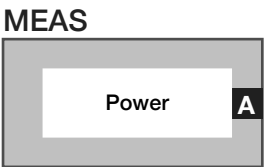


Meas: Noise Power

Measurement block measures noise power for a selected port using the dedicated noise detector in the receiver's baseband subsystem.

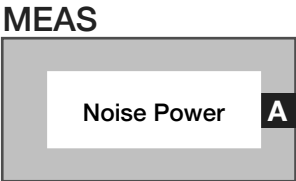

Par Level

The power level in dBm for PAR or CCDF measurements. For PAR set to maximum expected peak

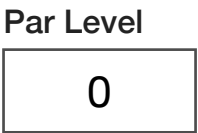

PANEL: DIGITIZER MEASUREMENTS

Trigger



Drop down list button that is used in a pre/post measure groups to activate ('on') or deactivate ('off') triggered receiver measurements. This button is commonly used with the **Delay** button in the pre/post measure group and the **Trigger Mode** button in the test panel or section default.

Trigger Mode

Drop down list button that configures the receiver's detector hardware for different trigger/pulse type measurements. This button is commonly used in test panels with the **Trigger** and **Delay** buttons placed in pre/post measure groups.

The 'normal' selection uses the receiver's voltage detector for triggered measurements.

The 'voltage' selection performs the same function as the 'normal' mode.

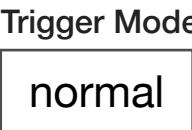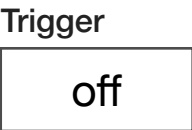


The 'power' selection uses the RMS detector for triggered measurements.

The 'V vs T' selection uses the voltage detector for triggered **Voltage vs Time** block measurements.


Delay

Decimal notation input button used within pre/post measure groups to delay the start of a triggered measurement with a user-defined duration. The value is in units of seconds with a maximum value of 0.01 seconds and a resolution of 1µs. This button is commonly used with the **Trigger** button.

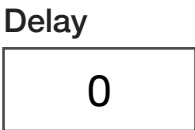


Meas: Triggered Complex V

Measurement block that calculates an RF signals complex voltage vector vs. time relative to a specified trigger in the premeasure. This measurement block is commonly used with the **Trigger**, **Trigger Mode**, and/or **Delay** buttons.

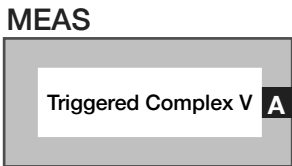

Meas: Triggered Power

Measurement block computes RF signal power vs. time from measured complex voltage relative to a specified trigger in the premeasure. This measurement block is commonly used with the **Trigger**, **Trigger Mode**, and/or **Delay** buttons.

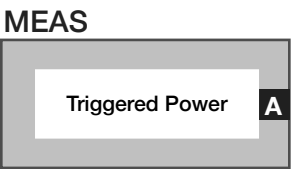

PANEL: SPECTRUM MEASUREMENTS

If Shift

Decimal notation input button that sets the frequency offset for the FPGA-based mixer within the digital signal processor subsystem. Values are in units of Hz with a range of 0 to 100 kHz.

If Shift

0

Det Bw


Drop down list button that configures the bandwidth of a post-measure, low-pass digital filter in the receive detector’s FPGA-based DSP chain. These provide selectable, narrow-band filters with typically 60 dB of stop band attenuation. The ‘bypass’ selection is the default, applying no digital filter. The other options are 3 MHz, 2 MHz, 1 MHz, 500 kHz, 200 kHz, 100 kHz, 50 kHz, 25k Hz, 10k Hz, 5k Hz, 2.5 kHz, and 1 kHz bandwidth filters.

Det Bw

bypass


Meas: Spectrum Power

Measurement block computes the spectral power in units of Watts/Hz using the receiver’s FPGA-based, real-time DSP.

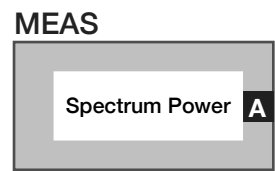

Meas: Spectrum Voltage


Measurement block computes spectral voltage vectors (complex voltage) versus time using the receiver’s FPGA-based, real-time DSP.

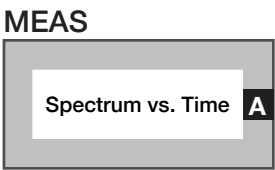

CONTROL PANELS

Real-time control of the instruments in this TIM.

CONTROL PANELS 8 RI8567: 100 kHz - 12GHz TEST SET

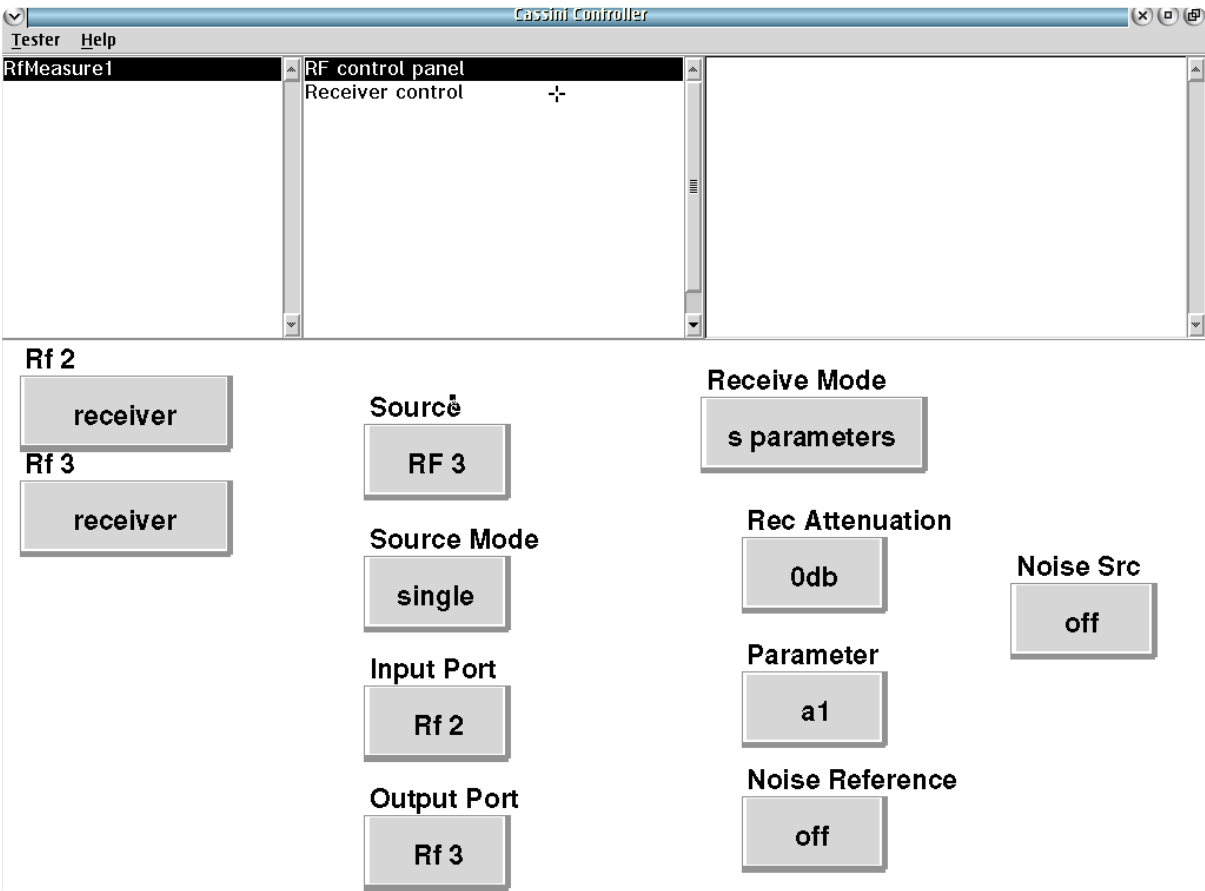


RfMeasure# **Rf control panel** controls the states of the receiver in real time.

RECEIVER CONTROL PANEL

POWER DBM, VOLTAGE DBM, NOISE DBM/HZ, RMS DBM, Path Gain

All above measurements are refreshed in real-time when clicked.

RI8572: WAVEFORM GENERATOR & MEASURE

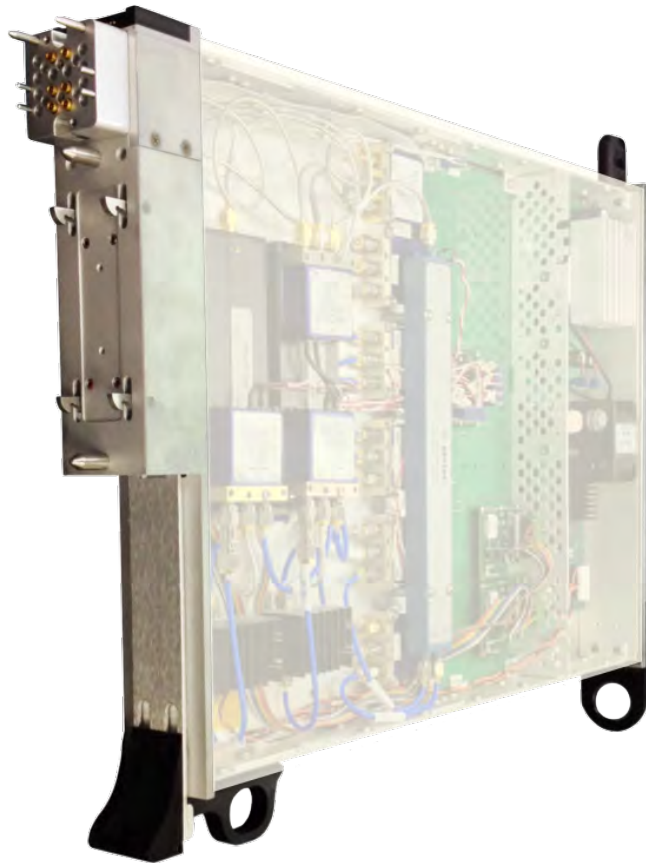

TOPICS

[Instruments provided by this TIM](#)

[Configuration Panel](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Oscilloscope**, **SineGen**, and **Waveform** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Oscilloscope, RI74105x Hi Spd scope/counter/BER
- SineGen, Ri7403x Dual Sine Source
- Waveform, Ri74211x Complex Waveform


NOTE: Multiple RI8594 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Oscilloscope,SineGen,Waveform; Oscilloscope2,SineGen2,Waveform2; Oscilloscope2,SineGen2,Waveform2; etc).

The “x” in RI8594x denotes the model revision number.

CONFIGURE PANEL

Configure the Instruments in this TIM.

CONFIGURATION PANELS 4 RI8572: WAVEFORM GENERATOR & MEASURE

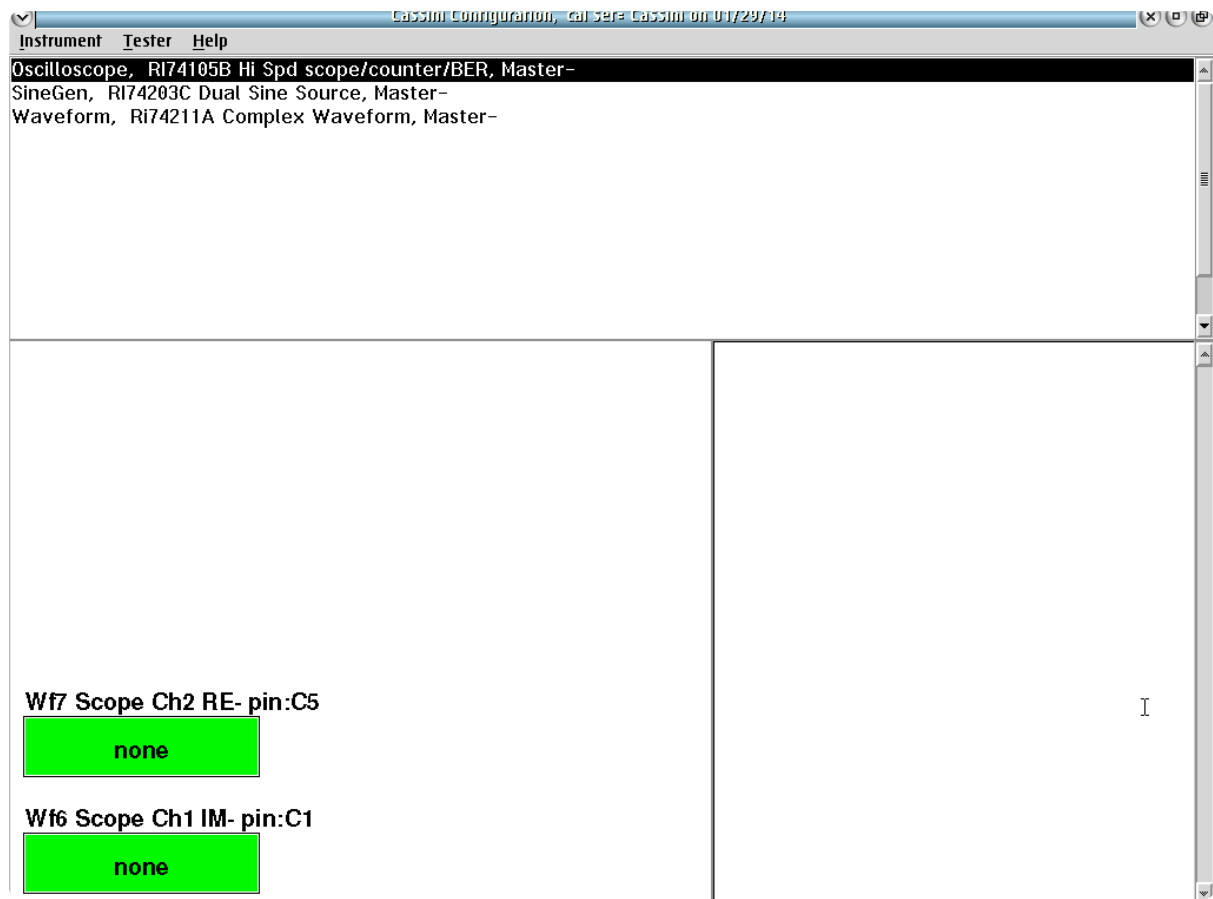

Shows the **Oscilloscope** connections.




WAVEFORM

Edit Patterns

Select from a list of waveform/patterns imported from Guru to be loaded into the waveform instrument's on-board memory.


INSTRUMENT BUTTON DIAGRAM 2.8

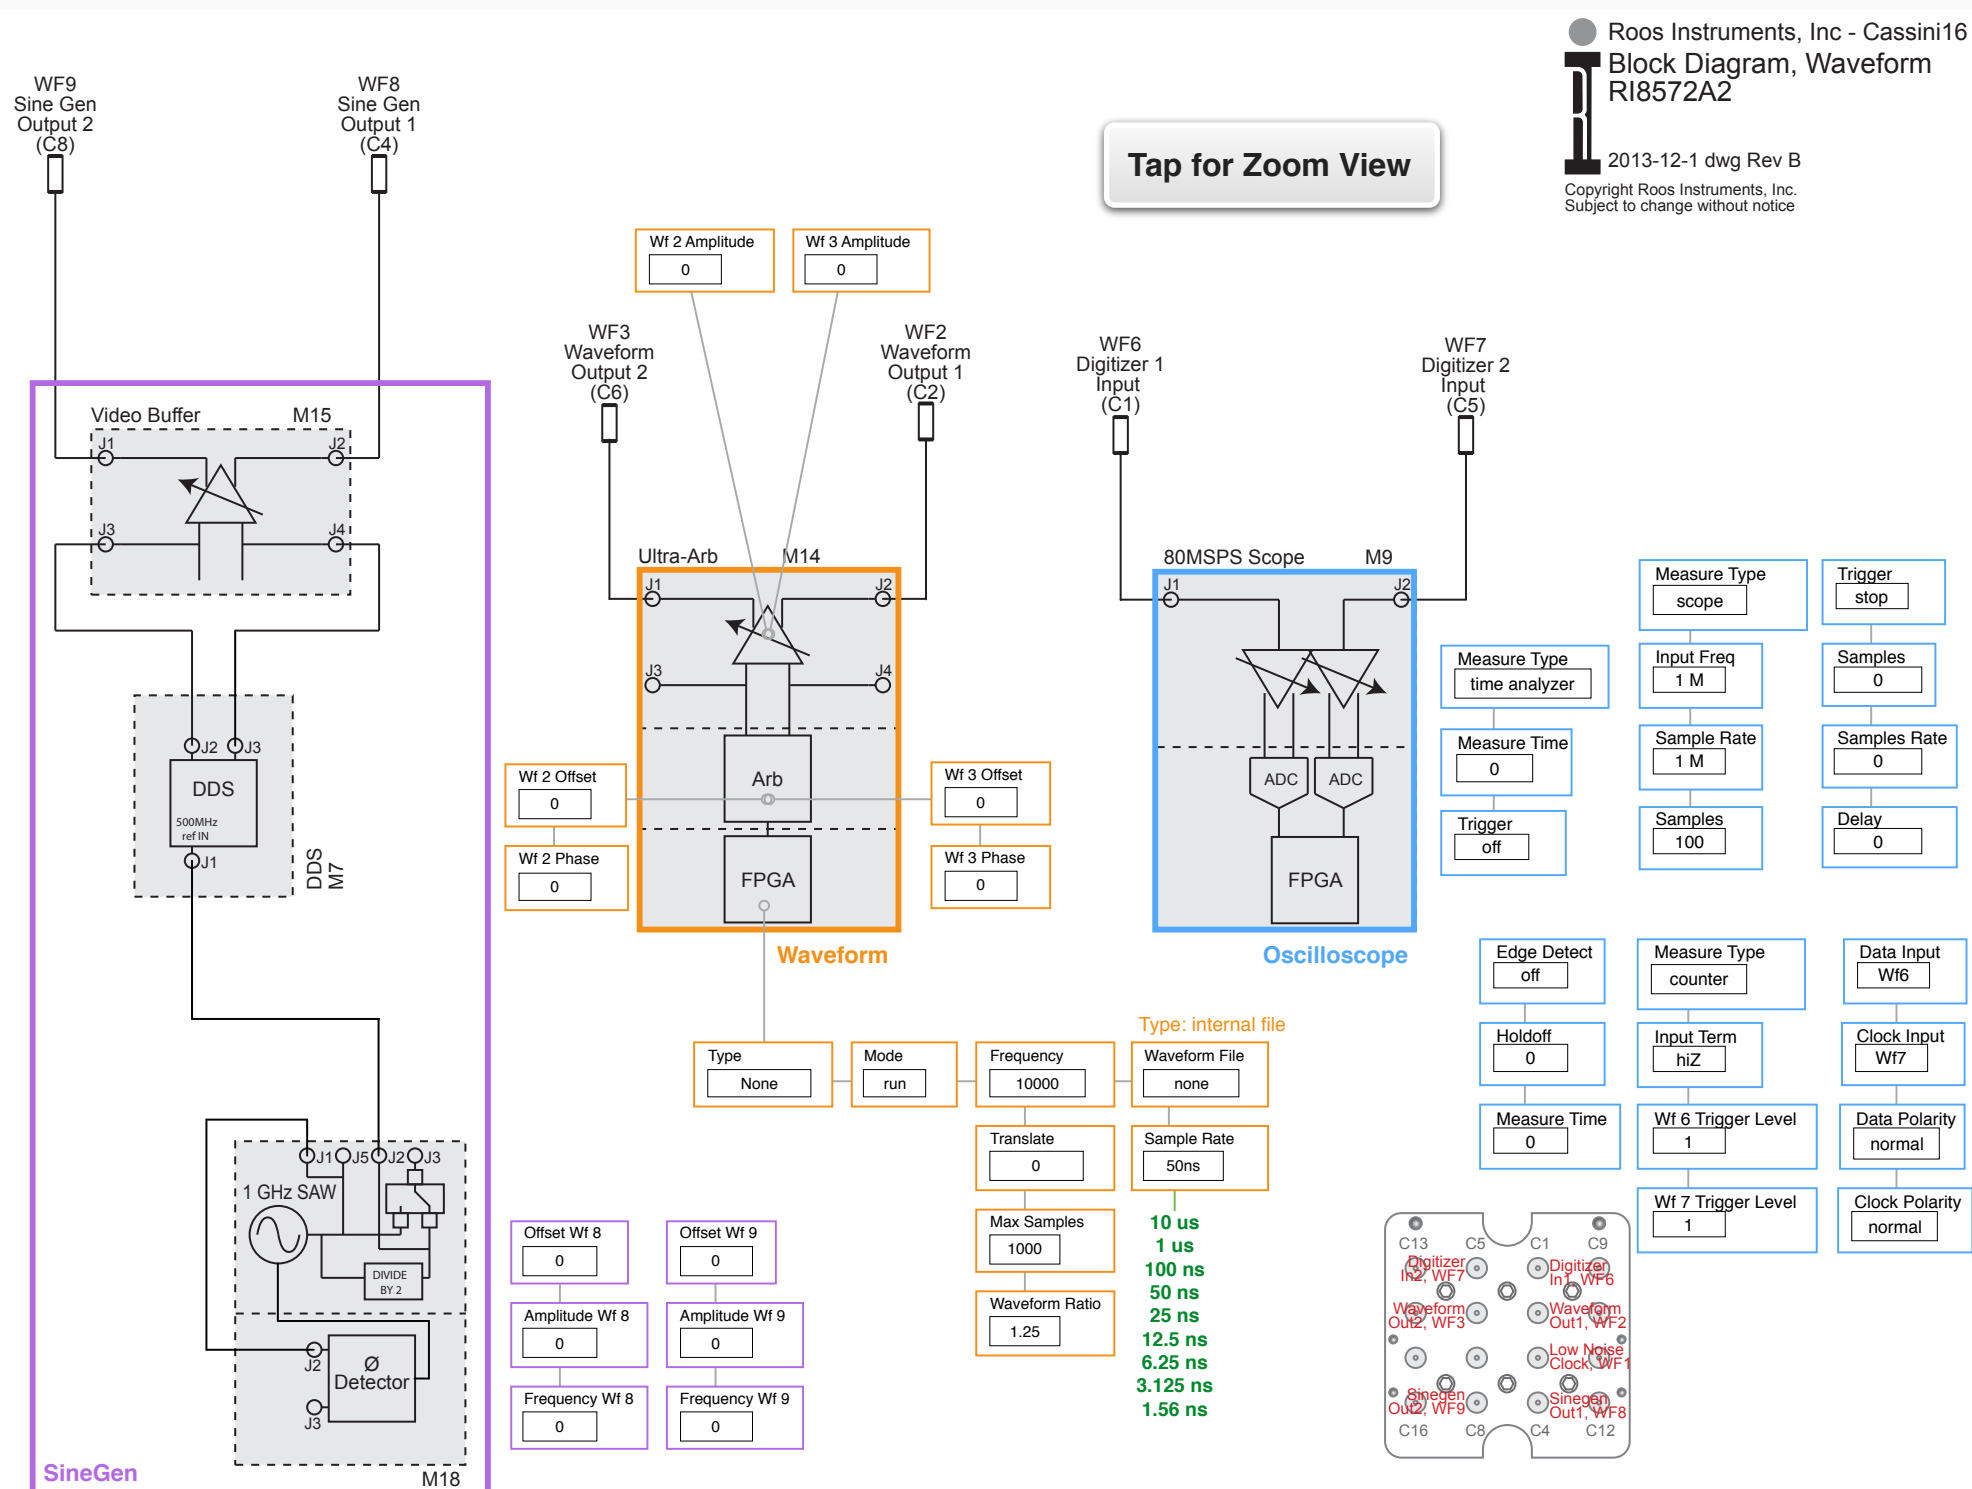

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 10 RI8572: WAVEFORM GENERATOR & MEASURE

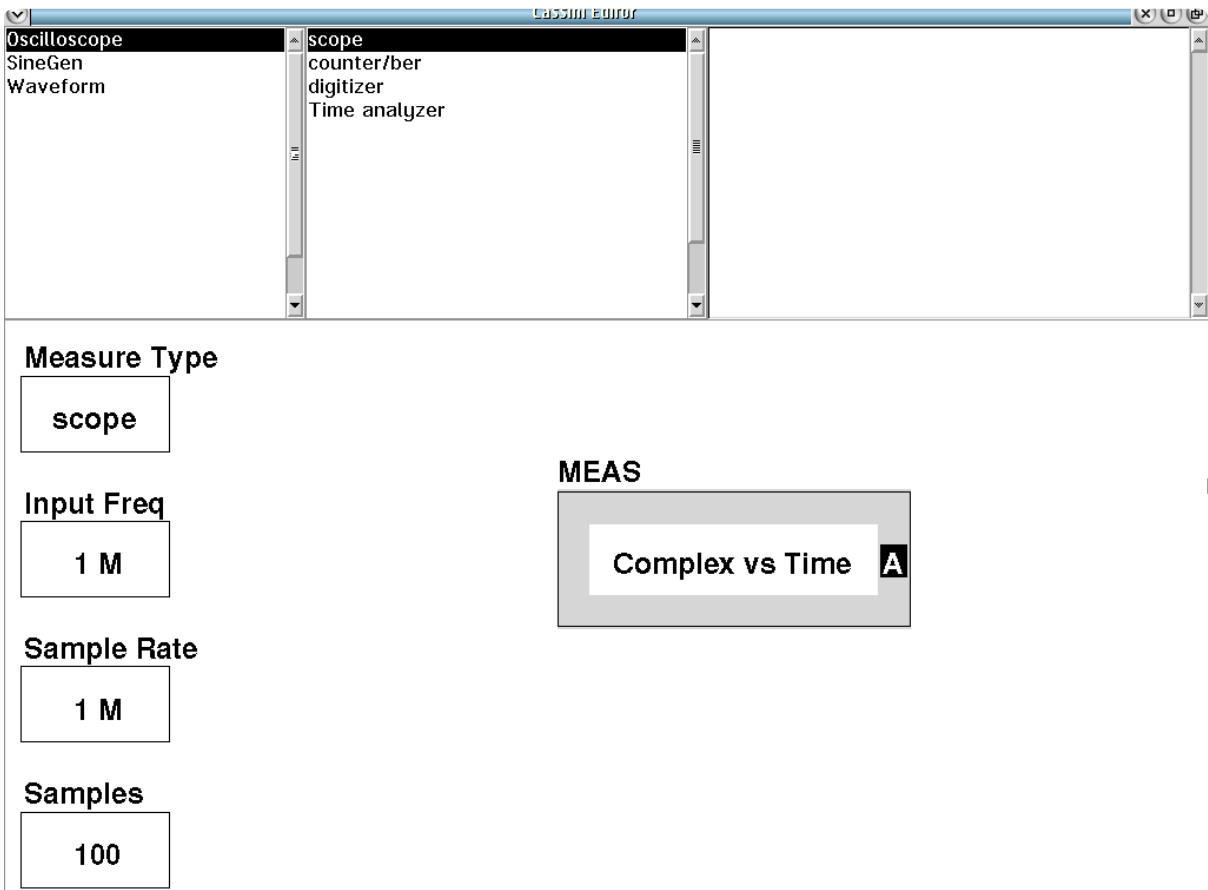

Oscilloscope **scope** panel provides basic state and measurement buttons.



OSCILLOSCOPE

PANEL: SCOPE

Measure Type

counter

Measure Type

Drop down list button that sets the operation type for the oscilloscope instrument. This button is found in the ‘scope’, ‘counter/ber’, and ‘time analyzer’ subsystem panes of the oscilloscope. Buttons and blocks found in these subsystem panes are settings/parameters used by the corresponding function choice of this button. The description of each function is as follows:

The ‘scope’ setting is an oscilloscope function optimized for signal capture of sinusoidal waveforms from 1 Hz to 80 MHz.

The ‘digitizer’ setting is a digitizing oscilloscope function for arbitrary signals from 1 Hz to 80 MHz.

The ‘counter’ setting performs frequency counting operation of sinusoidal, square-wave, and pulse signals. This function requires a voltage reference or trigger and several periods of the input signal to accurately compute signal frequency.

The ‘time analyzer’ setting performs timing computations of signal events using a trigger and a user-defined measurement timing window.

The ‘ber’ setting performs a bit error rate calculation. A predefined, pseudo-random gray code bit stream is emitted from the user-selected port. The digitizer captures the return signal after a user-specified wait or trigger time and then calculates the bit error rate.

The ‘reciprocal’ setting performs a signal frequency count using a reciprocal count method optimized for faster computation of signals below 1 MHz. The reciprocal counter uses the input signal as a trigger and counts the internal clock edges across one period of the input signal.

Input Freq

Decimal notation input button that sets the frequency of the expected input signal in units of Hz. The expected input frequency value enables accurate signal reconstruction of input signals with frequency values greater than the Nyquist sample rate of the oscilloscope.

NOTE: This button enables a Cassini system compiler directive to compensate for signal path calibrations for a known frequency value.

Input Freq

1 M

Samples

Decimal notation input button that sets the total number of samples in the oscilloscope capture window.

NOTE: Maximum number of samples is 2000.

Samples

100


Sample Rate

Decimal notation input button that sets the oscilloscope’s sample rate in units of Hz.

NOTE: Maximum sample rate is 80MS/s

Sample Rate

1 M

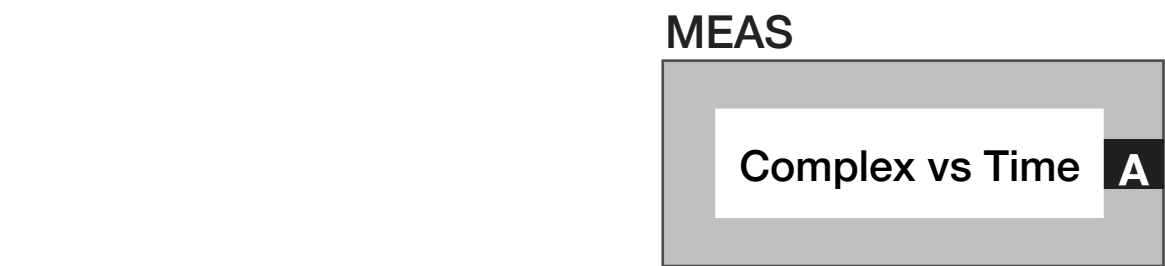

Meas: Complex vs Time

Measurement block that computes an RiComplex Voltage vs time result. Using port WF7 as the real (in-phase) signal component and the WF6 port as the imaginary (quadrature) signal component, the block computes a voltage vector representation of an I/Q baseband signal by digitizing each channel independently and then time-interleaving the channels.

PANEL: COUNTER/BER

Measure Time

0

Measure Time

Decimal notation input button that sets the measurement window for counter measurement gating in units of seconds. Maximum time limit is 2000***Sample Rate**.

Edge Detect

off

Edge Detect

Drop down list button that sets the edge detector mode. Option ‘off’ deactivates edge detection. The ‘rising’ option sets the detector to generate edges, trigger, or count on rising edge event types in the data input. The ‘both’ option sets the detector to generate edges, trigger, or count on both rising and falling edge event types in the data input.

NOTE: This button must be set to either ‘rising’ or ‘both’ for event counting.

Data Polarity

Drop down list button that sets the data input polarity for counter or bit error rate measurements. The ‘normal’ option is positive or rising edge count/trigger. The ‘inverted’ option is falling or negative edge count/trigger.

Data Input

Drop down list select button that selects the instrument resource port for measurements. The option ‘Wf6’ sets WF6, located at port position C1 on the instrument head, as input to the digitizer. The option ‘Wf7’ sets WF7, located at port position C5 on the instrument head, as input to the digitizer. The option ‘off’ internally disconnects all input ports or paths from the digitizer instrument.

Clock Polarity

Drop down list button that sets the polarity of the clock. The ‘normal’ option is positive or rising edge count/trigger. The ‘inverted’ option is falling or negative edge count/trigger.

Data Polarity

normal

Data Input

Wf6

Clock Polarity

normal

Clock Input

Drop down list select button selects the clock input for bitt error rate measurements. The ‘Wf6’ sets the signal available at the WF6 port located at position C5 on the instrument head as the clock input. The ‘Wf7’ sets the signal available at the WF7 port located at position C1 on the instrument head as the clock input. The ‘off’ option uses the instruments internal clock.

Wf 7 Trigger Level

Decimal notation input button that sets the trigger comparator level voltage for WF7. Valid range of inputs is ±0.4V

Wf 6 Trigger Level

Decimal notation input button that sets the trigger comparator level voltage for WF6. Valid range of inputs is ±0.4V

Clock Input

off

Wf7 Trigger Level

1

Wf6 Trigger Level

1

Input Term

Drop down list button sets the input termination value to ‘hiZ’ representing a high impedance value of approximately 10kΩ or ‘50ohm’ for 50Ω.

Input Term

hiZ

Holdoff

Decimal notation input button that sets the time in seconds that the edge/gate is disabled after sensing a trigger event. The range of values is 150ns to 25μs.

Holdoff

0

NOTE: Typically set to the rise time of the edge.

Meas: Frequency

Measurement block that computes signal frequency of the selected input port set by **Data Input** button. The **Measure Time** button sets the capture window time.

MEAS

FrequencyA

NOTE: A minimum of two edge/rise or fall time events is required for accurate frequency count.

Meas: Period

Measurement block that computes the time between signal edges of the selected input port set by **Data Input** button. The block uses the **Measure Time** button to set the capture window time.

NOTE: A minimum of two edge/rise or fall time events is required for accurate period measurement.

MEAS

PeriodA

Meas: Bit Error Rate

Measurement block computes the ratio of errors to bits (BER) in a bitstream of the selected input port set by **Data Input** button. The **Measure Time** button sets the capture window time.

MEAS

Bit Error RateA

PANEL: DIGITIZER

Delay

Decimal notation input button that sets the delay in units of seconds with a resolution of 1µs before a digitizer measurement or to offset the start of a record. Maximum delay value is 2000***Sample Rate**.

Delay

0

Sample Rate

Decimal notation input button that sets the digitizer sample rate in Hz. The valid sample rate range is 1 Hz to 80 MHz.

Sample Rate

0

Trigger

Drop down list button that is used within a pre-measure group to set the start and stop times of signal captures or bit error rate measurements. The ‘start’ option triggers an event collection. The ‘stop’ option ends the event collection.

Trigger

stop

NOTE: This button is used in conjunction with triggered measurements types.

Samples

Decimal notation input button that sets the measurement record length for the digitizer. Maximum value is 2000.

Samples

0

Meas: Triggered Voltage


Measurement block computes a single voltage vector sample from an I/Q input signal voltage vector using a pre-measure group trigger button. The sample point is set by the system measure reference plus any user specified delay using the **Delay** button. The block generates a single RiComplexVoltage value.

MEAS

Triggered Voltage A

Meas: Triggered Digitizer


Measurement block computes multiple samples of an I/Q input signal’s voltage vector using a pre-measure group trigger button. Sample points begin at the system measure ref plus any user specified delay using the **Delay** button. The block computes and time-interleaves the two signal channels into RiComplexVoltage values.

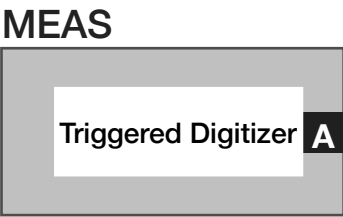

PANEL: TIME ANALYZER

Trigger


Drop down list button that is used within a pre-measure group to set the start and stop times of signal captures or bit error rate measurements. The ‘start’ option triggers an event collection. The ‘stop’ option ends the event collection.

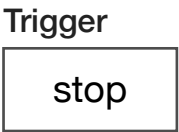


NOTE: This button is used in conjunction with triggered measurements types.

Measure Time

Decimal notation input button that sets the measurement window for counter measurement gating in units of seconds. Maximum time limit is 2000 samples***Sample Rate**

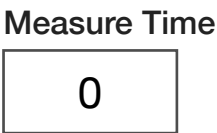

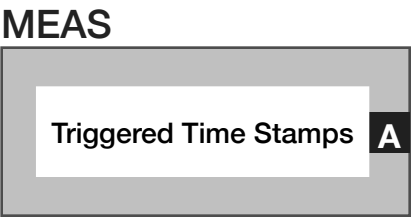


Meas: TriggeredTimeStamp

Measures events from the counter system. Generates an RiTimeD data type with an entry for each edge. Measure is started and stopped by the Trigger in the pre-measure. Use MeasureTime for the length to examine. Samples must exceed the measure time such that several samples occur after the time completes.

WAVEFORM

EDIT PANELS 11 RI8572: WAVEFORM GENERATOR & MEASURE

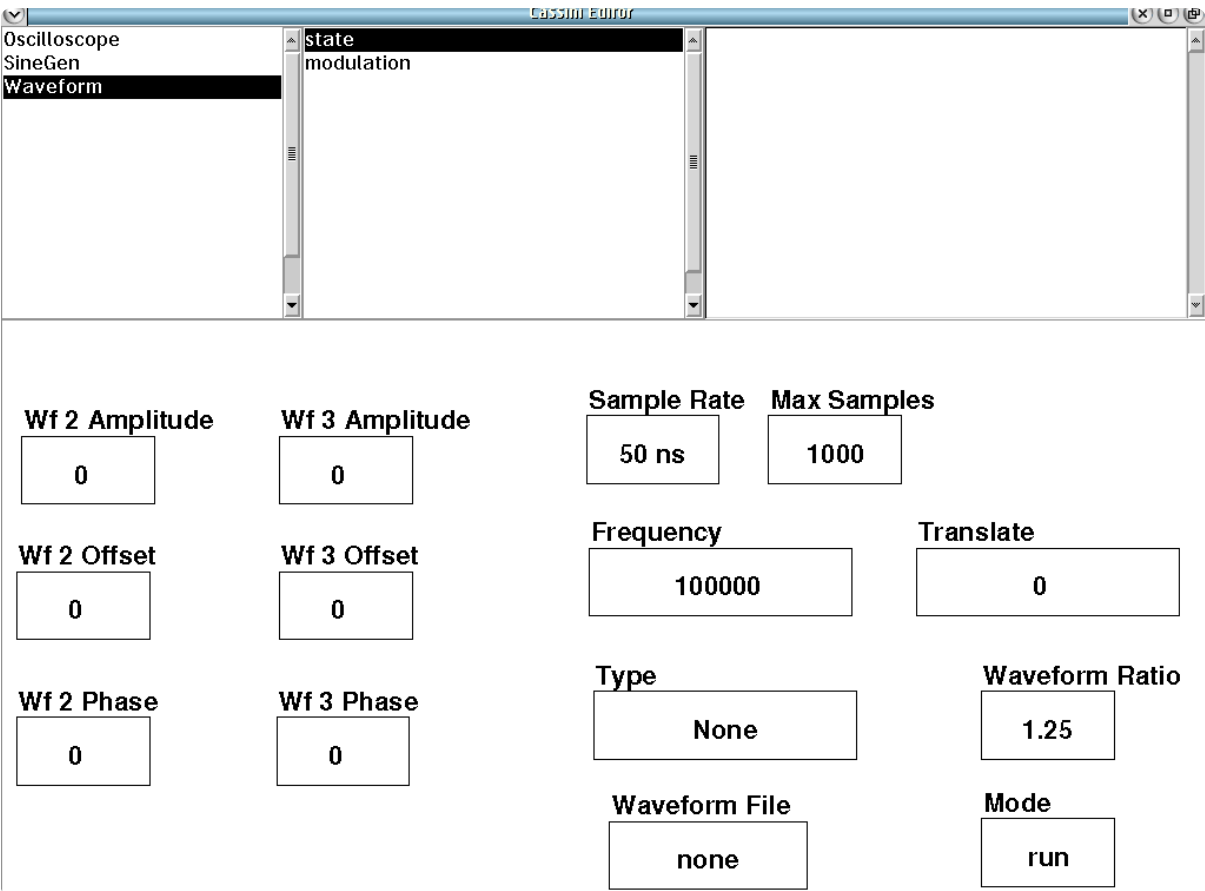

Waveform **state** panel provides basic state buttons for the waveform instrument.



PANEL: STATE

Wf3 Amplitude

Wf 3 Amplitude

Decimal notation input button that sets the amplitude of the open circuit peak voltage of the in-phase (real) signal component. The signal is available at WF3 located at position C6 on the instrument head. Maximum value is 2.5 volts peak.

Wf3 Phase

Wf 3 Phase

Decimal notation input button that sets the waveform delay in units of degrees of the in-phase (real) signal at WF3 located at position C6 on the instrument head. The range of values is ± 180 .

Wf3 Offset

Wf 3 Offset

Floating point button that sets the signal offset voltage for the waveform at WF3 located at position C6 on the instrument head. Available range is $\pm 3V$.

NOTE: The output waveform plus the offset cannot exceed ± 3 volts.

Wf 2 Amplitude

Decimal notation input button that sets the amplitude of the open circuit peak voltage of the quadrature (imaginary) signal component. The signal is available at WF2 located at position C2 on the instrument head. Maximum value is 2.5 volts peak.

Wf 2 Phase

Decimal notation input button that sets the waveform delay in units of degrees of the quadrature (imaginary) signal at WF2 located at position C2 on the instrument head. The range of values is ± 180 .

Wf 2 Offset

Floating point button that sets the signal offset voltage for the waveform at WF2 located at position C2 on the instrument head. Available range is $\pm 3V$.

NOTE: The output waveform plus the offset cannot exceed ± 3 volts.

Wf2 Amplitude

0

Wf2 Phase

0

Wf2 Offset

0

Frequency

Decimal notation input button that sets the waveform frequency in units of Hz. When modulating the signal/s this button sets the center frequency. The range of frequencies available are 1 kHz to 35 MHz

Translate

Decimal notation input button that generates two sinusoidal tones on WF2 and/or WF3 on either side of the **Frequency** button value by a user-defined value in units of Hz. For example, a **Frequency** value of 1 MHz and a **Translate** value of 100 kHz generates tones at 900 kHz and 1.1 MHz. Range of **Frequency** $\pm$ **Translate** values must remain between 1 Hz - 20 MHz.

NOTE: The translate button provides direct control of the arbitrary waveform generator's DDS and can be used to generate a sinusoidal signal on WF2/WF3 up to 80 MHz by setting the Sample Rate button to '1.56 ns', the Frequency button to 0 Hz, and the Wf2/Wf3 Amplitude button to the desired level. This multi-purpose feature can also be used to generate low frequency two-tone signals for intermodulation measurements.

Frequency

100000

Translate

0

Type

A drop down list button that outputs a two-channel, baseband waveform on WF2 (quadrature/imaginary) and WF3 (in-phase/real) from built-in modulation waveform types:

‘Quad’ - Quadrature sinusoidal waveforms (WF3 leads WF2 in phase by 90 degrees).

‘Fast Quad’ - This mode is no longer supported.

‘Sine’ - produces a sinusoidal waveforms on WF6 and/or WF7 with parameters defined by the user.

‘Dual Sine’ - This mode is no longer supported.

“SSB Dual Sine” - Single sideband, dual sine waves on WF6/WF7. This mode produces two sinusoidal waveforms on a single channel specified by the user with Frequency 1= **Frequency** setting, and Frequency 2=**Frequency** * **Frequency Ratio**.

‘SqWave’ - produces a square-wave signal on WF6 and/or WF7 with parameters defined by the user.

‘modulation’ - produces a modulated waveform using the button parameters found in the modulation pane of the waveform instrument.

‘file’ - This mode is no longer supported.

Type

none

‘internal file’ - enables a user-defined signal specified by the **Waveform File** button in the edit panel. The list of waveforms in the **Waveform File** button can be edited by adding or removing waveform files to the TIM from Guru via the **Edit Patterns** button in the Configuration Panel. ‘internal file’ - This mode is no longer supported.

Waveform Ratio

1.25

Waveform Ratio

Decimal notation input button that used with the ‘SSB Dual Sine’ mode to generate two sinusoidal tones at frequency values that are a ratio value of each other on a single channel for WF6 or WF7. For example, a **Frequency** value of 2 MHz and **Waveform Ratio** of 1.25 produces a tone at 2 MHz and 2.5 MHz. Range of valid inputs is 1 to 2.

Sample Rate

50 ns

Sample Rate

A drop down list button that sets the time between the waveform data’s next sample output. Sample rates options are ‘10 μs’ (100 kHz), ‘1 μs’ (1 MHz), ‘100 ns’(10 MHz), ‘50 ns’(20 MHz), ‘25 ns’ (40 MHz), and ‘12.5 ns’ (80 MHz), ‘6.25 ns’ (160 MHz), ‘3.125 ns’(320 MHz), and ‘1.56 ns’(640 MHz).

For ‘sine’, ‘quad’, and ‘SSB Dual Sine’, the **Sample Rate** must be typically **Sample Rate** ≥ 8***Frequency** for accurate signal generation.

NOTE: For the “Pattern” type files the maximum sample rate is ‘25 ns’

Max Samples

1000

Decimal notation input button that sets the number of samples in the emitted waveform. Maximum value is 2000.

Mode

run

Mode

Drop down list button that enables or triggers a burst of an emitted waveform.

The ‘run’ value is used in global or section defaults or within a test panel to initiate a waveform.

The ‘stop’ value is used in global or section defaults or within a test panel to cease a waveform.

The ‘pmStart’ value is used to trigger a burst of the waveform with a precision start time designated by the user within a test panel using a pre-measure sequence grouping.

The ‘pmStop’ value is used to trigger the end of a waveform burst with a precision stop time designated by the user within a test panel using a post-measure sequence grouping.

The ‘trigger’ value is used to start a waveform burst with a pre-set start time of 0 and is terminated by the user within a test panel using a ‘pmStop’ in the post-measure sequence grouping.

NOTE: ‘pmStart’ and ‘pmStop’ must be used together within a test panel for the desired result of syncing the waveform with an event or user start time.

Waveform File

none

Waveform File

Drop down list button chooses waveforms that have been preloaded into the instrument.

PANEL: MODULATION

Filter

A drop down list button that selects a digital filter type to be applied to the waveform. Built-in types include: “Raised Cosine”, “Gaussian”, “GMSK”, or a user-defined filter type provided by the **Filter File** button.

Filter

none

Filter Bw

A decimal notation input button that sets the ratio of the selected filter’s bandwidth with the symbol bandwidth.

Filter Bw

1.0

Filter Taps

Decimal notation input button that sets the total number of digital filter coefficients.

Filter Taps

0

Mod Index

A decimal notation input button that sets the ratio of the excursions of the modulated signal to the level of the unmodulated carrier.

Mod Index

1.0

Data Bits

An integer value button that sets the number of data points per record.

Data Bits

100

Data Rate

An integer value button that sets the output data point rate in units of Hz

Data Rate

1000000

Modulation Type

A drop down list button that selects a modulation from the built-in standards: “Ran FSK” - Random Frequency Shift Keying, “8PSK” - 8

Modulation Type

none

Symbol Phase Shift Keying, ‘Edge’, ‘QPSK’ Quadrature Phase Shift Keying, ‘FM Tone’, and ‘AM Tone’.

Filter File

none

Filter File

A drop down list button that selects the file name of a user-defined digital filter taps or coefficients file.

Prn Type

none

Prn Type

A drop down list button that selects the size of the pseudo random number seed used in the sequence generator. i.e “PN5”, “PN7”, “PN9”, etc.

Data Delay


0

Data Delay

A decimal notation input button that sets the data output delay in units of seconds with a resolution of 1 μs.

SINEGEN

EDIT PANELS 12 RI8572: WAVEFORM GENERATOR & MEASURE

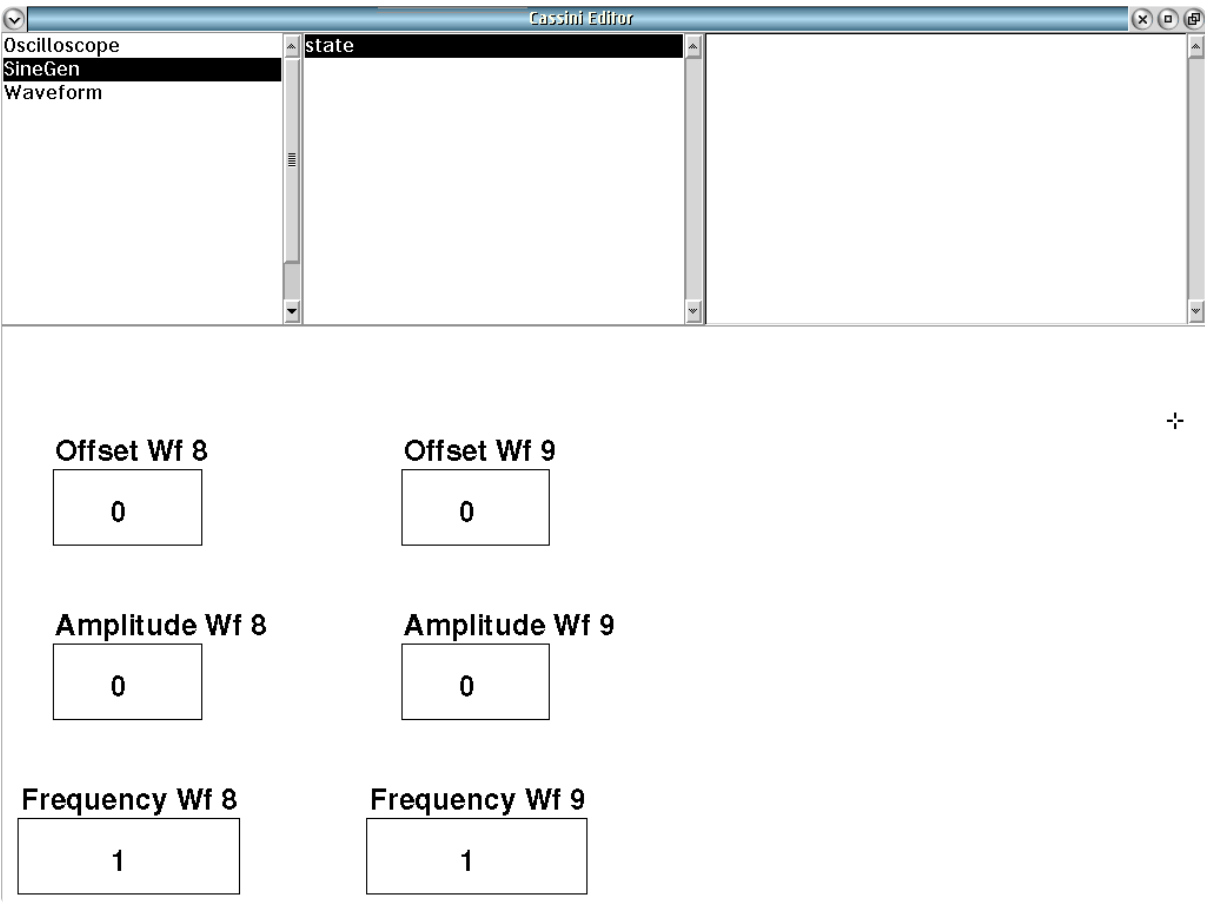

SineGen **sate** panel provides basic state buttons for the simple sine wave generator.

PANEL: STATE

Frequency Wf 8

1

Frequency Wf 8

Floating point button that sets the output sine wave’s frequency in MHz. The range of frequencies are 1kHz to 90MHz.

Amplitude Wf 8

0

Amplitude Wf 8

Decimal notation input button that sets the amplitude of the open-circuit, peak-to-peak voltage of the in-phase (real) signal component. The signal is available at WF8 located at position C4 on the instrument head. Input value is peak-to-peak voltage (i.e - a value of 2 results in a +1 V to -1 V signal). Maximum value is 2.5 volts.

Offset Wf 8

0

Offset Wf 8

Floating point button that sets the signal DC offset voltage for the waveform at WF8 located at position C4 on the instrument head. Available range is ±3V.

NOTE: The output waveform plus the offset cannot exceed ±3 volts.

Frequency Wf 9

1

Frequency Wf 9

Floating point button that sets the output sine wave’s frequency in MHz.

Amplitude Wf 9

0

Amplitude Wf 9

Decimal notation input button that sets the amplitude of the open-circuit, peak-to-peak voltage of the quadrature (imaginary) signal component. The signal is available at WF9 located at position C8 on the instrument head. Input value is peak-to-peak voltage (i.e a value of 2 results in a +1 V to -1 V signal). Maximum value is 2.5 volts.

Offset Wf 9

0

Offset Wf 9


Floating point button that sets the signal DC offset voltage for the waveform at WF9 located at position C8 on the instrument head. Available range is ± 3 V.

NOTE: The output waveform plus the offset cannot exceed ± 3 volts.

CONTROL PANELS

Real-time control of the instruments in this TIM.

CONTROL PANELS 9 RI8572: WAVEFORM GENERATOR & MEASURE

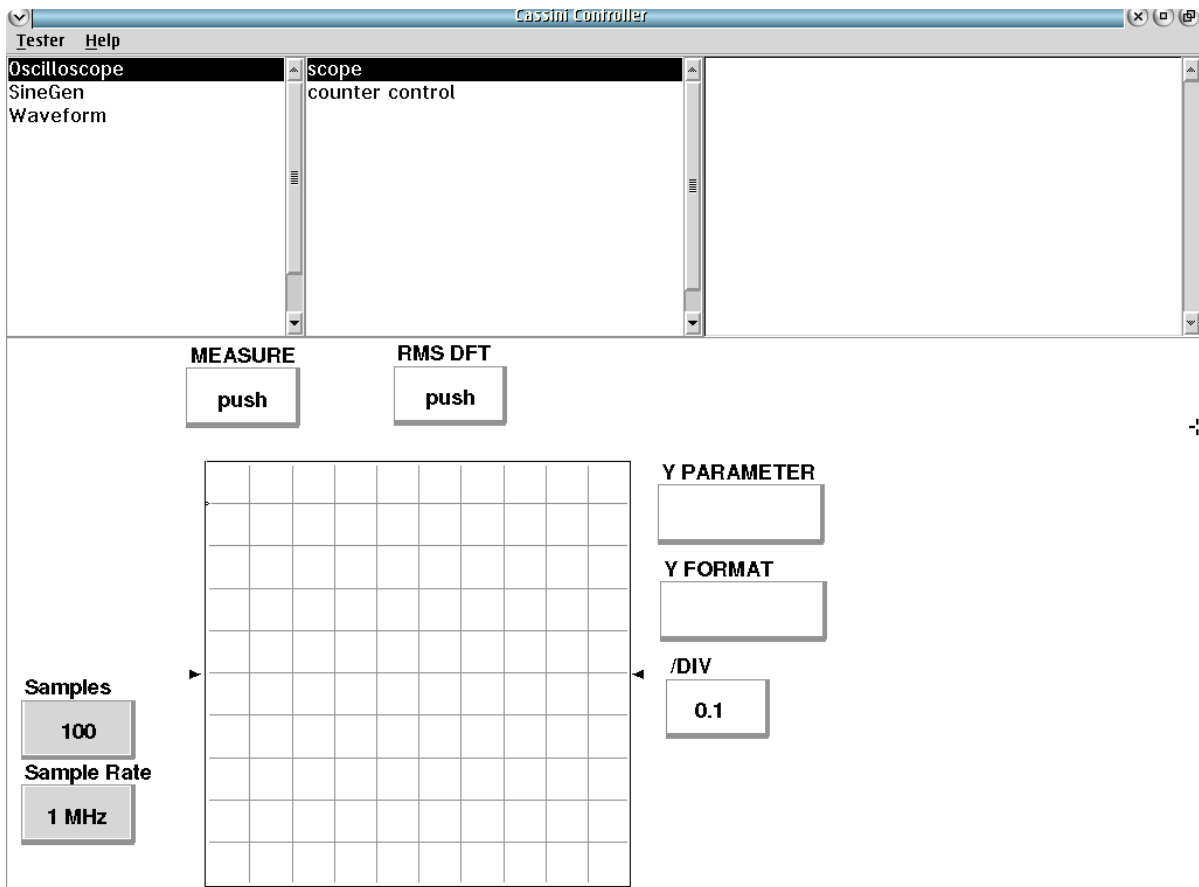

Oscilloscope **Scope** panel displays oscilloscope measurements graphically.



OSCILLOSCOPE SCOPE

MEAURE, RMS DFT, Y PARAMETER, Y FORMAT, /DIV

Update the graph with measured values in real-time.

COUNTER CONTROL

Edge Period, COUNTER FREQ, COUNTER

Click to update measurement in real-time.

RI8574: SYSTEM CONTROLLER (EPC)



TOPICS

[Instruments provided by this TIM](#)

[Edit Panel Button Descriptions](#)

[Temperature Control Buttons](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instruments in this TIM appear as **DataSim** and **System** and the Infrastructure provides a **Tester** instrument in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- System, System Resources 2

Infrastructure includes one of the following:

- Tester, Ri8568x Cassini 16 Slot Tester, Master
- Tester, Ri8549x Cassini 8 Slot Tester, Master

NOTE: The “x” in the model number denotes the revision of the Instrument. In this case, the Infrastructure provides the hardware the Tester instrument displays.

Optional Instruments may include:

- TempControl, Temptronics TP04310A Temperature Controller (or compatible)

EDIT PANELS

Automated control of the system level instrument in this TIM with use by the Test Plan Editor.

NOTE: TempControl is an optional feature that requires a RIFL pod for instrument control.

EDIT PANELS 13 RI8574: SYSTEM CONTROLLER



System **data saves** panel enables datalog and local variable control in a test plan.



PANEL: DATA SAVES

Save Unspecified

An input block used to save single datapoint or multiple numerical data values from a test panel to the data log worksheet. This save type enables measurement data to be offloaded as CSV, STDF, RITdB or other standard data log format. The name of the data save is defined by the user by right-clicking within the gray area of the block and selecting ‘Data Name’ from the pop-up menu list.

Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation block. Accordingly, the data unit choices are limited to the data type of the connected measurement/calculation blocks. The unit options can be accessed by a right-click and selection of ‘Data Format’ from the pop-up menu list.

Viewing Data Save Values in a Plot

Data saved to this block can be viewed in a data plot after the test plan has been compiled and executed by left-clicking within the gray area of the block and selecting the plot type from the pop-up window list.

Save Unspecified



Applying Measurement Limits to Data Save Values

Measurement limits can be applied to this data save type by right-clicking within the gray area of the block and selecting ‘Single-valued Limit’ or ‘Multi-valued Limit’ if more than one measurement value is saved.

NOTE: If a single numerical value is saved, the measurement limit will default to a single-value limit. If multiple numerical values are saved, the measurement limit will allow a multi-value limit option.

Array

An input block that can store a single datapoint or multiple numerical data values as a local variable with the associated instrument setting values used in the panel or test section defaults to index the stored values as a multi-dimensional array. The storage structure of an **Array** block allows measurement data to be sorted and/or plotted relative to an instrument state or multiple states (typically frequency or power sweeps) in which the data was saved in a test panel by using the same instrument setting blocks in the test panel. This allows cross referencing measured values against multiple instrument state indices such as signal power, frequency, voltage settings, etc. when displaying in a plot or when accessed using an **Array**, **Array Src**, or

Array



Array Element output block in subsequent test panels or sections. The name of the array can be defined by the user by right-clicking within the gray area of the block and selecting 'Var Name' from the pop-up menu list.

Data Type Information


The data type of the stored value or values is inherited from the connected measurement/calculation blocks. There are no measurement units associated with an **Array**.

Viewing Array Values in a Plot

Data saved to this block can be viewed in a data plot after the test plan has been compiled and executed by left-clicking within the gray area of the block and selecting the plot type from the pop-up window list.

If multi-dimensional data is saved to an array, i.e - measurement data with more than one independent variable(multiple instrument settings) associated with a measured datapoint, the multi-variable plot window will open when left-clicking within the gray area of the block. This window allows the user to define the which instrument index will define the independent variable on the x-axis, and color code the plots based on a second instrument setting independent variable.

Local Var

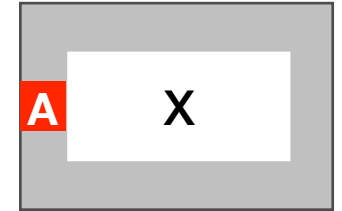

Local Var

An input block used to save single datapoint or multiple numerical data values from the the test plan to a local variable. The name of the local variable can be defined by the user by right-clicking within the gray area of the block and selecting 'Var Name' from the pop-up menu list.

Data Type Information

The data type of the stored value or values is inherited from the upstream connected measurement/calculation block. There are no measurement units associated with **Local Var** data.

Viewing Local Var Values in a Plot

Data saved to this block can be viewed in a data plot after the test plan has been compiled and executed by left-clicking within the gray area of the block and selecting the plot type from the pop-up window list.


Local Var Put

An input block used to save a single numerical measurement value from a test panel to a local variable. If multiple data values are input to the **Local Var Put** input block, i.e - measurements from a sweep of power or frequency for instance, every subsequent data point overwrites the previous value. The name of the local variable can be defined by the user by right-clicking within the gray area of the block and selecting 'Var Name' from the pop-up menu list. The value stored in this block can be called using a **Local Var** output block in separate test panel or test section.

Data Type Information

The data type of the stored value is inherited from the connected measurement/calculation block. There are no measurement units associated with **Local Var** data.

Local Var Put

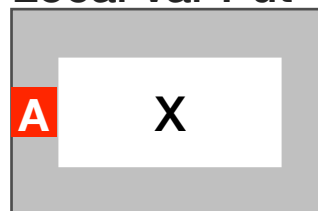


Sorted by data

An input block that stores a single datapoint or multiple numerical data values to a local variable that can be sorted in ascending order by a parameter of the data such as power or phase. This block is typically used to index data according to ascending measurement value when calling the local variable with a **Local Var** output block or when viewing data in a plot. The name of the **Sorted by data** local variable can be defined by the user by right-clicking within the gray area of the block and selecting 'Var Name' from the pop-up menu list.

Sort by Data

The data organization can be defined by the user by right-clicking within the gray area of the block and selecting 'Index by...' from the pop-up menu list. A list of available sort types are displayed in the pop-up window based on the data type of the variable.

Sorted by data

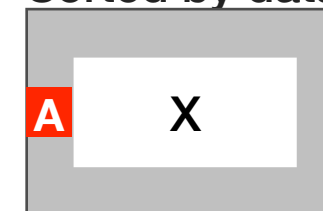


Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation blocks. There are no measurement units associated with **Sorted by data** variables.

Viewing Values in a Plot

Data saved to this block can be viewed in a data plot after the test plan has been compiled and executed by left-clicking within the gray area of the block and selecting the plot type from the pop-up window list.

Idx by nil

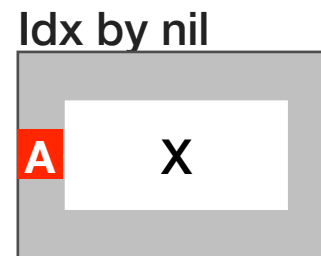

The “Index by” input block stores a single datapoint or multiple numerical data values in a local variable with each data point sorted relative to an instrument state in which the data was saved in a test panel. This controls the order in which the measured values are stored relative to an instrument state setting such as signal power, frequency, etc. when displaying in a plot or when accessed using an **Local Var** output block in subsequent test panels or sections. The name of the array can be defined by the user by right-clicking within the gray area of the block and selecting ‘Var Name’ from the pop-up menu list.

Indexing Data Values

To index measurement data by an instrument setting the input block owner must be changed from the default setting of ‘System’ to the desired instrument. To change the owner, right click anywhere within the white space area contained by the ‘System’ box that surrounds the gray block and select ‘Change Owner’ from the pop-up menu list. A list of available instruments in the current tester configuration will pop-up allowing the user to select the desired instrument. Once the desired instrument owner has been designated, the list of available instrument settings associated with that instrument can be accessed by right clicking within the gray area of the block and selecting ‘State Name’ from the pop-up menu list.

NOTE: In practical applications, the “Index by” block owner is typically set to an instrument that is being swept across a range of values such as voltage, current, power, or frequency in a test panel or test section. The “Index by” parameter is set to the instrument setting that is being swept in a test panel or test section.

Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation blocks. There are no measurement units associated with “Indexed by” local variables.

Viewing Values in a Plot

Data saved to this block can be viewed in a data plot after the test plan has been compiled and executed by left-clicking within the gray

area of the block and selecting the plot type from the pop-up window list.

Cal Data


A specialized input block that stores a single datapoint or multiple numerical data values(indexed by frequency or power) to a calibration table for an instrument or fixture signal path. The data format saved by the block is translated by the tester as signal path loss compensation, phase reference, or mismatch correction. If calibration data for the specified path or instrument exists, it is overwritten by the measured data when the block is used in a test plan.

This button is typically used in conjunction with the **Cal Reset** button.

WARNING: Altering or otherwise amending instrument calibration data can cause unwanted and/or erratic behavior that may result in instrument or device damage and will void the performance specifications of the Cassini test system.

Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation blocks. The **Cal Data** block requires specific instrument owner and data parameters that allows

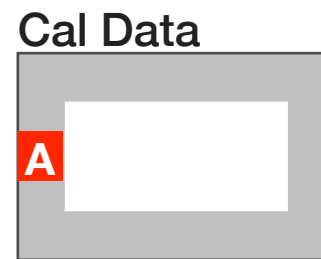

the software to automatically apply the measured data as a calibration correction or “error adapter” as it is often called.

Calibration Naming Conventions

To associate the calibration data to a fixture path, the block owner must be changed from the default setting of ‘System’ to ‘Fixture’. Right click anywhere within the white space area contained by the ‘System’ box that surrounds the gray block and select ‘Change Owner’ from the pop-up menu list.

NOTE: A fixture must be physically connected and checked into the tester or a fixture definition must be activated in the Configuration Window to access the ‘Fixture’ owner.

The name of the **Cal Data** block can be defined by the user by right-clicking within the gray area of the block and selecting ‘Cal Name...’ from the pop-up menu list. In order for the calibration data to be applied, the ‘Cal Name’ of the block must match the path name specified in the Device Connection editor for the associated fixture/fixture definition.

CAUTION: Some restricted Cal Data names and instrument owner pairs are reserved for instrument calibration parameters. Contact support@roos.com before creating and executing test plans that may alter or overwrite instrument calibration data.

Viewing Values in a Plot

Data saved to this block can be viewed in a data plot after the test plan has been compiled and executed by left-clicking within the gray

area of the block and selecting the plot type from the pop-up window list.


Saving & Applying Calibration Data

After a test plan using a **Cal Data** block is complete, the calibration data will be temporarily active in the associated fixture path while the fixture remains connected or the fixture definition remains active in the Configuration Window. The calibration data can be saved permanently to the fixture by

Cal Data blocks used in a calibration or fixture calibration test plan typically include measurement limits or validation test plans to verify the quality/efficacy of the resulting calibration data. These test plan types when executed by a Calibration Executive or Fixture Executive program automatically save the associated path/instrument calibration data from the **Cal Data** block permanently upon completion of a test plan pass.

Local Var

An output block that calls previously saved local variable data(single or multiple values) generated by a **Local Var** or **Local Var Put** input block. The data type of recalled values are set by the inherited data

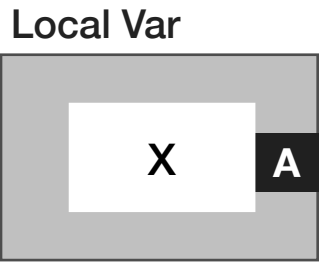

type when the data was captured in a **Local Var** or **Local Var Put** Input block.


The local variable can be selected by right-clicking anywhere within the gray area of the block and selecting 'Var Name' from the pop-up menu list. A window list of available local variables will be displayed from which a single variable can be selected.

NOTE: The local variable data is not valid in the test panel in which the data was saved to a Local Var or Local Var Put input block. A call to a local variable must occur in a test section or test panel that occurs after the local variable save.

Instr State Source

An output block that provides instrument settings as a numerical value or multiple values from the current test panel. For example, if a test panel swept the Source1 frequency from 1GHz to 10GHz in 100MHz steps, the 101 frequency setting points of Source1 could be accessed by placing the **Instr State Source** button in the panel, setting 'Source1' as the owner, and 'Frequency' as the instrument state source parameter.

Instr State Source

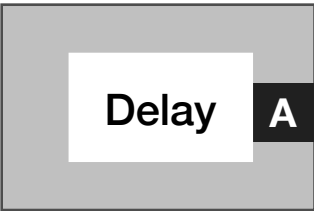


To access an instrument’s available settings the owner must be changed from the default setting of ‘System’ to the desired instrument. To change the button owner, right click anywhere within the white space area contained by the ‘System’ box that surrounds the gray block and select ‘Change Owner’ from the pop-up menu list. A list of available instruments in the current tester configuration will pop-up allowing the user to select the desired instrument. Once the desired instrument owner has been designated, the list of available instrument settings associated with that instrument can be accessed by right clicking within the gray area of the block and selecting ‘State Name’ from the pop-up menu list.

NOTE: The instrument state source button incurs no test or measurement time impact because there is no measurement associated with the instrument setting values. The instrument values are available to the Instr State Source block at compile time.

Array Src

An output block that emits all stored data of the selected array variable as a RIData datatype without the need for indexing the array with instrument buttons. The array variable can be selected by right-clicking anywhere within the gray area of the block and selecting ‘Var

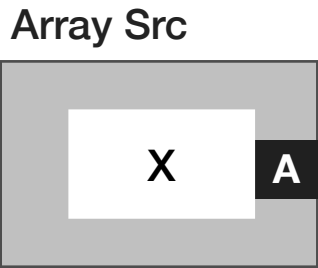

Name’ from the pop-up menu list. A window list of available local variables will be displayed from which a single variable can be selected.

The local variable data inherits the data type of upstream measurement connected to the **Local Var** input block.


NOTE: The array variable data is not valid in the test panel in which the data was saved to an Array input block. A call to a Array Src variable must occur in a test section or test panel that occurs after the Array variable save.

Array Element

An output block that provides a single datapoint from the selected array variable. The datapoint is extracted by placing an instrument button state of the desired datapoint in the panel with the **Array Element** block to index and extract the value.

NOTE: The instrument button type and value used to extract the datapoint must match an instrument button type and value used when creating the array.

Array Element

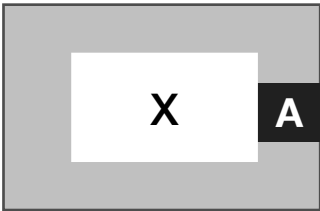


Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation blocks of the **Array** input block. There are no measurement units associated with Array local variables.

NOTE: The array variable data is not valid in the test panel in which the data was saved to a Array input block. A call to an Array Element value must occur in a test section or test panel that occurs after the Array variable save.

Array

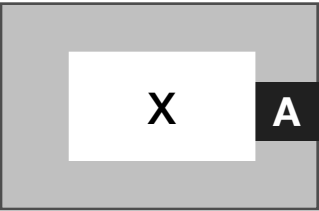

Array

An output block that provides data values from an array variable by using the same instrument panel button/s values used with the associated **Array** input block to index the stored values.

If a group of test panels with arrays have common instrument button sweeps/ranges then the array variables will align the stored values based on that range index. If there is no shared ranges then the entire variable is emitted as a vector.

NOTE: The instrument button sweep or range used to create the array input block variable must be used to extract the values from the array output block. The button type, values, and range dimension must match the indices used when the array was captured.


An array local variable can be selected by right-clicking within the gray area of the block and selecting 'Var Name' from the pop-up menu list. A window list of available local variables will be displayed from which a single variable can be selected.

Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation blocks of the **Array** input block. There are no measurement units associated with Array local variables.

NOTE: The array variable data is not valid in the test panel in which the data was saved to a Array input block. A call to an Array variable must occur in a test section or test panel that occurs after the Array variable save.

Cal Data

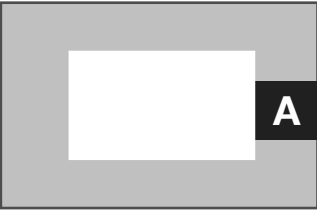

Cal Data

An output block that recalls the measured data stored in the user specified **Cal Data** input block. This button is typically used in conjunction with the **Cal Reset** button.


NOTE: The calibration data from a Cal Data output block is not valid in the test panel in which the data was saved to a Cal Data input block. A call to the calibration data must occur in a test section or test panel that occurs after the calibration data save.

Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation blocks of the **Cal Data** input block. To recall the calibration data from a previous **Cal Data** input block, the block owner must be changed from the default setting of ‘System’ to match the owner of the **Cal Data** save. To change the owner, right click anywhere within the white space area contained by the ‘System’ box that surrounds the gray block and select ‘Change Owner’ from the pop-up menu list. Once the owner has been changed, the calibration data can be recalled by changing the name of the **Cal Data** output block to match the associated **Cal Data** input block by right-clicking within the gray area of the block and selecting ‘Cal Name...’ from the pop-up menu list.

NOTE: To access fixture calibration data, the fixture must be physically connected and checked into the tester or a fixture definition must be activated in the Configuration Window to access the ‘Fixture’ owner.

Cal Point

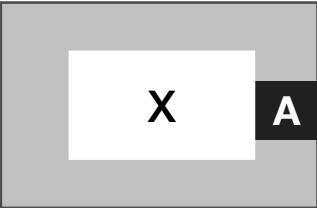

Cal Point

An output block that returns a single point cal factor from a specified **Cal Data** input block based on an index determined by an associated instrument’s state button(typically a frequency or power setting) placed in the test panel or test section.This button is typically used in conjunction with the **Cal Reset** button.

NOTE: The calibration data from a Cal Data output block is not valid in the test panel in which the data was saved to a Cal Data input block. A call to the calibration data must occur in a test section or test panel that occurs after the calibration data save.

Data Type Information

The data type of the stored value or values is inherited from the connected measurement/calculation blocks of the **Cal Data** input block. To recall the calibration data from a previous **Cal Data** input block, the block owner must be changed from the default setting of ‘System’ to match the owner of the **Cal Data** save. To change the owner, right click anywhere within the white space area contained by the ‘System’ box that surrounds the gray block and select ‘Change Owner’ from the pop-up menu list. Once the owner has been changed, the calibration data can be recalled by changing the name

of the **Cal Data** output block to match the associated **Cal Data** input block by right-clicking within the gray area of the block and selecting ‘Cal Name...’ from the pop-up menu list.

NOTE: To access fixture calibration data, the fixture must be physically connected and checked into the tester or a fixture definition must be activated in the Configuration Window to access the ‘Fixture’ owner.

Cal Reset

A list selection button that resets the calibration data of the user-specified entry to its default value when the test plan is compiled. This button is typically used in conjunction with the **Cal Data** input and output blocks.

WARNING: Overwriting or altering instrument calibration data can cause unwanted instrument behavior that may result in instrument or device damage and will void the performance specifications of the Cassini test system.

To reset calibration data, the **Cal Reset** button owner must be changed from the default setting of ‘System’ to match the owner of the intended path(typically ‘Fixture’) or instrument. To change the owner, right click anywhere within the white space area contained by the ‘System’ box that surrounds the Cal Reset parameter box and

Cal Reset



select ‘Change Owner’ from the pop-up menu list. Once the owner has been changed, the calibration data to be reset can be selected by changing the name of the **Cal Reset** button to match the intended fixture path or instrument resource name by right-clicking within the Cal Reset parameter box of the button and selecting ‘Cal Name...’ from the pop-up menu list.

NOTE: To reset fixture calibration data, the fixture must be physically connected and checked into the tester or a fixture definition must be activated in the Configuration Window to access the ‘Fixture’ owner.

PANEL: FLOW CONTROL

Set Flag

An input block that creates a conditional flag based on a single datapoint or multiple data points provided to the block. When placed in a test panel and executed, this block sets the true/false logic conditions of the flag for the **skipIfTrue**, **abortIfTrue**, **skipIfFalse**, and/or **abortIfFalse** buttons that execute conditional test program actions. If multiple data points and limits are applied to a **Set Flag** input block the results are logically OR'ed, i.e - all limit conditions must be true for the flag to be true.


The name of the flag is defined by the user by right-clicking within the gray area of the block and selecting 'Flag Name' from the pop-up menu list.

Conditional data limits are applied to the flag by right-clicking within the gray area of the block and selecting 'Flag Limits' or 'Limit File' if more than one measurement value is saved. Flag limits are displayed on the Set Flag block above the name for reference.



NOTE: If a single numerical value is saved, the measurement limit will default to a single-value limit. If multiple numerical values are saved, the measurement limit will allow a multi-value limit option.

skipIfTrue

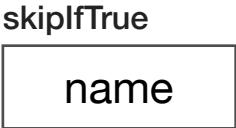

A drop down list button placed in the Conditional Statement panel of a test section that skips all test panels within the section if the selected flag specified by a **Set Flag** input block is true. The flag pointer is set by right clicking within the name field of the button and selecting 'Flag Name' from the pop-up menu. A pop-up window then provides the list of available conditional flags based on the Set Flag input blocks used.

NOTE: The skipIfTrue button must be placed in the Conditional Statement panel of a Test Section. If multiple skipIfTrue buttons are placed in the same Conditional Statement panel, any true flag can cause a skip.

abortIfTrue

A drop down list button placed in the Conditional Statement panel of a test section that aborts the test program if the selected flag specified by a **Set Flag** input block is true. The flag pointer of the **abortIfTrue** button is set by right clicking within the name field of the button and selecting ‘Flag Name’ from the pop-up menu. A pop-up window then provides the list of available conditional flags based on the Set Flag input blocks used.

NOTE: The abortIfTrue button must be placed in the Conditional Statement panel of a Test Section. If multiple abortIfTrue buttons are placed in the same Conditional Statement panel, any true flag can cause the test program to abort.

skipIfFalse

A drop down list button placed in the Conditional Statement panel of a test section that skips all test panels within the section if the selected flag specified by a **Set Flag** input block is false. The flag pointer of the **skipIfFalse** button is set by right clicking within the name field of the button and selecting ‘Flag Name’ from the pop-up

abortIfTrue

name

skipIfFalse

name

menu. A pop-up window then provides the list of available conditional flags based on the Set Flag input blocks used.

NOTE: The skipIfFalse button must be placed in the Conditional Statement panel of a Test Section. If multiple skipIfFalse buttons are placed in the same Conditional Statement panel, any false flag can cause a skip.

abortIfFalse

A drop down list button placed in the Conditional Statement panel of a test section that aborts the test program if the selected flag specified by a **Set Flag** input block is false. The flag pointer of the **abortIfFalse** button is set by right clicking within the name field of the button and selecting ‘Flag Name’ from the pop-up menu. A pop-up window then provides the list of available conditional flags based on the Set Flag input blocks used.

NOTE: The abortIfFalse button must be placed in the Conditional Statement panel of a Test Section. If multiple abortIfFalse buttons are placed in the same Conditional Statement panel, any true flag can cause the test program to abort.

abortIfFalse

name



promptIfFalse

A drop down list button placed in the Conditional Statement panel of a test section that pauses the test program and opens a user prompt window if the selected flag specified by a **Set Flag** input block is false. The user prompt window provides two options for the operator: ‘Continue’ - proceeds with the test program

‘Abort’ - terminates the test program immediately.

The flag pointer of the **promptIfFalse** button is set by right clicking within the name field of the button and selecting ‘Flag Name’ from the pop-up menu. A pop-up window then provides the list of available conditional flags based on the Set Flag input blocks used.

NOTE: The promptIfFalse button must be placed in the Conditional Statement panel of a Test Section.



Prompt

A text string input button placed in a Conditional Statement panel of a test section that pauses the test program at the beginning of a test section and opens a user prompt window and displays the text string input by the user to the button. The prompt window displays the text string and provides two options for the operator: “Continue” - proceeds with the test program; “Abort” - terminates the test program immediately.

NOTE: The Prompt button must be placed in the Conditional Statement panel of a Test Section.

PANEL: STATE

Sequence Delay

An integer value input button used only in Pre Measure and Post Measure groups that forces a test pause and hold of all instrument settings in the sequence. The **Sequence Delay** button input value is in units of microseconds with 100ns resolution.

NOTE: The Sequence Delay button is only valid in Pre Measure and Post Measure groups. Within a Pre/Post Measure group, buttons are executed in a sequenced order from left to right as they are placed in the panel.

Averages

An integer value input button that sets the number of measurements taken and used to compute a mean or average value. When placed in a test panel or test section, the **Averages** button applies to all measurements present in the same test panel or test section accordingly. A value of 1 will take only one measurement.

Sequence Delay

0

Averages

1

Pause

0

Pause

An integer value input button that forces a test pause and hold of all instrument settings in a test panel before a measurement is executed. If a **Pause** button is placed in a test section or test panel, the pause and hold is executed after all instrument button settings are set and before any measurements are taken. If a **Pause** button is placed within a Measure group, the pause and hold is executed after all instrument button settings within the Measure group are set and before the measurement within the Measure group is taken. If a **Pause** button is placed in Global/Section default, the value is ignored. The **Pause** button input value is in units of microseconds with 100ns resolution. When set to a negative time (-10000), this button will reduce the settle time by overriding the instruments' default settle time and may result with unstable measurements.

Repeat

0

Repeat

An integer value input button that when placed in a test panel, sets the number of times to repeat the measurements in that panel. When the repeat value is greater than one, single data point saves or local variable are represented as multi-point measurements with the repeat

number defining the index and the independent axis in plots. It is typically used as a test program debug tool for determining measurement stability.

Index

An integer value input button that is used as the numeric sorting parameter for data measured using a lock step group. The index button is placed within a lock step group, typically with a measurement block and an instrument parameter such as frequency, power, voltage, etc. When an instrument parameter is swept across a range of values, the **Index** button must also be configured as a range with the same number of values as the instrument sweep parameter. This allows the measured data to be stored in ascending numeric order of the index button values while still conducting the measurement according to ascending instrument parameter values.

NOTE: When used with an instrument sweep/range, the index button only defines the storage indexing of the sweep, not the execution order of the instrument sweep.

Index

0

Trigger Spacing

A decimal notation input button that sets the time between the trigger reference(represented by a **Meas Ref** button) and measurement block placed to the left of the **Trigger Spacing** button and buttons/ Measurement blocks placed to the right of the **Trigger Spacing** button. The input value is in units of seconds with a resolution of 100ns.

NOTE: The input value to the Trigger Spacing button must be positive.

Trigger Spacing

0

Outer Loop

An integer value button that assigns a state change cost value for all instrument state changes contained in a single test panel in which it is placed. The **Outer Loop** button is a compiler directive that incorporates the input value as an additional cost value associated with changing to the instrument settings of a test panel or the instrument state changes contained within a [Lock Step group](#) in which it is also placed. A higher input value denotes an additional cost value that raises the overall cost value compared to another **Outer Loop** button with a smaller value. The cost value is used by the

Outer Loop

1

compiler to prioritize the execution of multiple test panels within a test section in order of the lowest cost values to the highest cost values.

By default the **Outer Loop** button has a higher cost value than the **Inner Loop** button. **Outer Loop** buttons can be used in conjunction with **Inner Loop** buttons within a [Lock Step group](#) to control the execution order of two or more instrument button parameter sweeps/ranges within one test panel. State changes associated with **Inner Loop** buttons with ascending input values are executed before **Outer Loop** buttons with ascending values. The combination of the two buttons enable nested instrument range sweeps across multiple instrument parameters with a user-specified execution order.

NOTE: When used within a lock step group with an instrument range sweep, the Outer Loop index size must match the sweep index size, i.e. the number of Outer Loop buttons must match the number of points in the sweep.

Inner Loop

An integer value button that assigns a state change cost value for all instrument state changes contained in a single test panel in which it is placed. The **Inner Loop** button is a compiler directive that incorporates the input value as an additional cost value associated with changing to the instrument settings of a test panel or the

Inner Loop

1

instrument state changes contained within a [Lock Step group](#) in which it is also placed. A higher input value denotes an additional cost value that raises the overall cost value compared to another **Inner Loop** button with a smaller value. The cost value is used by the compiler to prioritize the execution of multiple test panels within a test section in order of the lowest cost values to the highest cost values.

By default the **Inner Loop** button has a lower cost value than the **Outer Loop** button. **Inner Loop** buttons can be used in conjunction with **Outer Loop** buttons within a [Lock Step group](#) to control the execution order of two or more instrument button parameter sweeps/ranges within one test panel. State changes associated with **Inner Loop** buttons with ascending input values are executed before **Outer Loop** buttons with ascending values. The combination of the two buttons enable nested instrument range sweeps across multiple instrument parameters with a user-specified execution order.

NOTE: When used within a lock step group with an instrument range sweep, the Inner Loop index size must match the sweep index size, i.e. the number of Inner Loop buttons must match the number of points in the sweep.

Meas Ref

A decimal notation input button in units of seconds that marks the preceding instrument state button as the start event reference of a

Meas Ref

0

measurement, offset by the value entered. The input value is in units of seconds with 1 microsecond resolution. A positive input value offsets the measurement time reference later in time from the start event reference by the input value. A negative input value moves the measurement time reference earlier than the start event reference by the input value. The measurement reference defines the zero index or left-most edge of data plots.

This button is used with time-based measurements such as **Voltage vs Time, Current vs. Time** and/or **Delayed Voltage** measurement blocks.

Delay Cost

A decimal notation input button that sets a user-defined, time cost value(in units of seconds) for the compiler's test optimization function. This button is a compiler directive that incorporates the input as the expected time delay incurred when executing state changes typically related to the device under test. When placed in a test panel, the time cost information is added to the known instrument state change timing information. This is used by the compiler to prioritize test order and test execution of all test panels within the test section in order to achieve optimum test speed. A larger **Delay Cost** input value denotes a longer state change time and higher time cost associated with all of the state changes in the panel. The optimizer will seek to

Delay Cost

0.01

minimize changes to all of the states found within a panel with a large time cost across all of the tests found in the same test section.

Delay Settling

A decimal notation input button that sets the settling time(in units of seconds) for the state of an entire test panel. This button is a compiler directive that adds a user-defined delay after all of the instrument and device state changes have been executed.

Delay Settling

0.01

Trigger Ref

A decimal notation input button that marks the preceding button as the time reference event for a triggered measurement, offset by the value entered. The input value is in units of seconds with 1 microsecond resolution. A positive input value offsets the measurement time reference later in time from the start event reference by the input value. A negative input value moves the measurement time reference earlier than the start event reference by the input value.

This button is used with time-based measurements such as **Triggered Voltage, Triggered Digitizer** measurement blocks.

Trigger Ref

0

Test Type

A drop down list button that when placed in a test panel, defines the order of priority of the test panel relative to other test panels in the same test section. The Test Type button is a compiler directive that informs the optimizer if or when the test panel measurements occur within a test section:

The ‘standard’ option is the system default setting that allows the compiler’s test optimizer to decide the order of test panels within the test sections based on an time cost analysis of state changes.

The ‘first’ option designates that the measurements in the associated test panel should be executed before all other test panels within the same test section.

The ‘last’ option designates that the measurements in the associated test panel should be executed after all other test panels within the same test section.

The ‘calculation’ option designates that there are no measurements in the associated test panel, and forces the test optimizer to execute the panel as a calculation operation. Typically this is used in test panels where mathematical, algorithmic, data type conversion, and/or data save operations of local variables and data saves are executed. The

Test Type

standard

function of the ‘calculation’ option of the **Test Type** button is identical to the **Calculation Only** block.

NOTE: Instrument sweeps used as indices for extracting data values from variable arrays or data saves within designated calculation panels do not act on the instrumentation, i.e - instrument sweeps for indexing purposes do not incur any test time impact.

Do If True

none

Do If True

A drop down list button that compiles and executes a test section, test panel, or lock step group during test plan run time if the selected symbol value is non zero(logical true). This button enables additional tests and/or measurements to be compiled and executed depending on the logic condition(value) of a user-defined symbol.

To select the symbol to be used for the logic argument, left-click within the parameter field and select the desired symbol from the pop-up list.

NOTE: A symbol can be created from the Set Symbol button or from creating/activating a symbol table from the test plan menu options: ‘Options’>‘Edit Symbol’.

To execute a test section upon a true symbol condition with multiple test panels, place the **Do If True** button in the Conditional Statement of a test section.

To execute a single test panel upon a true symbol condition the **Do If True** button can be placed anywhere within the desired test panel.

To execute an additional lock step upon a true symbol condition with multiple test panels, place the **Do If True** button within the Lock Step group of buttons and measurement.

Self Cal

Self Cal

Precompile

The Self Cal button is hard coded to the Precompile condition as the test system’s default and only setting. Before a compile is executed, the test system performs a self calibration of instruments that contain thermally sensitive components. This self calibration measures and corrects any thermal drift offsets prior to test execution.

PANEL: INPUT OUTPUT STATE

Freq Reference

none

Freq Reference

A drop down list button that selects an Instrument as the frequency index of measurements when using virtual instruments such as the Vector Network Analyzer or Noise Figure Meter. By default, all measured data is referenced/indexed by the instrument frequency designated as the input with the Input button of the virtual instrument. This button allows the user to select another instrument as the frequency index reference. This button is typically used with the **Input Freq Offset**, **Input Freq Scale**, **Output Freq Offset**, and **Output Freq Scale** buttons.

NOTE: Only instruments active in the test system are available in the Freq Reference drop down list.

Input Freq Offset

0

Input Freq Offset

A decimal notation input button that defines a constant shift or offset of the index frequency that is designated by either the **Freq**

Reference or virtual instrument **Input** button. The frequency units are defined by the instrument frequency parameter specified by the **Freq Reference** button. The input index frequency value is defined by the equation below:

$$IndexFrequency = FreqReference[frequency] * InputFreqScale + InputFreqOffset$$

Input Freq Scale

A decimal notation input button that defines a multiplier value applied to the index frequency that is designated by either the **Freq Reference** or virtual instrument **Input** button. The input index frequency value is defined by the equation below:

$$IndexFrequency = FreqReference[frequency] * InputFreqScale + InputFreqOffset$$

Out Freq Offset

A decimal notation input button that defines a constant shift or offset of the index frequency that is designated by either the **Freq Reference** or virtual instrument **Output** button. The frequency units are defined by the instrument frequency parameter specified by the **Freq Reference** button. This button is typically used in applications

Input Freq Scale

1

Out Freq Offset

0

to define a frequency index for measurements of a device under test that performs frequency translation such as an RF mixer or divider/multiplier. The Output index frequency value is defined by the equation below:

$$IndexFrequency = FreqReference[frequency] * OutputFreqScale + OutputFreqOffset$$

Out Freq Scale


A decimal notation input button that defines a multiplier value applied to the index frequency that is designated by either the **Freq Reference** or virtual instrument **Output** button. The frequency units are defined by the instrument frequency parameter specified by the **Freq Reference** button. This button is typically used in applications to define a frequency index for measurements of a device under test that performs frequency translation such as an RF mixer or divider/multiplier. The Output index frequency value is defined by the equation below:

$$IndexFrequency = FreqReference[frequency] * OutputFreqScale + OutputFreqOffset$$

Out Freq Scale

1

PANEL: GENERAL CALCULATIONS

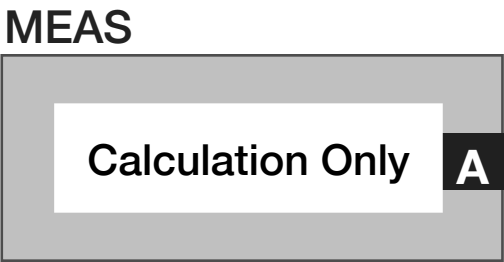


Meas: Calculation Only

This block is a compiler directive that designates the panel as a calculation only panel, i.e - there are no measurements in the associated test panel. This block forces the test optimizer to execute the panel as a calculation operation, using instrument button settings or sweeps as index parameters only. Typically this block is used in test panels where mathematical, algorithmic, data type conversion, and/or data save operations of local variables and data saves are executed. The function of the **Calculation Only** block is identical to the **Test Type** button with the 'calculation' option selected.

NOTE: Instrument sweeps used as an index for extracting data values from variable arrays or data saves within designated Calculation Only test panels do not act on the instrumentation, i.e - instrument sweeps for indexing purposes do not incur any test time impact.

Constant

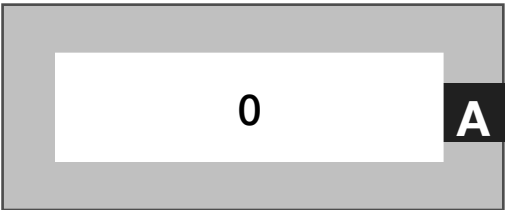

Constant

A calculation block that outputs a user-defined, fixed numerical value. It is typically used as an input to arithmetic functions and/or logic arguments. The value of a constant is defined by right-clicking within the gray area of the block and selecting 'Default...' from the pop-up menu list.

Data Type Information

The data type of the constant value can be defined by right-clicking within the gray area of the block and selecting 'DataType...' from the pop-up menu list. The unit scaling options can be defined by right-clicking within the gray area of the block and selecting 'Units Scale' from the pop-up menu list.

Convert



Convert

A one-input calculation block that converts the data type of measurements or calculation data that is supplied to the input of the


block (red A on left side). The converted data is supplied to subsequent measurement, local variable, or data save blocks by connecting the output of the block (black A on left side).

To set the conversion data type, connect the input of the Convert block to a measurement, local variable output block, or calculation block. Right-click within the gray area of the block and select 'DataType...' from the pop-up menu list.

Calc

The one input calculation block performs arithmetic operations on data provided by a single measurement or data output block. The calculation options are defined by the measurement block that is connected to the input of the block (red A on left side). The output data from the **Calc** block can be connected to multiple downstream operations or data/variable saves.

To select a calculation option for a given data type, connect the measurement data or variable output block to the **Calc** input. Once connected, right-click on the **Calc** block and select 'Calculation' from the pop-up menu options. The calculation operations available for the given data type are provided in the calculation window list.

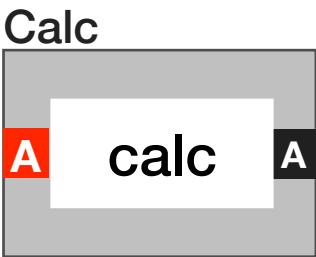


NOTE: The data type of the values supplied to the input of the Calc block is displayed at the top of the calculation window.

Calc (Two Input)

The two-input calculation block performs arithmetic operations on data provided by two measurement or data output blocks. The calculation options are defined by the measurement or data output block connected to the 'A' input of the block (red A on left side). The output data from the **Calc** block can be connected to multiple downstream operations or data/variable saves.

To select a calculation option for a given data type, connect the measurement or data output blocks to the **Calc** buttons inputs. Once connected, right-click on the **Calc** block and select 'Calculation' from the pop-up menu options. The calculation operations available for the given data type are provided in the calculation window list.

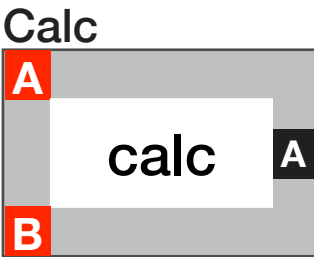


NOTE: The datatype and by extension the calculation options of the two-input calc block are defined by the data source connected to the 'A' input.

Calc (Three Input)

The three-input calculation block performs arithmetic operations on data provided by three measurement or data output blocks. The calculation options are defined by the measurement or data output block connected to the ‘B’ input of the block (red B on left side). The output data from the **Calc** block can be connected to multiple downstream operations or data/variable saves.

To select a calculation option for a given data type, connect the measurement or data output blocks to the **Calc** buttons inputs. Once connected, right-click on the **Calc** block and select ‘Calculation’ from the pop-up menu options. The calculation operations available for the given data type are provided in the calculation window list.

NOTE: The datatype and by extension the calculation options of the three-input calc block are defined by the data source connected to the ‘B’ input.

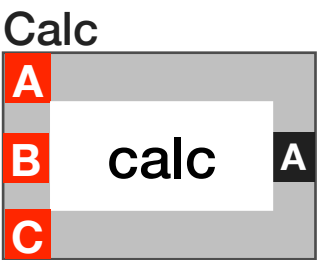

Set Symbol

A decimal notation input button that sets the value of a user-specified symbol. This button can be used to create a symbol and set its value within a test panel or to change the default value of a previously defined symbol from a symbol table. The value defined by the Set Symbol button overrides the symbol values defined in the symbol table.

The **Set Symbol** button defaults to a symbol name of ‘X’. The symbol name can be changed by right-clicking on the button and selecting ‘Symbol Name...’ from the pop-up menu list. From the name prompt, a new symbol can be created by entering the name in the empty field. A previously defined symbol value can be changed from by selecting ‘Cancel’ in the name prompt and selecting from the list of symbols.

Data Type Information

The data type of the symbol value can be defined by right-clicking on the button and selecting ‘DataType...’ from the pop-up menu list. The unit scaling options can be defined by right-clicking within the gray area of the block and selecting ‘Units Scale’ from the pop-up menu list.

Set Symbol X

0.0

Var Prompt

A decimal notation input button that creates a user prompt with an input field, and stores the user input value to the specified variable during test plan execution. This button is used to create a new variable and set its value within a test panel.

The variable name can be changed by right-clicking on the button and selecting ‘Var Name...’ from the pop-up menu list.

The text visible in the user prompt can be defined by right-clicking on the button and selecting ‘Prompt Text...’ from the pop-up menu list.

NOTE: During test plan execution, the operator must select ‘OK’ (press enter) in the prompt before the test can continue.

Data Type Information

The data type of the variable can be defined by right-clicking on the button and selecting ‘DataType...’ from the pop-up menu list.

Var Prompt



Vector Range



Vector Range

A calculation block that outputs a subset of a single connected data output block with indexed data values such as arrays, index by variables, instrument state sources, and/or calibration data. The index range can be specified by the user by setting the start and stop indices of the vector range desired: Right-click within the gray area of the block and select ‘Start Index’ to select the initial value and select ‘Stop Index’ to select the final value of the index range.

TEMPTRONICS TP04310A TEMPERATURE CONTROLLER

PANEL: TEMPERATURE

Test Plan Controlled

A drop down list button to set to ‘yes’ if used within the Test Plan. Use to quickly disable all temperature operations, useful for debugging.

Test Plan Controlled

no

Temperature

A decimal notation input button with units in °C to set the Temperature. Use the **Soak** and **Max Error** buttons to control the time needed before testing continues.

Temperature

20

Head

A drop down list button to raise or lower the ThermoStream head.

Head

up

Flow

A drop down list button to set air flow to on or off.

Flow

off

MEAS

Temperature

A

Meas: Temperature

A measurement block that outputs the measured temperature in °C.

MEAS

TemperatureSettled

A

Meas: TemperatureSettled

A measurement block that sets the time in seconds to wait until the temperature is within MaxError, then wait the number of seconds specified by the **Soak** button.

Soak

A decimal notation input button to set a wait time in units of seconds once the temperature set by the **Temperature** button is reached.

Max Error

A decimal notation input button to set the temperature error in °C at which **Soak** time starts.

Soak

0

Max Error

1

RI8568X CASSINI 16 SLOT TESTER

PANEL: STATE

The ‘Tester’ instrument provides power supplies for the fixtures. These buttons are used to control the power supplies for fixture modules or supply voltage to additional instrumentation internal to the fixture or present on the device interface board PCB.

Fixture 28v

A drop down list button to control the 28 V supply to the fixture. This supply provides voltages to drive additional RF switches, relays, etc. added to the internal of the fixture or device interface board PCB. The supply provides voltage through the fixture’s RIFL interface to the fixture carrier board.

The ‘on’ setting provides ±5 volt and ±15 volt supplies to the fixture.

The ‘off’ setting provides sets the supplies to 0 volts.


Fixture 28v

off

WARNING: There is a risk of electrical shock if there is no fixture installed on the test head when the **Fixture 28v** is set to ‘on’ in a test plan. The **Fixture 28v** button should be left in the default

setting of ‘off’ or removed from test plans if no fixture is installed on the test head.

EDIT PANELS 14 RI8574: SYSTEM CONTROLLER

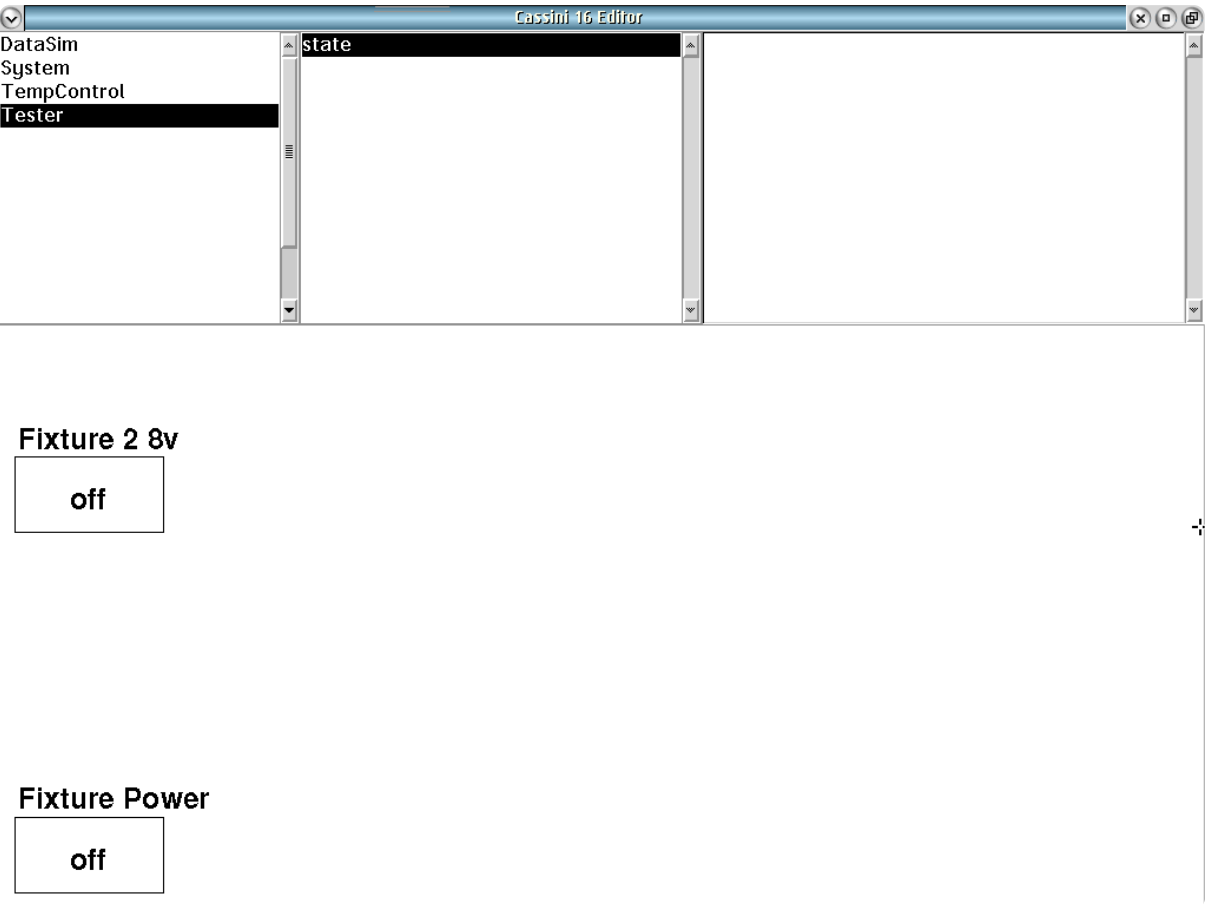

Tester **state** panel shows fixture power states.

Fixture Power

off

Fixture Power

A drop down list button to control the ± 5 V and ± 15 V supplies to the fixture. The fixture supply provides voltage through the fixture’s RIFL interface to the fixture carrier board to power on fixture modules.

The ‘on’ setting provides ± 5 volt and ± 15 volt supplies to the fixture.


The ‘off’ setting provides sets the supplies to 0 volts.

WARNING: There is a risk of electrical shock if there is no fixture installed on the test head when the Fixture 28v is set to ‘on’ in a test plan. The Fixture 28v button should be left in the default setting of ‘off’ or removed from test plans if no fixture is installed on the test head.

CONTROL PANELS

Real-time control of the instruments in this TIM. Most buttons behave exactly like described in the Edit Panel. Only controls that are not included in the Edit panel are listed in this section.

CONTROL PANELS 10 RI8574: SYSTEM CONTROLLER

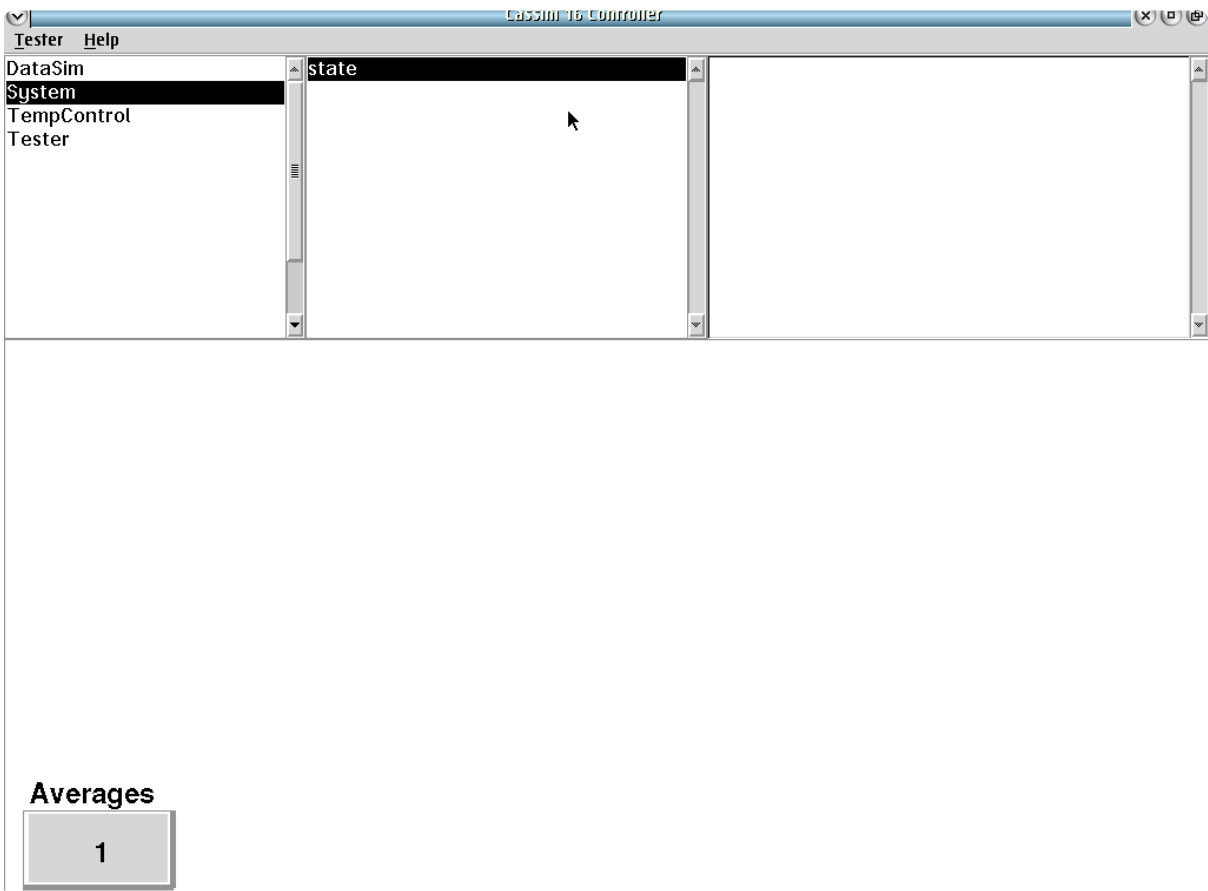

System **state** button provides real-time control over the number of averages measurements take.



SYSTEM

STATE PANEL

Averages

Many measurements support averaging. Use this button to set the averaging factor.

TEMPCONTROL

CONTROL PANEL

Temperature

Measure the current temperature in °C. (Read Only)

RI8575: PHASE NOISE MEASURE



TOPICS

[Instruments provided by this TIM](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **PhaseNoiseAnalyzer** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- PhaseNoiseAnalyzer, RI8575x 1 - 16 GHz Phase Noise Analyzer


NOTE: Multiple RI8575 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - PhaseNoiseAnalyzer, PhaseNoiseAnalyzer2, PhaseNoiseAnalyzer3, etc). The “x” in RI8575x denotes the model revision number.

INSTRUMENT BUTTON DIAGRAM 2.9

Roos Instruments, Inc - Cassini
Block Diagram, Phase Noise Discriminator TIM
RI8575A

2012-03-21
Copyright Roos Instruments, Inc.
Subject to change without notice


Tap for Zoom View

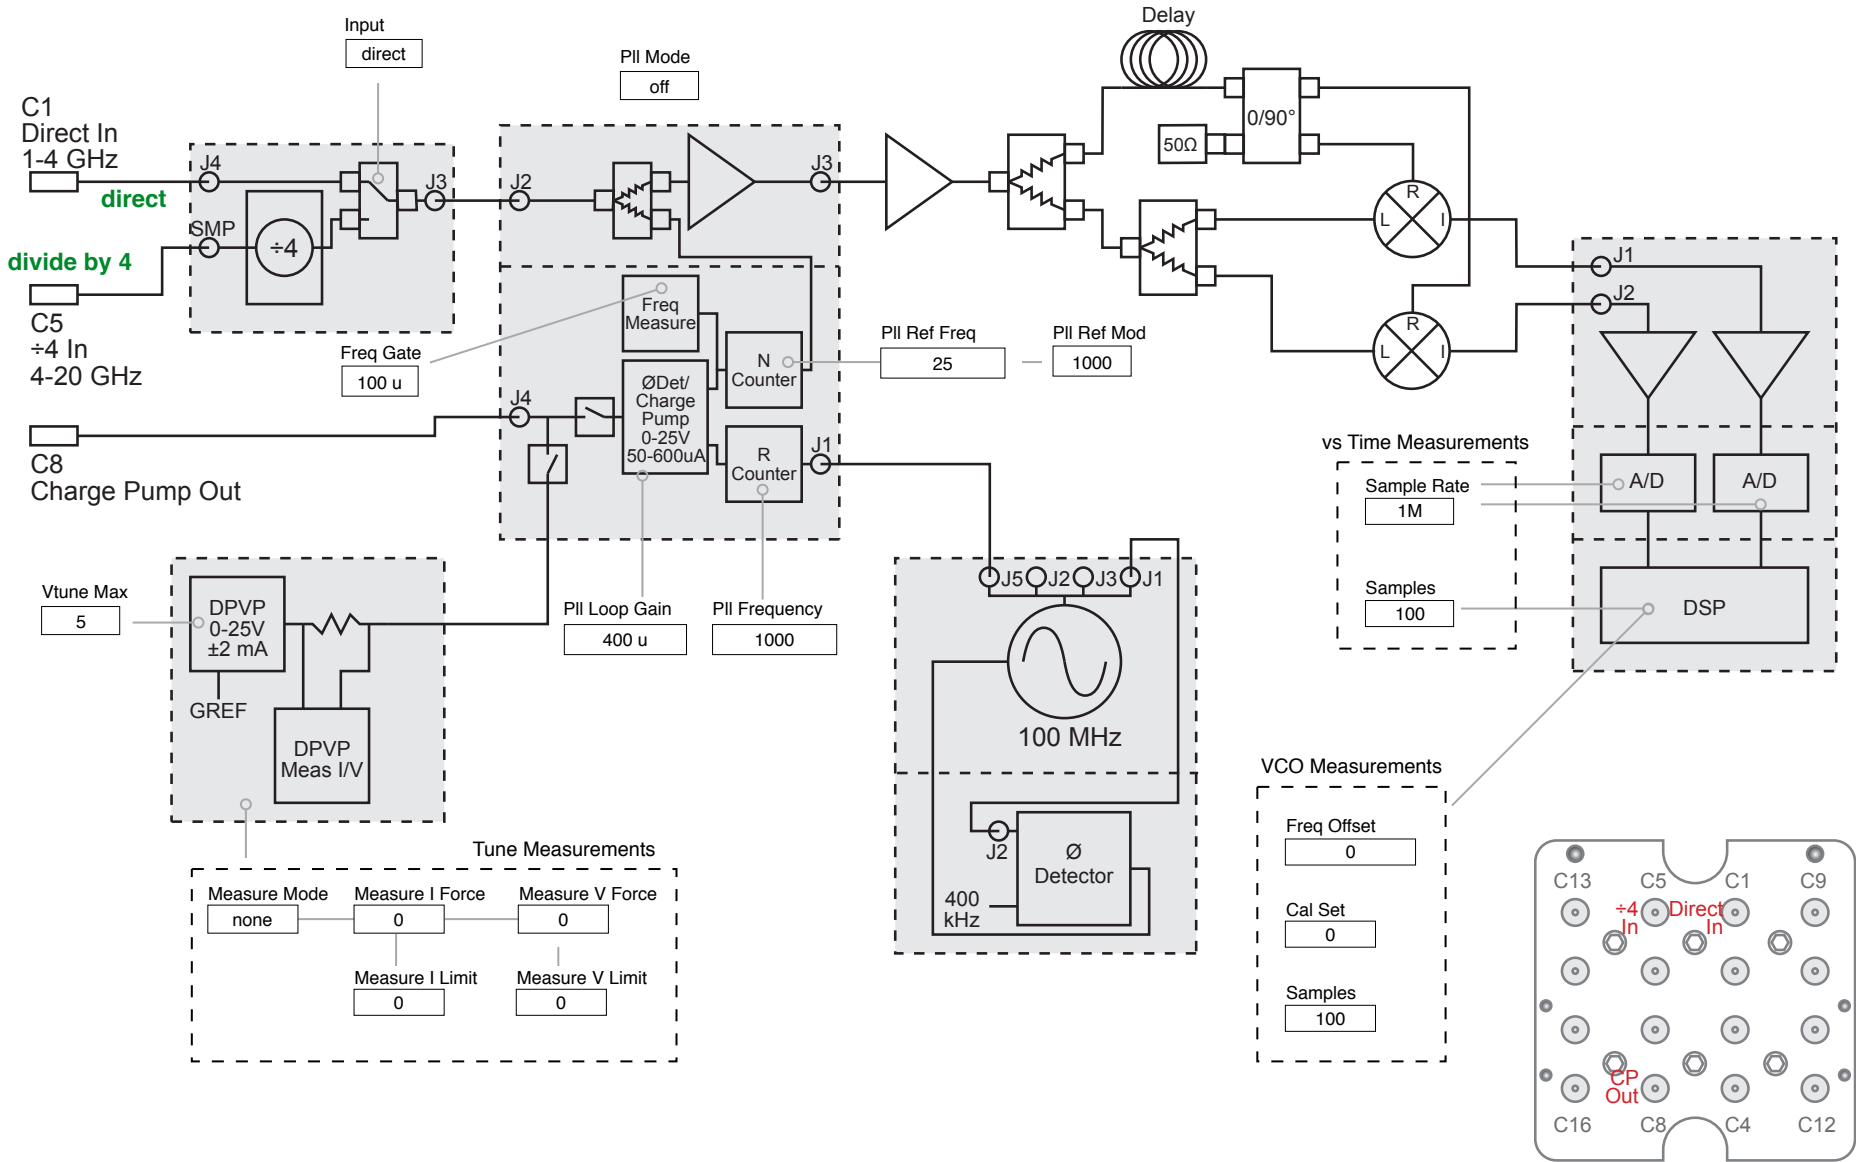


EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 15 RI8575: PHASE NOISE MEASURE

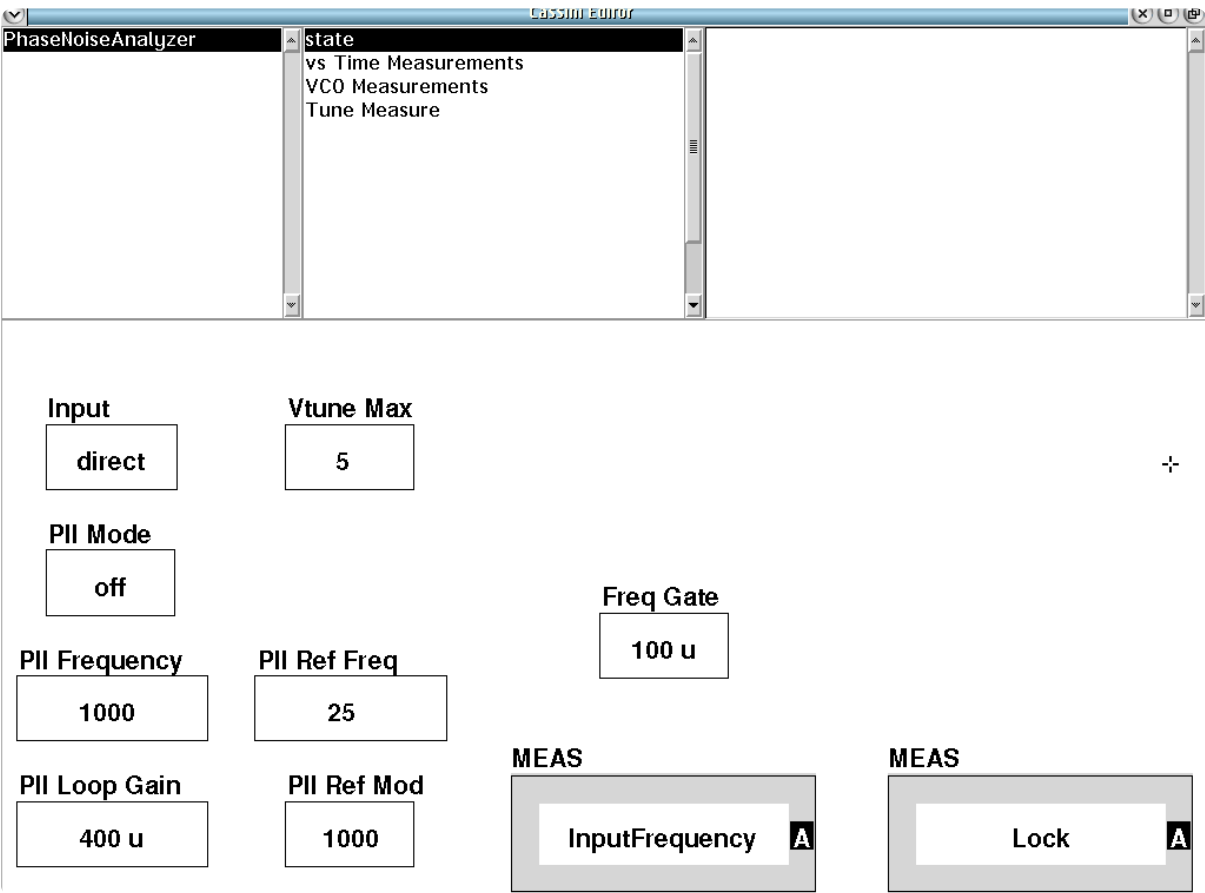

 PhaseNoiseAnalyzer **state** panel shows state and measurement buttons for the instrument in this TIM.



PANEL: STATE

PII Frequency

1000

PII Frequency

A floating-point input button with units of MHz that defines the lock frequency of the DUT. If the frequency range is between 800 MHz to 4000 MHz, set the **Input** button to the 'direct' setting. If the frequency range is between 2000 MHz to 4000 MHz, set the **Input** button to the '/4' (divide by 4) setting. The **PII Ref Freq** button (internal reference oscillator frequency) must also be set to correspond with the expected frequency from the DUT. The ratio of the **PII Frequency** value to the **PII Ref Freq** value sets the *N Counter*. The value of the **PII Ref Mod** button defines the allowable fractional component of the *N Counter* and thus the resolution of the lock frequency.

NOTE: The frequency resolution of an input to the Direct port is defined as: $Pll\ Ref\ Freq / Pll\ Ref\ Mod$

The frequency resolution of an input to the ÷4 Port (C5) is defined as: $(Pll\ Ref\ Freq / Pll\ Ref\ Mod) \times 4$

PII Ref Freq

A integer value input button that sets the reference frequency of the phase detector for the internal reference PLL in units of MHz. This reference value sets the R Counter parameter in the phase lock circuitry of the internal reference PLL. The R counter provides 100 MHz signal. This R counter drives a frequency divider for adjusting the locking value to match the DUT’s using the formula: $100\text{ MHz} \div R$. The range of R is 4 to 1023. This allows a maximum frequency value of 25 MHz. When **PII Mode** is set to ‘count’, the **PII Frequency** and **PII Ref Freq** buttons are used to set the N Counter.

NOTE: It is recommended that the Pll Ref Freq button be set to 25 MHz when Pll Mode is set to ‘count’ mode.

PII Ref Mod

An integer data input button with units of MHz that sets the fractional modulus from 0 to 4095. This button is used with the **PII Frequency** and **PII Ref Freq** buttons to define the frequency locking and phase synchronization of the DUT with the internal reference PLL.

PII Ref Freq

25

PII Ref Mod

1000

PII Loop Gain

A floating-point input button that sets the phase detector current gain with units of Amps. The maximum current value is 625uA and the minimum value is 10uA. The loop gain is primarily a function of the external loop filter and the DUT VCO’s kV. This button is used with the **Vtune Max** button.

PII Loop Gain

400 u

PII Mode

List select button that sets the function of the internal PLL and measure instruments.

The ‘off’ setting disconnects the RF input paths from the phase detector and charge pump. This mode is useful when using the parametric measure capability (DPVP Meas I/V) for leakage current measurements.

The ‘lock’ setting activates the PLL’s phase detector and connects the charge pump to the *Charge Pump Out (C8)* port to phase lock the input source for measurements using the phase noise discriminator.

The ‘count’ setting activates the frequency counter/measure function of the PLL. This setting is commonly used with the **Measure Mode**

PII Mode

off

button to capture tuning voltages with the parametric measure (DPVP Meas I/V) on the *Charge Pump Out (C8)* port.

The ‘Disc’ setting is the ‘discriminator only’ mode which disconnects the charge pump from the *Charge Pump Out (C8)* port and disables the phase detector to measures phase noise with the phase discriminator without phase locking the DUT.

Input

Drop-down list button that selects either the *Direct In 1-4GHz (C1)* or *÷ 4 4-20 GHz (C5)* RF input ports to the phase detector and PLL locking loop. The ‘direct’ value routes the *Direct In 1-4 GHz Input (C1)* port to the phase lock loop. The ‘/4’ value routes the *÷ 4 4-20 GHz (C5)*.

This button is commonly used with the **Pll Mode**, **Pll Ref Freq**, **Pll Frequency**, **Pll Ref Mod**, and **Vtune Max** buttons.

NOTE: The ‘Direct In’ port supports frequencies from 800 MHz to less than 4 GHz and the ‘÷ 4’ port supports frequencies from 4 GHz to 20 GHz with -5 dBm to +10 dBm typical performance.

Input

direct

Freq Gate

100 u

Freq Gate

Integer value button that sets the frequency counter/measure instruments capture time in seconds. The frequency counter depth is 16 bits. The frequency resolution in Hz is defined as:

$(1 \div \text{Freq Gate}) \times (\text{Pll Frequency} \div \text{Pll Ref Freq})$

The maximum **Freq Gate** value is:

$(\text{Pll Frequency} \div \text{Input Frequency}) \times (1 \div \text{Pll Ref Freq})$

NOTE: If the input frequency and Pll Ref Freq button value are set to the recommended 25 MHz, the Maximum Freq Gate value is 2.6 msec.

Vtune Max

5

Vtune Max

Floating-point button that sets the upper limit or maximum value of the drive voltage for tuning the DUT frequency. This setting provides a voltage upper limit clamp to prevent the *DPVP 0-25V ±2mA* supply from exceeding the DUT’s supply or rail voltage. The maximum voltage value is 25 volts and minimum is 5 volts.

This button is commonly used with the **PII Mode** button in the ‘lock’ setting with the **Input**, **PII Ref Freq**, **PII Frequency**, **PII Ref Mod** buttons.



Meas: Input Frequency

Measurement block that calculates the input frequency in MHz. This block is only valid with a **PLLFrequency** button set to the maximum expected frequency.

The **PIIMode** button can be set to count for unlocked measurements or lock if the **MeasureMode** button is not set to ‘none.’

Meas: Lock

Measurement block where the result is a floating point value of 1.0 if the loop is locked (true). This block is only valid in **PII lock** mode when the **MeasureMode** button is set to ‘none’.

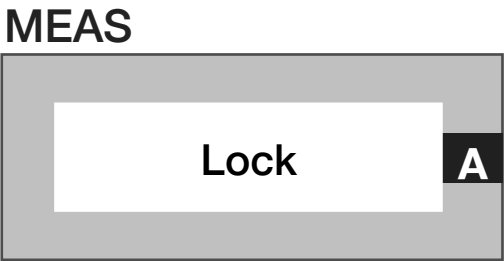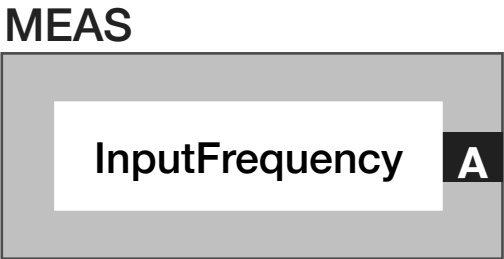

PANEL: VS TIME MEASUREMENTS

Samples

1

Samples

Integer value button that sets the number of samples to use in a phase measurement with the discriminator. The maximum value is 1024. Together with the **Sample Rate** button, this button defines the total measurement time for **Noise Vs Time** and **Tune Voltage Vs Time** measurement blocks.

Sample Rate


1 M

Sample Rate

Decimal notation input button that sets the sample rate for phase measurements with the discriminator in Hertz. The maximum sample rate is 40 MHz. Together with the **Sample Rate** button, this button defines the total measurement time for **Noise Vs Time** and **Tune Voltage Vs Time** measurement blocks.


Meas: Disc Vs Time

Measurement block that calculates the DC output of the discriminator. Used to get carrier frequency information.

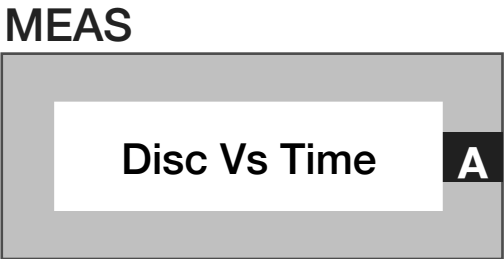


Meas: Noise Vs Time

Measurement block that computes the AC output of the discriminator. It is used for raw FM measurements.

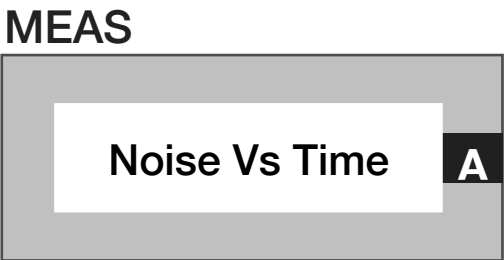

Meas: Tune Voltage Vs Time


Measure block that computes the tune voltage. The **Measure Mode** button must be set 'Meas V' to capture voltage values on the *Charge Pump Out (C8)* tune line.

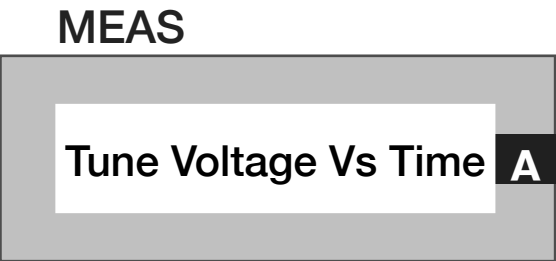

PANEL: VCO MEASUREMENTS


Meas: Sideband

The measurement block assumes a FM tone sideband and gives the ratio of the sideband power to the carrier power. The measured value is a one sided calculation of the carrier as seen on a spectrum analyzer and is B/2.

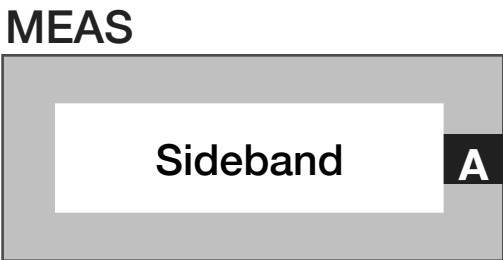

Meas: Phase Noise

Discriminator power measurement adjusted for offset frequency in dBc/hz. The result is a one sided calculation similar to the measurement computed on a spectrum analyzer.

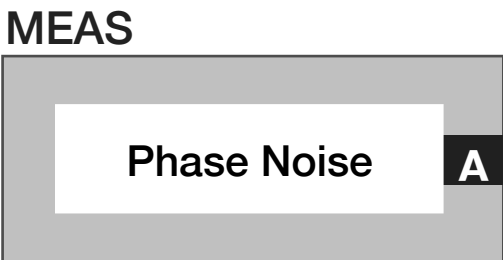

Freq Offset

Integer value button that sets the frequency offset in units of Hertz for the DSP mixer.

Freq Offset

0

Samples

Integer value button that sets the number of samples used in a measurement. For DSP measurements this is the number of averages. The maximum value for VCO measurements with the DSP is 3000 samples.

Samples

100

Cal Set

Local variable input button used for RI internal purposes only.

Cal Set

0

PANEL: TUNE MEASURE

Measure Mode

none

Measure Mode

Drop down list button that select the mode of the *Charge Pump Out (C8)* port.

Drop down list button that sets the mode of the precision measure instrument (*DPVP Meas I/V*).

The ‘none’ selection disconnects the precision measure resource from the *Charge Pump Out (C8)* port.

The ‘Meas I’ selection forces a voltage defined by the **Measure V Force** button and measures on the *Charge Pump Out (C8)* port. The **Measure I Limit** button restricts the maximum amount of current delivered by the supply(*DPVP 0-25V, ±2 mA*) during the measurement to avoid damaging the device pin if there is a DUT failure.

The ‘Meas V’ selection forces a current defined by the **Measure I Force** button and measures the resulting voltage on the *Charge Pump Out (C8)* port. The **Measure V Limit** button restricts the maximum voltage applied by *DPVP 0-25V, ±2 mA* during the measurement. Typically the **Measure V Limit** button is set to the DUT’s supply rail or ground depending on the polarity of the **Measure I Force** button to avoid damaging the device pin.

NOTE: This mode is typically used for continuity tests or testing protection diodes on DUT pins.

The ‘Leakage’ selection measures the current on the *Charge Pump Out (C8)* port. This mode sets the precision measure’s sense resistor to it’s lowest current measurement range and incorporates a built-in, recursive averaging method to measure DC leakage currents in the pA range. Leakage forces voltage with a 50u max current.

NOTE: This mode can be used in continuity tests for device pins with large in-rush currents or long duration time constants during power up.

The ‘Leak Cal’ selection is the same mode as the ‘Meas I’ mode with the exception that the voltage limit settings are deactivated. The value set with the **Measure V Limit** is ignored, and the supply(DPVP 0-25V, $\pm 2\text{ mA}$) will provide as much available voltage as possible to force the current condition defined by the **Measure I Force** button.

NOTE: Use caution with this mode, as pin voltages can exceed the rail voltages of the device under test.

Measure I Force

Force current in iMeas mode. Max is 2 mA.

Measure I Force

0

Measure V Force

0

Measure V Force

Force voltage in Force V mode. Range is -2 to +25 volts.

Measure V Limit

0

Measure V Limit


Voltage limit in I Force mode. Range is 0 to 25 volts

Measure I Limit

0


Measure I Limit

Current limit in vMeas mode. Max is 2 mA.

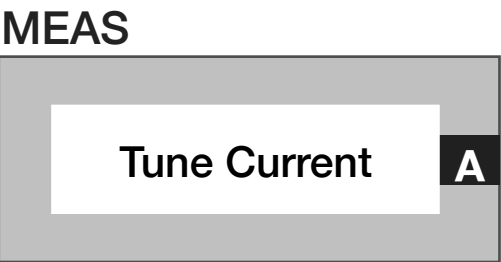

Meas: Tune Current

Measure the current on the tune line. Range is ± 2 mA or $\pm 50\mu$ A in leakage mode. When not in leakage mode then setting Measure I Limit to less than 500μ A selects a finer resolution.

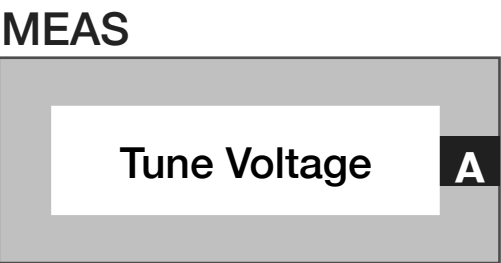


Meas: Tune Voltage

Measure the voltage on the tune line. Range is -3v to + 25v

CONTROL PANELS

Real time control of the instruments in this TIM.

CONTROL PANELS 11 RI8575: PHASE NOISE MEASURE

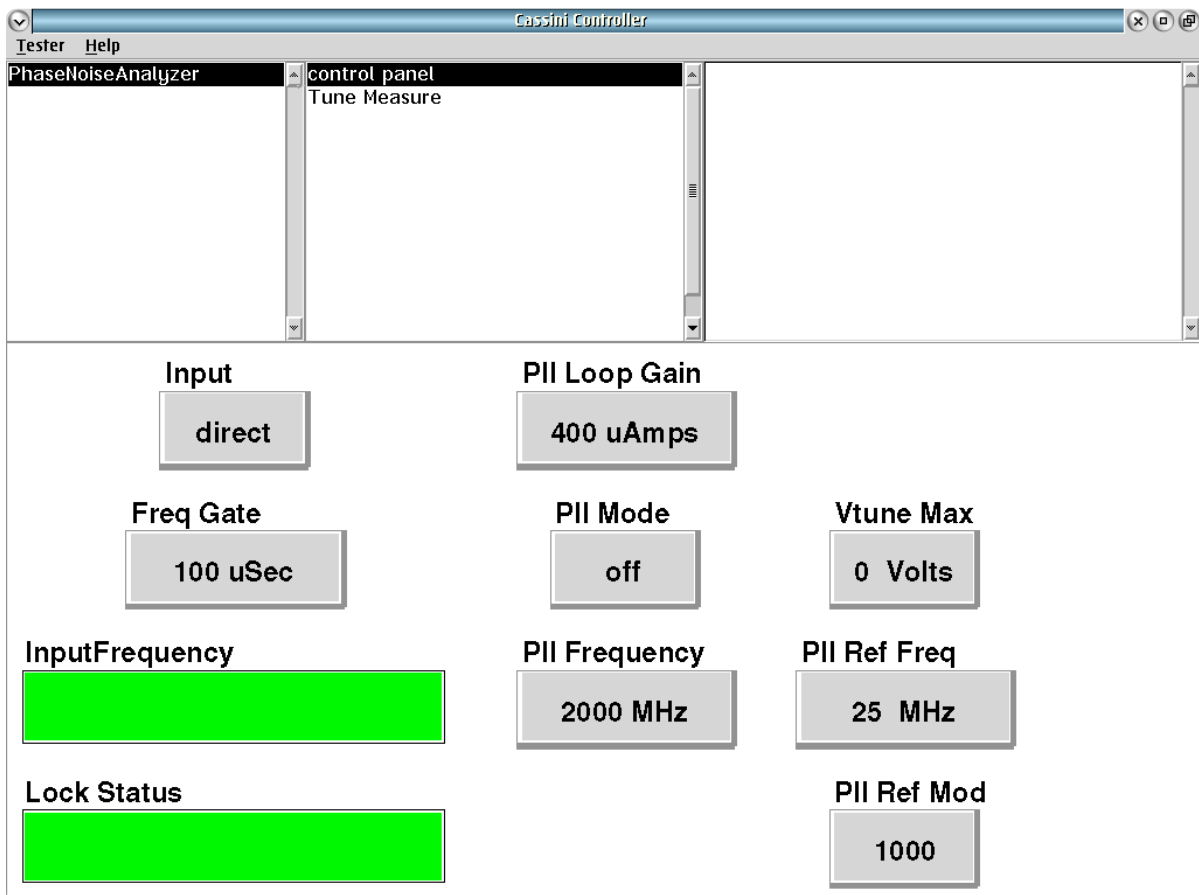

PhaseNoiseAnalyzer **control panel** shows state and connection buttons for real-time control of the instrument in this TIM.



CONTROL PANEL

InputFrequency

Displays the input frequency.

Lock Status

Displays the lock status.

TIME MEASURE

VOLTAGE

Displays the Voltage.

CURRENT

Displays the Current.

RI8577: SOURCE COMBINER



TOPICS

[Instruments provided by this TIM](#)

[Configuration Panel](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content.

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Src12Output** in the panel dialog windows. Additional TIMs appear as Src12Output# with # replaced by the number of TIM.

Model and Name as it appears in the Tester Configuration:


- Src12Output, RI8577x Src1/2 Output TIM

NOTE: Multiple RI8577 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Src12Output, Src12Output2, Src12Output3, etc). The “x” in RI8577x denotes the model revision number.

CONFIGURATION PANELS

All of the connection path buttons **Source1 RF Input- pin:C1**, **Source2 RF Input -pin:C5**, **Main RF Output -pinC7**, **Aux RF Output1 -pin:C3**, **Aux RF Output2 -pinC8**, and **Source2 Output - pinC4** are green because they provide connections to the Test Fixture interface. This means they must be defined by the connections that are listed in the Test Fixture definition, but are still displayed here.

CONFIGURATION PANELS 5 RI8577: SOURCE COMBINER

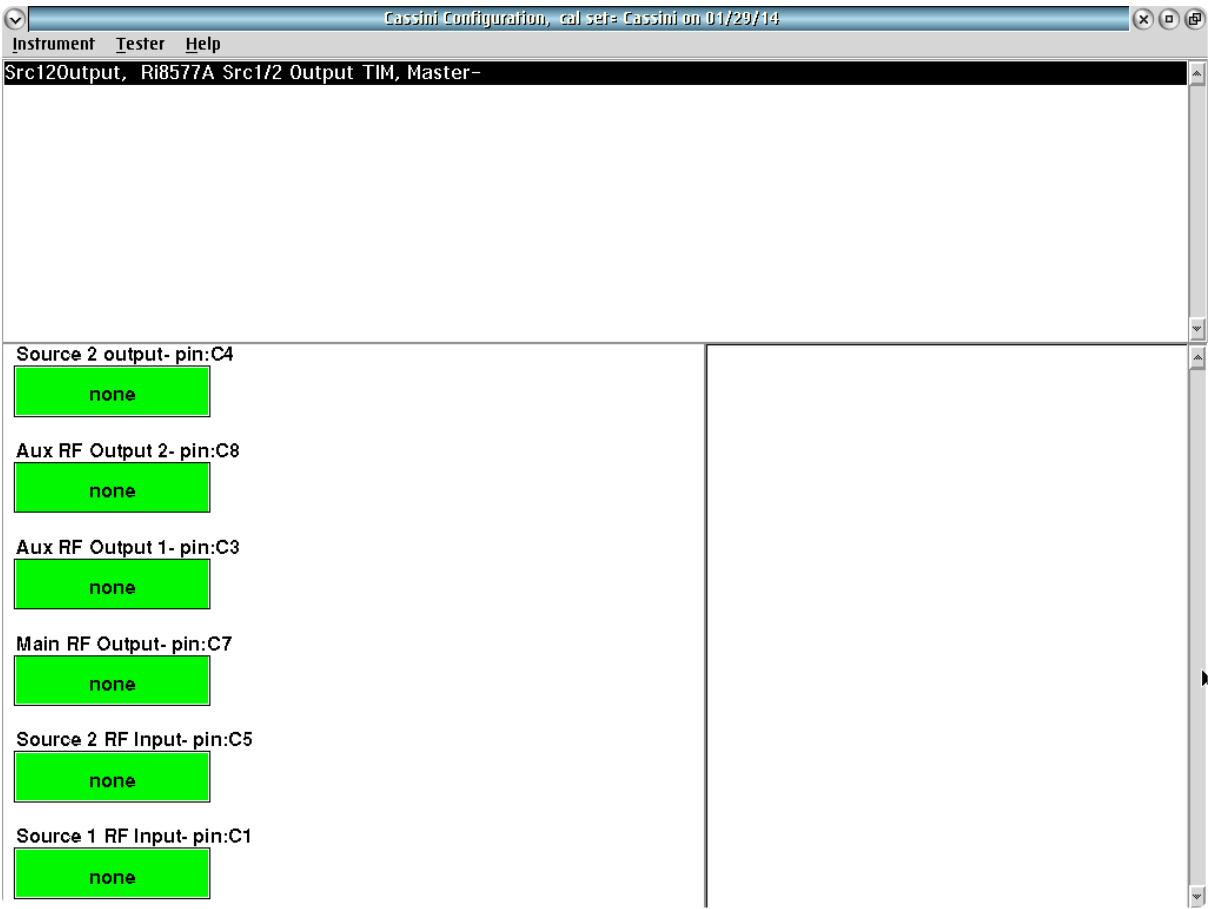


Displays connection paths entering and leaving this TIM.

INSTRUMENT BUTTON DIAGRAM 2.10

R


Block Diagram, Src1/2 Output TIM
RI8577A0
2013-08-01

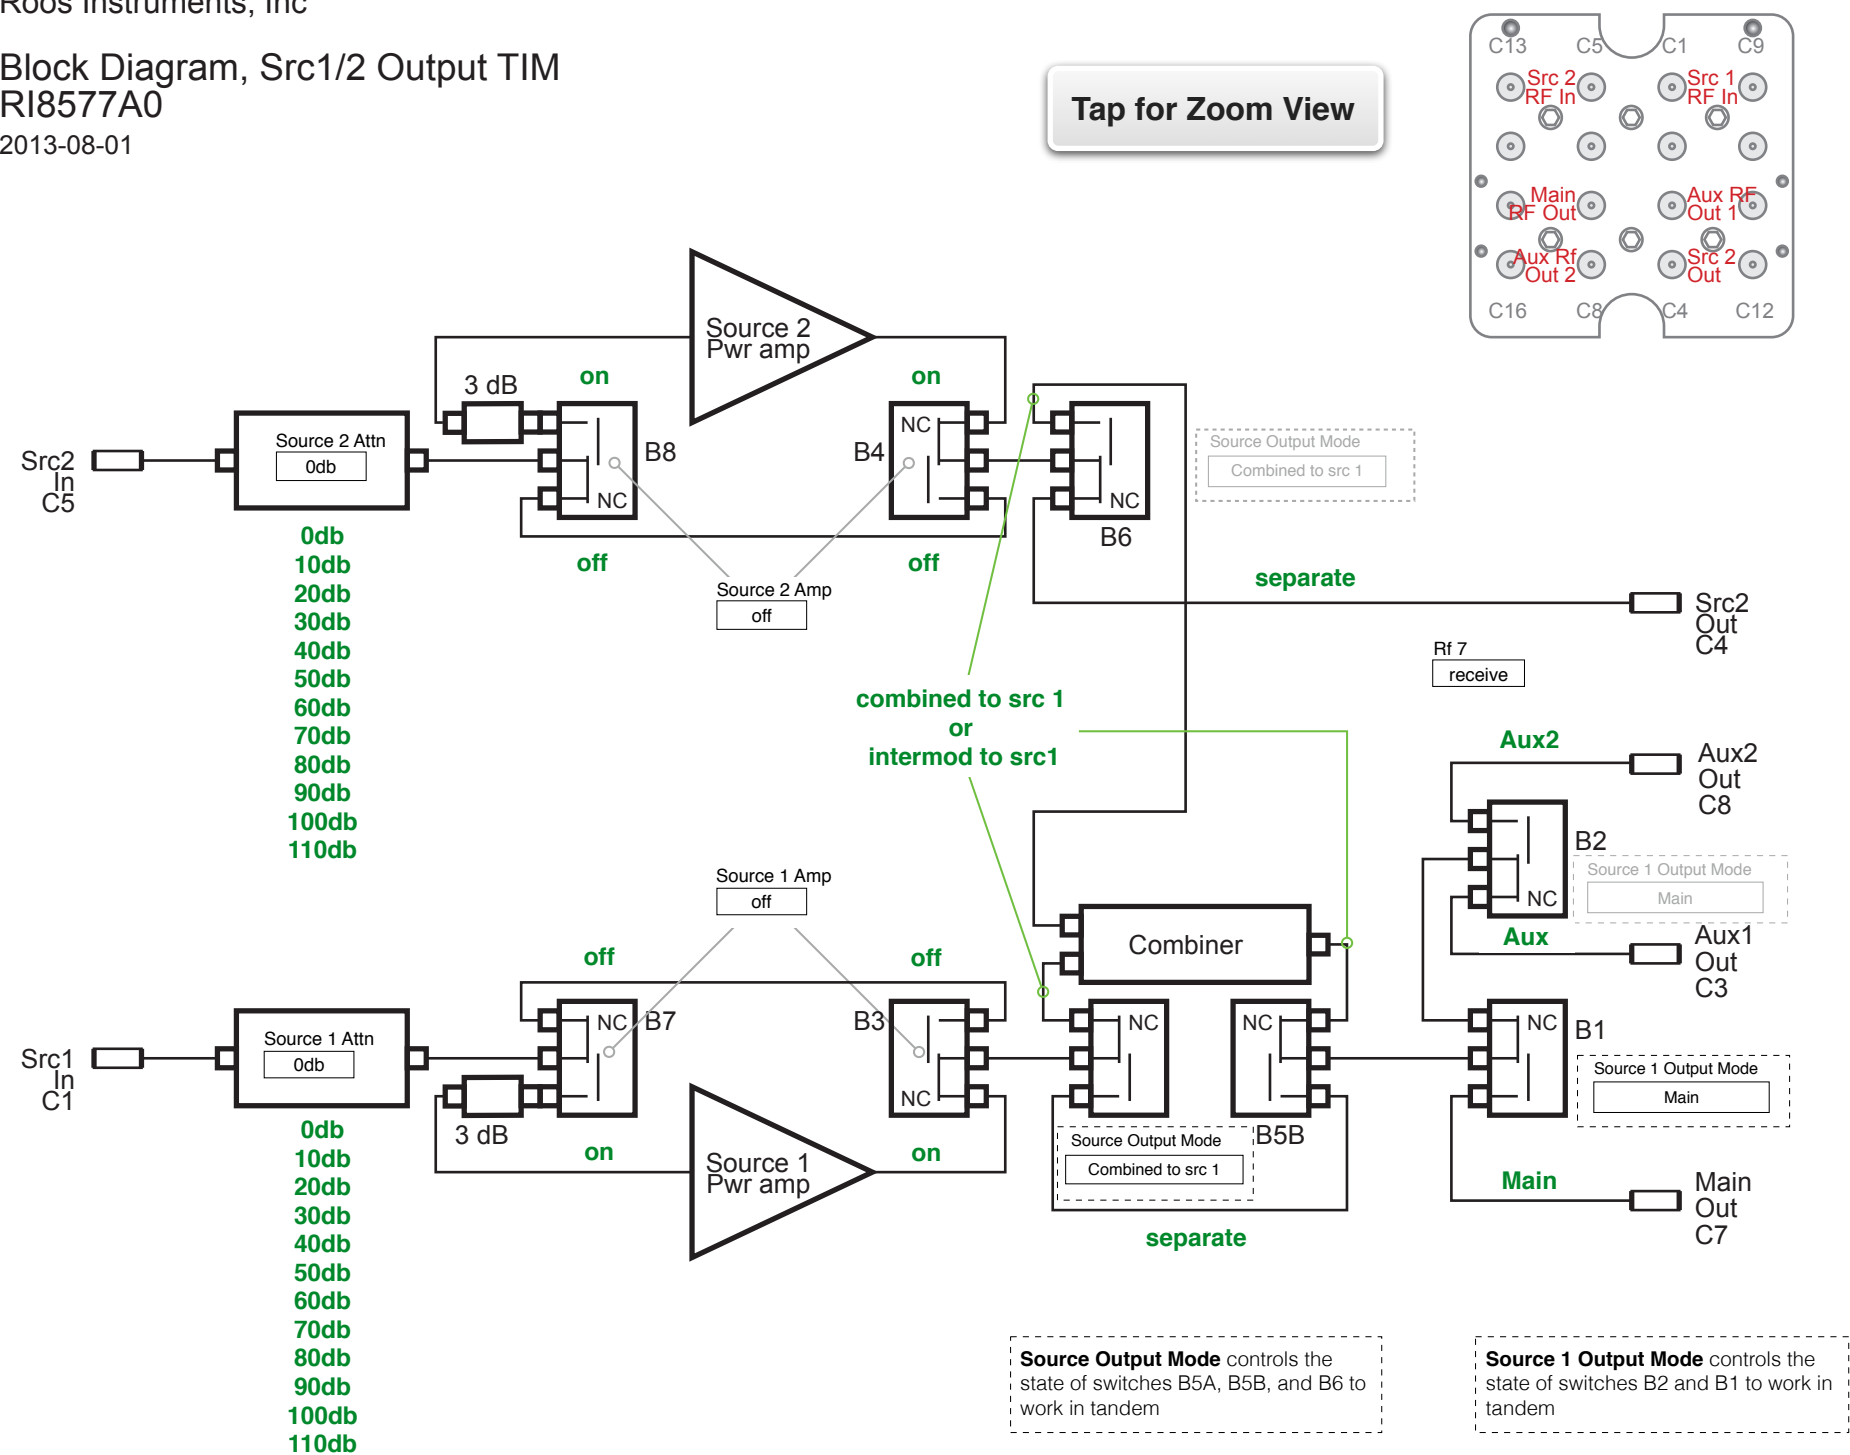

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 16 RI8577: SOURCE COMBINER

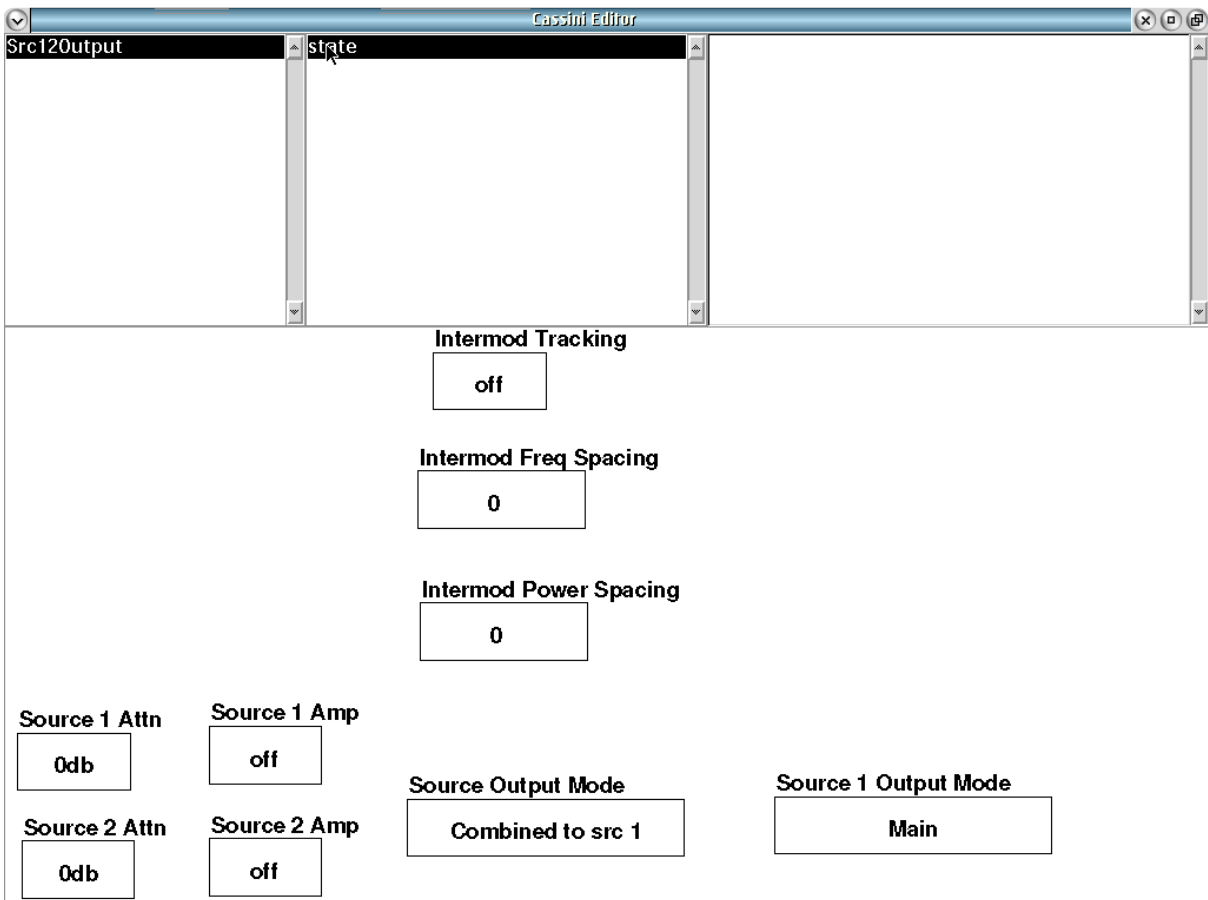

Src12Output controls the signal paths going through this instrument.

PANEL: STATE

Source 1 Attn

0db

Source 1 Attn

A drop down list button for path 1 that switches in the steps of the 110 dB mechanical attenuator offered in 10 dB steps.

NOTE: The “0” dB step is relative to the other steps.

Source 2 Attn

0db

Source 2 Attn

A drop down list button for path 2 that switches in the steps of the 110 dB mechanical attenuator offered in 10 dB steps.

NOTE: The “0” dB step is relative to the other steps.

Source 1 Amp

A drop down list button that in the “on” state connects a 20 dB gain amp into the output path. (usable only 500 MHz to 6 GHz)

Source 2 Amp

A drop down list button that in the “on” state connects a 20 dB gain amp into the output path. (usable only 500 MHz to 6 GHz)

Intermod Tracking

A drop down list button that in the “on” state directs the compiler to use the information in the “Intermod Frequency Spacing” button, and “Intermod Power Spacing” buttons tracking and redirect the Source1 and Source 2 instruments-parameters.

Source 1 Amp

off

Source 2 Amp

off

Intermod Tracking

off

Intermod Freq Spacing

0

Intermod Freq Spacing

A floating-point input button with units of MHz that sets the spacing between the two Sources to setup a Two tone measurement. Source 1 will be set above its requested frequency by 1/2 the intermod frequency spacing and Source2 will be set below the requested frequency of Source 1 was set to by the same amount. This is only valid when the Source Output Mode is set to “intermod to Src 1” mode.

Intermod Power Spacing

0

Intermod Power Spacing

A floating-point input button with units of dB that sets the output power difference between the two Sources. Source1 is set to its requested power and Source2 is offset from that set in Source 1 by the value of the Intermod Power Spacing button. This only has effect when the Source Output Mode is set to “Intermod to src1”mode.

Source Output Mode

Combined to src 1

A drop down list button that sets the internal source routing to be combined with a passive power combiner or still conditioned but as separate outputs.

The “separate” mode routes the Source 1 output directly to the output selected with the Source 1 Output Mode button. Source 2 is set to the Src 2 out directly.

The “Combined to src1” mode routes the two sources into a passive power combiner and then routes the combined signal to the output selected with the Source 1 Output Mode button. The Src2 output is disconnected.


The “Intermod to src1” mode again routes the two sources into a passive power combiner and then routes the combined signal to the output selected with the Source 1 Output Mode button. The Src2 output is again disconnected. In addition this mode directs the compiler to alter the values of both Source1 and Source2’s Frequency and Power output settings to take into account the values listed in the “Intermod Freq Spacing” and “Intermod Power Spacing buttons.

Source 1 Output Mode

Main

Source 1 Output Mode

CONTROL PANELS 12 RI8577: SOURCE COMBINER

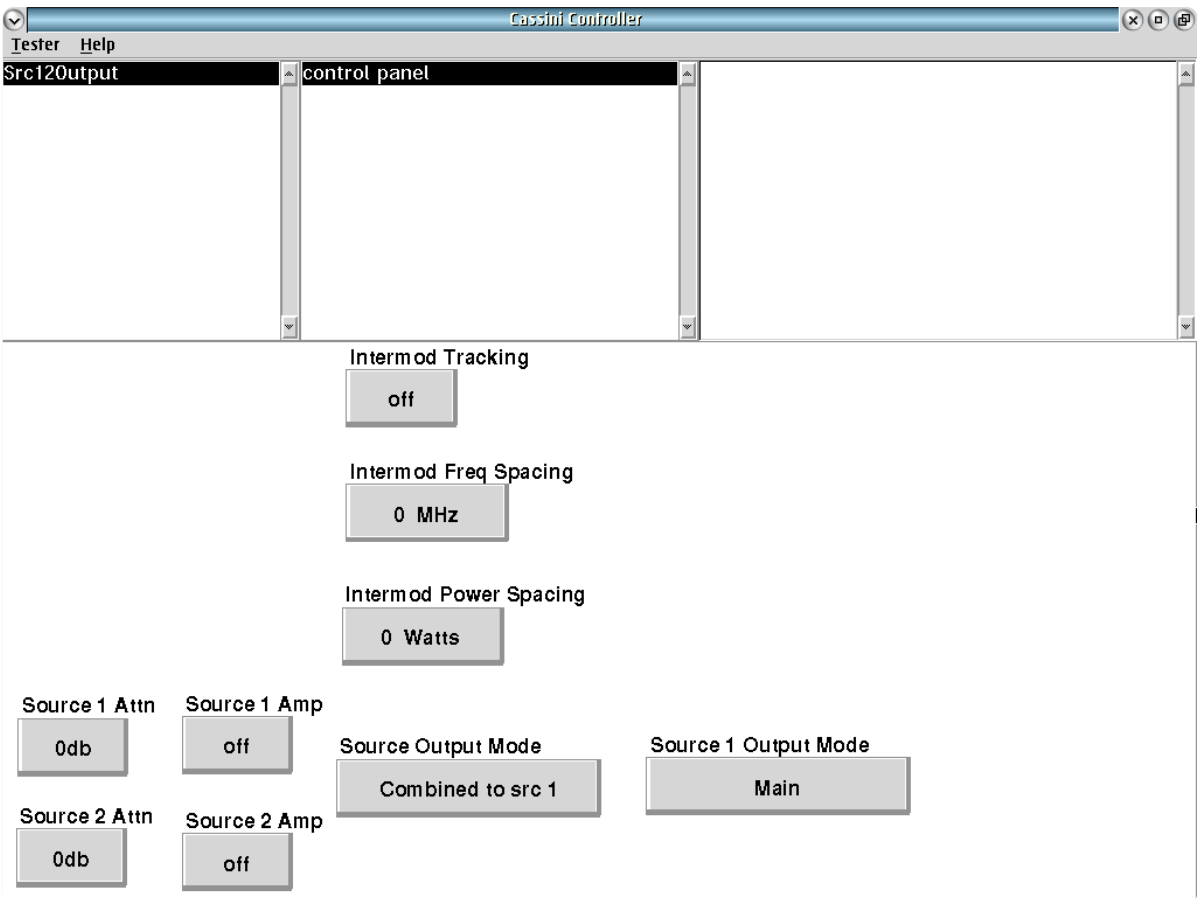


Src12Output control panel provides real-time control of signals going through this TIM.

A drop down list button that sets the internal source routing to connect the output of the Source 1 path to either the “Main”, “Aux”, or “Aux2” output ports.

CONTROL PANELS

Real time control of the instruments in this TIM. Please refer to the Edit Panels for help with buttons contained in both the “Edit” and “Control” panels.

RI8580: 57GHz TO 64GHz TESTSET

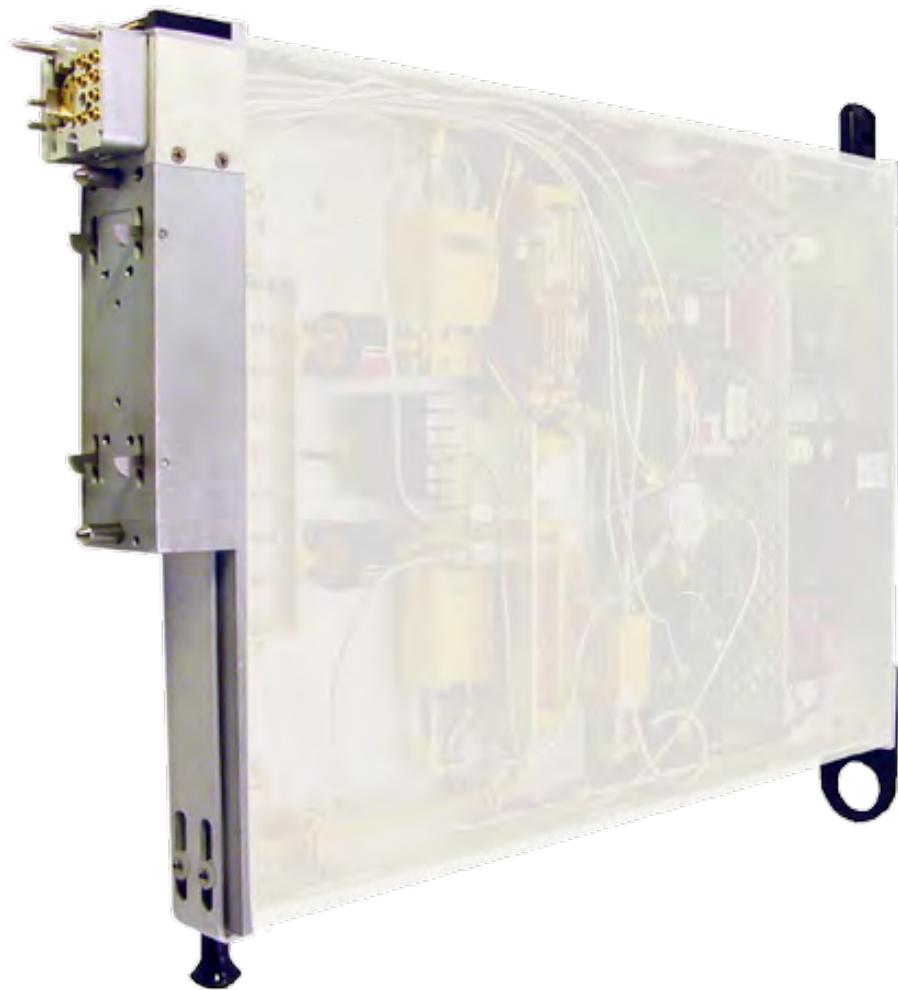

TOPICS

[Instruments provided by this TIM](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Test Head66** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Test Head66, RI8580x 66 GHz Test Set


NOTE: Multiple RI8580 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head66, Test Head662, Test Head663, etc). The “x” in RI8580x denotes the model revision number.

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

Note: Screenshots show Test Head66 buttons, subject to change.

EDIT PANELS 17 RI8580: 57 TO 64GHz TEST SET

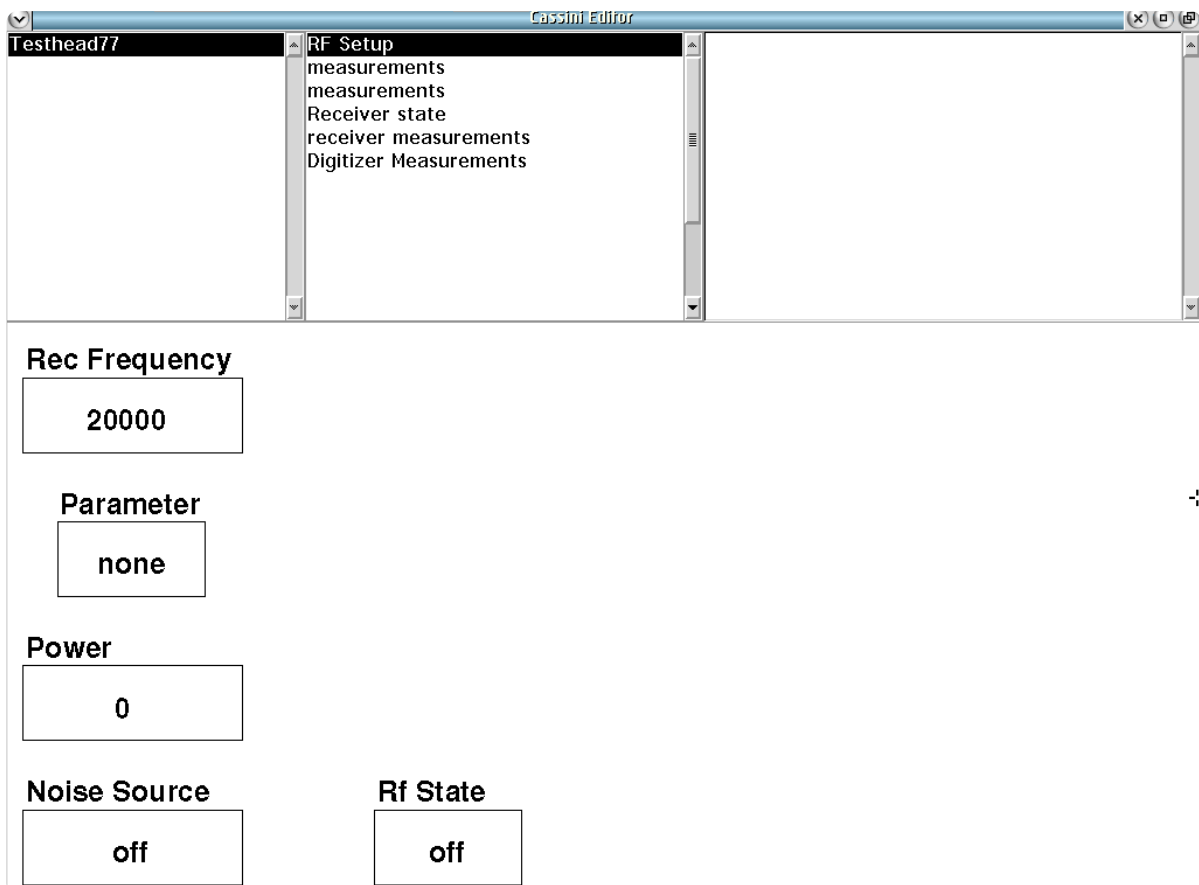

Testhead66 RF Setup shows state configuration options.

PANEL: RF SETUP

Parameter
none

Parameter

Drop down list button that designates which of the coupler ports will be routed to the switching network. It is typically used for routing incident/reflected wave signals to the receiver for wave/s-parameter measurements.

Choices: a1, b1, b2, Rf4

The ‘a1’, ‘b1’. and ‘b2’ selections uses the compiler’s expert system to automatically select the correct switch routing. These selections require an RF port to be set by **Input Port** and **Output Port** buttons and corresponding **Rf 2/Rf 3**, **Rf 6** or **Rf 7** button selections.

Note:

a1 is the incident wave to the input port of the device under test.

b1 is the reflected wave from the input port of the device under test.

b2 is the reflected wave from the output port of the device under test.

Noise Source

Drop down list select button that sets Noise Source on or off

Power

Decimal notation input button that sets power at the device to a dBm value. Resolution is 0.1 dBm.

Rec Frequency

Decimal notation input button that sets the receiver frequency in MHz.

Rf State

A drop down list button that sets the RF source output to the “on” or “off” state.

Noise Source

off

Power

0

Rec Frequency

20000

Rf State

off

PANEL: MEASUREMENTS

Meas: Input Wave

Measurement block that performs power corrected one port wave parameters at the receive Frequency.

Meas: Corrected S11

Measurement block that performs a corrected S11 parameter measurement.

Average Mode

A drop down list button that is associated with the higher-level macro measurement buttons that sets the method of averaging used.

MEAS

Input WaveA

MEAS

S11A

Average Mode

std


The “std” mode uses the number of Averages set by the System Button when measuring and completes all the averages of each of the parameters in a high-level macro button before moving to the next parameter. For example, on an S11 measurement with 4 averages, the tester would measure a₁, a₁, a₁, a₁, then b₁, b₁, b₁, b₁. This is the fastest averaging mode, but if the signal drifts while the a₁ measurements are being made, the measurement can be less accurate.

The “adjacent” mode uses the number of **Averages** set by the System Button as above, but when measuring to satisfy a high-level macro button, it takes data from each of the parameters needed one at a time, before completing another round of measurements for the average. For example, on an S₁₁ measurement with 4 averages, the tester would measure a₁, b₁, a₁, b₁, a₁, b₁, a₁, b₁. This makes the a₁ and b₁ measurements virtually simultaneous. The “adjacent averaging” mode is slightly slower than the “std” mode, but can minimize the effects of any signal drift especially for large number of averages.

NOTE: At higher frequencies and with averages greater than 8 to 16, some improvement in accuracy and repeatability are often achieved using the adjacent averaging mode.

PANEL: MEASUREMENTS


MEAS

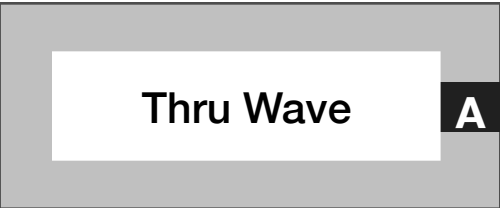

Meas: Thru Wave

Measurement block that performs a₁₁ and b₂₁ measurement at the input frequency. The result is corrected to be absolute voltage. note that the phase is only defined within a test and not with any other readings.

MEAS

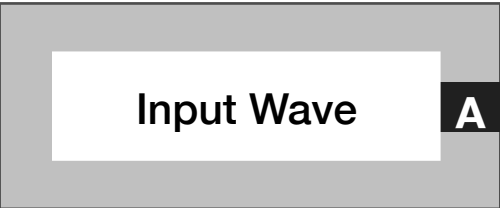


Meas: Input Wave

Measurement block that performs a power corrected wave measurement.

Meas: Corrected S11

Measurement block that performs a corrected S11 parameter measurement.

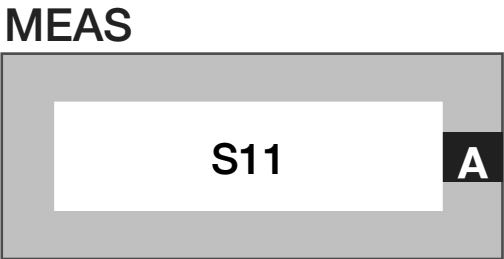

PANEL: RECEIVER STATE

If Bw

If Bw

200 kHz

Drop down list select button that sets the receiver’s analog detection bandwidth within the “IF Board, 21.4 MHz” in the block diagram. The ‘5 MHz’ option is the full bandwidth of the receiver’s front-end.

The ‘7 KHz’ value is a bandpass filter applied before the IF signal is converted to zero IF/baseband.

The ‘200 kHz’ is a low pass filter applied after IF conversion to zero IF.

The ‘TOI’ value activates a filtering/gain/attenuator mode that selects the ‘7 kHz’ IF filter and optimizes the IF and baseband gain/attenuator scheme for third order intercept measurements. In ‘TOI’ mode the **If Gain** button is limited to values of ‘8’ and ‘14’.

If Gain

Drop down list select button that sets the gain of an amplifier in units of dB within the “IF Board, 21.4MHz” shown in the block diagram. This value should be optimized for best dynamic range. The selection options of ‘8’, ‘14’, ‘20’, ‘26’, ‘32’, ‘38’, ‘44’, ‘50’, ‘56’, ‘62’, and ‘68’ are in units of dB.

NOTE: Optimal settings are achieved by increasing the value until an overflow messages appears in the message window during test compile or run and then selecting the value below the setting that causes an overflow warnings.

Samples

A integer button that is the number of samples per waveform measure points.

Meas Rate

Floating point data button that sets the measure rate. The fastest is 200 KHz

If Gain

20

Samples

1

Meas Rate

80000

Rms Bw

Sets the post detection bandwidth. RMS uses a 10 MHz IF bandwidth always.

Rms Gain

Drop down list button that sets the post-detection gain. ‘Low’ is approximately -20dB.

Rms Bw

Slow


Rms Gain

High

PANEL: RECEIVER MEASUREMENTS


Meas: Noise Power

Measurement block that performs a noise power measurement for the current path.

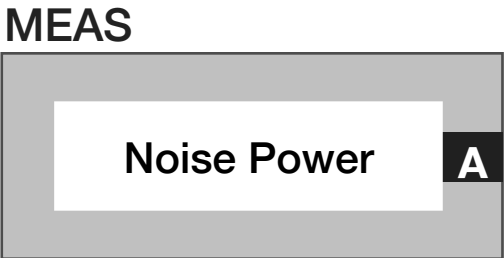


Meas: Voltage

Measurement block that performs a complex voltage measurement for the current path.

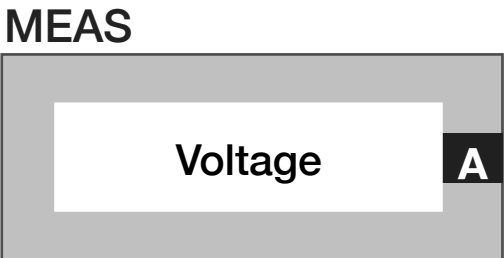


Meas: Power

Measurement block that performs a corrected power measurement for the current path. Converts voltage to power and then averages the result

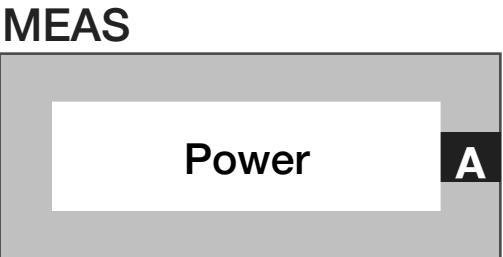

Meas: Phase Noise


Measurement block that performs the noise power measurement in a 1 Hz bandwidth using the current path. Uses the **Noise Power** measurement as it base.

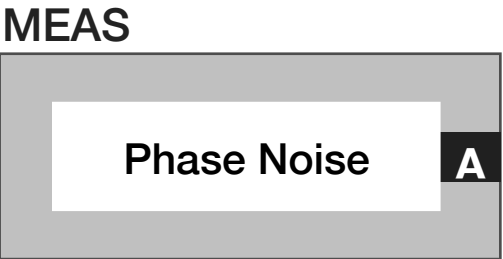

Meas: Voltage Vs Time

Measurement block that creates a vector of complex voltage measurements vs Time. The vector is a Complex data type.


Meas: RMS Power Vs Time

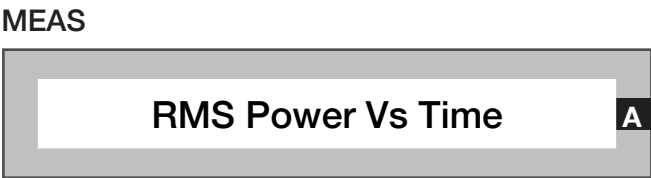

Measurement block that creates a vector of RMS Power measurements vs. Time.

Meas: RMS Power


Measurement block that performs RMS power measurement for current path using the RMS/Noise detector.

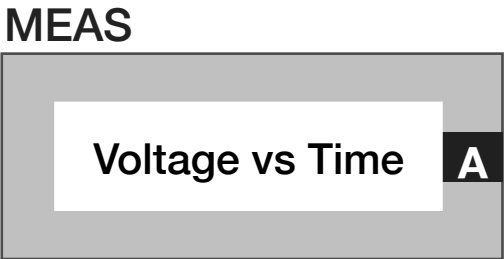

Meas: RMS Voltage

Measurement block that performs a RMS voltage measurement using hardware RMS calculation.

Note: Fully error corrected Scalar data type.

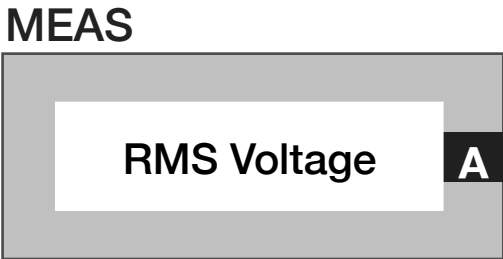

PANEL: DIGITIZER MEASUREMENTS

Trigger



Drop down list button that is used in a pre/post measure groups to activate ('on') or deactivate ('off') triggered receiver measurements. This button is commonly used with the **Delay** button in the pre/post measure group and the **Trigger Mode** button in the test panel or section default.

Trigger Mode

Drop down list button that configures the receiver's detector hardware for different trigger/pulse type measurements. This button is commonly used in test panels with the **Trigger** and **Delay** buttons placed in pre/post measure groups.

The 'normal' selection uses the receiver's voltage detector for triggered measurements.

The 'voltage' selection performs the same function as the 'normal' mode.

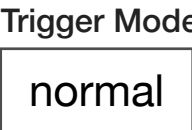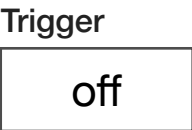


The 'power' selection uses the RMS detector for triggered measurements.

The 'V vs T' selection uses the voltage detector for triggered **Voltage vs Time** block measurements.


Delay


Decimal notation input button used within pre/post measure groups to delay the start of a triggered measurement with a user-defined duration. The value is in units of seconds with a maximum value of 0.01 seconds and a resolution of 1µs. This button is commonly used with the **Trigger** button.

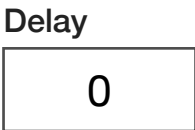

Meas: Delayed Power


Measurement block that performs a RMS power measurement after a specified delay time set by the **Delay** button.

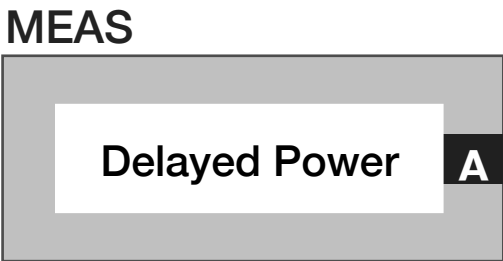

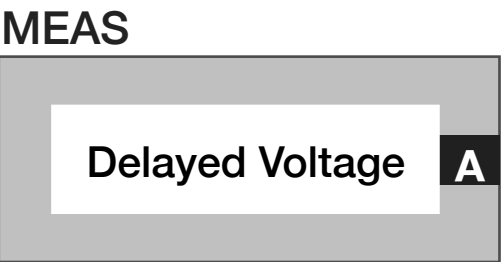

Meas: Delayed Voltage

Measurement block that performs a complex voltage after a specified delay time set by the **Delay** button.

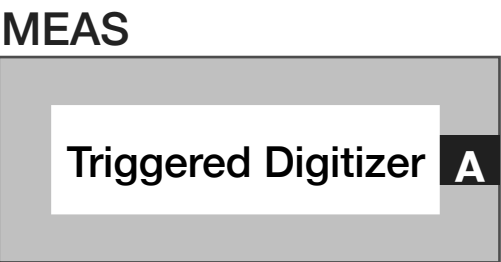


Meas: Triggered Digitizer

Measurement block that performs a complex voltage measurement vs time relative to a trigger in the premeasure group set by **Trigger** and **Trigger Mode** buttons.

CONTROL PANELS

Real time control of the instruments in this TIM.

CONTROL PANELS 13 RI8564: 75 TO 81GHz TEST SET

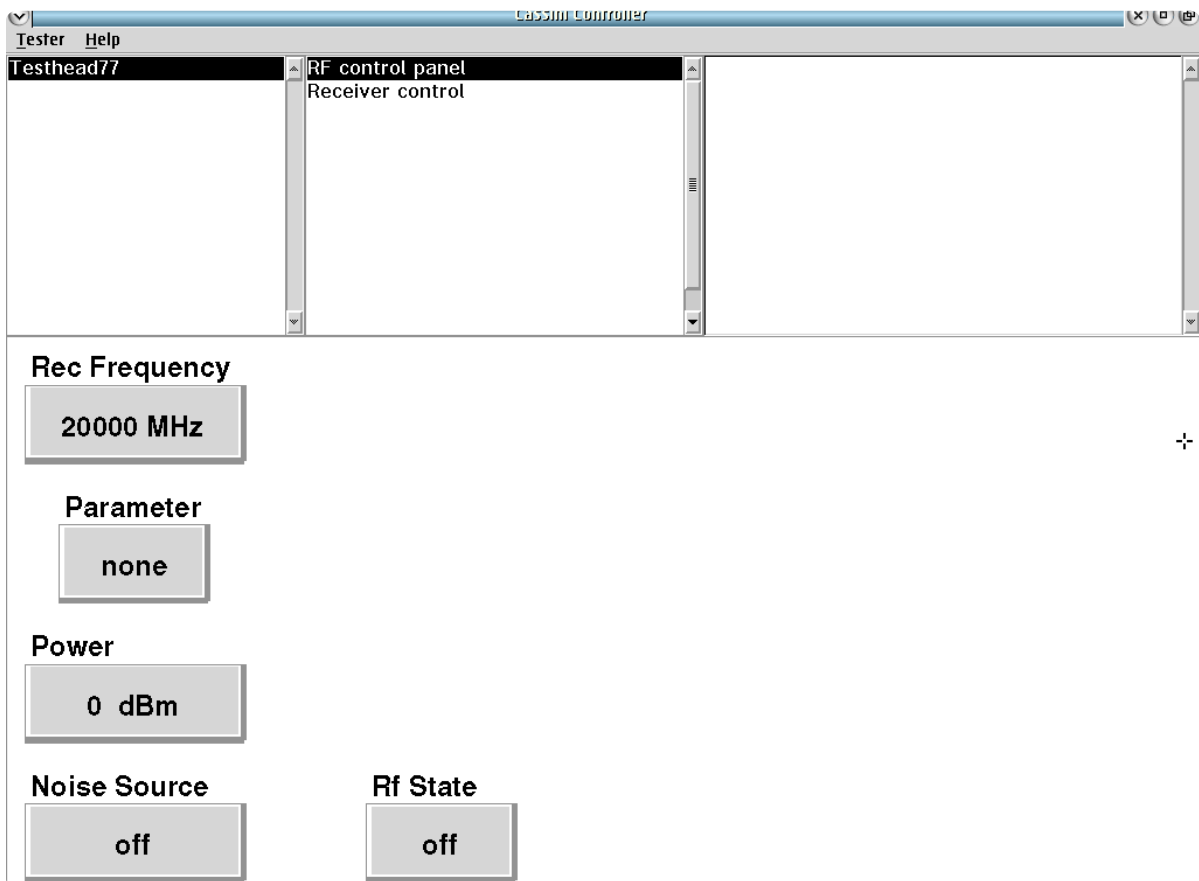

Testhead66 **RF Control panel** provides real-time state controls for this TIM.

RECEIVER CONTROL

POWER DBM, VOLTAGE DBM, NOISE DBM/HZ, RMSDBM

The above values are refreshed when LMB clicked within the button.

RI8581: 100kHz TO 20GHz RECEIVER



TOPICS

[Instruments provided by this TIM](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM


The instrument in this TIM appear as **Receiver** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Receiver, RI8581x .01 to 20 GHz Complex Receiver TIM

NOTE: Multiple RI8581 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Receiver, Receiver2, Receiver3, etc). The “x” in RI8581x denotes the model revision number.


INSTRUMENT BUTTON DIAGRAM 2.11

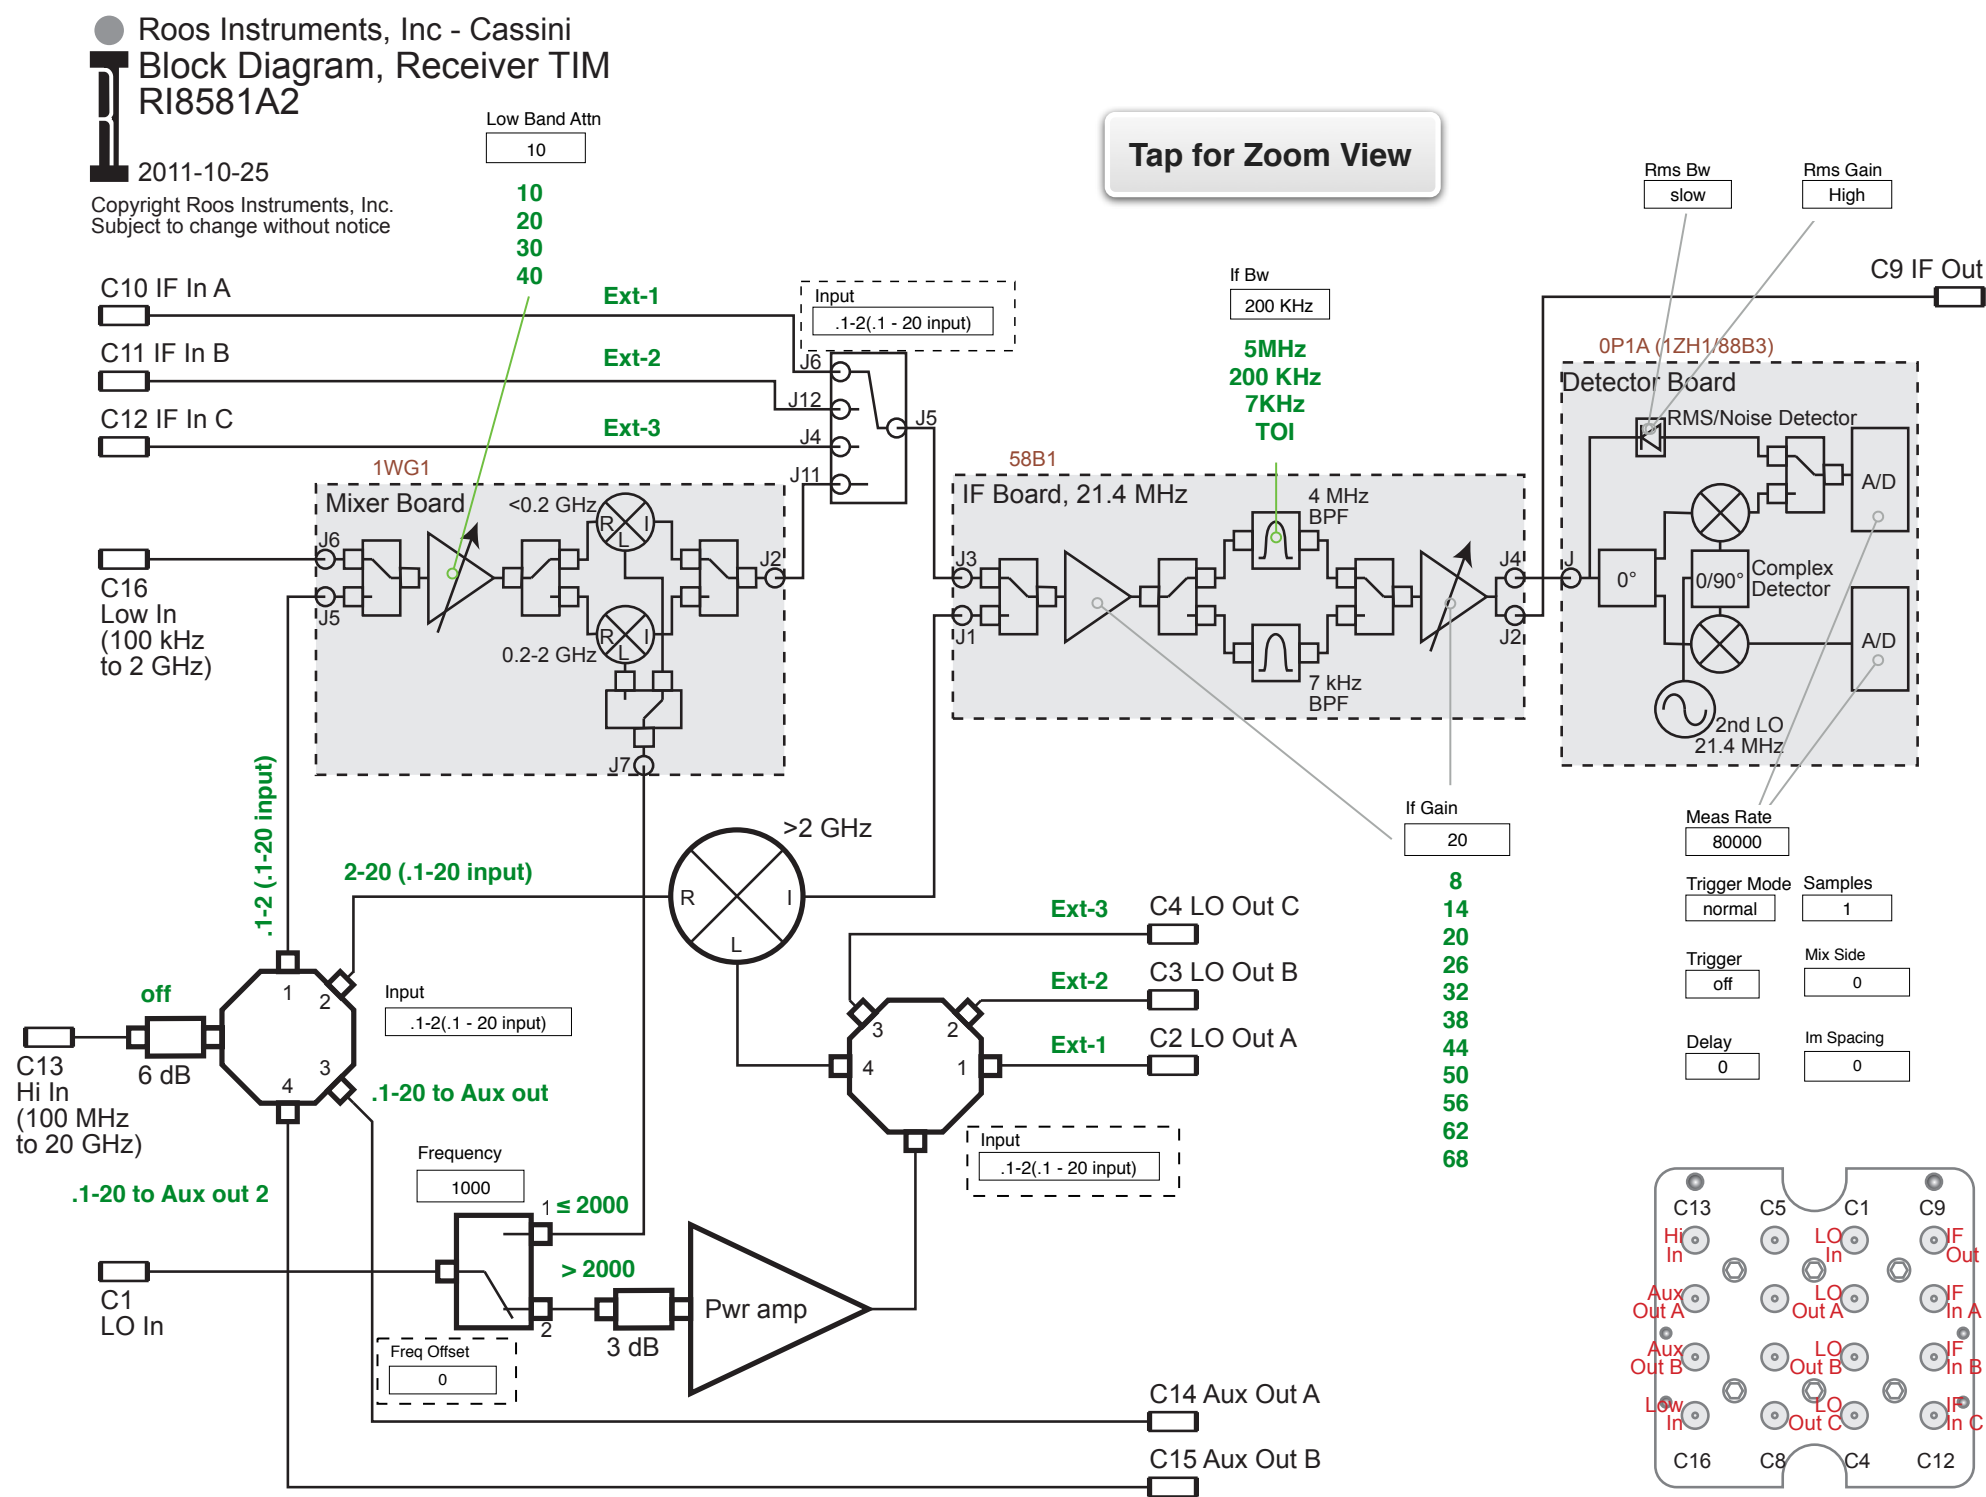

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 18 RI8581: 100MHZ TO 20GHZ RECEIVER

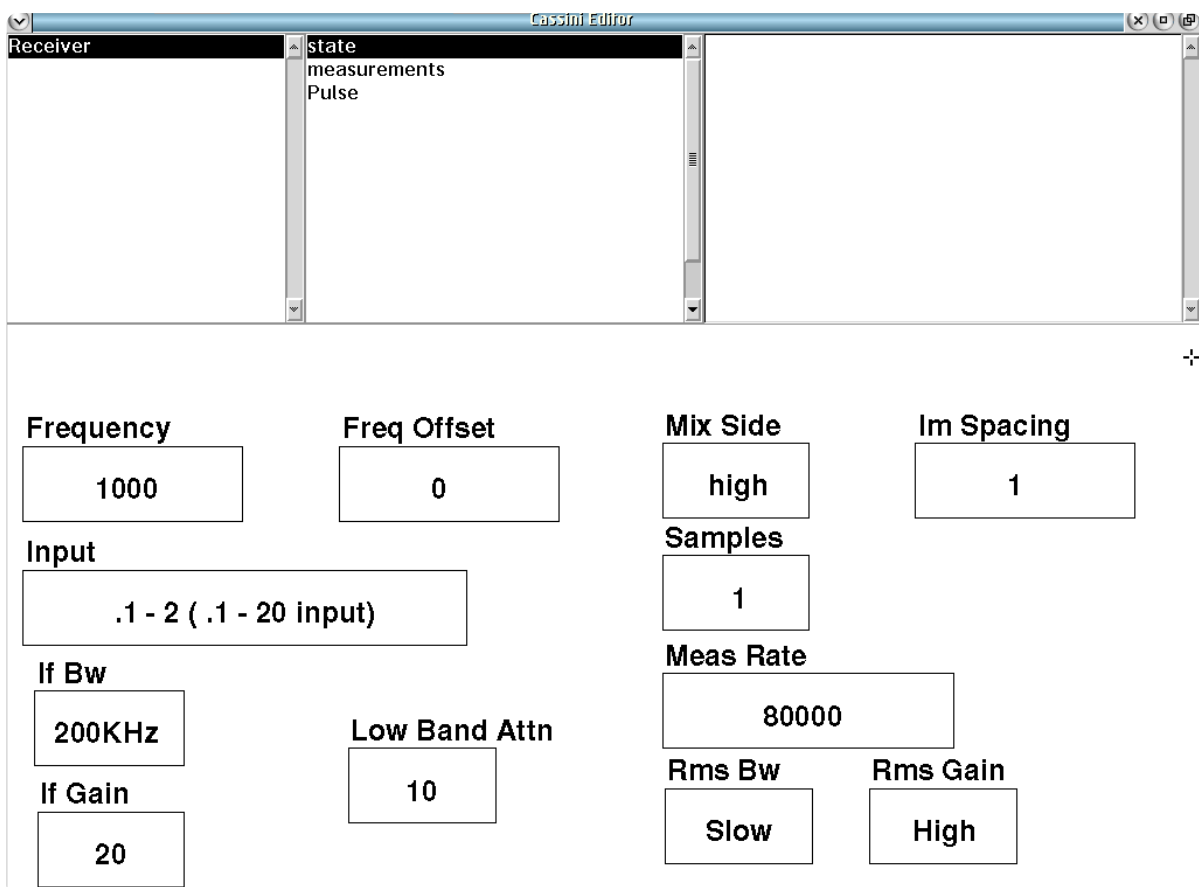

Receiver **state** buttons for control of the receiver.



PANEL: STATE

Frequency

1000

Frequency

Decimal notation input button that sets the tuned frequency of the receiver in MHz. This frequency value is set by the system reference button when using a virtual instrument such as: VNA, noise figure, or other multi-TIM measurement.

NOTE: This button is only used for measurements defined by the receiver instrument such as a power or vector voltage measurement.

Freq Offset

0

Freq Offset

Decimal notation input button that sets the receiver output offset frequency in MHz. Typical offset range is ± 5 MHz.

NOTE: A maximum offset range of ± 10 MHz is possible within certain frequency ranges. Consult the message window during compile to ensure offset compliance for a given center frequency.

Mix Side

Drop down list select button that selects the ‘High’ (upper) or ‘Low’ (lower) sideband of the down converted signal image to be digitized by the receiver. ‘Default’ allows the compiler to select the optimal value.

NOTE: This button should only be used if the device has unexpected or undesirable spectral content in upper or lower sideband which interferes with the measurement.

Im Spacing

Set the spacing in MHz between the two signals used for an intermodulation measurement.

NOTE: The receiver frequency must be set to the frequency value that is center and equidistant between the two signals of interest.

Mix Side

high

Im Spacing

1

Input

Drop down list select button that routes the selected physical input port to the receiver’s downconversion/digitizer path or to another port on the instrument test head.

‘.1-2 (.1-20 input)’ and ‘2-20 (.1-20 input)’ options connect input port *Hi In* located at C13 on the instrument test head to the downconverter/digitizer.

‘.1 - 20 to Aux out’ routes the input port **Hi In** located at C13 on the instrument test head to the output port *Aux Out A* located at C14 on the instrument test head.

‘.1 - 20 to Aux out 2’ routes the input port *Hi In* (C13) to the output port *Aux Out B* (C15) on the instrument test head.

‘.005 - 2 Input’ connects the input port *Low In* (C16) to the downconverter/digitizer.

‘off’ disconnects all input ports from the receiver’s downconverter/digitizer.

‘Cal’ is used for RI internal purposes only.

‘LO Cal’ connects *LO In* (C16) to the receiver's downconverter/digitizer.

Input

.1-2 (.1 - 20 input)

‘Ext-1’ routes IF In A (C10) as an input to the receiver and routes LO In (C1) to LO Out A (C2) as an output.

‘Ext-2’ routes IF In A (C10) as an input to the receiver and routes LO In (C1) to LO Out A (C2) as an output.

‘Ext-3’ routes IF In A (C10) as an input to the receiver and routes LO In (C1) to LO Out A (C2) as an output.

NOTE: The ‘Ext-1’, ‘Ext-2’, and ‘Ext-3’ options are used to support the IF and LO port routing requirements for frequency converting testsets(RI8560: 56GHz to 67GHz TestSet, RI8563: 4GHz to 40.5GHz TestSet, RI8564: 71GHz to 83GHz TestSet) or external mixer/frequency converters in the fixture.

Samples

Decimal notation input button that sets the total number of measurement samples.

Samples

1

If Bw

Drop down list select button that sets the receiver’s analog detection bandwidth within the “IF Board, 21.4 MHz” in the block diagram. The ‘5 MHz’ option is the full bandwidth of the receiver’s front-end.

If Bw

200 KHz

The ‘7 KHz’ value is a bandpass filter applied before the IF signal is converted to zero IF/baseband.

The ‘200 kHz’ is a low pass filter applied after IF conversion to zero IF.

The ‘TOI’ value activates a filtering/gain/attenuator mode that selects the ‘7 kHz’ IF filter and optimizes the ratio of the gain scheme for the amplifiers on the input and output sides of the IF filter to place all of the gain on the output side for high-fidelity third order intercept measurements. In ‘TOI’ mode the **If Gain** button is limited to values of ‘8’ and ‘14’.

Low Band Attn

Drop down list select button that sets the baseband gain attenuator found at the output of the “Mixer Board” in the block diagram to optimize the receiver analog path for best dynamic range. The options ‘10’, ‘20’, ‘30’, and ‘40’ represent attenuation values in units of dB.

Low Band Attn

10

If Gain

Drop down list select button that sets the gain of an amplifier in units of dB within the “IF Board, 21.4MHz” shown in the block diagram. This value should be optimized for best dynamic range. The selection

If Gain

20

options of ‘8’, ‘14’, ‘20’, ‘26’, ‘32’, ‘38’, ‘44’, ‘50’, ‘56’, ‘62’, and ‘68’ are in units of dB.

NOTE: Optimal settings are achieved by increasing the value until an overflow messages appears in the message window during test compile or run and then selecting the value below the setting that causes an overflow warnings.

When used with the If Bw button set to the ‘TOI’ option, the If Gain setting is a ratio between the input and output amplifiers of the IF filters to place all of the gain on the output side. In this mode, only the ‘8’ and ‘14’ values of the IF gain button are valid.

Meas Rate

Decimal notation input button that sets the sample rate of the receiver’s digitizer in units of Hz. The maximum sample rate is 200 kHz.

Rms Bw

Drop down list select button that sets the post-detection bandwidth for Root Mean Squared (RMS) measurements. This button is used to optimize the settling speed of the detectors lock and measure speed. It is commonly used with the **RMS Power**, **RMS Voltage**, and **RMS PowerVsTime** measurement blocks.

Meas Rate

80000

Rms Bw

slow

NOTE: The ‘Fast’ setting can be susceptible to increased measurement instability due to DUT and fixture path dependent settling times.

An RMS measurement overrides the **If Bw** button and uses a 10 MHz IF bandwidth.

NOTE: The RMS detector receive path is automatically selected when an RMS Power, RMS Voltage, or RMS PowerVsTime measurement block is used.

Rms Gain

Drop down list button that sets the post-detection gain. This button is commonly used with the **RMS Power**, **RMS Voltage**, and **RMS PowerVsTime** measurement blocks.

The ‘High’ setting is approximately 0dB.

The ‘Low’ setting is approximately -20dB.

NOTE: The RMS detector receive path is automatically selected when an RMS Power, RMS Voltage, or RMS PowerVsTime measurement block is used.


Rms Gain

High

PANEL: MEASUREMENTS


Meas: Noise Power

Measures noise power for a selected port using the dedicated noise detector in the receiver’s baseband subsystem.

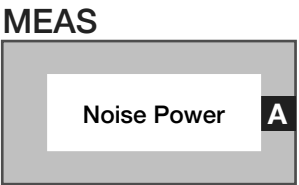


Meas: Voltage

Measures an RF signals complex voltage amplitude for the selected port. The input signal is mixed with the receiver’s orthogonal tuning signals, providing input signal phase and amplitude represented as a complex voltage value or voltage vector.

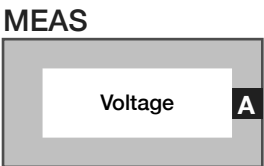


Meas: Power

Measures the corrected signal power for the selected port and path. The block converts complex voltage to a scalar power value and then averages the result.

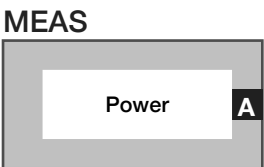


Meas: Phase Noise

Measure the noise power in units of Watts/Hz in a 1 Hz bandwidth using the current setup. Uses the Noise Power measurement as its base.

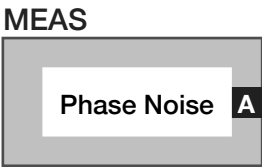


Meas: Intermod

Use this button to measure the intermod intercept point of an amplifier in watts. The intermod signals are assumed to be above and below the center frequency and both sidebands are used to compute the intercept

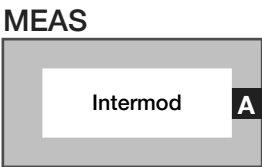


Meas: VoltageVsTime

Measures an RF signal complex voltage amplitude or voltage vector and records the value with its corresponding measurement time.

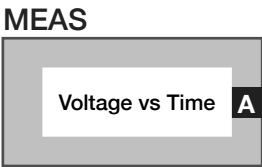


Meas: RmsPowerVsTime

Measures RMS power for the selected port using the dedicated RMS/ Noise detector path and records the corresponding measurement time.

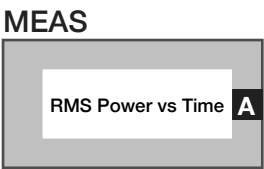


Meas: RMS Power

Measure the RMS power for the selected port using the RMS/Noise detector.

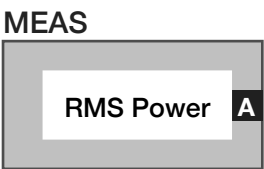

Meas: RMS Voltage

Measurement block measures RMS voltage by converting the complex voltage vector into a scalar amplitude vector and then computes the root mean square value.

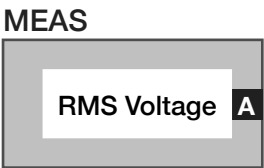

PANEL: PULSE

Trigger

Drop down list button that activates ('on') or deactivates ('off') the trigger option on receiver measurements. Trigger on starts a measurement series

Trigger

off

Trigger Mode

Drop down list button sets the trigger mode for the receiver's pulse/ trigger measurement functions. Option 'normal' triggers normally, 'voltage' triggers on voltage value, 'power' triggers on power value, 'V vs T' triggers on Voltage vs Time value.

Trigger Mode

normal

Delay


Decimal notation input button that sets the delay between measurements in units of seconds for the pulse mode measurements. Resolution is 1µs.

Delay

0

Meas: TriggeredDigitizer

Measures an RF signals complex voltage/voltage vector vs. time relative to a specified trigger in the premeasure.

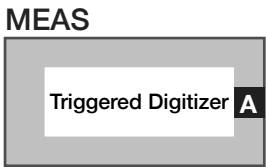


CONTROL PANELS

Real time control of the instruments in this TIM.

RECEIVER CONTROL

CONTROL PANELS 14 RI8581: 100MHZ TO 20GHZ RECEIVER

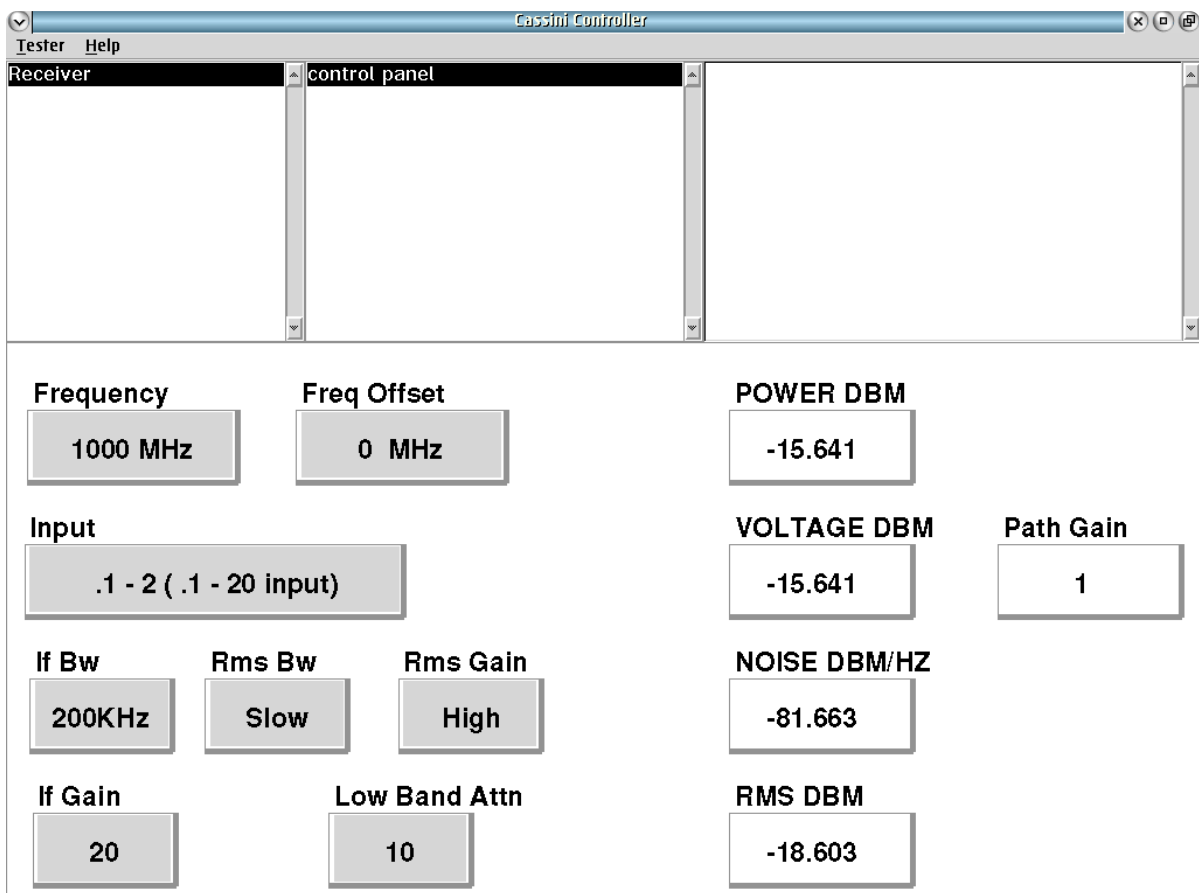

Receiver **control panel** provides Power, Voltage, Noise and path gain as well as receiver state.

POWER DBM, VOLTAGE DBM, NOISE DBM/HZ, RMS DBM, Path Gain

The above values are live, refreshed when clicked.

RI8587: 100kHz TO 20GHz DSP RECEIVER



TOPICS

[Instruments provided by this TIM](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM


The instrument in this TIM appear as **Receiver** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Receiver, RI8587x .01 to 20GHz Complex Receiver TIM w DSP

NOTE: Multiple RI8587 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Receiver, Receiver2, Receiver3, etc). The “x” in RI8587x denotes the model revision number.


INSTRUMENT BUTTON DIAGRAM 2.12

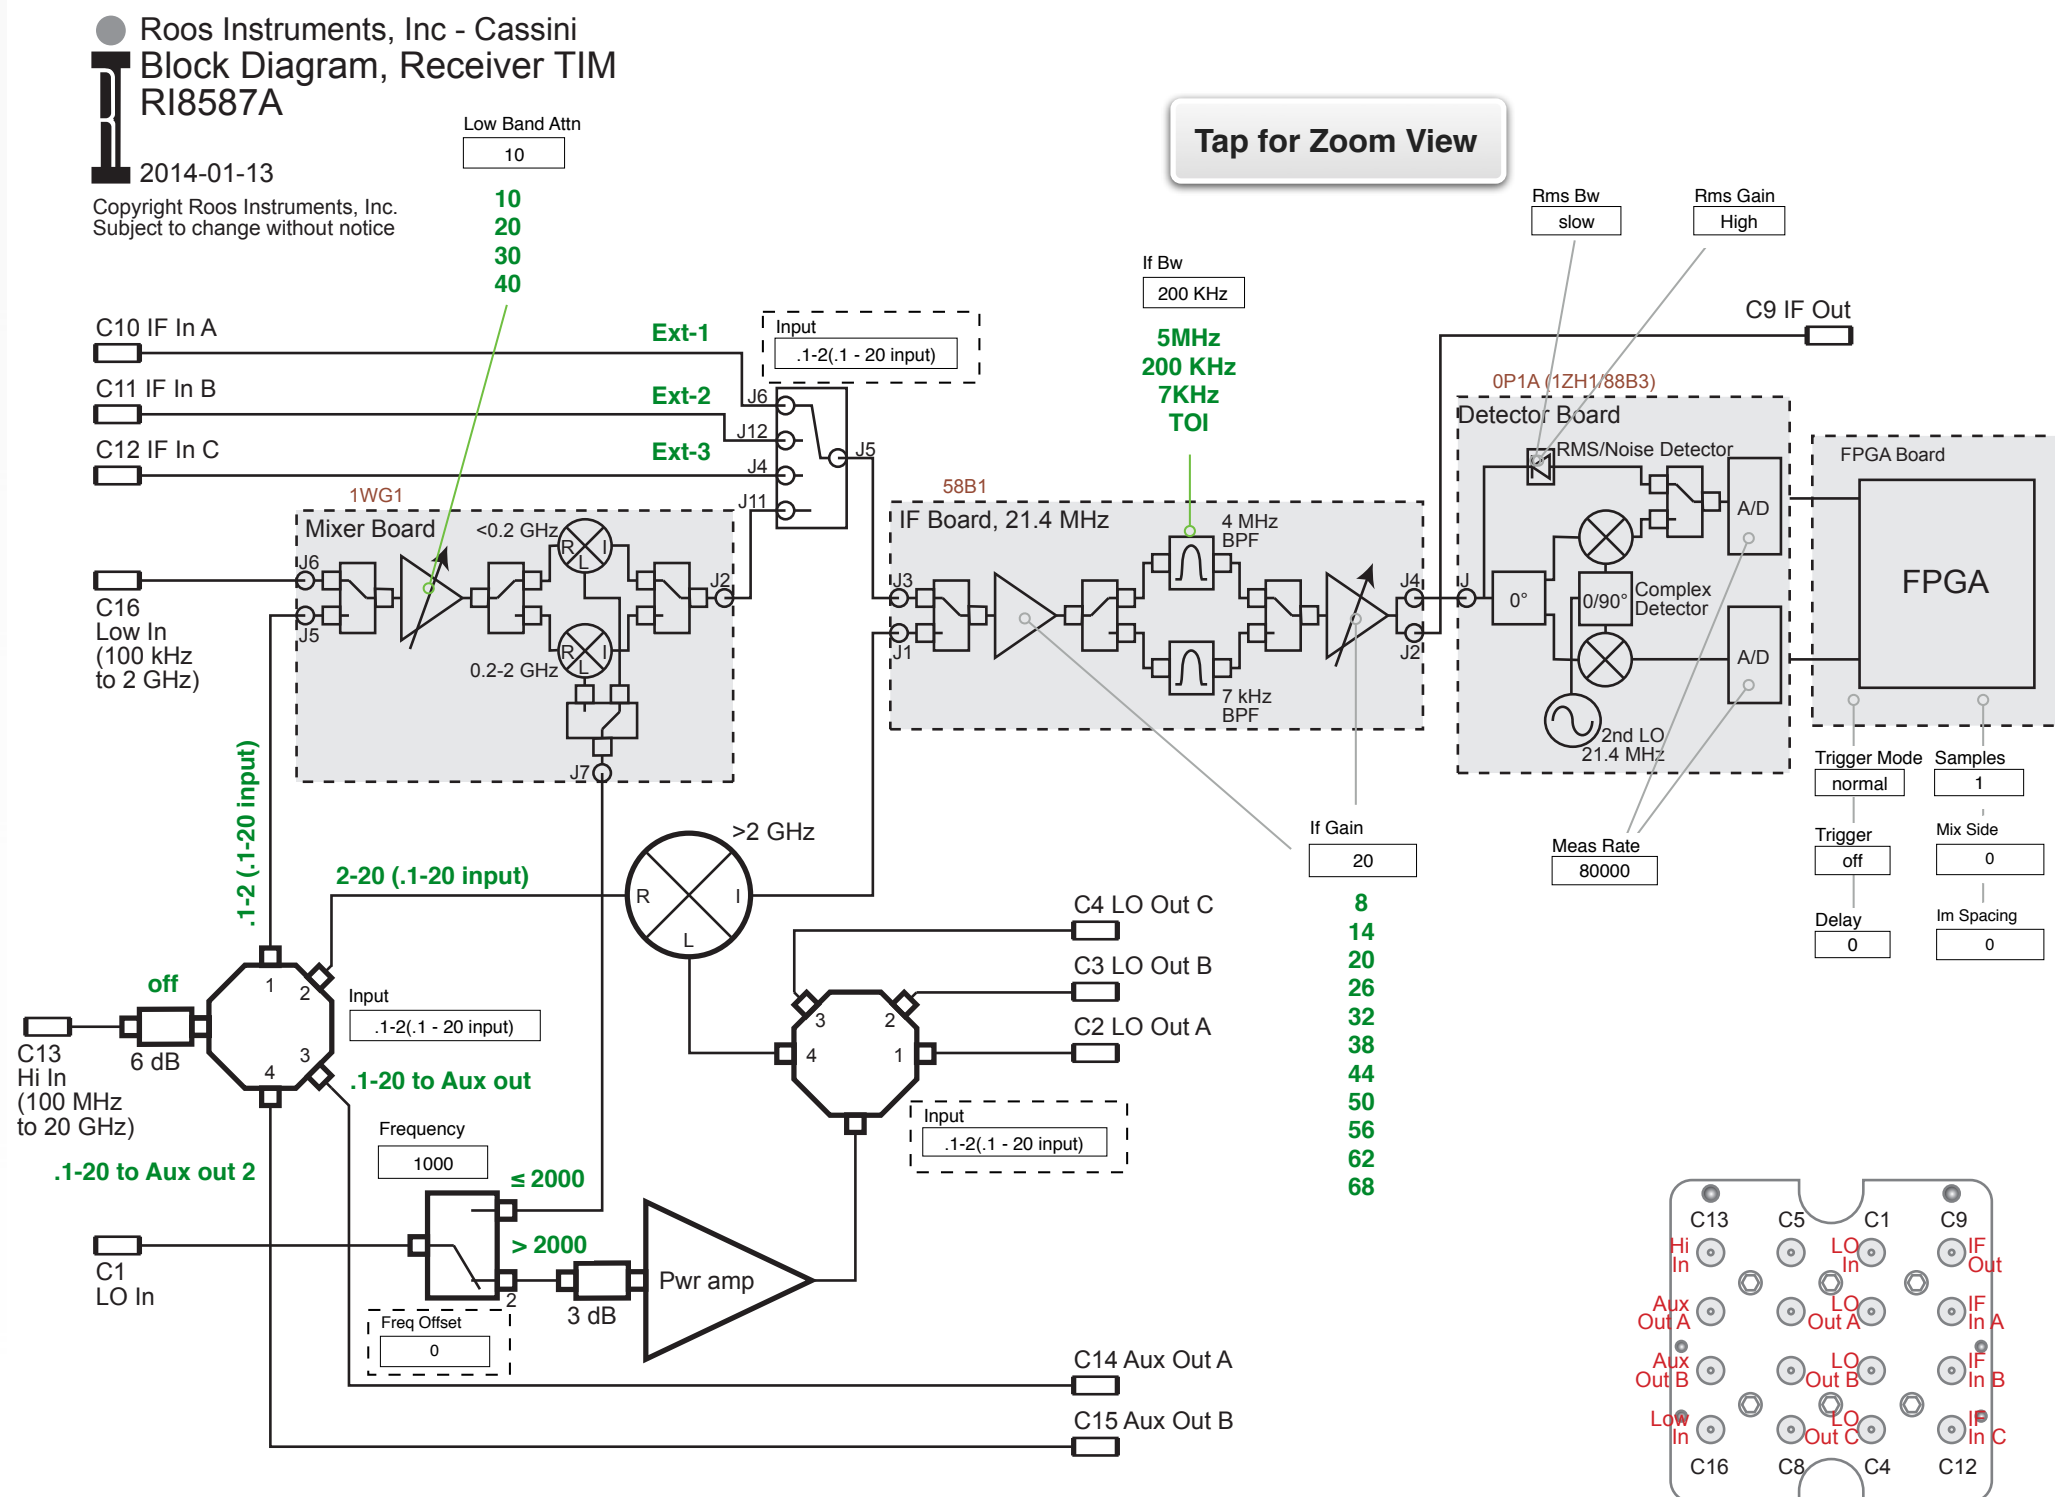

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 19 RI8581: 100MHZ TO 20GHZ RECEIVER

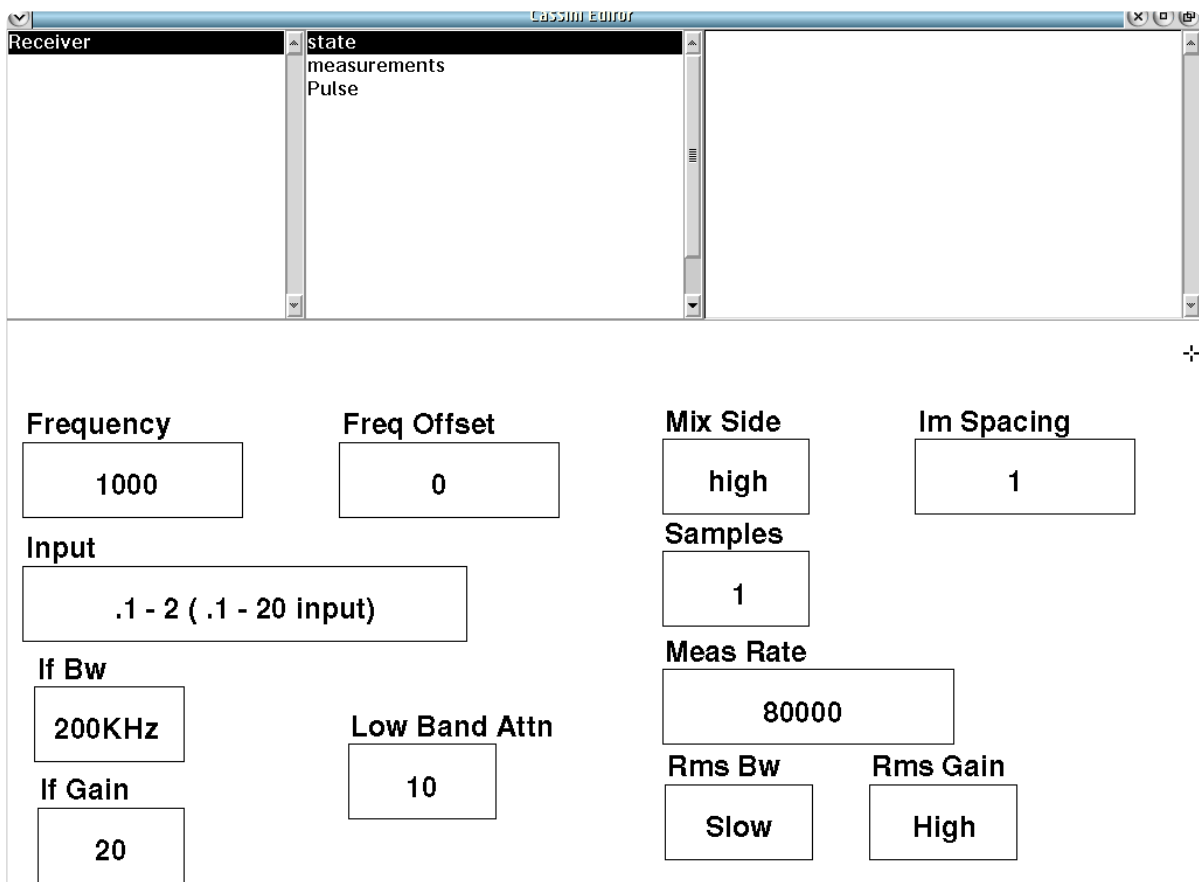

Receiver **state** panel shows state options for the receiver.

PANEL: STATE

Frequency

1000

Frequency

Decimal notation input button that sets the tuned frequency of the receiver in MHz. This frequency value is set by the system reference button when using a virtual instrument such as: VNA, noise figure, or other multi-TIM measurement.

NOTE: This button is only used for measurements defined by the receiver instrument such as a power or vector voltage measurement.

Freq Offset

0

Freq Offset

Decimal notation input button that sets the receiver output offset frequency in MHz. Typical offset range is ± 5 MHz.

NOTE: A maximum offset range of ± 10 MHz is possible within certain frequency ranges. Consult the message window during compile to ensure offset compliance for a given center frequency.

Mix Side

Drop down list select button that selects the ‘High’ (upper) or ‘Low’ (lower) sideband of the down converted signal image to be digitized by the receiver. ‘Default’ allows the compiler to select the optimal value.

NOTE: This button should only be used if the device has unexpected or undesirable spectral content in upper or lower sideband which interfere with the measurement.

Im Spacing

Set the spacing in MHz between the two signals used for an intermodulation measurement.

NOTE: The receiver frequency must be set to the frequency value that is center and equidistant between the two signals of interest.

Mix Side

high

Im Spacing

1

Input

.1-2 (.1 - 20 input)

Input

Drop down list select button that routes the selected physical input port to the receiver’s downconversion/digitizer path or to another port on the instrument test head.

‘.1-2 (.1-20 input)’ and ‘2-20 (.1-20 input)’ options connect input port *Hi In* located at C13 on the instrument test head to the downconverter/digitizer.

‘.1 - 20 to Aux out’ routes the input port **Hi In** located at C13 on the instrument test head to the output port *Aux Out A* located at C14 on the instrument test head.

‘.1 - 20 to Aux out 2’ routes the input port *Hi In* (C13) to the output port *Aux Out B* (C15) on the instrument test head.

‘.005 - 2 Input’ connects the input port *Low In* (C16) to the downconverter/digitizer.

‘off’ disconnects all input ports from the receiver’s downconverter/digitizer.

‘Cal’ is used for RI internal purposes only.

‘LO Cal’ connects *LO In* (C16) to the receiver's downconverter/digitizer.

‘Ext-1’ routes IF In A (C10) as an input to the receiver and routes LO In (C1) to LO Out A (C2) as an output.

‘Ext-2’ routes IF In A (C10) as an input to the receiver and routes LO In (C1) to LO Out A (C2) as an output.

‘Ext-3’ routes IF In A (C10) as an input to the receiver and routes LO In (C1) to LO Out A (C2) as an output.

NOTE: The ‘Ext-1’, ‘Ext-2’, and ‘Ext-3’ options are used to support the IF and LO port routing requirements for frequency converting testsets(RI8560: 56GHz to 67GHz TestSet, RI8563: 4GHz to 40.5GHz TestSet, RI8564: 71GHz to 83GHz TestSet) or external mixer/frequency converters in the fixture.

Samples

Decimal notation input button that sets the total number of measurement samples.

Samples

1

If Bw

Drop down list select button that sets the receiver’s analog detection bandwidth within the “IF Board, 21.4 MHz” in the block diagram. The ‘5 MHz’ option is the full bandwidth of the receiver’s front-end.

If Bw

200 KHz

The ‘7 KHz’ value is a bandpass filter applied before the IF signal is converted to zero IF/baseband.

The ‘200 kHz’ is a low pass filter applied after IF conversion to zero IF.

The ‘TOI’ value activates a filtering/gain/attenuator mode that selects the ‘7 kHz’ IF filter and optimizes the ratio of the gain scheme for the amplifiers on the input and output sides of the IF filter to place all of the gain on the output side for high-fidelity third order intercept measurements. In ‘TOI’ mode the **If Gain** button is limited to values of ‘8’ and ‘14’.

Low Band Attn

Drop down list select button that sets the baseband gain attenuator found at the output of the “Mixer Board” in the block diagram to optimize the receiver analog path for best dynamic range. The options ‘10’, ‘20’, ‘30’, and ‘40’ represent attenuation values in units of dB.

Low Band Attn

10

If Gain

Drop down list select button that sets the gain of an amplifier in units of dB within the “IF Board, 21.4 MHz” shown in the block diagram. This value should be optimized for best dynamic range. The selection

If Gain

20

options of ‘8’, ‘14’, ‘20’, ‘26’, ‘32’, ‘38’, ‘44’, ‘50’, ‘56’, ‘62’, and ‘68’ are in units of dB.

NOTE: Optimal settings are achieved by increasing the value until an overflow messages appears in the message window during test compile or run and then selecting the value below the setting that causes an overflow warnings.

When used with the If Bw button set to the ‘TOI’ option, the If Gain setting is the ratio between the input and output amplifiers of the IF filters to place all of the gain on the output side. In this mode, only the ‘8’ and ‘14’ values of the IF gain button are valid.

Meas Rate

Decimal notation input button that sets the sample rate of the receiver’s digitizer in units of Hz. The maximum sample rate is 200 kHz.

Rms Bw

Drop down list select button that sets the post-detection bandwidth for Root Mean Squared (RMS) measurements. This button is used to optimize the settling speed of the detectors lock and measure speed. It is commonly used with the **RMS Power**, **RMS Voltage**, and **RMS PowerVsTime** measurement blocks.

Meas Rate

80000

Rms Bw

slow

NOTE: The ‘Fast’ setting can be susceptible to increased measurement instability due to DUT and fixture path dependent settling times.

An RMS measurement overrides the **If Bw** button and uses a 10 MHz IF bandwidth.

NOTE: The RMS detector receive path is automatically selected when an RMS Power, RMS Voltage, or RMS PowerVsTime measurement block is used.

Rms Gain

Drop down list button that sets the post-detection gain. This button is commonly used with the **RMS Power**, **RMS Voltage**, and **RMS PowerVsTime** measurement blocks.

The ‘High’ setting is approximately 0dB.

The ‘Low’ setting is approximately -20dB.

NOTE: The RMS detector receive path is automatically selected when an RMS Power, RMS Voltage, or RMS PowerVsTime measurement block is used.


Rms Gain

High

PANEL: MEASUREMENTS


Meas: Noise Power

Measurement block measures noise power for a selected port using the dedicated noise detector in the receiver’s baseband subsystem.

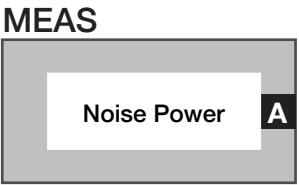


Meas: Voltage

Measures an RF signals complex voltage amplitude for the selected port. The input signal is mixed with the receiver’s orthogonal tuning signals, providing input signal phase and amplitude represented as a complex voltage value or voltage vector.

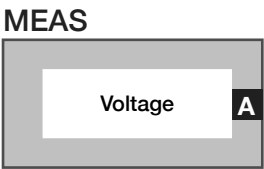


Meas: Power

Measures the corrected signal power for the selected port and path. The block converts complex voltage to a scalar power value and then averages the result.

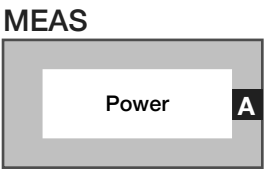


Meas: Phase Noise

Measure the noise power in units of Watts/Hz in a 1Hz bandwidth using the current setup. Uses the Noise Power measurement as it base.

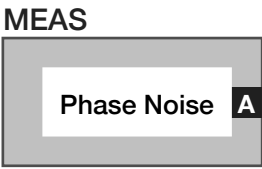


Meas: Intermod

Use this button to measure the intermod intercept point of an amplifier in watts. The intermod signals are assumed to be above and below the center frequency and both sidebands are used to compute the intercept

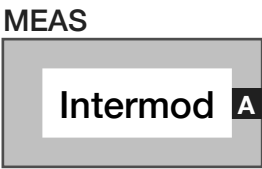


Meas: Voltage Vs Time

Measures an RF signal complex voltage amplitude/voltage vector and records the value with it’s corresponding measurement time.

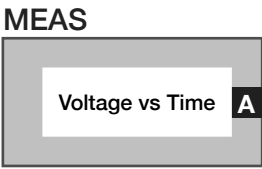


Meas: RMS Power Vs Time

Measures RMS power for the selected port using the dedicated RMS/ Noise detector path and records the corresponding measurement time.

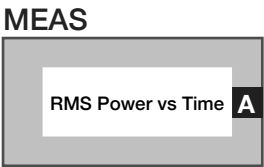


Meas: RMS Power

Measure the RMS power for the selected port using the RMS/Noise detector.

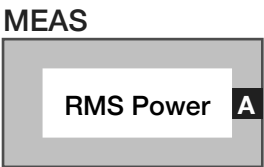

Meas: RMS Voltage


Measurement block measures RMS voltage by converting the complex voltage vector into a scalar amplitude vector and then computes the root mean square value.

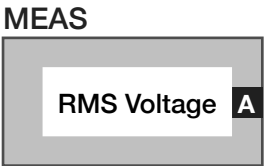

PANEL: PULSE

Trigger

Drop down list button that is used in a pre/post measure groups to activate ('on') or deactivate ('off') triggered receiver measurements. This button is commonly used with the **Delay** button in the pre/post measure group and the **Trigger Mode** button in the test panel or section default.

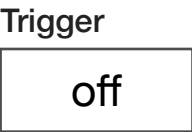


Trigger Mode

Drop down list button that configures the receiver's detector hardware for different trigger/pulse type measurements. This button is commonly used in test panels with the **Trigger** and **Delay** buttons placed in pre/post measure groups.

The 'normal' selection uses the receiver's voltage detector for triggered measurements.

The 'voltage' selection performs the same function as the 'normal' mode.

The 'power' selection uses the RMS detector for triggered measurements.

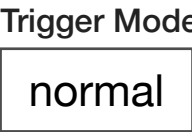



The ‘V vs T’ selection uses the voltage detector for triggered **Voltage vs Time** block measurements.

Delay

Decimal notation input button used within pre/post measure groups to delay the start of a triggered measurement with a user-defined duration. The value is in units of seconds with a maximum value of 0.01 seconds and a resolution of 1µs. This button is commonly used with the **Trigger** button.

Meas: TriggeredDigitizer

Measurement block measures an RF signals complex voltage vector vs. time relative to a specified trigger in the premeasure. This measurement block is commonly used with the **Trigger**, **Trigger Mode**, and/or **Delay** buttons.

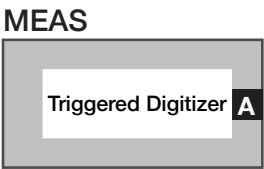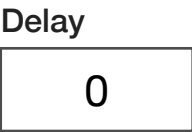


PANEL: SPECTRUM MEASUREMENTS

If Shift


Decimal notation input button that sets the frequency offset for the FPGA-based mixer within the digital signal processor subsystem. Values are in units of Hz with a range of 0 to 100 kHz.

Det Bw

Drop down list button that configures the bandwidth of a post-measure, low-pass digital filter in the receive detector’s FPGA-based DSP chain. These provide selectable, narrow-band filters with typically 60dB of stop band attenuation. The ‘bypass’ selection is the default, applying no digital filter. The other options are 200 kHz, 100 kHz, 50 kHz, 25 kHz, 10 kHz, 5 kHz, 2.5 kHz, and 1 kHz bandwidth filters.

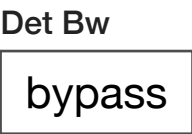


Meas: Spectrum Noise

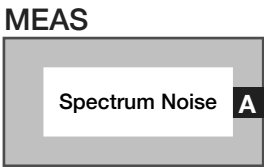


Measurement block computes noise using the receiver’s FPGA-based, real-time DSP.

Meas: Spectrum Power

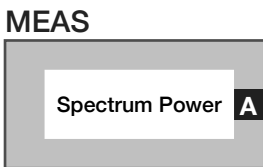

Measurement block computes power vectors (complex power) using the receiver’s FPGA-based, real-time DSP.

Meas: Spectrum Voltage

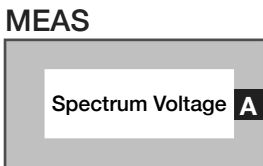


Measurement block computes spectral voltage vectors (complex voltage) versus time using the receiver’s receiver’s FPGA-based, real-time DSP.

CONTROL PANELS

Real time control of the instruments in this TIM.

CONTROL PANELS 15 RI8587: 100MHZ TO 20GHZ RECEIVER

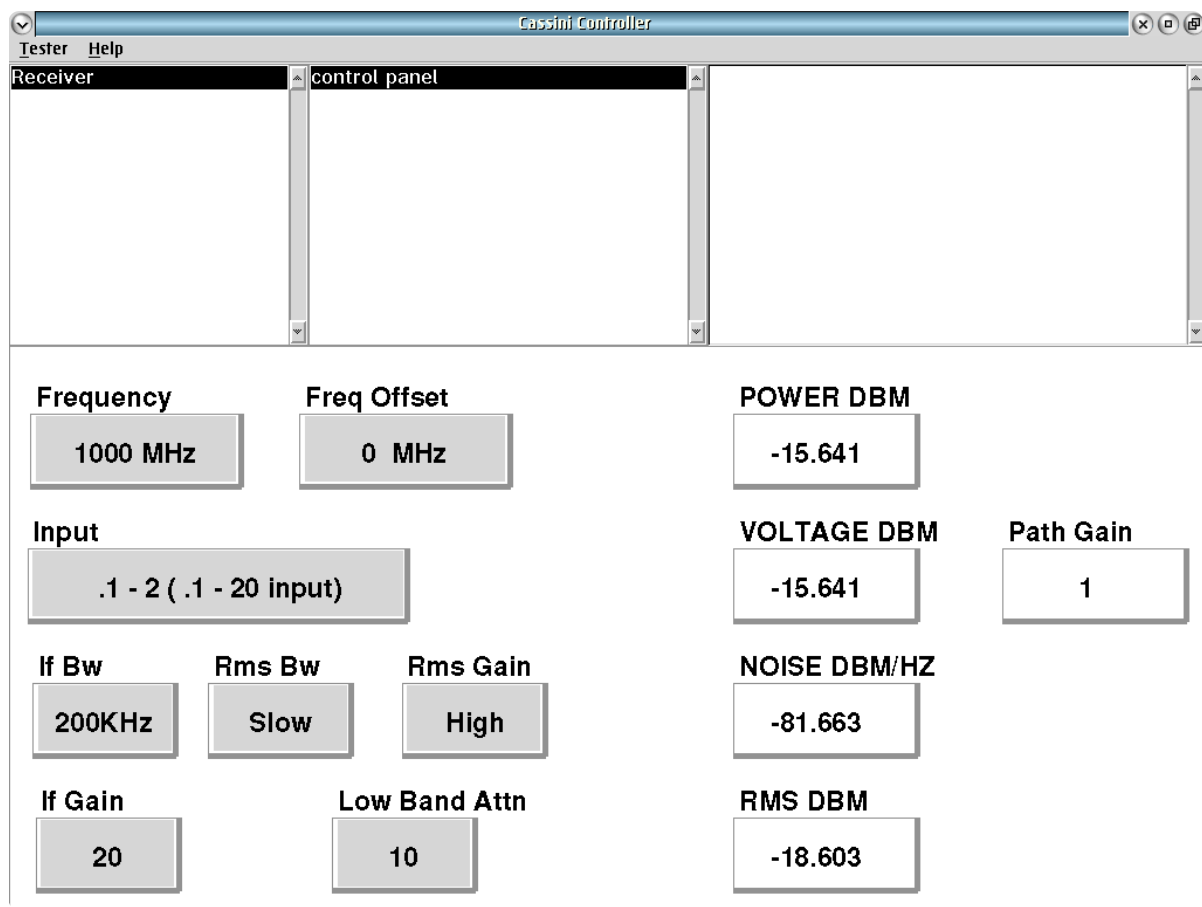

Receiver **control panel** shows real-time states and Power, Voltage, Noise measurements made by the receiver.

CONTROL PANEL

POWER DBM, VOLTAGE DBM, NOISE DBM/HZ, RMS DBM, Path Gain

Click to update these measurements in real-time.

RI8594: HIGH PERF. WAVEFORM GENERATOR & MEASURE



TOPICS

[Instruments provided by this TIM](#)

[Configuration Panel](#)

[Instrument Diagram with Edit Buttons](#)

[Edit Panel Button Descriptions](#)

[Control Panel](#)

Tap the links above to quickly access content

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **LowNoiseClock**, **Oscilloscope**, **SineGen**, and **Waveform** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- LowNoiseClock, Ri8585x Low Noise Source
- Oscilloscope, RI74105x Hi Spd scope/counter/BER
- SineGen, Ri7403x Dual Sine Source
- Waveform, Ri74211x Complex Waveform


NOTE: Multiple RI8594 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Oscilloscope,SineGen,Waveform,LowNoiseClock; Oscilloscope2,SineGen2,Waveform2,LowNoiseClock2; Oscilloscope3,SineGen3,Waveform3,LowNoiseClock3, etc).

The “x” in RI8594x denotes the model revision number.


CONFIGURE PANEL

Configure the Instruments in this TIM.

CONFIGURATION PANELS 6 RI8572: WAVEFORM GENERATOR & MEASURE

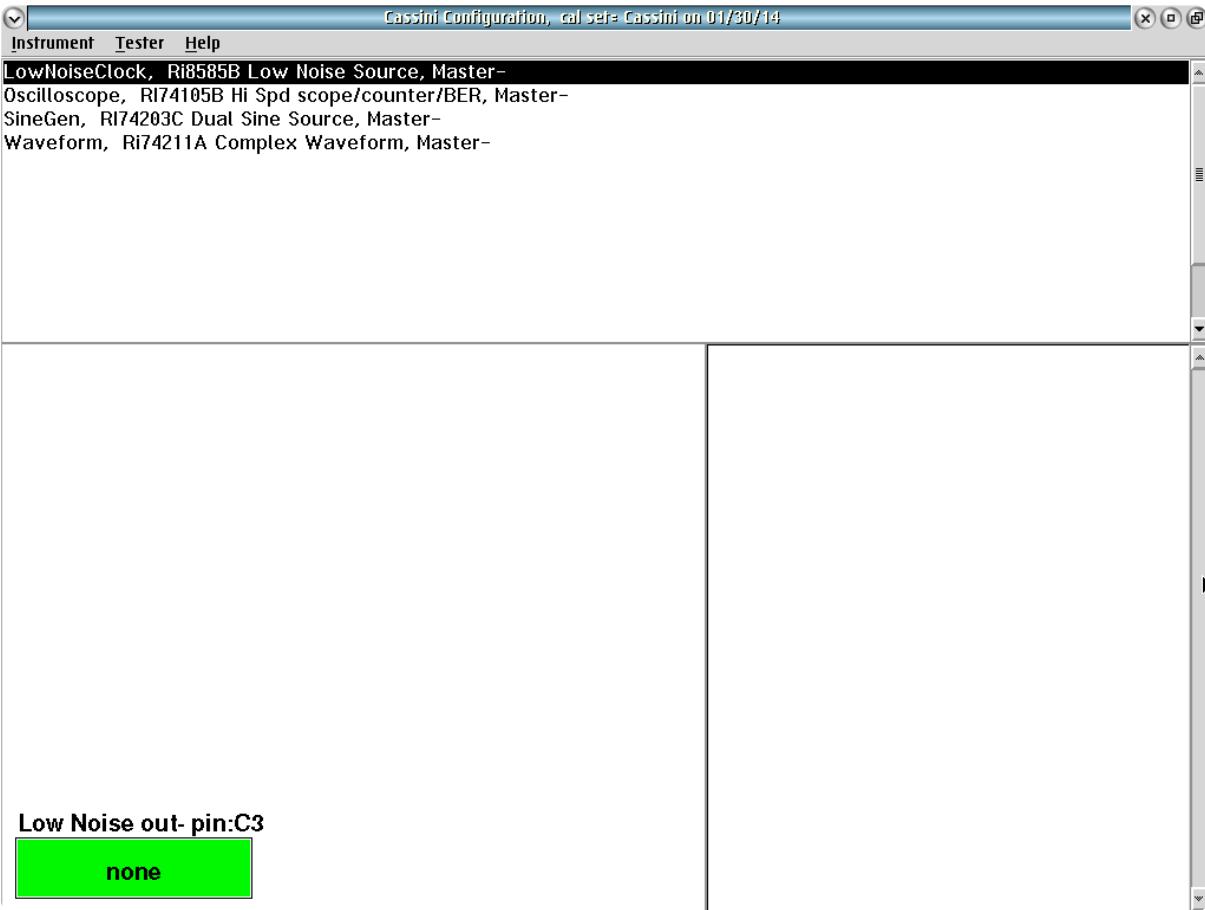

 LowNoiseClock shows connections from this instrument.



LOWNOISECLOCK

The LowNoiseClock instrument provides one resource allocation in the configuration panel: **Low Noise out-pin:C3**.

NOTE: Green buttons can only be configured with a fixture definition.

OSCILLOSCOPE

The Oscilloscope instrument provides two resource allocations in the configuration panel: **Wf7 Scope Ch2 RE-pin:C5** and **Wf6 Scope Ch1 IM-pin:C1**.

NOTE: Green buttons can only be configured with a fixture definition.

SINEGEN

The SineGen instrument provides two resource allocations in the configuration panel: **Wf9 Sine Out- pin:C8** and **Wf8 Sine Out-pin:C4**.


NOTE: Green buttons can only be configured with a fixture definition.

WAVEFORM

The Waveform instrument provides three resource allocations in the configuration panel: **Edit Patterns**, **Wf 3**, **Wf 2**.

NOTE: Green buttons can only be configured with a fixture definition.

IMAGE 2.4 EDIT PATTERNS DIALOG

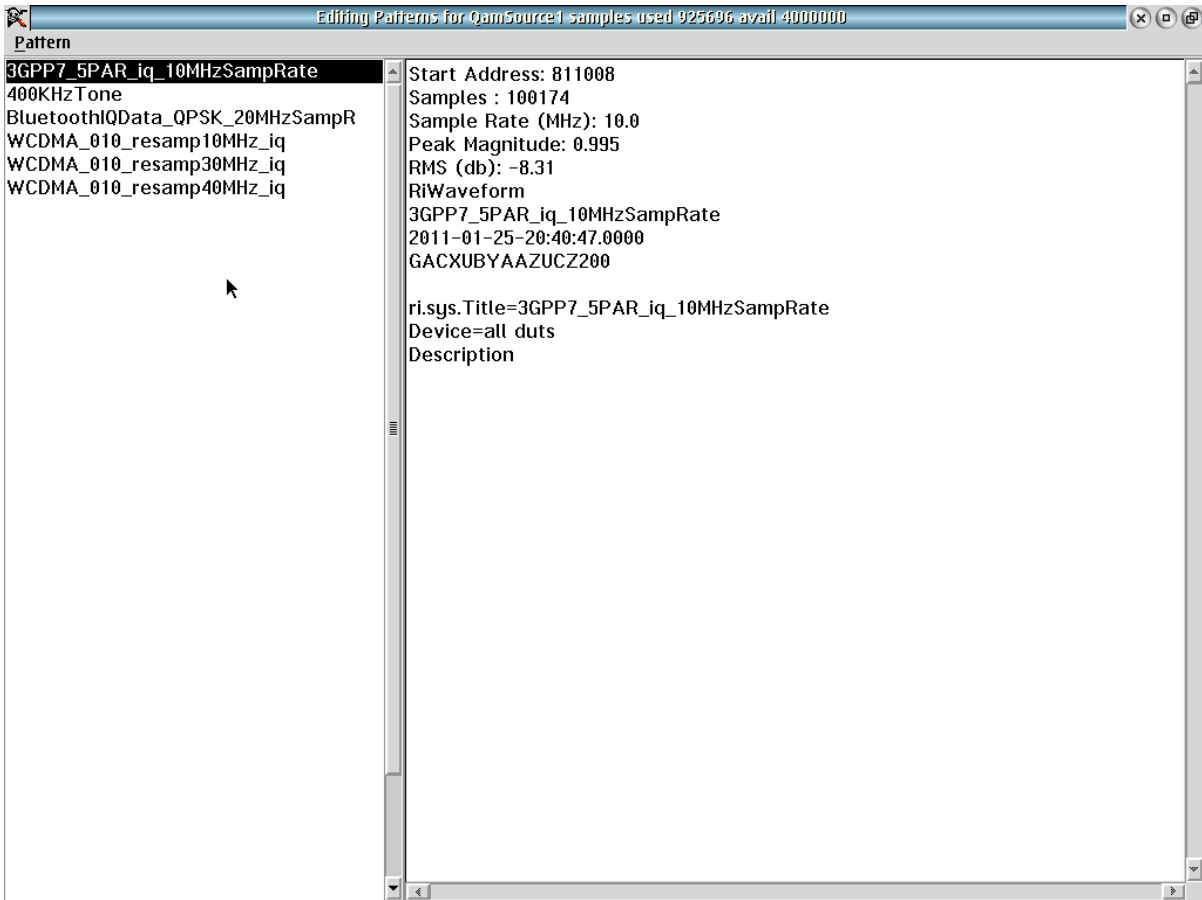


Edit Waveforms

This button displays the current waveform/pattern loaded into the Waveform’s arbitrary waveform generator. Clicking on the button opens the Edit Patterns window (See [Image 2.4](#)). The left pane of the Edit Patterns window displays a list of all waveforms that have been loaded into the instruments on-board memory. Selecting any of these waveforms displays more information in the right pane: start address in memory, number of samples, sample clock rate, peak magnitude, RMS magnitude indB, and more information about the original waveform file from Guru. New waveforms can be added to the list using the Pattern pull down menu at the top left of the window and then selecting “add from Guru.” The user can specify a different pattern name from the Guru version for test program purposes.

NOTE: Waveforms are programmed into memory sequentially. While waveforms can be removed from the list view by selecting them and using the menu option “Pattern > remove”, they are not erased from the memory. To make used memory available again, all waveforms must be purged using the “Pattern > Erase > All Patterns” menu option.


INSTRUMENT BUTTON DIAGRAM 2.13

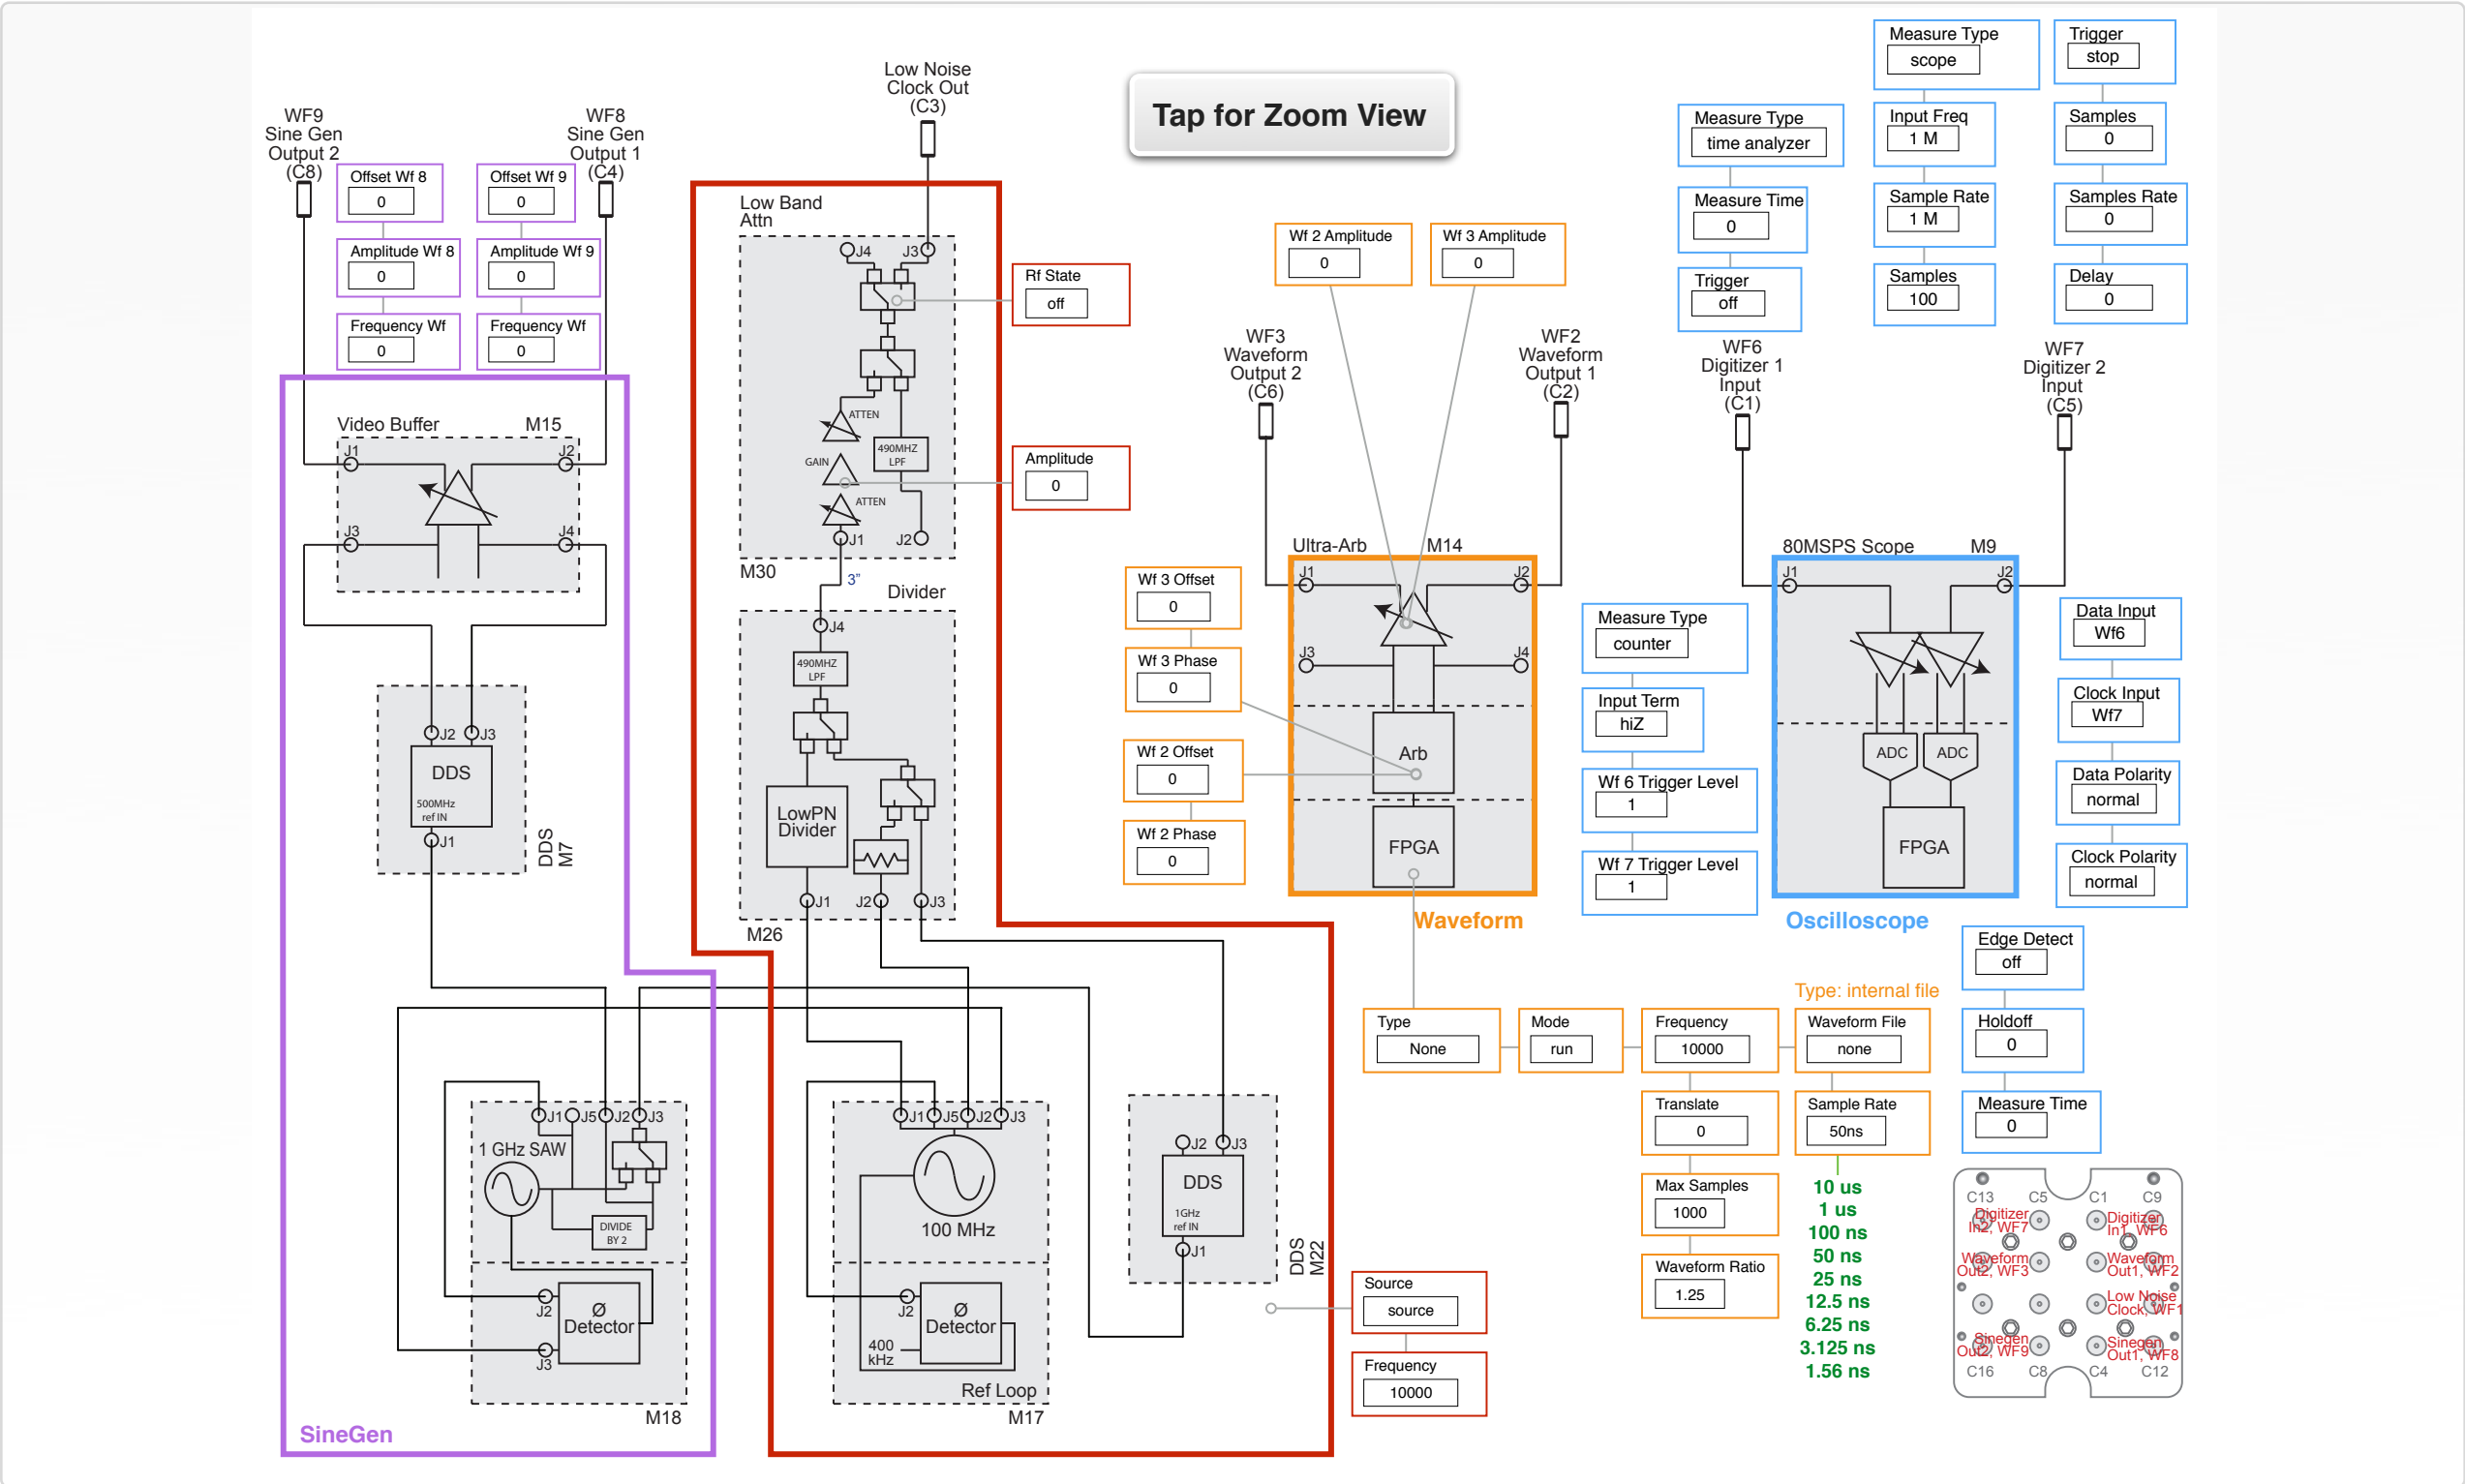

EDIT PANELS

Automated control of the instruments in this TIM with use by the Test Plan Editor.

EDIT PANELS 20 RI8572: WAVEFORM GENERATOR & MEASURE

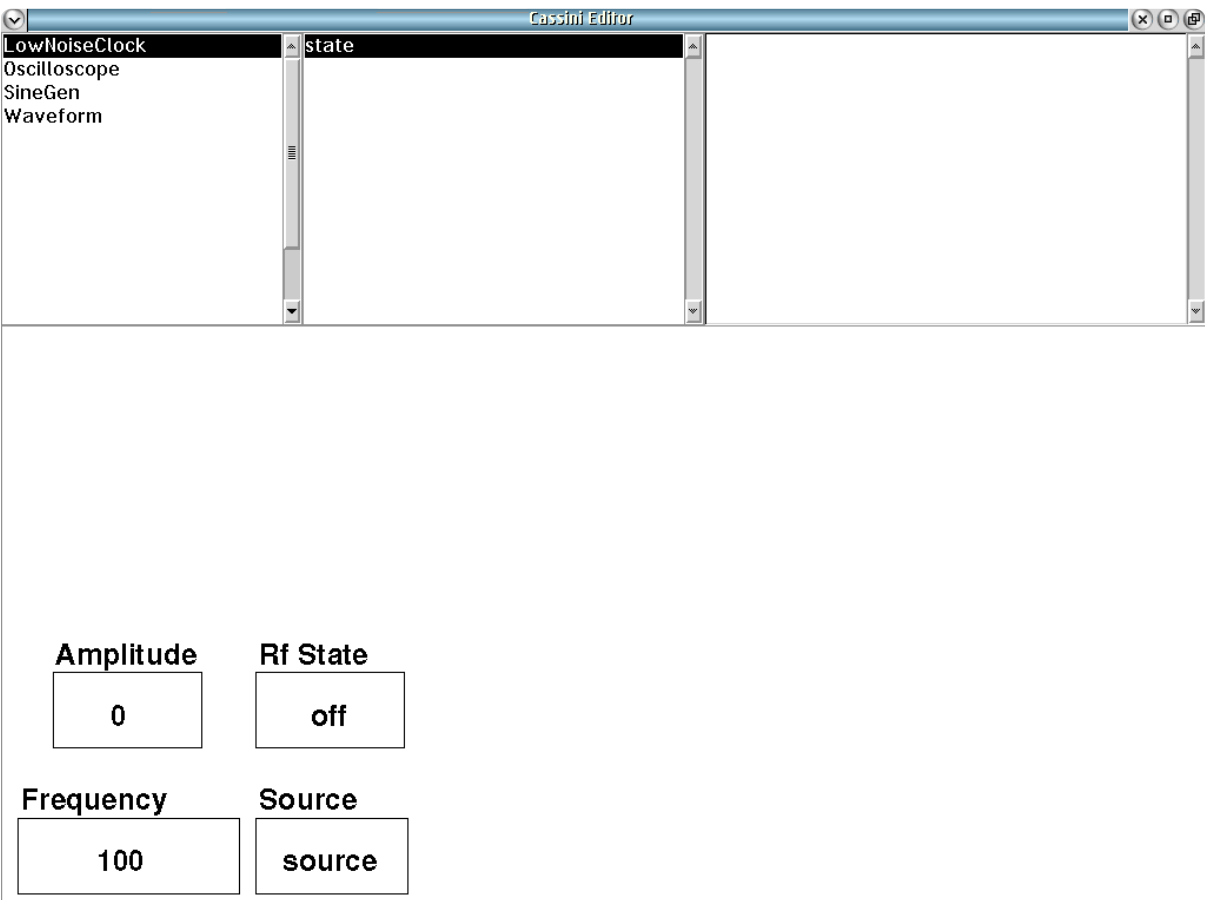

LOWNOISECLOCK

PANEL: STATE

Frequency

100

Frequency

Decimal notation input button that sets the source output frequency in MHz. The frequency range is 0 to 400 MHz.

NOTE: The button's value is dependent on the Source button selected. For frequency values between 0 to 100 MHz, for 100 MHz it is 100 MHz and with a the divider, it is 5, 6.25, 10, 12.5, 20, 25, 50 MHz.

Amplitude

0

Amplitude

Decimal notation input button that sets the low-noise clock signal amplitude in units of dBm. The range of valid input values are -60 to +10.

Rf State

Drop down list button makes the clock signal active ('on') or inactive ('off') at the clock output port located at position C3 of the instrument test head.

Rf State

off

Source

Drop down list button that sets the reference source for the low-noise clock.

Source

source

The 'source' option selects the Direct Digital Synthesizer (DDS) that sources frequency values between 200 Hz to 400 MHz.

The '100 MHz' option selects the ultra-low phase noise 100 MHz crystal oscillator.

The 'divider' option selects the 100 MHz crystal oscillator with frequency division to provide the highest phase noise performance at set frequency values of 5, 6.25, 10, 12.5, 20, 25, 50 and 100 MHz.

NOTE: The typical phase noise performance of the 100 MHz oscillator is approximately 148 dBc/Hz. The 'divider' option has typical noise performance of approximately 148 dBc/Hz + 20log(100 MHz/Frequency) dBc/Hz.

OSCILLOSCOPE

PANEL: SCOPE

Measure Type

Drop down list button that sets the operation type for the oscilloscope instrument. This button is found in the ‘scope’, ‘counter/ber’, and ‘time analyzer’ subsystem panes of the oscilloscope. Buttons and blocks found in these subsystem panes are settings or parameters used by the corresponding function choice of this button. The description of each function is as follows:

The ‘scope’ setting is an oscilloscope function optimized for signal capture of sinusoidal waveforms from 1 Hz to 80 MHz.

The ‘digitizer’ setting is a digitizing oscilloscope function for arbitrary signals from 1 Hz to 80 MHz.

The ‘counter’ setting performs frequency counting operation of sinusoidal, square-wave, and pulse signals. This function requires a voltage reference or trigger and several periods of the input signal to accurately compute signal frequency.

The ‘time analyzer’ setting performs timing computations of signal events using a trigger and a user-defined measurement timing window.

Measure Type

counter

The ‘ber’ setting performs a bit error rate calculation. A predefined, pseudo-random gray code bit stream is emitted from the user-selected port. The digitizer captures the return signal after a user-specified wait or trigger time and then calculates the bit error rate.

The ‘reciprocal’ setting performs a signal frequency count using a reciprocal count method optimized for faster computation of signals below 1 MHz. The reciprocal counter uses the input signal as a trigger and counts the internal clock edges across one period of the input signal.

Input Freq

Decimal notation input button that sets the frequency of the expected input signal in units of Hz. The expected input frequency value enables accurate signal reconstruction of input signals with frequency values greater than the Nyquist sample rate of the oscilloscope.

Input Freq

1 M

NOTE: This button enables a Cassini system compiler directive to compensate for signal path calibrations for a known frequency value.

Samples

Decimal notation input button that sets the total number of samples in the oscilloscope capture window.

NOTE: Maximum number of samples is 2000.

Samples

100

Sample Rate

Decimal notation input button that sets the oscilloscope’s sample rate in units of Hz.

NOTE: Maximum sample rate is 80 mS/s

Sample Rate

1 M

MEAS

Complex vs Time A

Meas: Complex vs Time

Measurement block that computes an RiComplex Voltage vs Time result. Using port WF7 as the real (in-phase) signal component and the WF6 port as the imaginary (quadrature) signal component, the block computes a voltage vector representation of an I/Q baseband signal by digitizing each channel independently and then time-interleaving the channels.

PANEL: COUNTER/BER

Measure Time

0

Edge Detect

off

Measure Time

Decimal notation input button that sets the measurement window for counter measurement gating in units of seconds. Maximum time limit is 2000*Sample Rate.

Edge Detect

Drop down list button that sets the edge detector mode. Option ‘off’ deactivates edge detection. The ‘rising’ option sets the detector to generate edges, trigger, or count on rising edge event types in the data input. The ‘both’ option sets the detector to generate edges, trigger, or count on both rising and falling edge event types in the data input.

NOTE: This button must be set to either ‘rising’ or ‘both’ for event counting.

Data Polarity

normal

Data Polarity

Drop down list button that sets the data input polarity for counter or bit error rate measurements. The ‘normal’ option is positive or rising edge count/trigger. The ‘inverted’ option is falling or negative edge count/trigger.

Data Input

Wf6

Data Input

Drop down list select button that selects the instrument resource port for measurements. The option ‘Wf6’ sets WF6, located at port position C1 on the instrument head, as input to the digitizer. The option ‘Wf7’ sets WF7, located at port position C5 on the instrument head, as input to the digitizer. The option ‘off’ internally disconnects all input ports/paths from the digitizer instrument.

Clock Polarity

normal

Clock Polarity

Drop down list button that sets the polarity of the clock. The ‘normal’ option is positive or rising edge count/trigger. The ‘inverted’ option is falling or negative edge count/trigger.

Clock Input

Drop down list select button selects the clock input for bitt error rate measurements. The ‘Wf6’ sets the signal available at the WF6 port located at position C5 on the instrument head as the clock input. The ‘Wf7’ sets the signal available at the WF7 port located at position C1 on the instrument head as the clock input. The ‘off’ option uses the instruments internal clock.

Clock Input

off

Wf 7 Trigger Level

Decimal notation input button that sets the trigger comparator level voltage for WF7. Valid range of values between ±0.4 V.

Wf7 Trigger Level

1

Wf 6 Trigger Level

Decimal notation input button that sets the trigger comparator level voltage for WF6. Valid range of values between ±0.4 V

Wf6 Trigger Level

1

Input Term

Drop down list button sets the input termination value to ‘hiZ’ representing a high impedance value of 10 kΩ or ‘50 ohm’ for 50 Ω.

Input Term

hiZ

Holdoff

Decimal notation input button that sets the time in seconds that the edge/gate is disabled after sensing a trigger event. The range of values can be set between 25 μs and 150 ns.

Holdoff

0

NOTE: Typically set to the rise time of the edge.

Meas: Frequency

Measurement block that computes signal frequency of the selected input port set by **Data Input** button. The **Measure Time** button sets the capture window time.

MEAS

Frequency A

NOTE: A minimum of two edge/rise or fall time events is required for accurate frequency count.



Meas: Period

Measurement block that computes the time between signal edges of the selected input port set by **Data Input** button. The block uses the **Measure Time** button to set the capture window time.

NOTE: A minimum of two edge/rise or fall time events is required for accurate period measurement.

Meas: Bit Error Rate

Measurement block computes the ratio of errors to bits in a bitstream of the selected input port set by **Data Input** button. The **Measure Time** button sets the capture window time.

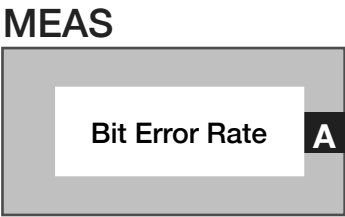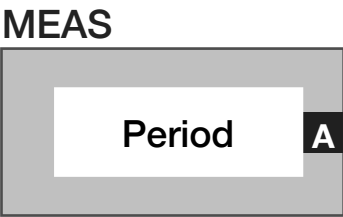

PANEL: DIGITIZER

Delay

Decimal notation input button that sets the delay in units of seconds with a resolution of 1 μ s before a digitizer measurement or to offset the start of a record. Maximum delay value is 2000***Sample Rate**.

Delay

0

Sample Rate

Decimal notation input button that sets the digitizer sample rate in Hz. The valid sample rate range is 1Hz to 80MHz.

Sample Rate

0

Trigger

Drop down list button that is used within a pre-measure group to set the start and stop times of signal captures or bit error rate measurements. The ‘start’ option triggers an event collection. The ‘off’ option ends the event collection.

Trigger

stop

NOTE: This button is used in conjunction with triggered measurements types.

Samples

Decimal notation input button that sets the measurement record length for the digitizer.

NOTE: Maximum number of samples is 2000.

Samples

0

Meas: Triggered Voltage

Measurement block computes a single voltage vector sample from an I/Q input signal voltage vector using a pre-measure group trigger button. The sample point is set by the system measure reference plus any user specified delay using the **Delay** button. The block generates a single RiComplexVoltage value.

MEAS

Triggered Voltage A

Meas: TriggeredDigitizer

Measurement block computes multiple samples of an I/Q input signal's voltage vector using a pre-measure group trigger button. Sample points begin at the system measure reference plus any user specified delay using the **Delay** button. The block computes and time-interleaves the two signal channels into RiComplexVoltage values.

MEAS

Triggered Digitizer A

PANEL: TIME ANALYZER

Trigger

Drop down list button that is used within a pre-measure group to set the start and stop times of signal captures or bit error rate measurements.


The ‘start’ option triggers an event collection.

The ‘stop’ option ends the event collection.

The ‘berStart’ option triggers an event collection for bit error rate measurements. This is used in conjunction with the **Bit Error Rate** measurements block and **Wf6 Trigger Level** and/or **Wf7 Trigger Level** button/s.


The ‘berStop’ option ends an event collection for bit error rate measurements. This is used in conjunction with the **Bit Error Rate** measurements block and **Wf6 Trigger Level** and/or **Wf7 Trigger Level** button/s.

NOTE: This button is used in conjunction with triggered measurements types.

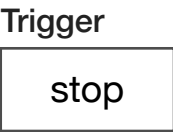


Measure Time

Decimal notation input button that sets the measurement window for counter measurement gating in units of seconds. Maximum time limit is 2000 samples***Sample Rate**

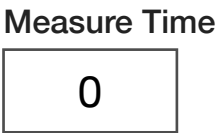

Meas: Triggered Time Stamp

Measures events from the counter system. Generates an RiTimeD with an entry for each edge.Measure is started and stopped by the Trigger in the pre-measure. Uses MeasureTime for the length to examine. Samples must exceed the measure time such that several samples occur after the time completes.

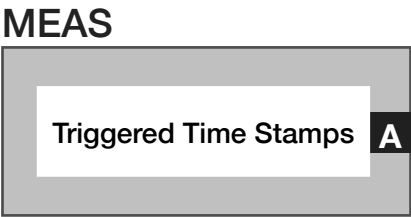

WAVEFORM

PANEL: STATE

Wf 3 Amplitude

Decimal notation input button that sets the amplitude of the open circuit peak voltage of the in-phase (real) signal component. The signal is available at WF3 located at position C6 on the instrument head. Maximum value is 2.5 volts peak.

Wf 3 Phase

Decimal notation input button that sets the waveform delay in units of degrees of the in-phase (real) signal at WF3 located at position C6 on the instrument head. The range of values is ± 180 .

Wf 3 Offset

Floating point button that sets the signal offset voltage for the waveform at WF3 located at position C6 on the instrument head. Available range is ± 3 V.

Wf3 Amplitude

0

Wf3 Phase

0

Wf3 Offset

0

NOTE: The output waveform plus the offset cannot exceed ± 3 volts.

Wf 2 Amplitude

Decimal notation input button that sets the amplitude of the open circuit peak voltage of the quadrature (imaginary) signal component. The signal is available at WF2 located at position C2 on the instrument head. Maximum value is 2.5 volts peak.

Wf 2 Phase

Decimal notation input button that sets the waveform delay in units of degrees of the quadrature (imaginary) signal at WF2 located at position C2 on the instrument head. The range of values is between ± 180 degrees.

Wf2 Amplitude

0

Wf2 Phase

0

Wf 2 Offset

Floating point button that sets the signal offset voltage for the waveform at WF2 located at position C2 on the instrument head. Available range is between ± 3 V.

NOTE: The output waveform plus the offset cannot exceed ± 3 volts.

Frequency

Decimal notation input button that sets the waveform frequency in units of Hz. When modulating the signal/s this button sets the center frequency. The range of frequencies available are 1 kHz to 35 MHz.

Translate

Decimal notation input button that generates two sinusoidal tones on WF2 and/or WF3 on either side of the **Frequency** button value by a user-defined value in units of Hz. For example, a **Frequency** value of 1 MHz and a **Translate** value of 100 kHz generates tones at 900 kHz

Wf2 Offset

0

Frequency

100000

Translate

0

and 1.1 MHz. Range of **Frequency** $\pm$ **Translate** values must remain between 1 Hz - 20 MHz.

NOTE: The translate button provides direct control of the arbitrary waveform generator's DDS and can be used to generate a sinusoidal signal on WF2/WF3 up to 80 MHz by setting the Sample Rate button to '1.56 ns', the Frequency button to 0 Hz, and the Wf2/Wf3 Amplitude button to the desired level. This multipurpose feature can also be used to generate low frequency, two-tone signals for intermodulation measurements.

Type

A drop down list button that outputs a two-channel, baseband waveform on WF2 (quadrature/imaginary) and WF3 (in-phase/real) from built-in modulation waveform types:

'Quad' - Quadrature sinusoidal waveforms (WF3 leads WF2 in phase by 90 degrees).

'Fast Quad' - This mode is no longer supported.

'Sine' - produces a sinusoidal waveforms on WF6 and/or WF7 with parameters defined by the user.

'Dual Sine' - This mode is no longer supported.

Type

none

“SSB Dual Sine” - Single sideband, dual sine waves on WF6/WF7. This mode produces two sinusoidal waveforms on a single channel specified by the user with Frequency 1= **Frequency** setting, and Frequency 2=**Frequency** * **Frequency Ratio**.

‘SqWave’ - produces a square-wave signal on WF6 and/or WF7 with parameters defined by the user.

‘modulation’ - produces a modulated waveform using the button parameters found in the modulation pane of the waveform instrument.

‘file’ - This mode is no longer supported.

‘internal file’ - enables a user-defined signal specified by the **Waveform File** button in the edit panel. The list of waveforms in the **Waveform File** button can be edited by adding or removing waveform files to the TIM from Guru via the **Edit Patterns** button in the Configuration Panel.

Waveform Ratio

Decimal notation input button that used with the ‘SSB Dual Sine’ mode to generate two sinusoidal tones at frequency values that are a ratio value of each other on a single channel for WF6 or WF7. For example, a **Frequency** value of 2 MHz and **Waveform Ratio** of 1.25

Waveform Ratio

1.25

produces a tone at 2 MHz and 2.5 MHz. Range of valid inputs is 1 to 2.

Sample Rate

A drop down list button that sets the time between the waveform data’s next sample output. Sample rates options are “10 μs”(100 kHz), “1 μs”(1 MHz), “100 ns”(10 MHz), ‘50 ns’(20 MHz), ‘25 ns’(40 MHz), ‘12.5 ns’(80 MHz), ‘6.25 ns’(160 MHz), ‘3.125’(320 MHz), and ‘1.56 ns’(640 MHz).

For ‘sine’, ‘quad’, and ‘SSB Dual Sine’, the **Sample Rate** must be typically **Sample Rate** ≥ 8***Frequency** for accurate signal generation.

NOTE: For the “Pattern” type files the maximum sample rate is ‘25 ns’.

Sample Rate

50 ns

Max Samples

Decimal notation input button that sets the number of samples in the emitted waveform.

NOTE: Maximum number of samples is 2000.

Max Samples

1000

Mode

Drop down list button that enables and/or triggers a burst of an emitted waveform.

The ‘run’ value is used in global defaults or section defaults or within a test panel to initiate a waveform.

The ‘stop’ value is used in global defaults or section defaults or within a test panel to cease a waveform.

The ‘pmStart’ value is used to trigger a burst of the waveform with a precision start time designated by the user within a test panel using a pre-measure sequence grouping.

The ‘pmStop’ value is used to trigger the end of a waveform burst with a precision stop time designated by the user within a test panel using a post-measure sequence grouping.

The ‘trigger’ value is used to start a waveform burst with a pre-set start time of 0 and is terminated by the user within a test panel using a ‘pmStop’ in the post-measure sequence grouping.

Mode

run

NOTE: ‘pmStart’ and ‘pmStop’ must be used together within a test panel for the desired result of syncing the waveform with an event or user start time.

Waveform File

Drop down list button that selects a waveform from the preloaded user-defined waveforms on the instrument.

Waveform File

none

PANEL: MODULATION

Filter

A drop down list button that selects a digital filter type to be applied to the waveform. Built-in types include: “Raised Cosine”, “Gaussian”, “GMSK”, or a user-defined filter type provided by the **Filter File** button.

Filter

none

Filter Bw

A decimal notation input button that sets the ratio of the selected filter’s bandwidth with the symbol bandwidth.

Filter Bw

1.0

Filter Taps

Decimal notation input button that sets the total number of digital filter coefficients.

Filter Taps

0

Mod Index

A decimal notation input button that sets the ratio of the excursions of the modulated signal to the signal level of the unmodulated carrier in the time domain.

Mod Index

1.0

Data Bits

An integer value button that sets the number of data points per record.

Data Bits

100

Data Rate

An integer value button that sets the output data point rate in units of Hz

Data Rate

1000000

Modulation Type

A drop down list button that selects a modulation from the built-in standards: “Ran FSK” - Random Frequency Shift Keying, “8PSK” - 8

Modulation Type

none

Symbol Phase Shift Keying, “Edge”, “QPSK” Quadrature Phase Shift Keying, “FM Tone”, and “AM Tone”

Filter File

A drop down list button that selects the file name of a user-defined digital filter taps or coefficients file. The maximum number of coefficients is 200.

Prn Type

A drop down list button that selects the size of the pseudo random number seed used in the sequence generator. i.e “PN5”, “PN7”, “PN9”, etc.

Data Delay

A decimal notation input button that sets the data output delay in units of seconds with a resolution of 1 μs.

Filter File

none

Prn Type

none

Data Delay

0

SINEGEN

PANEL: STATE

Frequency Wf 8

Floating point button that sets the output sine wave’s frequency in MHz. The range of values are 1kHz to 100MHz.

Amplitude Wf 8

Decimal notation input button that sets the amplitude of the open-circuit, peak-to-peak voltage of the in-phase (real) signal component. The signal is available at WF8 located at position C4 on the instrument head. Input value is peak-to-peak voltage (i.e - a value of 2 results in a +1V to -1V signal). Maximum value is 2.5 volts.

Offset Wf 8

Floating point button that sets the signal DC offset voltage for the waveform at WF8 located at position C4 on the instrument head.

Frequency Wf 8

1

Amplitude Wf 8

0

Offset Wf 8

0

NOTE: The output waveform plus the offset cannot exceed ± 3 volts.

Frequency Wf 9

Floating point button that sets the output sine wave’s frequency in MHz. The range of values are 1kHz to 100MHz.

Frequency Wf 9

1

Amplitude Wf 9

Decimal notation input button that sets the amplitude of the open-circuit, peak-to-peak voltage of the quadrature (imaginary) signal component. The signal is available at WF9 located at position C8 on the instrument head. Input value is peak-to-peak voltage (i.e - a value of 2 results in a -1 V to +1 V signal). Maximum value is 2.5 volts.

Amplitude Wf 9

0

Offset Wf 9

Floating point button that sets the signal DC offset voltage for the waveform at WF9 located at position C8 on the instrument head.

Offset Wf 9

0


NOTE: The output waveform plus the offset cannot exceed ± 3 volts.

CONTROL PANELS

Real time control of the instruments in this TIM.

See Control buttons.

CONTROL PANELS 16 RI8594: HIGH PERF. WAVEFORM

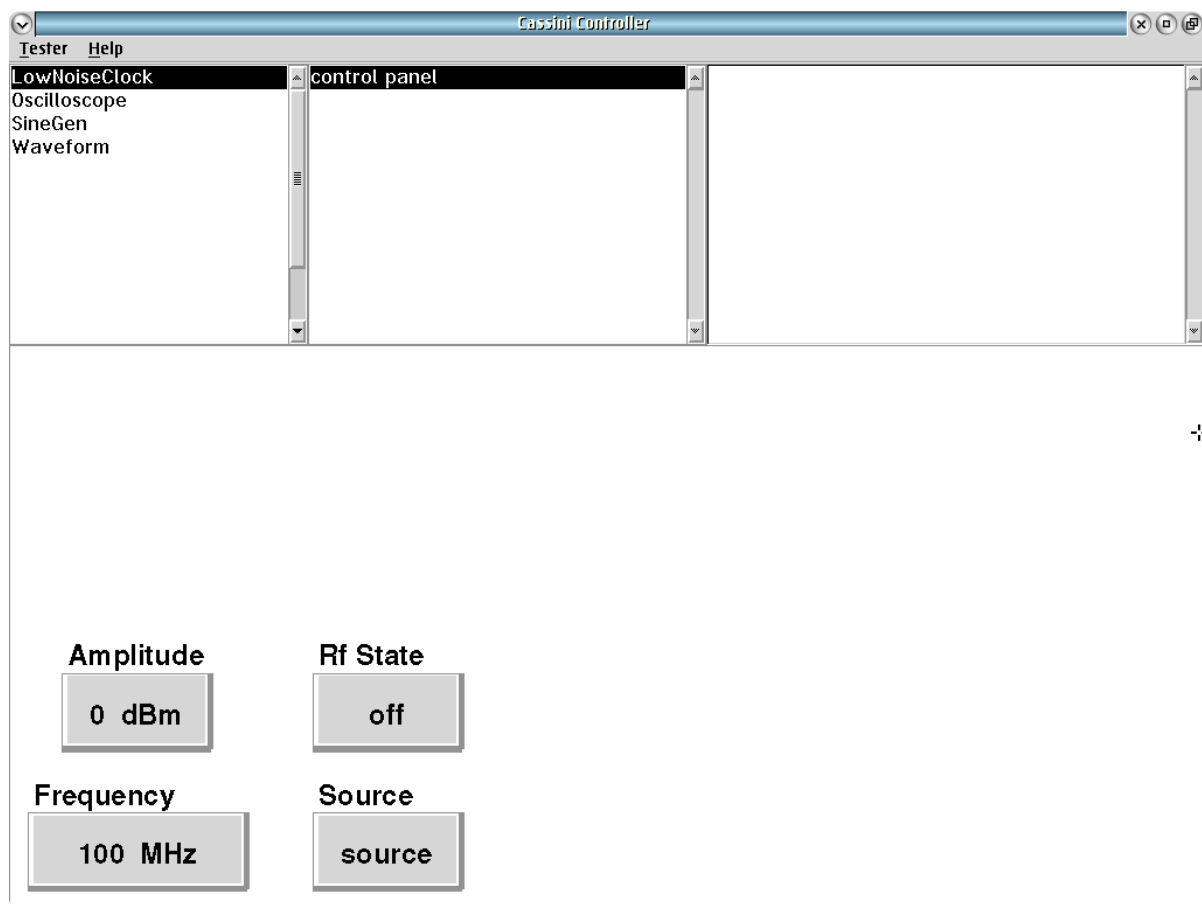

OSCILLOSCOPE SCOPE

MEAURE, RMS DFT, Y PARAMETER, Y FORMAT, /DIV

Update the graph with measured values in real-time.

COUNTER CONTROL

Edge Period, COUNTER FREQ, COUNTER

Click to update measurement in real-time.

CARE & MAINTENANCE

3

Provides General Care &
Maintenance Information
for:

- ESD Control
- Maintenance Schedule
 - Daily
 - Periodic
- Fixture Care
- RF Connector Care

ELECTROSTATIC DISCHARGE (ESD) CONTROL

Electrostatic Discharge (ESD) often damages or reduces the life of the test system or its components. The following steps should minimize ESD damage.

CREATE AN ANTISTATIC WORK AREA BY:

- Spraying all surfaces (floors as well as tables) with an antistatic solution.
- Handling all electronic parts and assemblies in antistatic containers.
- Using static conductive floor mats and grounded antistatic service mats.
- Using grounded wrist straps (with 1-Megohm resistors).
- Discharge static from personnel before handling electronic components or printed circuit boards by using wrist ground straps and antistatic outer clothing.
- Discharge static from tools before they are used to service electronic assemblies.

- Service or work on electronic assemblies only in areas which are static-controlled.
- Remove the following materials from the test/work areas:
 - Food containers and wrappers (plastic, cellophane, paper and Styrofoam)
 - Clothing and shoes fabricated from man-made materials (rubber-soled shoes)
 - Paper
 - Tapes
- Maintain humidity levels between 40 and 60%.
- In severe static-inducing conditions, for example in automated work areas or where the humidity levels are very low, use air ionizers.
- Consult an ESD Control Specialist for additional recommendations.

MAINTENANCE SCHEDULE

Cassini test systems are designed for high-volume use in a production environment. If properly maintained, the test system should only require a minimum amount of scheduled downtime to maintain performance. The provided maintenance schedule summary is a recommended guideline based on the requirements of a standard, high-volume production test floor. The planned maintenance timelines can be extended when used in a lab setting, very low volume production, or a thermally stable ($\pm 5^{\circ}\text{C}$) and "Class 3+ Cleanroom" test floor. The frequency and details of the procedures listed in the Preventive Maintenance Schedule can be adapted by the end-user's discretion. For example, calibrations can be safely postponed up to 6 months time if the system is in a thermally stable environment where the ambient temperature does not vary by more than 5°C .

***As Needed:** Maintenance should be completed either within the recommended time period or as needed; whichever occurs first.

****Required Tools:** Standard Tools include Clean Dry Air (CDA) or Pressurized Air, Cotton Swabs, Tweezers, Alcohol and SMA torque wrench. Diagnostic/Calibration Plate is provided with the system. Full

Calibration Kit is either contained onsite or provided by RI during a scheduled visit.

PREVENTIVE MAINTENANCE SCHEDULE

Maintenance	Daily	Monthly	Quarterly	Yearly	*As Needed
Socket	✓				MFG Suggestion
DIB		✓			>10% Yield Change
Test Head TIM Ports	✓				1000 Fixture Docks
Fixture Inserts at DIB	✓				1000 DIB Installs
Docking Hardware		✓			1000 Docks
Handler Pod - Test Head RIFL Cable			✓		Frequent Handler Changes
Diagnose/ Verify		✓			Yield Drops
TIM System Calibration				✓	TIM Swap
Auxiliary Rack RF Cables			✓		TIM Swap
Fixture Calibrations	Never Calibrate Fixture Unless Modified				Modification/ Damage

PREVENTIVE MAINTENANCE DETAILS

Mainten ance	Time to Complete	Role/ Login	**Required Tools	Notify RI Support
Socket	1-2 min	Operator	Standard Tools	
DIB	10 min	Maintena nce	Standard Tools. Voltmeter, Magnifier	
Test Head TIM Ports	2 min	Operator	Standard Tools	
Fixture Inserts at DIB	1 min	Operator	Standard Tools	
Docking Hardware	30 sec	Operator		If wear is found
Handler Pod - Test Head RIFL Cable	1 min	Operator		
Diagnose/ Verify	1-5 min (selective) 1 hour (complete)	Maintena nce	Diagnostic/ Calibration Plate, Power Meter	✓

DAILY MAINTENANCE

Daily maintenance typically includes the cleaning and repairing of sensitive electronic connectors. Isopropyl alcohol (at least 90% concentration) is the Roos Instrument’s approved solvent to clean connectors. Connector and component surfaces should be dried using de-ionized, compressed air to remove residual debris. If the contamination is not removed, test operations should cease and affected components should be shutdown and removed for maintenance. If the severity of the contamination or damage to a component is such that it cannot be repaired onsite, contact Roos Instruments for repair and/or service support.

DAILY MAINTENANCE PROCEDURE

Carefully inspect socket and load board connections. Look for any physical damage, bent pins or fingers, and contamination such as dirt, dust, or metal flakes.

Check microwave and DC connectors between the fixture and test head for signs of wear or damage. Look for any physical damage, bent pins or fingers, and contamination such as dirt, dust, or metal flakes.

CAUTION: Small pieces of metal or conductive debris can cause an electrical short between components or to ground resulting in damage to the test system components.

- Inspect the docking hardware for signs of mechanical wear.

WARNING: Worn components can cause improper alignment resulting in intermittent measurements.

- Inspect RIFL cables attached to Handler Pods for signs of any damage or loose connections.
- Verify that the grounding wire and alligator clips between the handler and test system and/or auxiliary rack and test system are properly attached to an electrically grounded metal on both ends. Alligator clips are provided as a convenience and can be changed to a more permanent solution with spade clips.
- If there is physical damage to any of these components or cables, the system should be serviced immediately. If the components cannot be repaired onsite, contact Roos Instruments for repair and/or service support.

PERIODIC MAINTENANCE

- Visually inspect all connectors between the test head and fixture. Look for any signs of physical damage: bent pins or fingers in the PKZ #12 connector, and contamination such as dirt, metal flakes, etc.
- Check the physical interface between the fixture and handler for signs of wear or damage.
- Connect the Calibration/Diagnostic plate to the test head.

NOTE: For proper alignment, the RI Logo Arrow should point towards the infrastructure chassis.

PERFORM FULL SYSTEM DIAGNOSTICS:

- From the Cassini window, choose **System > Tester** to open the Configuration Window.
- From the Configuration window, choose **Tester > Diagnose**. If multiple TIM configurations exist, choose the appropriate

name from the list that matches the current arrangement of TIMs and press **Select**.

- Choose **Run > All** to perform a full system check.
- Follow any on-screen instructions, making sure connectors are properly seated in the diagnostic fixture. This will verify that the system meets calibrated performance specifications.
- If there are any failures, follow the [Diagnose Procedure](#), document the failure, and request service from Roos Instruments support.

FIXTURE CARE AND MAINTENANCE

FIXTURE STORAGE


RI Fixtures use robust mechanical and electrical connections to survive the rigors of high volume semiconductor production. Regular repeated use without proper maintenance, however, can reduce the functional lifetime of the fixture.

Store the fixture in a protected place when not in use such as a metal cabinet or book shelf. Make sure that the shelf the fixture sits on is clean. The fixture feet will allow the fixture to sit without damaging the connectors. Check DC and RF connections periodically to ensure good contact and that damage has not occurred. Don't store the fixture in such a way as to allow objects to contact the bottom surface. Anti-static Styrofoam is OK. Doing otherwise may contribute to pin breakage or RF connector damage. Do not store on wire shelf racks.

FIXTURE CLEANING

The Cassini family of testers use a combination of blind mate adapters between the test head and fixture that include: gold pins for DC, PKZ #12 connectors for the RF and waveguide for mmWave. These connectors can become contaminated and will need to be cleaned. PKZ #12 connectors have especially small physical dimensions needed for good RF performance, and therefore are very delicate.

FIGURE 3.1 TESTHEAD-TO-FIXTURE INTERFACE

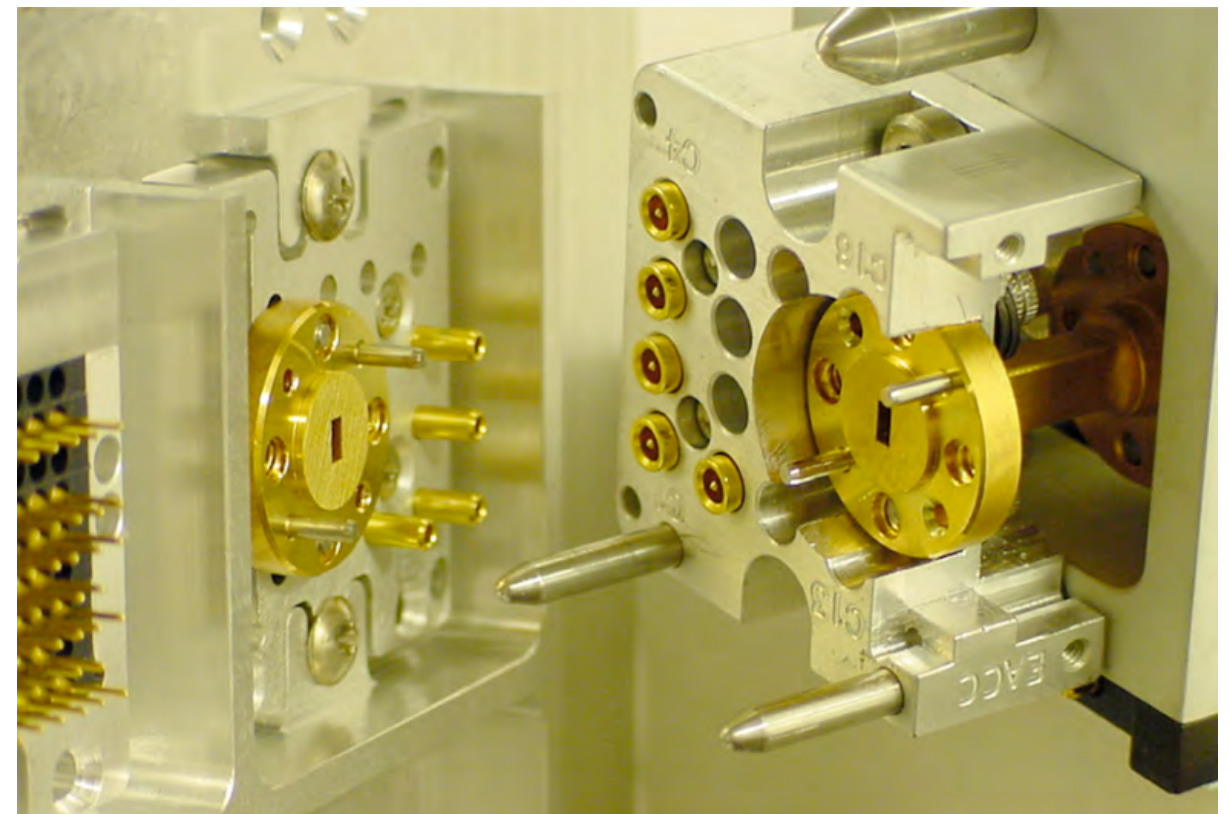

Gold pins in fixture connector block shown on left, PKZ male and waveguide shown on center fixture block, and the mating TIM Waveguide block with female PKZ shown on right.

CAUTION: Standard cleaning methods, such as a cotton swab, can damage the PKZ #12 connector.

This document shows how to clean PKZ #12 connectors using spray cleaner and spray duster. This technique works for both the male and female connectors.


To clean the connector, use a static-safe chemical cleaner such as TF-Cleaner shown in [Figure 3.2](#). If TF-Cleaner is not available, use an

FIGURE 3.2 EXAMPLE CLEANER



Recommended solution for cleaning connectors

FIGURE 3.3 CLEANER INGREDIENTS

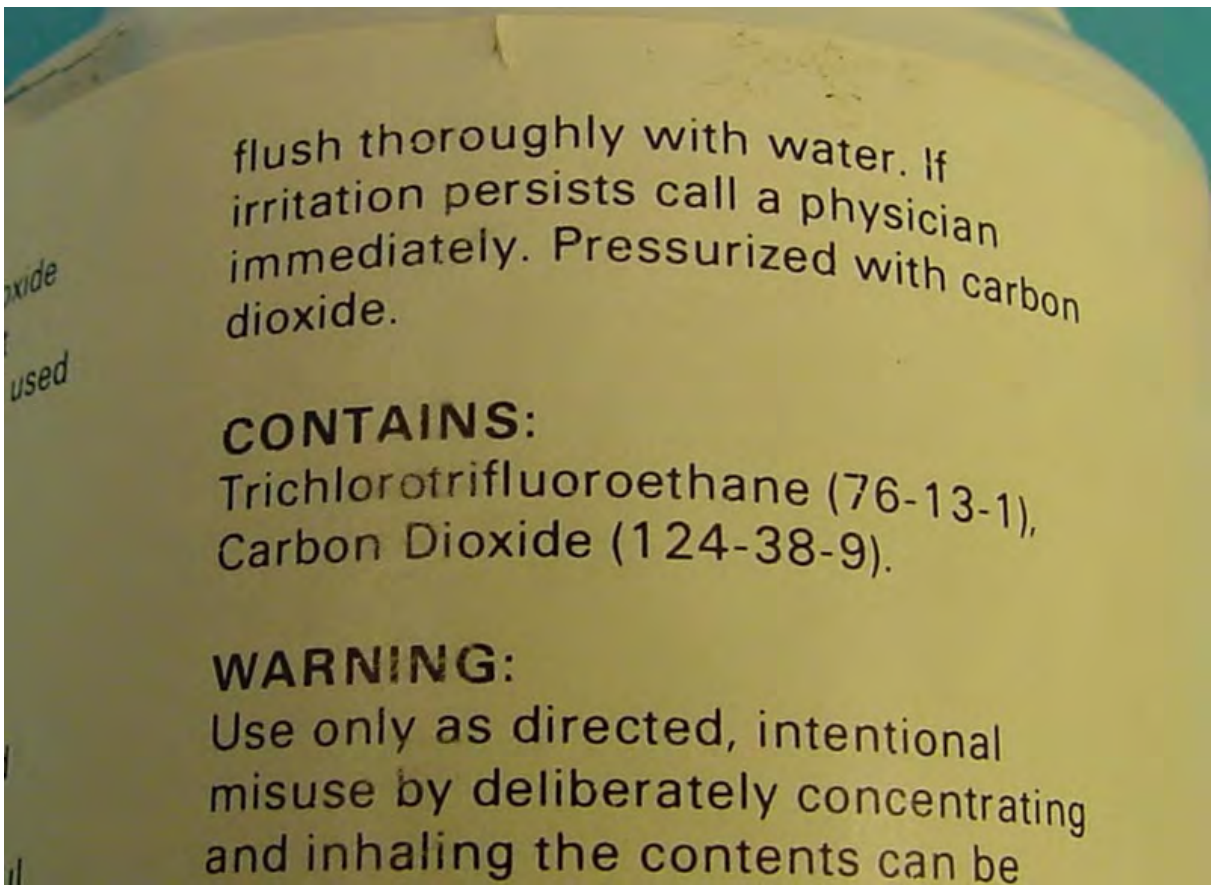


Ingredients for the TF Cleaner used by Roos Instruments

equivalent cleaner. Alcohol-based cleaners can also be acceptable, however cleaners that contain oils such as tuner cleaner, are NOT acceptable.

Using this, or an equivalent cleaner, spray a small amount into the connector as shown in [Figure 3.4](#). This should flush out any debris or contaminants.

CAUTION: Adhere to all safety use and warning labels on the cleaning solution container.

FIGURE 3.4 CLEANING THE CONNECTORS

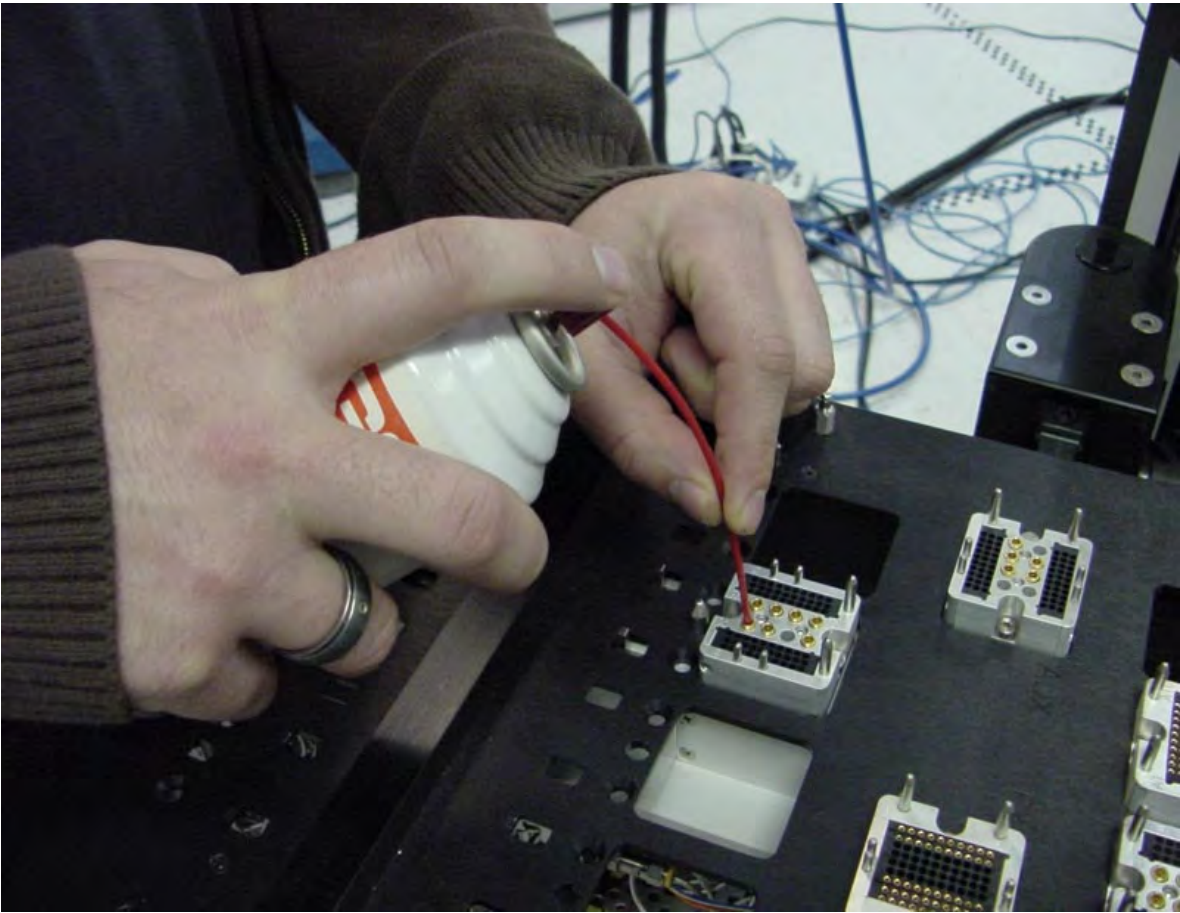

Spray a small amount of cleaner into each connector as shown in the figure.

FIGURE 3.5 DIRTY PKZ #12 CONNECTOR EXAMPLE



Magnified view of contamination possibly shorting the center conductor to the outer shell

FIGURE 3.6 CLEAN PKZ #12 CONNECTOR EXAMPLE



Magnified view of a clean connector

After flushing the connector with cleaner, use a 'duster', such as shown in [Figure 3.7](#) to dry the connector. Clean, dry air or stable gas such as CO₂ are acceptable. Spray the duster into the connector to thoroughly flush any cleaner and dry the connector.

FIGURE 3.7 AIR DUSTER



Type of compressed air duster used at Roos Instruments

DIB CLEANING

1. Using isopropyl alcohol (strength at least 98%) and a low-lint Q-tip or optical grade cleaning wipe, clean the contact side of the RF and DC interfaces carefully. Also wipe the tips of the pogo pins themselves.
2. Repeat step 1 for the contact pads of the socket.
3. Use compressed air to remove any residual alcohol or lint fibers.

SOCKET CLEANING

1. Inspect the socket for any broken or misaligned contacts.
2. Replace bad contacts using the manufacturers prescribed replacement procedures.
3. Use a mild stream of air and/or a soft artists brush to remove loose debris from the socket when needed.
4. Follow the manufacturers prescribed cleaning process for debris that is not easily removed.

RF CONNECTOR CARE

HANDLING SMA CABLES

When working with RF SMA cables, use the proper technique when adding or removing connections (See [Figure 3.8](#)). The key to safely connecting any coax connector is to remember that the center conductor should not spin. The center conductors usually have a thin gold plate on them, and if the connector is spun excessively the gold plating can be damaged. The damaged plating would then oxidize and cause degraded RF performance and by extension repeatability and calibration issues. Some key rules for working with SMA type connectors on Cassini test systems are:

- Always turn the coupling nut, do not spin the center conductor.
- Do not twist or bend RF cables.
- Do not put a wrench on the gold trim cap on the Auxiliary rack RF cables (see [Figure 3.9](#)).
- Always use a 5/16 inch(8mm) SMA torque wrench set to 7–10 in·lb (0.8 to 1.1 N·m).




FIGURE 3.8 MATING MICROWAVE CONNECTORS

Proper Procedure for Mating Microwave Connectors



1. Engage the two mating interfaces with slight pressure.
2. Hold the body of the male connector and **turn only the coupling nut**.
 - The coupling nut will engage the threads of the female connector.
3. Continue **turning only the coupling nut**.
 - The outer conductors will engage and align the connectors to each other.
 - Then the center conductors will engage.
 - Then the outer conductors (reference planes) will come together and the coupling nut will quit turning.
4. Use a torque wrench to apply the proper torque to complete the mating.

When the proper procedure for mating microwave connectors is followed, no rotational torque is applied to the center conductors. If the body of either connector is rotated, this is improper and can apply a rotational torque to the center conductor. All Southwest Microwave connectors have the center conductor rigidly captured to the outer housing. The center conductor captivation is, in most cases, accomplished with a high temperature plastic bead. This bead provides high axial retention at extended temperatures, but does not provide for any rotational resistance. Therefore proper mating is strongly recommended.

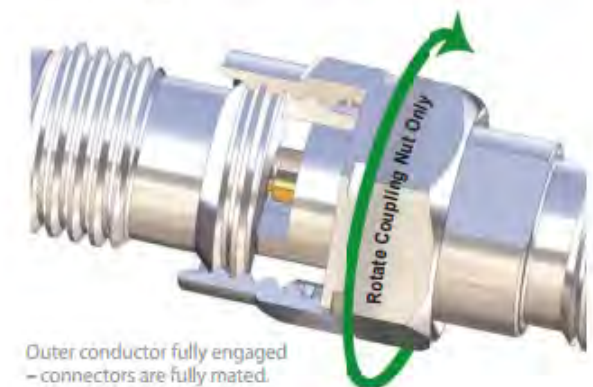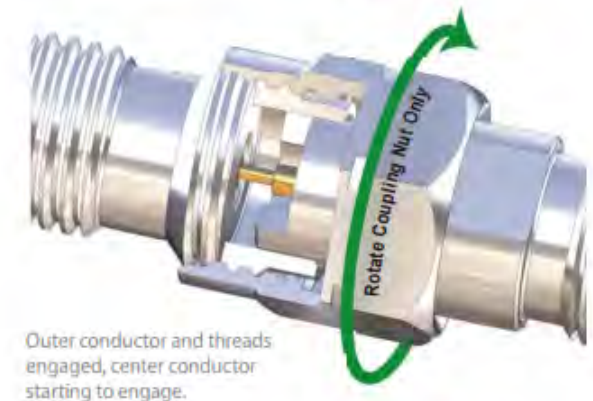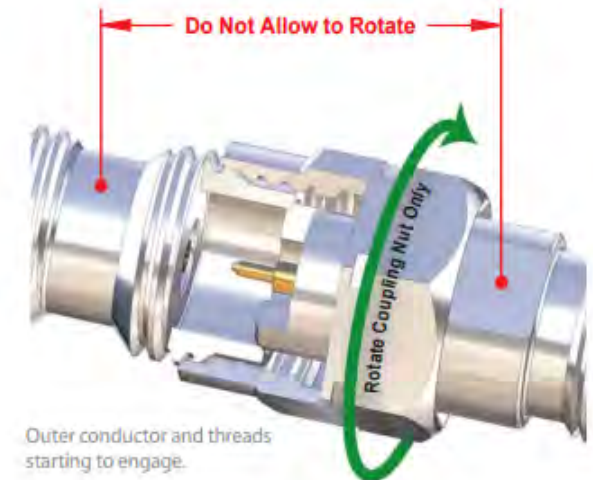

Procedure for mating microwave connectors

FIGURE 3.9 AUXILIARY RACK GOLD CAP



Do not use a wrench on gold trim cap.

SERVICE

4

Contains General Service Information for:

- Exchanging New or Repaired TIMs
- Guru Network Setup
- RF Relay & Attenuator Wear Levels
- Getting Assistance from Roos Instruments

EXCHANGING A NEW OR REPAIRED TIM

This section describes how to add a new, temporary replacement, or repaired Test Instrument Module. These instructions are the factory-specified guidelines for any new, factory-serviced, or factory-upgraded TIM to insure proper software and firmware compatibility.

BEFORE THE TIM IS INSERTED INTO THE TEST SYSTEM:

A Guru zip file (.gzp) containing instrument definitions, software drivers, and calibration data must be installed in the test system's local or networked Guru. This file is provided by a Roos Instruments support engineer and must be imported before installing the TIM.

IMPORTING SOFTWARE RESOURCES:

1. [Open the Guru Browser application](#) from the **Apps** button on the Guru control bar.
2. Import the definitions from the .gzp file into Guru using the [Import function](#) of the Guru browser. If the definitions in the .gzp were installed by a networked Cassini or simulator, the resources will sync to the test system's local Guru automatically when requested.
3. Remove the failed TIM if it is still installed. (See [Removing a TIM](#))
4. Once the software resources are installed, insert the TIM into the appropriate test head slot. (See [Installing a TIM](#))
5. Choose **System > Check** from the Cassini main system window.

NOTE: The TIM's information and calibration data is automatically loaded from Guru when the instrument is powered up. As such, calibration of the TIM is not necessary.

If a testset TIM (RI8545, RI8563, RI8564, RI8567, RI8580) has been replaced or re-calibrated, then a full system calibration of RF TIMs connected to the testset/s may be required.

6. Verify that the TIM has been added to system's configuration by checking the Equipment Pool or Configuration Window.

7. Verify that the TIM has valid calibration data by RMB clicking the TIM's instrument or instruments in the Configuration Window and selecting **Calibration > Inspect** menu. If the cal data values are all zero, then the Calibration data has NOT been loaded properly.

If the TIM installation is intended to be permanent and did not replace an existing TIM with the same model and location, the new tester definition should be saved. (See [Saving the Tester's Configuration](#))

Also, the test system's calibration list may have to be modified to include calibrations for the new TIM.

If a duplicate TIM is being added to the test system, the software will automatically assign the instrument name and the TIM instruments a number enumeration to the end of the instrument's name in the Equipment Pool and Configuration Window. For example, if a second RI8546C is added, containing the DutControl, PowerVI, and StaticDigital instruments, the new instruments will be assigned as DutControl2, PowerVI2, and StaticDigital2.

AUX Rack sources may require renaming to match the configuration as wired. Rename a TIM by selecting it from the Configuration window, RMB click and select **Rename**. Since two instruments can't be named the same, select a temporary name and continue renaming until all the Sources are named properly. A RecLO instrument must always be renamed manually.

If the TIM locations change, be sure to relocate or add the appropriate calibration block and/or interconnect cables to the Diagnostic/Calibration Interface plate. Also use the [Change the Calibration List](#) to set the default list of service test plans used to Diagnose or Calibration the system.

NOTE: The Calibration List guru object is created at the Factory and affects both Diagnostics and Calibration. Contact support@roos.com to coordinate any TIM reconfiguration.

SAVING THE TESTER'S CONFIGURATION:

1. Open the Configuration Window by choosing **System > Tester** from the Cassini main system window.
2. If one or more TIMs were added or removed, the default Calibration List must also be changed. Follow the [Change the Calibration List](#) procedure.
3. From the menu options along the top of the window, select **Tester > Save**.

NOTE: The saved tester definition controls two main functions:

- 1. When multiple TIMs of the same type exist in the configuration, the definition sets the enumeration of the TIMs and the instruments within i.e. - defines which is instrument1 and which is instrument2, etc. as well as their corresponding location on the test head.*
- 2. It enables simulated testers to use the same TIM and instrument layout configuration.*

It is important that the tester definition be saved after this type of installation. If the tester image is closed and re-started, the test system will need the updated tester definition to correctly and consistently identify the enumeration value of duplicate TIMs in the configuration.

GURU NETWORKING SETUP (TCP/IP AND FTP)

NETWORK SETTINGS

The network settings are managed by the embedded operating system (eCS). For Guru to operate properly, the network must be properly configured. The system controller is pre-configured to use DHCP to automatically assign appropriate network settings. If the network has a dedicated Guru Server, use the Guru Address Book to configure the connection to that server.

NOTE: Before contacting RI Support for assistance in setting up Guru networking, have the following information available: IP address, TCP/IP Net mask, Default Route, and DNS Server or static host names.


View the current IP address by entering **ifconfig lan0** into a command window prompt.

TCP/IP CONFIGURATION

If the system controller needs to use a static IP address, follow the instructions below:

1. Access the TCP/IP Configuration workbook from the **System Configuration toolbox > Network > TCP/IP > TCP/IP Configuration**. ([Figure 4.1](#))
2. From the Network tab, change to **Manually, Using** and enter the IP Address and Subnet mask.
3. From the Routing tab, click **Add** button and enter the Router address change type to **default** and press **OK**.
4. On Host Names tab, enter the system controller's Host Name and click **Add** to add DNS server IP address.
5. If the Guru Server's host name is not properly resolved by DNS, enter it into the Hosts tab (along the bottom). Test this by typing **host <Guru hostname>** into a command window. If the result fails, then a Host Name is required.

FIGURE 4.1 TCP/IP CONFIGURATION NOTEBOOK, NETWORK

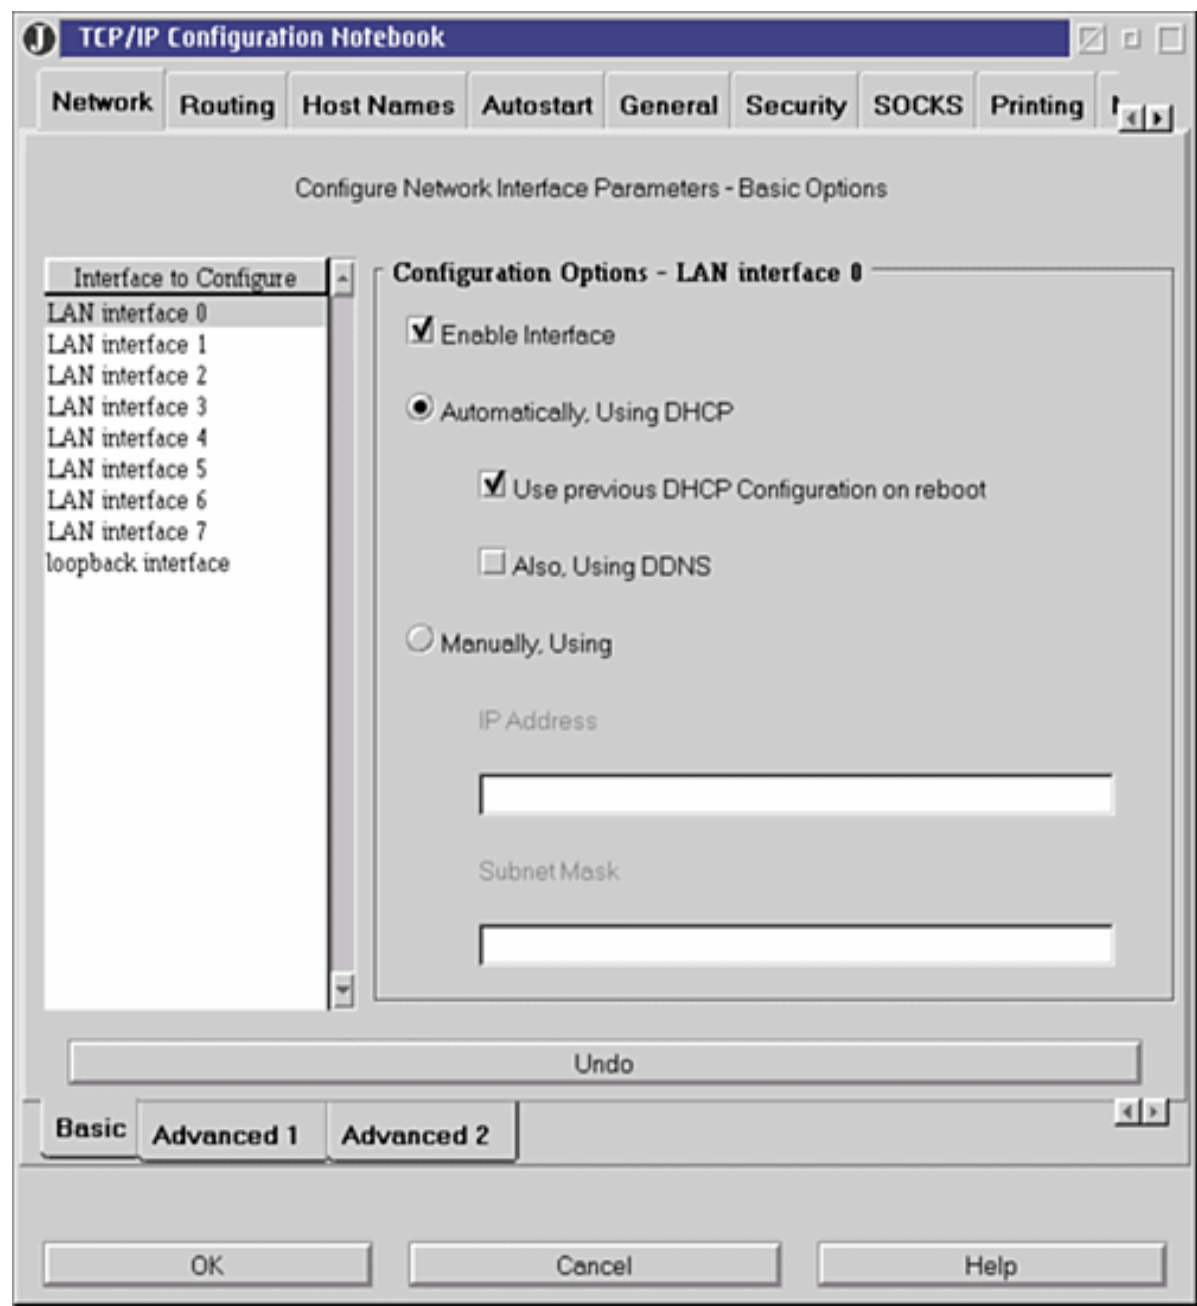

IP Address, Netmask setup screen.

FTP CAPABILITY

- Use the FTP applications provided by eCS (GUI or CLI) to FTP out from the system
- FTP Daemon must be set to Autostart to accept FTP connections
- TCP/IP Security must be set for at least 1 user
- User must have a Password (min 5 characters)
- Available drives or files for FTP need to be set (use Negative logic to share all files and drives)
- Must have FTP enabled


BINARY FTP TRANSFER MODE

This FTP capability is primarily for administrative activities. The preferred way to transfer test data is with the Guru Agent.

WARNING: Always use binary mode when transferring files via FTP.

ASCII mode will corrupt .gzip (and .zip) files because of the line feed conversion (ln -> ln+rf). To put the standard FTP client into binary mode, always enter the command **binary** before starting the file transfer.

FIGURE 4.2 FTP SERVER WITH TCP/IP

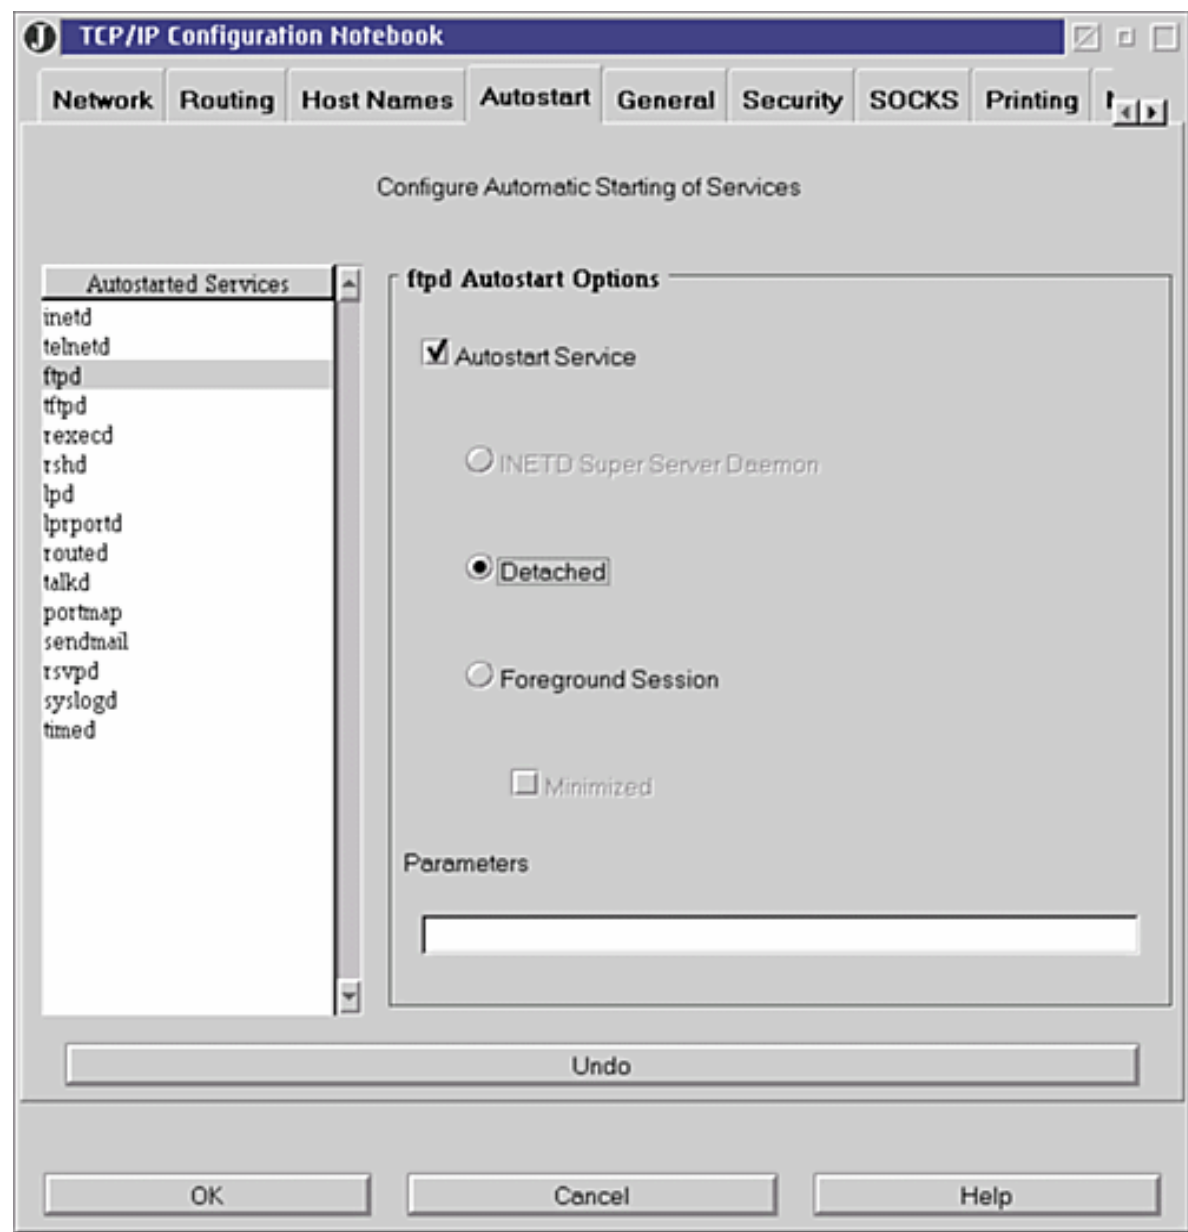

Servers setup screen enabling the FTP Daemon to run in the background and handle FTP requests.

CHECKING WEAR LEVELS OF RF RELAYS AND ATTENUATORS

WEAR LEVELS

Some TIMs contain mechanical RF relays and step attenuators that have a finite mechanical switching life cycle. The available life is based on the manufacturer’s specified lifetime for each component (typically 10 million switches). As each component has a particular life expectancy, the software tracks and logs this information throughout TIMs duration in the system.

The wear levels are displayed in the [Messages Window](#) upon startup as shown in [Figure 4.3](#). When the wear level of a particular component reaches 70% of available life, a preventive maintenance and calibration procedure should be scheduled. When the wear level reaches 95% of available life the performance of the component can begin to degrade. The TIM containing the relay or step attenuator should be returned to Roos Instruments for servicing.

NOTE: Switches or relays above 95% wear levels can degrade in performance causing poor impedance match conditions, signal leakage, power loss, and/or unresponsive switch control.

FIGURE 4.3 SWITCH WEAR LEVELS



Switch wear levels are displayed in the Messages Window. To display the messages window select the **System > Messages** buttons from the main window.

RESTORE, SYNC & LOG SYSTEM CONTROLLER

Guru provides tools to perform some administration tasks in the System window. A user must log in to Guru and have administration rights prior to performing any of the administration tasks.

Once logged in to Guru successfully, the Logon button changes to System button. Click the System button to bring up the System window.

Click the **Logoff** button to log out of Guru. You must log out of Guru to log in as a different user.

Click the **Shutdown** button to shutdown the Guru. Guru will restart automatically.

Click the **Restore** button to restore local Guru. This restores local Guru objects from a backup Guru. This feature will only work if the user has an Update Guru Server properly configured with the Guru Address Book application.

Click the **Synchronize** button to synchronize Local and Update Gurus. This feature checks the Local and Update Gurus and updates all objects on the Local Guru with the latest version from Update

Guru. This feature will only work if the user has a Guru Server properly configured.

NOTE: The Guru objects automatically sync every time it is loaded. This button is helpful for speeding up this process after the system has been disconnected for a very long time.

Click the **Message** button to see messages between Guru and Guru based applications. This is useful for debugging purposes. When the user clicks this button, a Logged Events Window will be displayed.

Click the **Cancel** button to dismiss the System window.

LOGGED EVENTS WINDOW


Selecting **System > Message** results in a Logged Events window being displayed. [Figure 4.4](#) The Logged Events window displays messages being sent between Guru and Guru based applications.

Severity (S) is either 1, 3, or 5. When a different severity level is selected and the Refresh button is clicked, the list will be updated with all messages with the selected severity and lower. For example, if severity of 1 is selected, it will only display messages with severity of 1; if severity of 5 is selected, it will display messages with severity of 5 and lower.

Level (L) is between 0 and 9. This is a measurement of the detail available in the message. First select a specific Level, click the Refresh button, and the list will be updated with all messages with selected level and lower. For example, if a level of 0 is selected, it will only display messages with level of 0; if level of 7 is selected, it will display messages with level of 7 and lower.

To change the order of the display, select Newest first or Oldest first, and click the Refresh button. To clear all the messages being displayed, click the Clear button. To close the Logged Events Window, click the Close button.

FIGURE 4.4 LOGGING EVENTS WINDOW

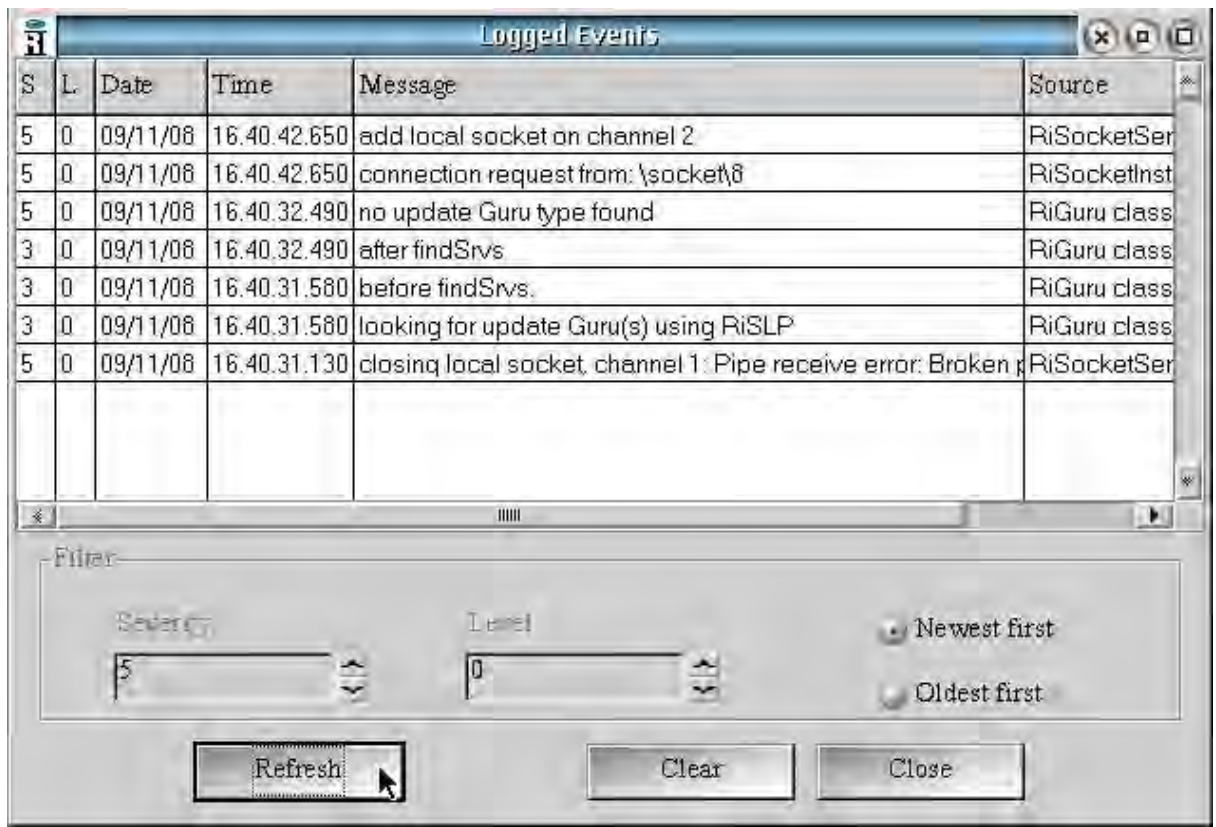

The Logging Events window displays messages being sent between Guru and Guru based applications

TRANSFERRING TEST DATA

Guru Agent Editor is used to create Guru Agent configuration files. Guru Agents are used to perform automated transfers to local or network storage destinations at regularly programmed intervals or manually executed. This document describes, primarily, the 'Copy' and the 'STDF Copy' Guru Agents.

The **Copy** type is used to perform automatic copying of files. It can perform automated copy functions from one Guru to another, from a Guru to a local or network mounted file system, or from a Guru to designated FTP locations.

It can operate on multiple Guru sources as well as multiple destinations of any type. FTP destinations can use standard SOCKS proxies to connect to FTP destinations outside of the local network.

FILE COPY GURU AGENT

Open Guru Agent by selecting **Apps > GuruAgent** from the Guru control bar. The left half of the window displays the data sources in a set of tabbed panes, the right contains data destination. In addition, there are pull down menus, found at the top of the program that allow

for configuring a Guru Agent, loading and saving of settings as well as adding and removing of data sources and destinations.

Loading a file for editing is accomplished by selecting the pull down menu **File > Open**. This presents a dialog box with a list of available Guru Agent setting files for editing. Select a file, and then select the **OK** button. Clicking the "Select Type" button allows for the selection of different types of files to be displayed, this can be useful if a GuruAgent settings file has been saved as a different type (or object class).

Similarly, selecting **File > Save** or **File > SaveAs** causes a file to be saved back to Guru. Save overwrites the previous file; SaveAs causes the creation of a new file, thus preserving the old one.

NOTE: Previous versions are always retrievable using the Guru "History" feature.

The Settings pull down menu has three categories of settings: Execution, Appearance and Messages/Errors. These are settings that control how the Guru Agent will run, when it will run, and how often it will run.

The pull down menu **Settings > Execution** displays a dialog window. The Execution settings control what type of copying will occur, how often the agent will run as well as whether it runs automatically at the specified rate (auto type), only at Guru startup (startup type), or only

when manually executed, such as from the Guru App selection button (Manual type).

NOTE: The selections “Regular Copy Agent” versus “STDF Copy Agent” refer to the manner in which source files are selected for copying. The primary difference is that selecting “STDF Copy Agent” causes the pieces of the STDF file to be assembled prior to being copied. For non-STDF file, the “Regular Copy Agent” selection should be used.

The Appearance dialog box is displayed by selecting the **Settings > Appearance** pull down menu.

It allows setting parameters such as whether a visible window is displayed while the agent is running (normally this is de-selected). In addition, this provides the option to allow the window to automatically close after the agent finishes running (this is the default case).

Sometimes it can be useful to allow the agent to keep running, after it has finished its task, for debugging purposes. Note that if “Auto Close” is not selected, the agent will not automatically terminate after it completes its task. As a result, the agent will not automatically run again until after the agent has been manually terminated.

The settings for “Screen Location” and “Screen Size” rarely need to be modified but are provided as a convenience to the user.

The Messages/Errors dialog box can be displayed by selecting the pull down menu: **Settings > Messages/Errors**. It allows the user to

select the types of errors that will be logged by the agent as it runs. There are four choices available:

0: No Logging of any sort

1: Logging only errors. For example: Couldn't find destination directory

2: Log Non-Errors as well as Errors. This includes lists of files that were successfully copied, and so on.

3: Debug Mode Logging. This enables logging of internal program events that are not normally of interest to most users.

SOURCE SETTINGS

The left area of the main application window represents the ‘Source’ information. This defines what needs to be copied and where it can be found. There can be as many sources as necessary. In order to add more sources, select **Edit > Add Source**; this causes a new data source being displayed (for example, 'source1', 'source2', etc.). You can add as many sources as desired. Delete a source by first selecting it (so that it is displayed) and then select **Edit > Del Source**.

The field **Match On** defines the Guru keys that are used to fetch pertinent data. What is entered here is a comma separated list of keys, or key=value pairs, that uniquely identify the data that is to be fetched. For example: 'ri.sys.ObjClass=RiAdminLog'. This would cause any file in the source location, that had that particular key/value pair, to be included in the group of files to be copied.

NOTE: When using the agent to assemble STDF or ATDF data logs, the Match On selection string should include "ri.sys.ObjClass=RiTestData, ri.sys.Type=summary"

The **Type** selection: currently only Guru Sources are allowed, therefore the selection box only allows for source selection of type 'Guru'.

The **Location** field specifies where the source is located. Legal entries here are either the word 'local' which implies that the 'Local Guru' is to be the source for the data. Otherwise any IP address or URL can be specified. An example would be 'www.roos.com'. Additionally, the IP address or URL, a colon and port number is optional for situations where a non-standard Guru port is being accessed. For example: 192.168.1.123:5000 0.

Proxy Info allows for a proxy to be used as a means of accessing the source location. A proxy can be defined as an HTTP proxy, a SOCKS4 proxy, or a SOCKS5 proxy. Clicking on the 'Proxy Info' field will bring up a dialog that allows selection of the type of proxy as well as the relevant required information e.g. hostname, proxy port address, proxy username and password (if needed).

Copied Files Tag defines a key that will be set after the copy operation is successfully completed. This is used in conjunction with the check box: 'Ignore Copied Files', to avoid recopying files that have already been copied.

Ignore Copied Files: This check box works in conjunction with the "Copied Files" entry. The default state for this is to be selected. If selected, any files that have already been copied, will not be copied again. De-selecting this will result in files being copied even if they have already been previously copied.

Ignore Invalid Files: Occasionally a corrupt or invalid file may find it's way into the file system. If a file is determined to be corrupt, incomplete or otherwise invalid, it automatically gets tagged as such. The default setting for this check box is that it be selected; this results in invalid files being ignored. De-selecting this check box will result in the agent re-attempting to gather and copy those invalid files. Note that this is primarily related to the STDF files option as they are pieced together from separate files.

DESTINATION SETTINGS

The area on the right hand side of the main application window represents the 'Destinations'. This defines where files will be copied as well as their final names. There can be as many destinations as necessary. To add more destinations, select **Edit > Add Destination**. This causes a new Data Destination to appear in the right hand area of the application, as a tabbed pane. Delete a destination by first selecting it and then select **Edit > Del Destination**.

The **Type** field can be any of three possible values: 'Guru', 'ftp', or 'file'. This identifies the type of destination being defined.

- 'Guru' causes source files to be copied to the specified destination Guru.

- ‘ftp’ causes an FTP connection to be opened using the specified values for Connect info, Location, Rename Template and Proxy Info.
- ‘file’ type will cause the data to be copied to a file system location using the specified values for Connect info, Location, Rename Template and Proxy Info.

The remaining fields will display if needed for the different destination type as described below.

The **Location** field describes either the IP address, ftp location or file system location that will be connected to when copying files to this destination. Valid entries here are IP addresses or URLs followed by an optional port number, or else a valid file path name.

The **Rename** Template is used to automatically create filenames from Guru keys. Within Guru, files are specified by sets of key=value pairs. Often these files have no useful filename that can be used to distinguish one file from another once copied to an ftp or file system location. This field allows a name to be automatically created from Guru keys. Any desired text can be entered here. In addition any value in angle brackets ‘< >’ is treated as the name of a Guru key. For example:

```
Date1<ri.dlog.StartTime>_<ri.dlog.Lot>_<inx.dlog.TestMode>_<inx.dlog.TestType>_<ri.dlog.Tester>_<ri.dlog.Testplan>.std
```


GETTING ASSISTANCE

This section provides general information for generating and exporting relevant data to Roos Instruments support. Reference the [troubleshooting section](#) for helpful tips and guides for debugging and diagnosing test issues.

Email support is available at support@roos.com.

Contact a Roos Instruments support or service engineer support via **Phone** +1.408.748.8589 between the hours of 9:00 a.m. to 6:00 p.m. (U.S. Pacific Standard Time, -8h UCT).

Online documentation and remote assistance, visit www.roos.com/support.

SENDING DATA TO ROOS INSTRUMENTS

Roos support can often provide better assistance if the Guru objects related to the problem are included in the service request as well as the version of the App.

If a software 'Walkback' error is met, select **SAVE** from the error dialog window to save the error message as a 'walkback.log' or

'vterror.log' file. The file is saved in the program directory, d:\RiApps\GuruApps\#####(App number).

The App Number and version can usually be found from the **Help > About** menu.

To send test system resources or files such as calibration information, software definitions, or test data, use the Guru Browser's [export option](#) to export a '.gzp' file.

From the Guru Browser export tab window, select the desired object in the table view by LMB click, and then RMB click, select **Export > Guru Format** from the pop up menu options. Following the instructions of the save dialogs, save the .gzp file to a mounted network drive or USB stick and attach to the email. Email the exported objects in the .gzp file to support@roos.com.

EXAMPLE GURU BROWSER KEY SELECTION:

```
ri.sys.ObjClass = RiInstrumentCal  
ri.hw.Model = <Instrument Model Number>
```

RECOMMENDED OBJECT CLASSES:

RiShortcut – Cassini System Software Management Shortcuts
RiTesterDef – Cassini Instrument Collection Definitions

OTHER IMPORTANT OBJECT CLASSES:

Depending on where the error occurred, other objects may be needed.

RiBaseInstDef – Instrument Feature Definitions

RiCalibrationKit – Calibration Offsets

RiCalList – Calibration Test Plans

RiEquipDiagLog – Diagnostic Logs (From the diagnostic test plan results , select ‘Results’ > ‘Save to Guru’)

RiFixtureDef – Fixture Definitions

RiFixtureCal – Fixture Calibrations

RiInstrumentDef – Instrument System Drivers

RiInstrumentCal – Instrument Calibrations

RiPatch – Cassini System Software Updates

RiShortcut – Cassini System Software Management Shortcuts

RiTesterDef – Cassini Instrument Collection Definitions

RiTest Plan - Test Plans (includes Developed (DUTs) and Service: Calibrate & Validate, Diagnose & Verify)

CREATE .ZIP FILE

Sometimes files must be saved as text (.txt) files. Always zip a file before sending it.

From the command prompt:

```
cd d:/folder/name/
```

```
zip 'zip file name' 'name of file(s) to be zipped'
```

Example: **zip guru.zip d:/RiGuru/**

DIAGNOSTICS

5

General Diagnostic
Information for:

- Theory and Planning
- Operator Interface
- Diagnostic Kit
- Diagnose Procedure
 - Preparation
 - Full or Targeted
 - EPC

Use Diagnostics to prepare
for Calibration or while
Troubleshooting.

OVERVIEW

This chapter provides an introduction to diagnostics and the automated fault detection of instruments on Cassini test systems. The information provided is the recommended practices and procedures for performing instrument diagnostics to help develop corporate policies for releasing a test system to production. A detailed explanation of the software interface is provided with a description of the standard [Diagnostic Kit](#) and its software resource definitions. The [Diagnostic Procedure](#) section provides step-by-step instructions for conducting diagnostics on Cassini instruments and the EPC Controller.

PRINCIPLES OF DIAGNOSTICS

Cassini diagnostics are used to test an instrument's operational capability. The instrument's internal components are exercised to detect hardware faults in a controlled test environment, performing various measurements to verify operation, consistency, and repeatability. These tests provide a simple pass or fail results based on factory defined parameters of acceptance. Two modes of

evaluation are expressed in the diagnostic tests list available to the user as either 'diagnose' or 'verify' in the test names. Collectively, both types of tests in the test list are referred to as 'diagnostics' on the Cassini test system with the descriptions of each as follows:

1. Diagnose tests check fundamental hardware functionality of an instrument's internal components. A damaged or malfunctioning component will cause the diagnose tests to fail.
2. Verify tests check the measurement capability of an instrument to insure that it is compliant with performance specifications of a calibrated instrument. This includes conducting tests to gauge the repeatability of measurements using fixed instrument and I/O port setup conditions in a controlled test environment. In the case of RF instruments, the diagnostics can involve several interconnected instruments.

NOTE: For some RF instruments, verify tests are inherently dependent on the instrument's calibration. An improperly executed or invalid instrument calibration can also cause verify tests to fail.

An aspect unique to diagnostics on Cassini ATE are the variable instrument configurations of the test system. Because of this, diagnostic tests available to the user are designated specifically for the configuration of TIMs installed. The instrument arrangement on the test head is addressed by matching a corresponding Diagnostic/Calibration Interface Plate and diagnostic/calibration test list to each unique test head instrument configuration. This Diagnostic/Calibration Interface Plate provides the specialized TIM interface blocks and

cross-instrument connections specific to the test system that is required to conduct diagnostics, see [Figure 5.10](#) for an example.

NOTE: Changes to the TIM layout or TIM upgrades may require physical changes to the diagnostic plate and/or changes to the diagnostic test list.

SOFTWARE INTERFACE

In software, the diagnostics for a Cassini test system are managed by a specialized user interface called the Diagnostic Executive. The interface provides the list of all instrument diagnostics for the test system and a console for executing, viewing, and saving diagnostic results. Access to the diagnostic executive is enforced by the user login permissions to limit viewing and execution to authorized personnel only. Reference the [User Interface](#) section in this Chapter for more information.

WHEN TO PERFORM DIAGNOSTICS

Diagnostics are an essential tool to confirm that the instruments in a Cassini test system are operational. As such, diagnostics are satisfactory for use in the acceptance process or to confirm that a Cassini system configuration is ready for production use. Listed below are the recommended instances for performing diagnostics on an instrument or Cassini test system:


- To verify operation of a test system instrument

- Before a system or instrument calibration.
- During a Cassini test system acceptance process.
- Before releasing a Cassini test system to production.
- When a TIM is exchanged or replaced, prior to its first use.
- When troubleshooting a TIM that is suspected of damage or malfunction.

SUPPLEMENTAL DIAGNOSTICS

Additional diagnostic tools are available on Cassini test systems. These include diagnostic tools for the RIFL communication hub and the disk drives in the EPC Controller. While the supplemental diagnostic tests provide additional system and instrument information, they are not required for validating the performance or operational capability of a Cassini TIM. The supplemental diagnostics are described in more detail in the [Diagnostic Procedure](#) section.

User Interface

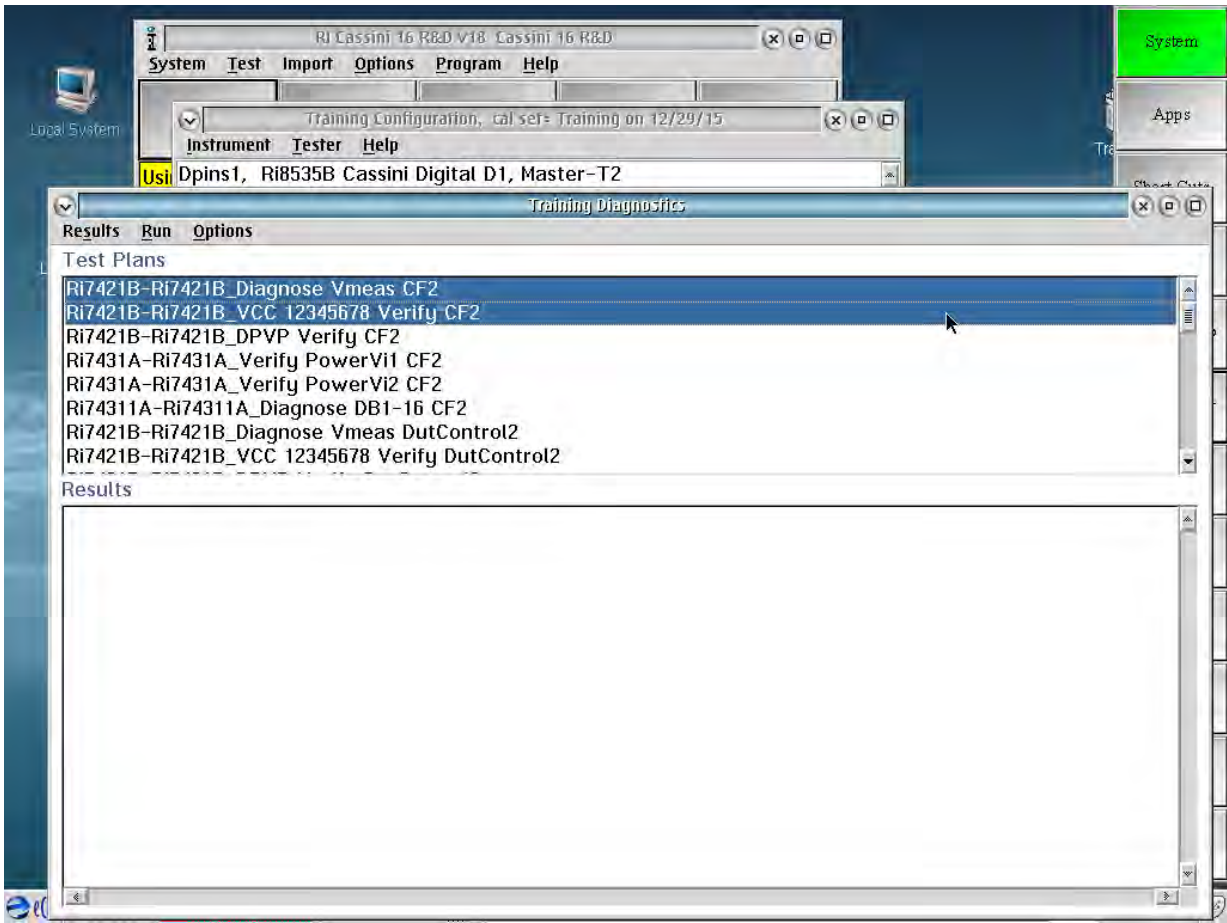

TOPICS

[Opening the Diagnostic Executive](#)

[Diagnostic Executive Window](#)

[Menu Options Details](#)

[Running Diagnostics](#)

OPENING THE DIAGNOSTIC EXECUTIVE

Diagnostics for Test Instrument Modules (TIMs) on Cassini test systems are accessed using the Diagnostic Executive. In the following section, this UI and its features are described.

Access to the Diagnostic Executive is restricted to users with the “Maintenance” permission enabled. Check with the system administrator for more information on user access.


The Diagnostic Executive window is accessible from the Tester Configuration Window. It can be accessed two different ways, giving the user access to different set of diagnostic test plans.

To access the default system diagnostics for all TIMs in the test system (recommended method):

1. Open a [Tester Configuration Window](#).
2. From the menu options select **Tester > Diagnose**, as shown in [Figure 5.1](#).

This option populates the diagnostic executive (example shown in [Figure 5.3](#)) with an ordered list of factory supplied Diagnose and Verify test plans for the specific TIM configuration of the Cassini test system. The test plans are organized in the list to be executed sequentially from top to bottom to perform a complete diagnostic of the test system.

FIGURE 5.1 OPENING DIAGNOSTIC EXECUTIVE

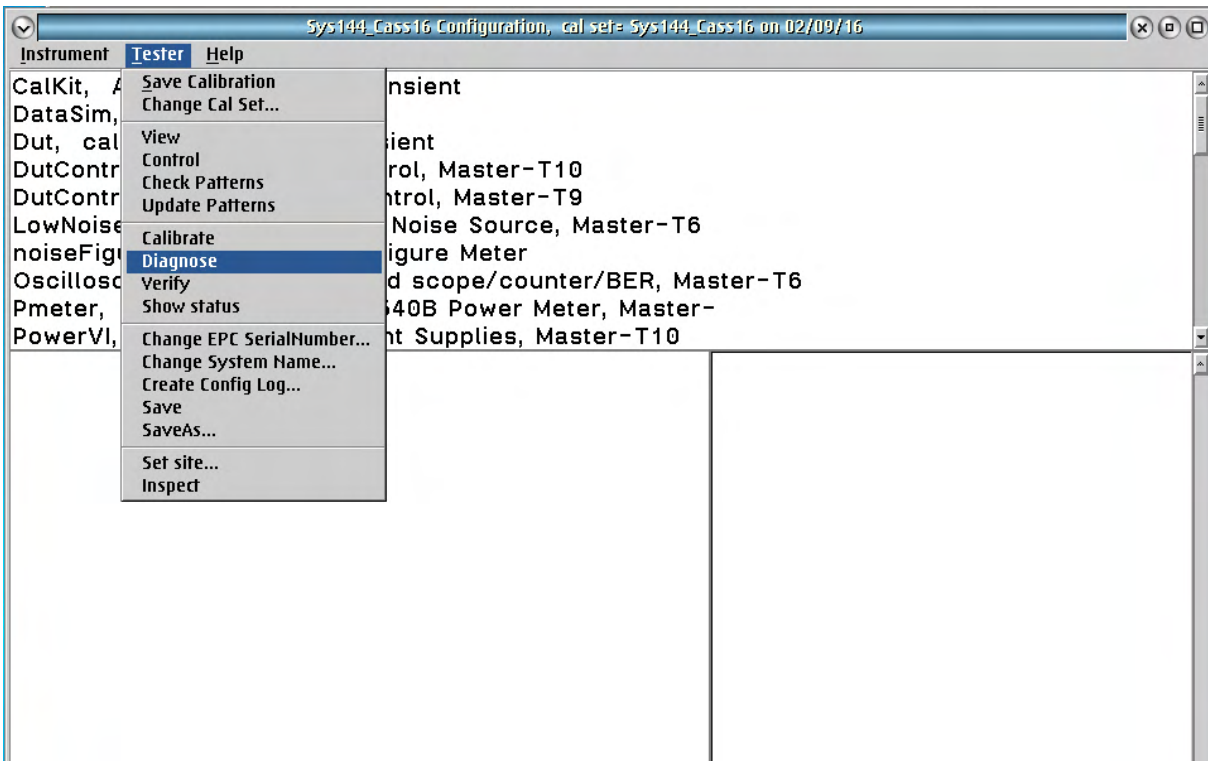

The Diagnostic tests are accessed from the **Tester > Diagnose** menu from the Configuration Window.

In addition to the standard diagnostic list, users can select alternative diagnostic lists to populate the Diagnostic Executive. These alternative diagnostic test lists are typically used when updating the system diagnostics to add support for upgraded or newly added TIMs.

To access an alternate diagnostic list:


1. Open a Tester Configuration Window.

- 2. Right mouse button click on the **System** instrument in the Tester Configuration window.
- 3. Select **Calibration > Diagnose...** from the pop-up menu options as shown in [Figure 5.2](#).

To save an alternate diagnostic list as the default:

- 1. Access the alternate diagnostic list using the steps above.
- 2. From the Configuration Window, select **Tester > Save** from the menu options.
- 3. Select OK from the ‘Tester name, OK to save’ pop-up window.

FIGURE 5.2 OPENING ALTERNATIVE DIAGNOSTIC TEST PLAN LIST

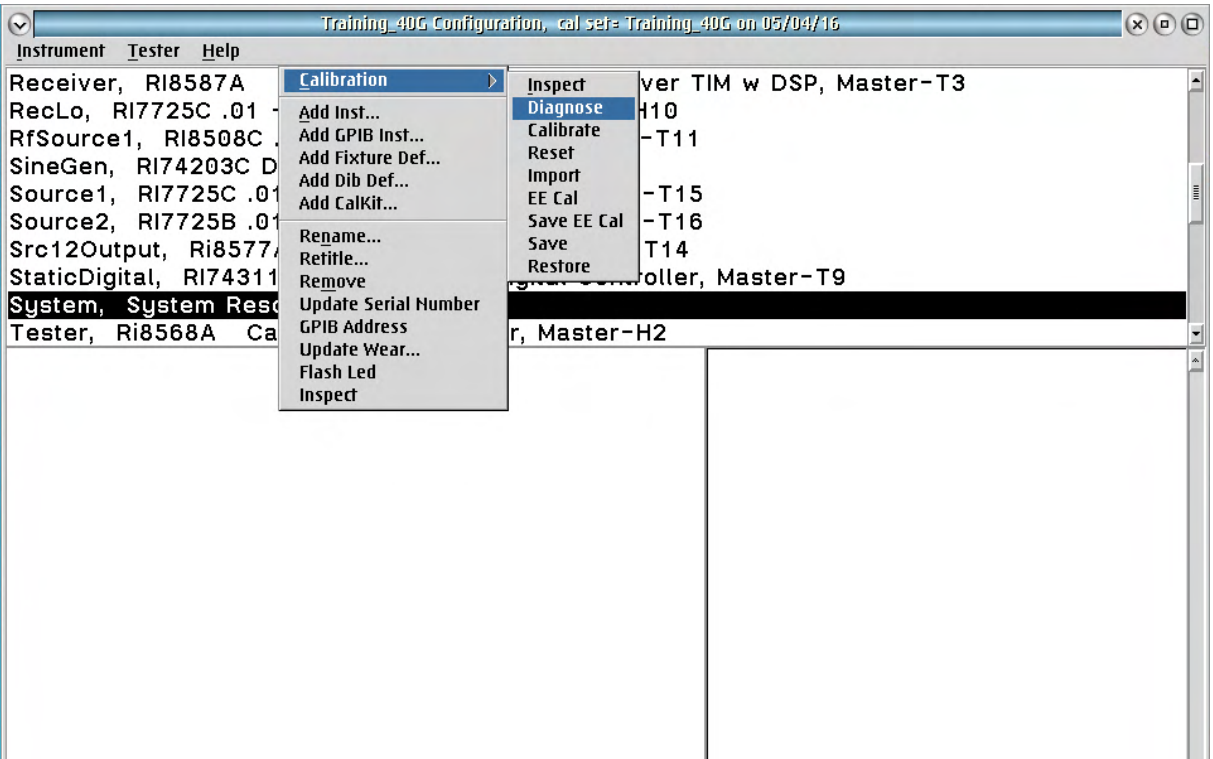

Alternate Diagnostic tests are accessed from Right Mouse Button (RMB) click the **System > Calibration > Diagnose** menu from the Configuration window.

DIAGNOSTIC EXECUTIVE WINDOW

The specialized user interface provides a console for executing RI diagnostic test plans with factory set limits and displaying the pass/fail results. This section describes the various options in the UI that are available to the user.

USER INTERFACE LAYOUT

The Diagnostic Executive window, shown in [Figure 5.3](#), is divided into two panes - Test Plans, and Results. The Test Plans section displays diagnostic tests in a scrollable list. This test list is populated based on the user's selection of either an individual TIM, or the factory default diagnostics for all TIMs in the test system, see [Diagnostics Procedure](#) for information on diagnostic list selection. Diagnostic tests can be selected (highlighted with a blue background) by Left Mouse Button (LMB) clicking on the desired test. A selected test can be unselected by LMB clicking on the highlighted test.


The Results section is a text display that provides user feedback of executed diagnostic tests, diagnostic pass/fail results, and measurement data. When diagnostics are executed, the name of the test that is currently running is displayed in the Results. Once completed, the pass or fail result is appended to the end of the corresponding test plan name, i.e - "RI7421b-RI7421B_Diagnose Vmeas CF2...Pass." The default result settings display a passing diagnostic test with the word 'Pass' appended. A failed results appends "FAILED!", followed by measurement data in the associated diagnostic test that failed.

MENU OPTIONS

Results Menu

The results menu is used for exporting diagnostic information and/or measurement data from the Diagnostic Executive. The **Save to File...** menu option allows the user to export all information displayed in the Results pane to a text file. This command opens an OS2 file directory window to save the diagnostic text file to the local file system.

FIGURE 5.3 DIAGNOSTIC EXECUTIVE WINDOW

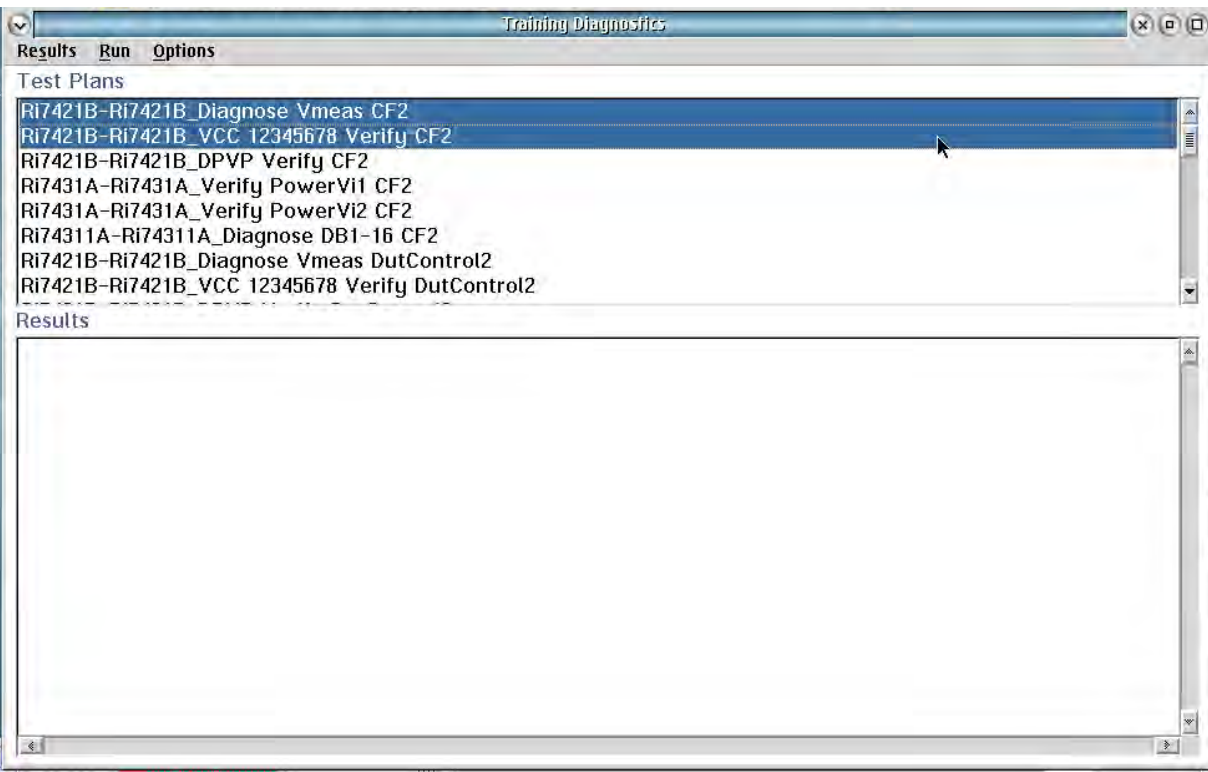

The Diagnostic Executive is divided into two panes: The Test Plans (top pane) provides the list of diagnostic tests for the selected TIM or TIMs. The Results (bottom pane) is a text console that displays diagnostic results.

NOTE: The 'Save to File...' menu option is the recommended procedure for exporting and sharing diagnostic information with RI support. The 'Save to Guru' menu option is reserved for RI internal purposes only.

CAUTION: Save to an RI approved USB drive, networked drive, or to the D:/ drive (as a temporary option).

Run Menu

The run menu provides the different options available to the user for executing diagnostic tests:

Unselect All Tests - this menu option will remove the selection (highlight) for all currently selected diagnostic tests in the Test Plan pane. By default, all test plans are unselected when the Diagnostic Executive is launched.

Selected - this menu option will execute all diagnostic tests that have been selected (highlighted) in the Test Plan pane. Selected tests will be executed as a batch in descending order starting from the top of the diagnostic list.

All - this menu option will execute a self test (if available) and all diagnostic tests in the Test Plan list.

NOTE: When this option is executed, all diagnostic tests in the list will be executed regardless of what test plans are selected.

Self Test - this menu option will execute low-level diagnostic checks of source TIMs mounted in an Aux Rack. See the [Diagnose Procedure](#) for more information on self tests.

Options Menu

The options menu provides diagnostic settings available to the user in the diagnostic executive:

Select Cal Kit - this menu option will allow the user to add a calibration kit software definition to the tester configuration.

Add Power Mtr - this menu option allows the user to add an RF power meter instrument to the tester configuration. A GPIB Instrument Pod must also be attached. When prompted, enter the same GPIB address as set on the Power Meter.

Inspect Symbols - this menu option is for RI internal purposes only.


Show All Results - this menu option will display all measurement data from executed diagnostics tests in the Results pane for both passing and failing tests.

Show Fails Only - this menu option will display measurement data associated with executed diagnostics tests in the Results pane for only for tests that fail. This is the default result display setting when the Diagnostic Executive is launched.

Open Test Plan - this menu option will open the test plan of a selected (highlighted) diagnostic test from the Test Plan pane. If multiple test plans are selected, the first test plan listed will be opened.

WARNING: Altering or modifying diagnostic test plans will void the performance specifications of the Cassini test system. Do not open diagnostic tests without supervision from or prior approval of RI support.

FIGURE 5.4 DIAGNOSTICS RESULTS EXAMPLE

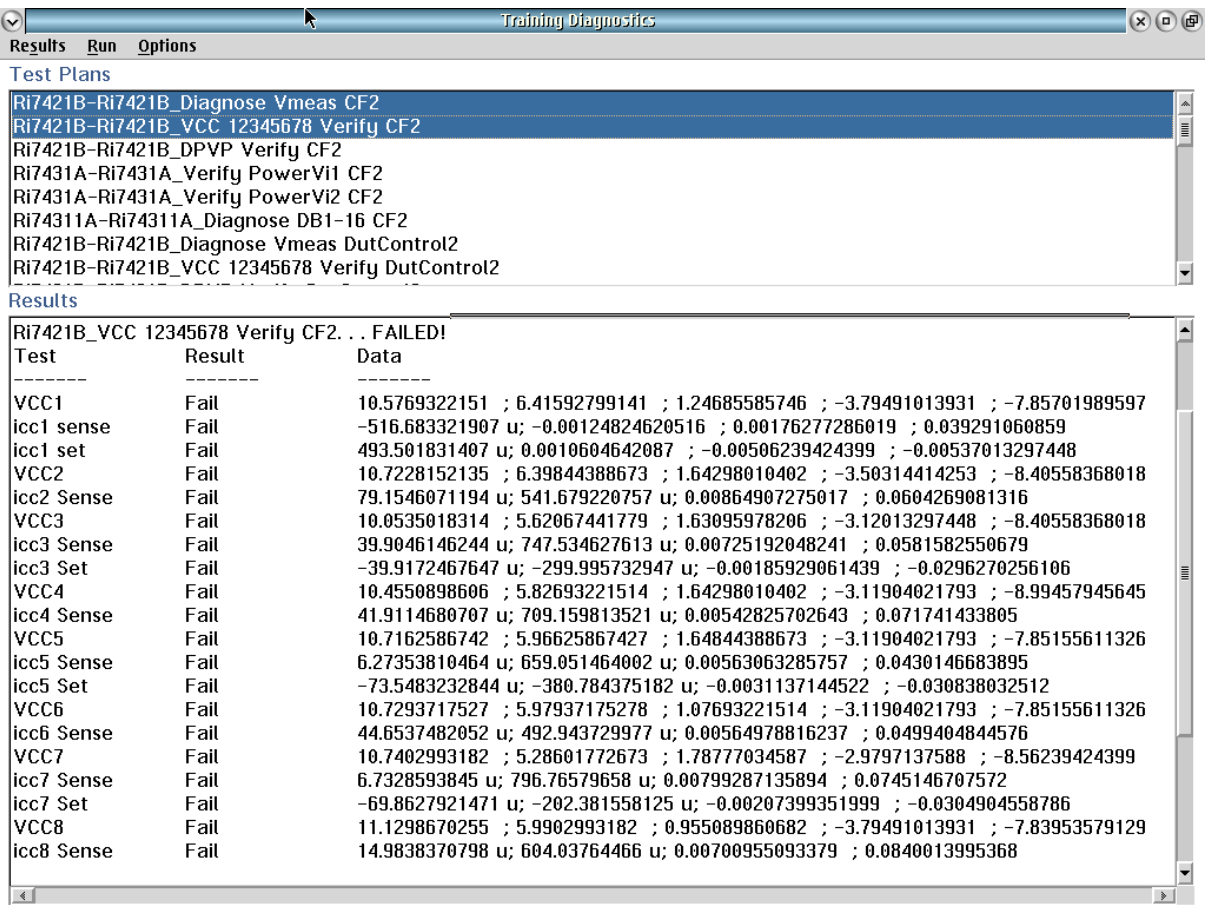

In the example above, fail results are shown for the Ri7421B Instrument. The diagnostic test results are listed from left to right: measurement name, measurement result, and all values of the measurement.

RUNNING DIAGNOSTICS

The function of the Diagnostic Executive’s role is to provide a UI to streamline the diagnostic process on Cassini. Along with providing a dedicated console for running diagnostics, the Diagnostic Executive automates and runs several features in the background that a user should be aware of when using this interface:

- Test plans are automatically compiled and executed.
- Diagnostic test and measurement limits are selected by the executive.
- Operating system memory is minimized for test plan compiles.
- Test plan debug mode is disabled.


The diagnostic test list is populated when the Diagnostic Executive is first launched as described in the previous section. To run all tests as a batch process by selecting **Run > All**. Alternatively, the user highlights the test or tests to execute by left-clicking on them to select. With the desired tests highlighted, the user can choose to run them by selecting **Run > Selected** from the menu options as shown in [Figure 5.6](#).

Once the diagnostics have been initiated by either one of the described methods, the executive automates diagnostic test compile and execution. The test compile progress bar is displayed to the user (an example is provided in [Figure 5.5](#)), and then executed uninterrupted. If user input or intervention is required, an operator

prompt will appear with specific instructions, and the test system will pause until the user selects the OK button in the prompt.

The results of diagnostic tests are automatically generated and provided in the Results pane. While a diagnostic test is executing, the name of the test is displayed in the text field with an ellipsis (for example “RI7421b-RI7421B_Diagnose Vmeas CF2...”), signifying that the diagnostic test is currently being conducted. Upon completion, the words “Pass” or “FAILED!” will be appended to the end of the ellipsis to denote the final status of the diagnostic test, i.e - “RI7421b-


FIGURE 5.5 COMPILE PROGRESS BAR

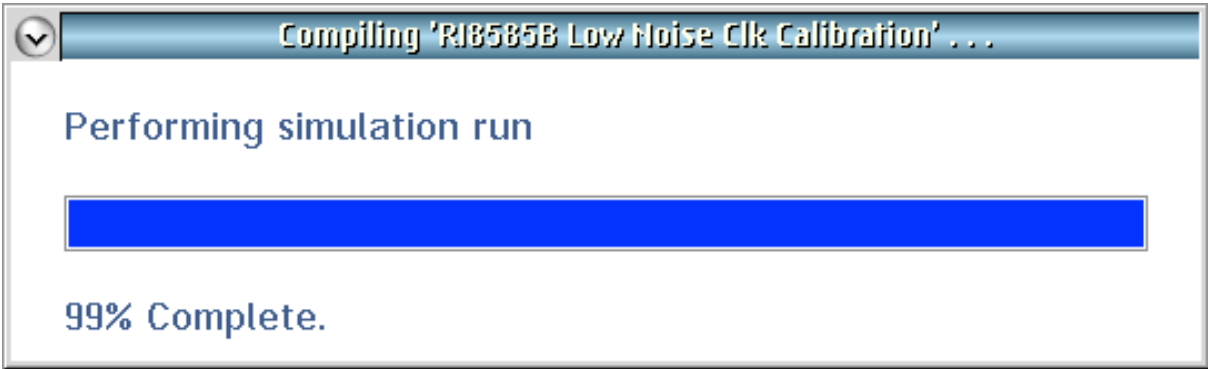

The Diagnostic Executive automates test plan compiles and displays a progress bar prior to test execution as show above.

Ri7421B_Diagnose Vmeas CF2...Pass.” The default Result settings display passing tests in this manner, with failing test displaying “FAILED!” followed by the results of all measurements in the associated diagnostic test including the pass/fail status of individual measurements. See [Figure 5.4](#) for an example of a failed diagnostic test. The result settings can be changed to display all measurements regardless of the test status by the user (see the [Menu Options](#) in the previous pages of this section for more information). The Diagnostic Executive will continue on to subsequent diagnostic tests until all selected test are completed.

FIGURE 5.6 RUNNING DIAGNOSTICS

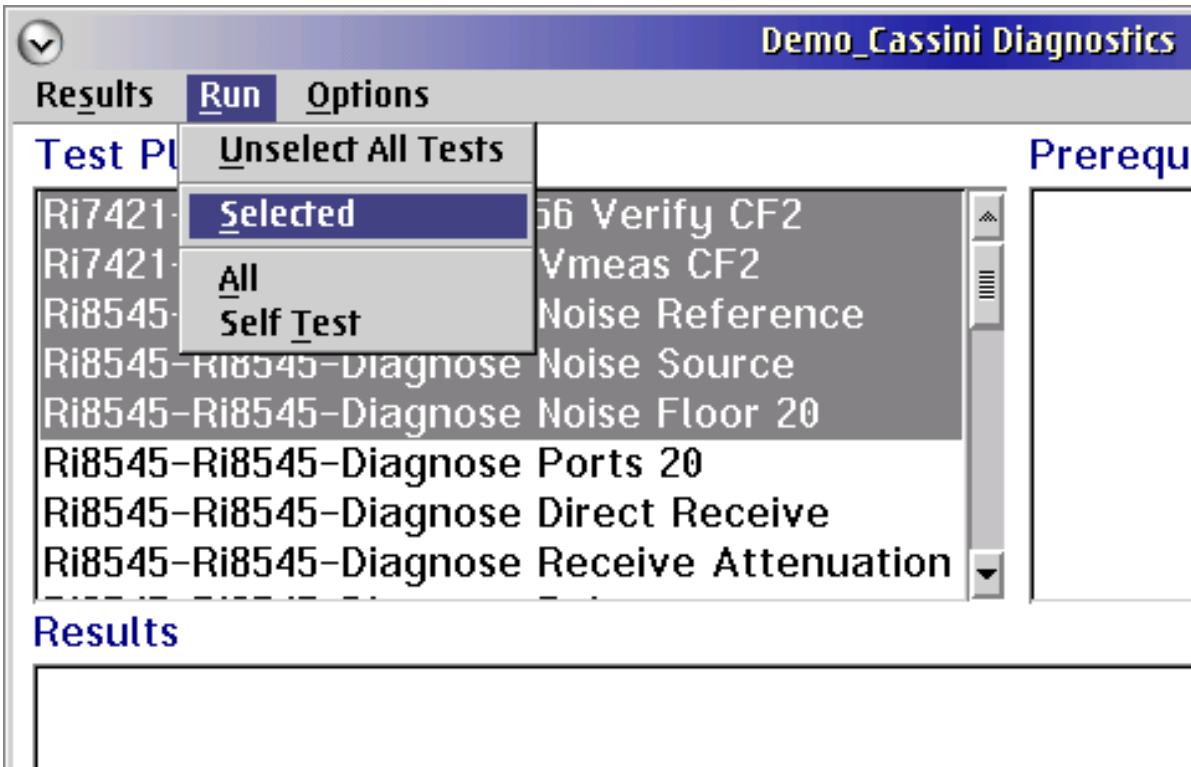

Selected diagnostic test plans can be executed using the menu options shown.

DIAGNOSTIC KIT

SUMMARY

- 1. Diagnostic Hardware**
- 2. Adding the Diagnostic/Calibration Interface Plate**
- 3. Initializing a Diagnostic/Calibration Interface Plate**

HARDWARE

Diagnostic Kit provides all of the components needed to perform diagnostics and/or calibration of the Cassini test system. Included in every kit is a specialized bottom plate called a Diagnostic/Calibration Interface Plate. The interface plate contains an 8-slot or 16-slot bottom plate with diagnostic TIM interface blocks that provide all the RF cross-instrument interconnect for performing both individual and RF system-level diagnostics of the instruments. Reference [Figure 5.7](#), [Interactive 5.1](#), [Figure 5.10](#) and [Figure 5.11](#) for examples of Diagnostic Kits and interface plates.

Diagnostic/Calibration Interface Plates are customized to match the Cassini configuration and specific instrument test head layout. To help manage the different possible configurations of the tester, every Diagnostic/Calibration Plate contains a unique serial number chip and label. These provide unique identifiers for the hardware for both the system software and service personnel to manage the administration of multiple interface plates and/or test system configurations. The ID chip is an Electronic Serial Number (ESN) that the Cassini software uses to automatically associate any calibration data (RiFixtureCal object) and add the fixture definition (RiFixtureDef object) that defines the instrument interconnect paths and default calibration values. On the Diagnostic/Calibration Plate are TIM interface blocks that provide access to ports and interconnect for exercising internal instrument functionality as well as multi-instrument functionality.

In addition to the Diagnostic/Calibration Plate, the diagnostic kit provides a protective transit case and contains additional cables and

RF adapters that are customized to the test system’s diagnostic requirements. Examples of typical Diagnostic Kits are provided in [Figure 5.11](#) and [Figure 5.12](#). The transit case is marked with the interface plate’s serial number and model number to uniquely identify its contents for service personnel.


NOTE: A single Calibration/Diagnostic Interface Plate can only be shared between multiple Cassini systems with identical TIM configurations.

FIGURE 5.7 DIAGNOSTIC KIT EXAMPLE



The Diagnostic Kit above shows a Cassini 16 Diagnostic/Calibration Interface Plate (Diagnostic/Calibration Plate) in its protective transit

INTERACTIVE 5.1 CASSINI 16 DIAGNOSTIC/CALIBRATION PLATE

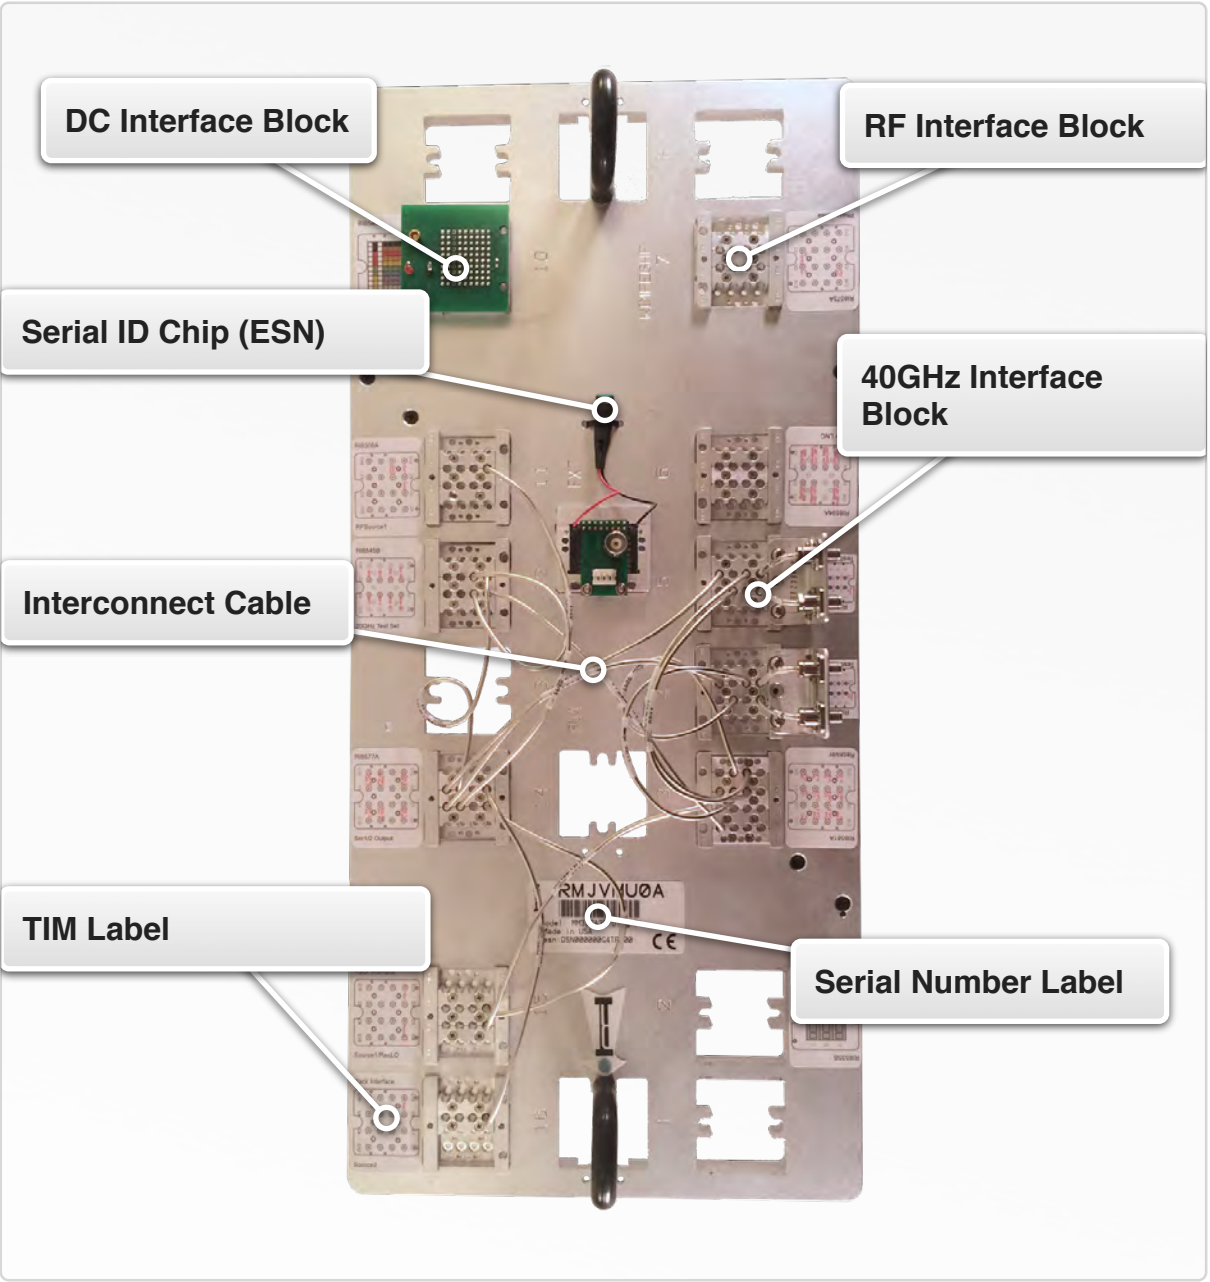

The above example shows a typical Diagnostic/Calibration Interface plate with all the necessary interface blocks and RF interconnections of a test head configuration for 40GHz applications.

ADDING THE DIAGNOSTIC/CALIBRATION PLATE


The Diagnostic/Calibration Interface plate must be docked to the test head and its' associated software definition, i.e - 'Fixture' instrument must be loaded in the Configuration window in order to run diagnostics. To add the Diagnostic/Calibration Plate to the Cassini configuration:

1. Place the Diagnostic/Calibration Plate on the test head and verify that the physical TIM layout the matches the location of the TIM interface block locations on the Diagnostic/Calibration Plate.
2. Verify that the instrument names and test head slot locations in the Configuration Window match the corresponding TIM Label on the interface block locations of the Diagnostic/Calibration Plate.

NOTE: In the Configuration window, the test head slot of an instrument is designated at the end of the instrument name by the suffix '-T' and then a number. For example '-T11' designates test head slot 11.

3. [Dock the Calibration/Diagnostic Interface Plate](#) to the test head and perform a [System Check](#) to add the software definition to the system configuration.
4. The diagnostic plate will appear in the configuration window as a 'Fixture' instrument followed by a descriptive title of the diagnostic plate, see [Figure 5.8](#). The message window will report, "Fixture Added " followed by the Diagnostic/Calibration plate name.

FIGURE 5.8 DIAGNOSTIC/CALIBRATION INTERFACE PLATE

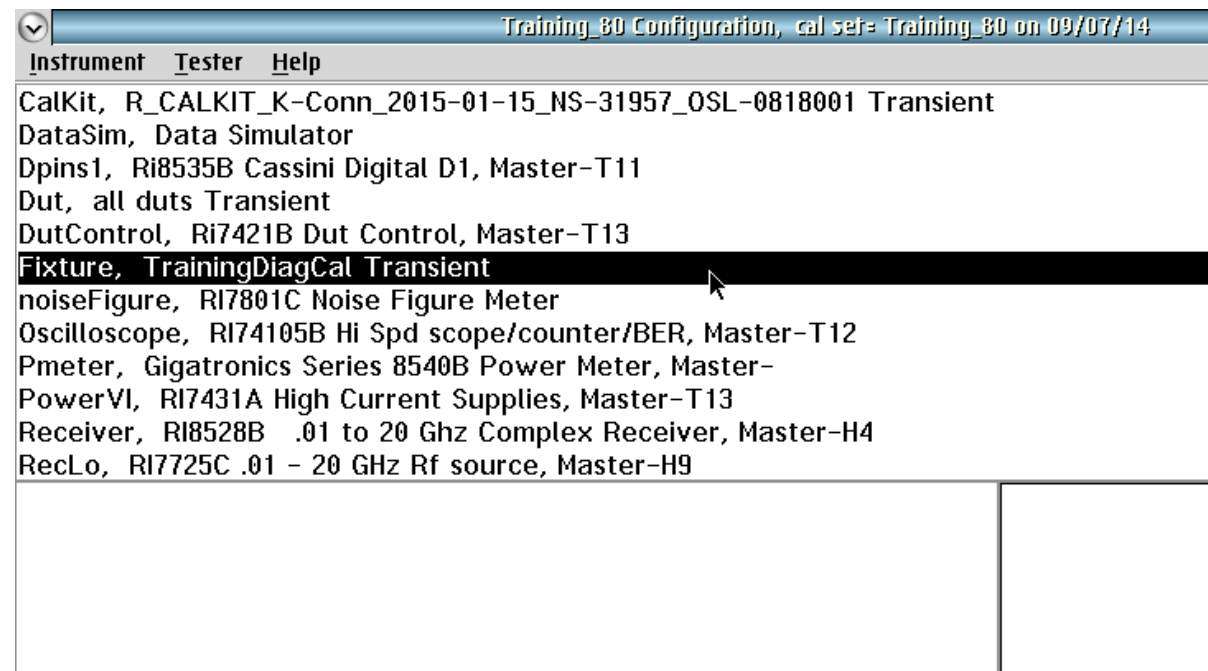

The Diagnostic/Calibration Interface Plate (highlighted above) appears in the system's configuration window as a "Fixture" instrument.

INITIALIZING A DIAGNOSTIC/CALIBRATION PLATE

Initializing a diagnostic/calibration plate is the process of linking the ID chip on the Diagnostic/Calibration Interface Plate with the software Fixture Definition (RiFixtureDef object). The Fixture Definition is created/edited with the Device Connection Editor application.

Initialization is required when:

- A new diagnostic plate is assembled that has never been used on a Cassini test system.
- The serial ID chip on the diagnostic plate has been replaced.
- The diagnostic plate needs to be associated with a new or different fixture definition.

The initialization process only has to be performed one time for a diagnostic plate. All subsequent System Checks and System Startups will automatically load the software definition for the diagnostic plate.

NOTE: Insure that the most up to date fixture definition for the diagnostic plate is imported in the Cassini's local Guru using Guru Browser before initialization. If the Cassini ATE is connected to a Guru Server, insure that the definition for the diagnostic plate was imported on any of the networked Cassini test systems.

To initialize a diagnostic/calibration plate:

1. If not already completed, Login to the test system with user permission to start the latest/appropriate shortcut and access the Main System window.


2. Open a [Tester Configuration Window](#).
3. Open a [Messages Window](#).
4. [Dock the Calibration/Diagnostic Plate](#) to the test head and perform a [System Check](#).

NOTE: If the ID chip has never been associated with a software definition and a System Check is performed, the message "No RiFixtureCal found for this esn:" followed by the unique serial number of the chip will be displayed in the Messages window. The fixture will not appear in the Configuration window until the serial number is associated to a software definition.

5. From the Configuration Window menu options, select **Instrument > Add Fixture Def...** to open a list of fixture software definitions.
6. From the pop up window, select the title of the fixture definition that will be linked to the Diagnostic/Calibration Interface plate's ID chip and select OK to activate it.
7. Once successfully added, a Fixture instrument will appear in the Configuration window as shown in the example in [Figure 5.8](#).
8. In the Configuration window, right click on the recently added Fixture definition and select **Calibration > Save** from the pop-up menu options. This will link the fixture definition with the ID chip on the diagnostic plate by creating a RiFixtureCal object in guru with the attribute "ri.test.Fixture=*Fixture Family*".


If the process has been completed correctly, the fixture instrument will be automatically added to the configuration window list when the diagnostic plate is docked and a [System Check](#) or [System Startup](#) is performed.

FIGURE 5.9 INITIALIZING A DIAGNOSTIC/CALIBRATION PLATE

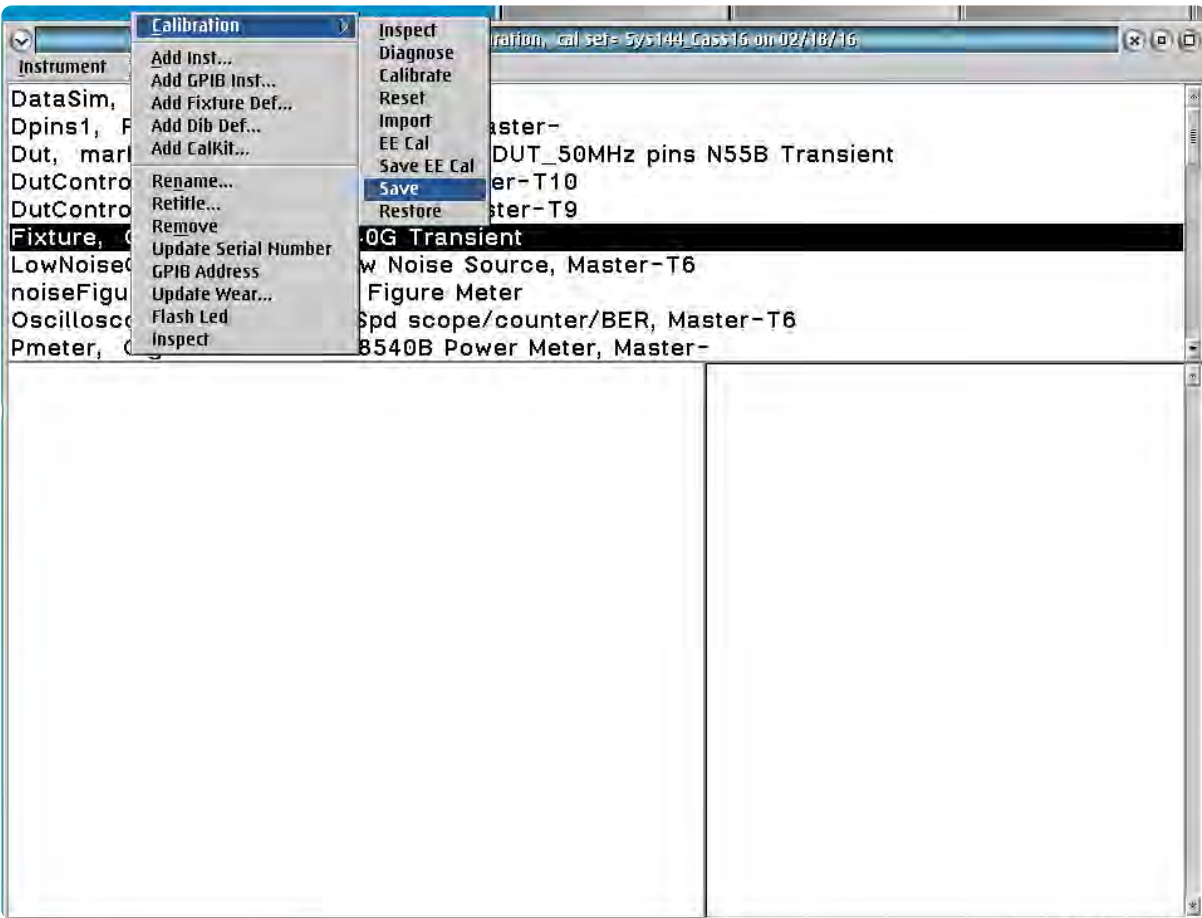

The fixture definition for the Calibration/Diagnostic Interface plate is linked to the ID chip on the plate by saving the active definition as a calibration as shown above.

FIGURE 5.10 CASSINI 8 DIAGNOSTIC/CALIBRATION INTERFACE PLATE

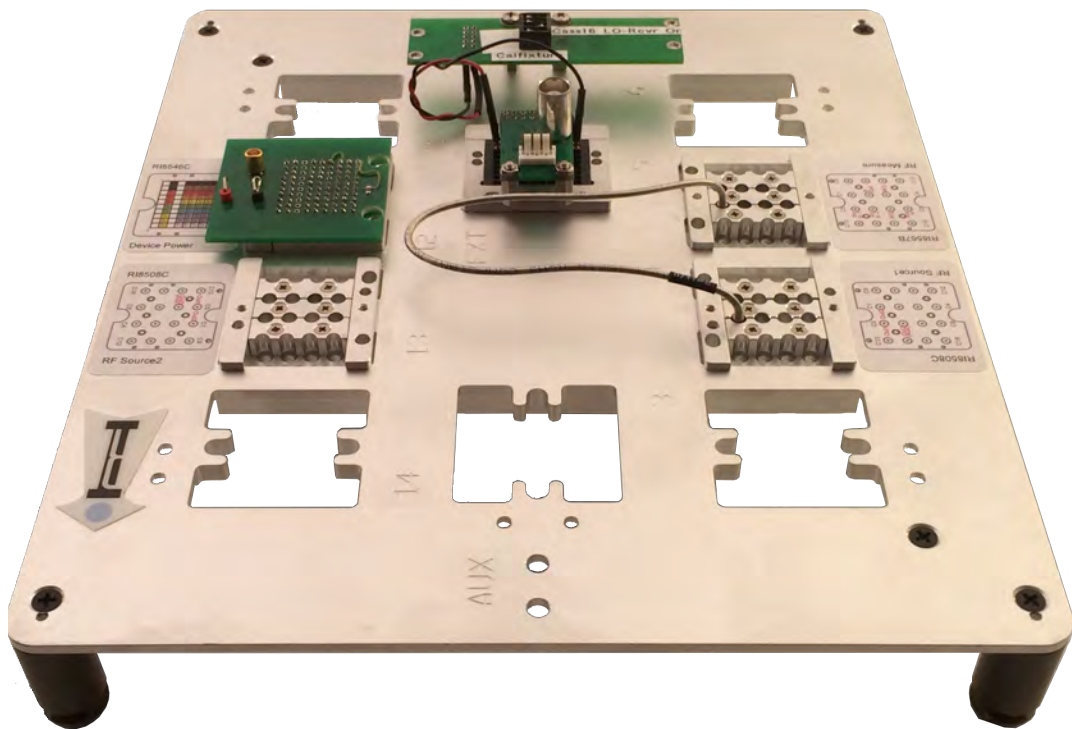

Above is an example of a Diagnostic/Calibration Interface plate for Cassini 8 configuration.

FIGURE 5.11 STANDARD CASSINI 16 DIAGNOSTIC KIT

Description	QTY	RI Part Number	Label
16-Slot Interface Plate (Custom)	1	W1MFEGHG	D1
8" #12 PKZ Special Cable	2	W1MFEJXE	D2
SMA 20dB Attenuator	1	M6GSFV1A	D3
8" SMA to #12 PKZ Special	2	W1MFEJWB	D4
50Ω Termination	1	M5R1BE1A	D5
Adapter, custom #12 PKZ(f)-SMA(f)	4	MBH0VH1B	D6
Serial Number (SN) Harness	1	MJUMNF4B	-
Cal/Diag Fixture Block	1	MMXT225A	-

These standard items are included with all Diagnostic Kits as standard items.

FIGURE 5.12 DIAGNOSTIC KIT EXAMPLE 2

Description	QTY	RI Part Number	Label
Adapter, SMA(f)-SMA(f)	1-2	M6GVJT1B	D9
SMA 30dB, 50W Attenuator	1	MPG9M41A	D10
16" #12 PKZ(f) Cable	1	MRT4ZF1A	D11
RI8546 DC Cal/Diag Block	1	RIK0249A	-
RF 16 Port Cal/Diag Block	3-12	RIK0168A	-
RF 40GHz AUX Block	1-2	RIK0167A	-
RF Waveguide W12 Block	1-2	RIK0198B	-

The items above are examples of items included for custom applications /TIM configurations.

DIAGNOSTIC PROCEDURE

SUMMARY

- 1. *Overview*
- 2. *Before Running Diagnostics*
- 3. *Test Instrument Module Diagnostics*
- 4. *System Controller (EPC) Diagnostics*

Read all instructions and procedures in this section before running diagnostics on a Cassini ATE system.

OVERVIEW

This section outlines the methods and procedures for conducting diagnostics on a Cassini ATE system in accordance with factory recommended practices. Diagnostics can be performed on demand to validate the operation of TIMS for acceptance or to identify a problem or issue with a TIM that is not operating within specifications or suspected of damage. Typically, diagnostics of the complete test system are performed before a calibration to insure that all TIMs are functionally operational and can produce repeatable results. A comprehensive diagnostic test of the Cassini ATE system includes:

- A test and verification of the RIFL communication link between the test system’s test head and installed TIMs
- Low-level tests of instruments with reference oscillators to verify drive levels and frequency lock.
- Diagnostic test plans that exercise the internal components of the instruments and perform various measurements to validate that the TIMs are functionally operational and produce repeatable results.

BEFORE RUNNING DIAGNOSTICS

Before running diagnostics the following procedures should be followed:

The test system and all TIMs must be powered on and allowed to warm-up at least 20 minutes before running diagnostics to allow instruments to reach a stable operating temperature. Diagnostic test results are not valid within the warm-up period.

1. Login to the test system with user credentials that have a “Maintenance” user role and are authorized to perform diagnostics.

NOTE: The user account can be logged out and logged in while the active shortcut and applications continue to run. Open applications will adapt their menu access controls to the user account that is activated.

2. Verify that the latest shortcut for performing diagnostics is active. Reference [Shortcuts & Software Patches](#) in Chapter 1 for more information.
3. Open the [Configuration Window](#).
4. Remove any physical fixtures and/or device interfaces from the test head.
5. Remove any fixture and/or DIB software definitions from the system configuration list by performing a [System Check](#) or Right

Mouse Button (RMB) click the fixture and/or DIB definition in the Configuration Window, and select **Remove** from the pop-up menu, and then select OK to confirm as shown in [Figure 5.13](#).


6. Inspect TIM interface surfaces and connectors to insure they are free of damage, wear, and/or debris. Reference [Figure 3.4](#), [Figure 3.5](#), and [Figure 3.6](#) for more information on inspecting and cleaning RF connectors.
7. Place the Diagnostic/Calibration Plate on the test head and verify that the physical TIM layout matches the location of the TIM interface block locations on the Diagnostic/Calibration Plate.
8. Verify that the instrument names and test head slot locations in the Configuration Window match the corresponding interface block locations on the Diagnostic/Calibration Plate.

NOTE: In the Configuration window, the test head slot of an instrument is designated at the end of the instrument name by the suffix ‘-T’ and then a number. For example ‘-T11’ designates test head slot 11.

9. [Dock the Calibration/Diagnostic Plate](#) to the test head and perform a [System Check](#) to add the fixture software definition to the system configuration. Confirm that the fixture was added to the Tester Configuration window.
10. [Open the Message Window](#) and clear the console field by selecting the **Clear** button at the bottom of the window.

- 11. Perform a [RIFL Test](#) to verify communication between the test head and installed TIMs (reference the [Equipment Pool](#) section of Chapter 1 for more information on the RIFL Test):
From the equipment pool, RMB click on ‘Master’ at the top of the node list and select ‘RIFL test’ from the pop-up menu options. In the pop-up window select OK to confirm a value of 1 in the repeat for a single run.
- 12. Confirm that all communication and loopback tests between the TIMs and test head hubs pass, i.e. - no failures in the Message Window console.

FIGURE 5.13 REMOVING A FIXTURE SOFTWARE DEFINITION

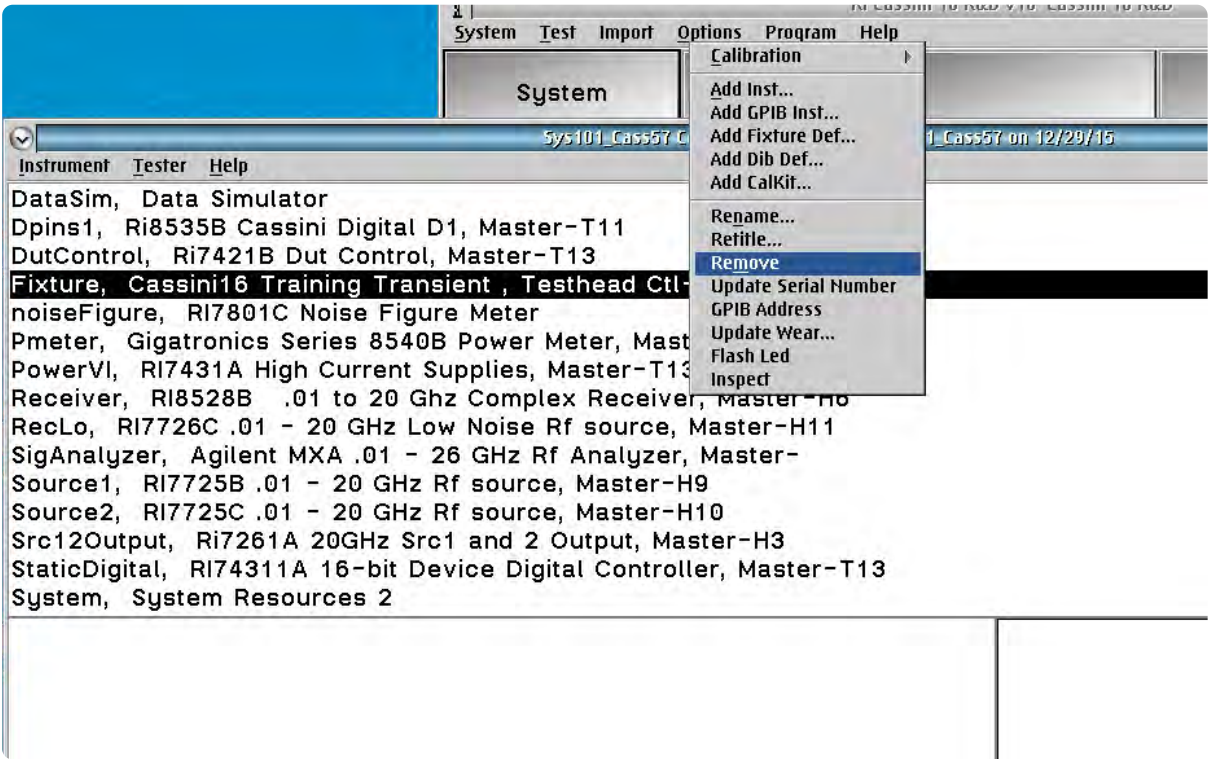

A fixture’s software definition can be removed from the system configuration by right-clicking on it to highlight it, and selecting ‘Remove’ from the pop-up menu options.

TEST INSTRUMENT MODULE DIAGNOSTICS

If all checks and tests from the previous section are satisfied, diagnostics can be performed on the test system's TIMs. The test system's primary instrument diagnostics can be accessed from the Configuration Window by selecting **Tester > Diagnose** from the menu options as shown in [Figure 5.2](#) of the User Interface section. This launches the [Diagnostic Executive](#) and loads the factory-installed diagnostic test plans for the test system (see [Figure 5.14](#)). The diagnostic tests are listed in order of ascending instrument number and grouped by TIM.

NOTE: This diagnostic list may vary between Cassini ATE systems with different TIM configurations. Diagnostic test plans for TIMs not currently installed in the test system can be viewed in the diagnostic list, but attempting to execute them can cause system errors.

Execute Self Test

The Self Test is a low-level diagnostic check for TIMs that contain reference oscillators. The self test measures and checks the reference drive levels and corresponding frequency values of these instruments.

1. From the Diagnostic Exec's menu options select **Run > Self Test**
2. Diagnostic results and measured data will be displayed in the [Messages Window](#).

Execute All Diagnostics (Complete System Diagnostics)

This is the recommended method for performing diagnostics prior to an annual calibration of the test system or when releasing a test system to production.

This option automatically compiles and executes every TIM diagnostic test sequentially, in the order they are listed in the executive window.

1. From the Diagnostic Exec's menu options select **Run > All**. Reference [Figure 5.14](#).
2. Diagnostic tests will be individually compiled and executed sequentially until all diagnostic tests are completed.
3. During compile of a diagnostic test, a pop-up status bar window will display progress and then close when the test program executes.
4. Diagnostic results will be displayed in the 'Results' pane of the Diagnostic Executive. See the [Viewing Diagnostic Results](#) for more information.

NOTE: In this execution mode, all diagnostic tests in the list will be executed uninterrupted until completion. To abort the system diagnostics hold down the CTRL key and press the Pause/Break key to force an abort. An 'Error:Control Break' window will pop-up. Select 'Abort' to stop the diagnostics.


Execute Individual Diagnostic Test (User Selection)

This is the recommended method for evaluating the operation of an individual TIM.

Individual diagnostic tests can be selected from the list of all test system diagnostics as follows:

- 1. LMB click the desired diagnostic test from the list to highlight it. This can be repeated to select multiple tests simultaneously. To unselect a highlighted test, LMB click on the highlighted diagnostic test. To unselect all highlighted tests, select **Run > Unselect All Tests**.
- 2. To execute the highlighted tests, from the menu options select **Run > Selected**. Reference [Figure 5.14](#).
- 3. During compile of a diagnostic test, a pop-up status bar window will display progress and then close when the test program executes.
- 4. Diagnostic results will be displayed in the 'Results' field in the lower pane of the executive window. See the [Viewing Diagnostic Results](#) section for more information.

FIGURE 5.14 RUNNING DIAGNOSTIC TESTS

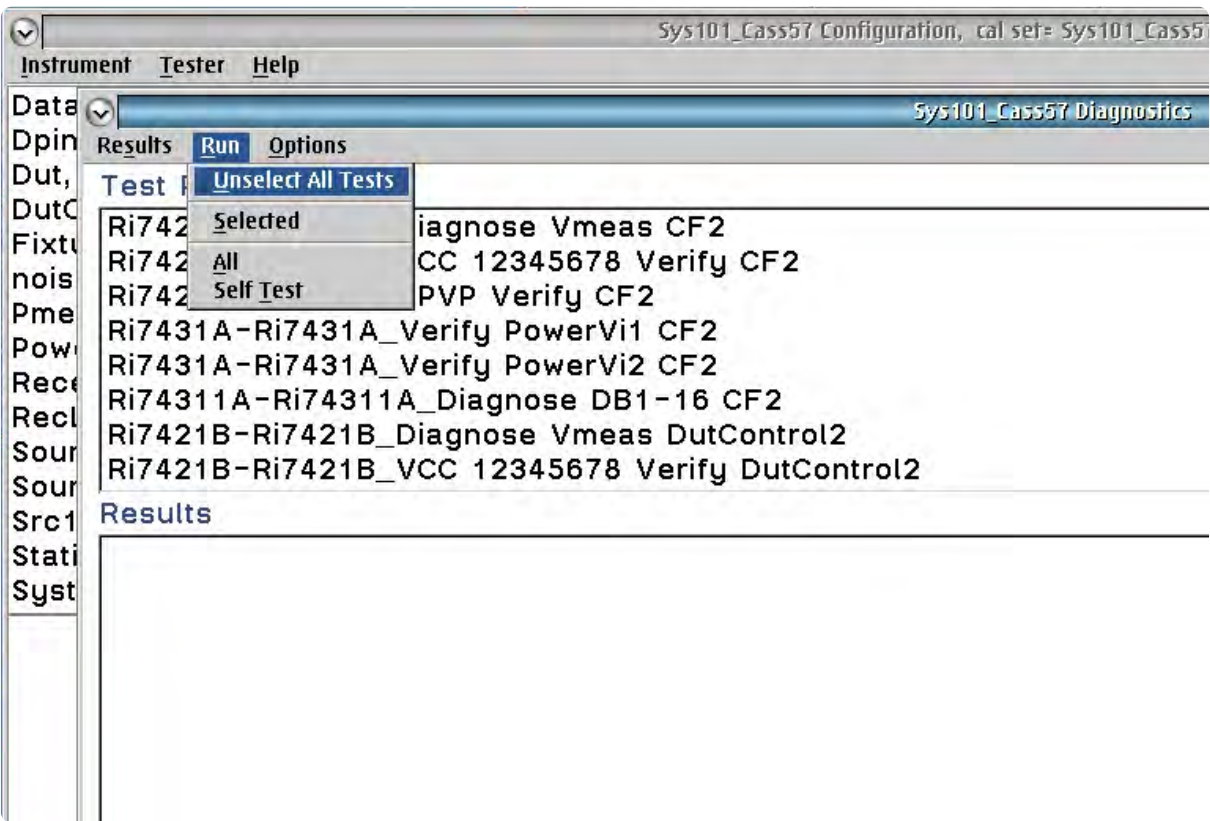

Diagnostic tests are executed from the Run menu option as shown above. All tests can be run by selecting the 'All' option or user-highlighted tests can be executed by choosing the 'Selected' option. As well, all highlighted tests can be unselected by choosing 'Unselect All Tests'.

Viewing Diagnostic Results

Once a diagnostic test is complete, the text field in the Results section of the Diagnostic Exec will display a pass or fail result for the corresponding test as shown in [Figure 5.16](#). The default result settings will display ‘pass’ at the end of a passing test. If the test fails, the results will display ‘FAILED!’ and then provide all measurement data associated with the failed test.

NOTE: The text field in the ‘Results’ section of the Diagnostic Exec is cleared before Diagnostic are executed, i.e - when the ‘Run’ > ‘All’ or ‘Run’ > ‘Selected’ menu options are executed.


To view all measurement results, i.e. - results from pass and fail diagnostic tests:

- 1. From the Diagnostic Exec menu options select **Options > Show All Results**.
- 2. Subsequent diagnostic tests that are executed will display all measured data in the results window for both passing and failing diagnostic tests.

To only view measurement results for failing diagnostic tests(default setting):

- 1. From the Diagnostic Exec menu options select **Options > Show Fails Only**.
- 2. Subsequent diagnostic tests that are executed will display measured data in the results window for failing diagnostic tests only.

FIGURE 5.15 RESULTS DISPLAY OPTIONS

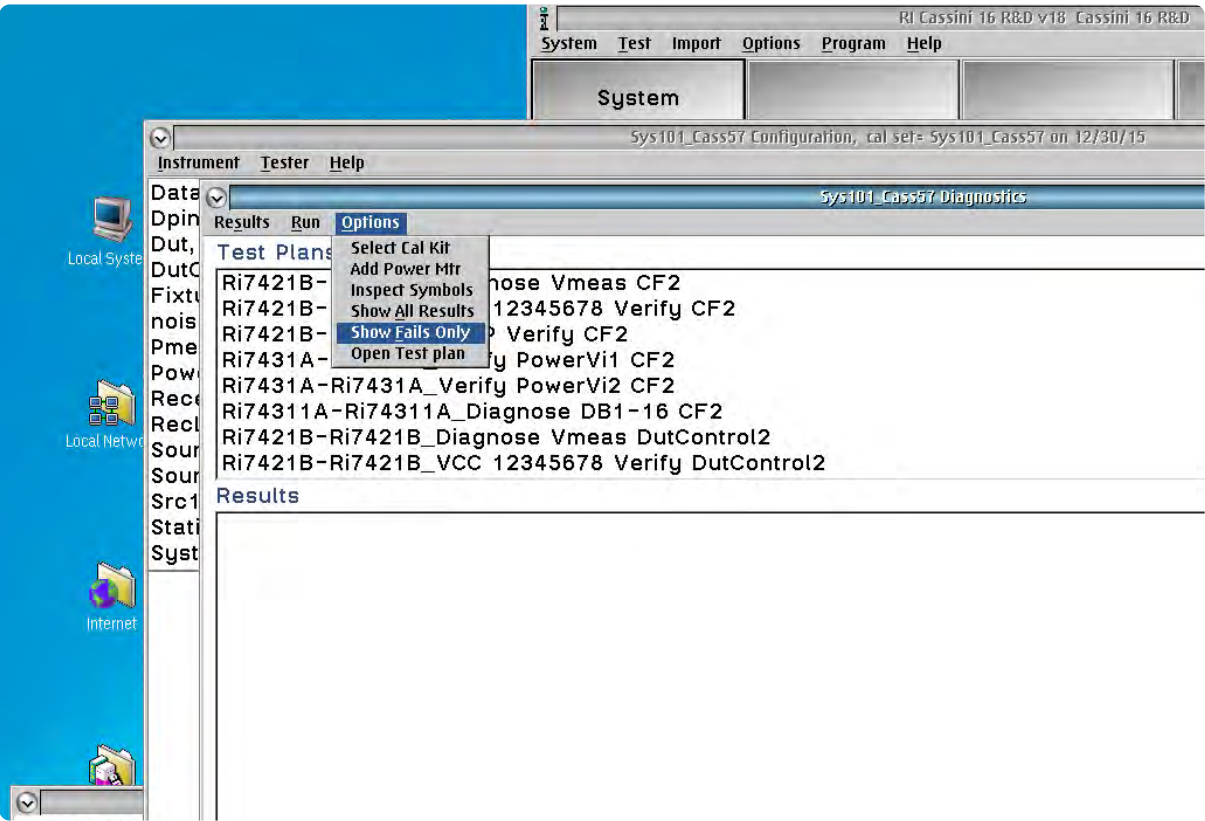

Pass/Fail information from diagnostic tests are displayed as text in the Results field of the Diagnostic Exec. Options for displaying all measured data or only failed data (default) can be selected from the ‘Options’ menu.

Saving Diagnostic Results

The text field data in the Results can be captured for support or documentation purposes from the Diagnostic Exec. To save the results to a text file(.txt):


1. From the Diagnostic Exec menu options select **Results > Save to File...** as shown in [Figure 5.16](#).
2. A Save File window will pop-up, allowing the user to enter a file name and select a file directory in which to store the text file.

CAUTION: Do not save files to the C:/ drive. Save to an RI approved USB drive, networked drive, or to the D:/ drive (temporary option).

Alternatively, the text in the Results field can be selected manually:

1. In the Results field, LMB hold and drag the mouse to select the text of interest.
2. RMB click within the highlighted text or hold the CTRL key and press C to copy the text to the clipboard.
3. The text can be pasted into a text file or other program from the clipboard by holding the CTRL key and pressing V to paste.

FIGURE 5.16 SAVING/EXPORTING DIAGNOSTIC RESULTS

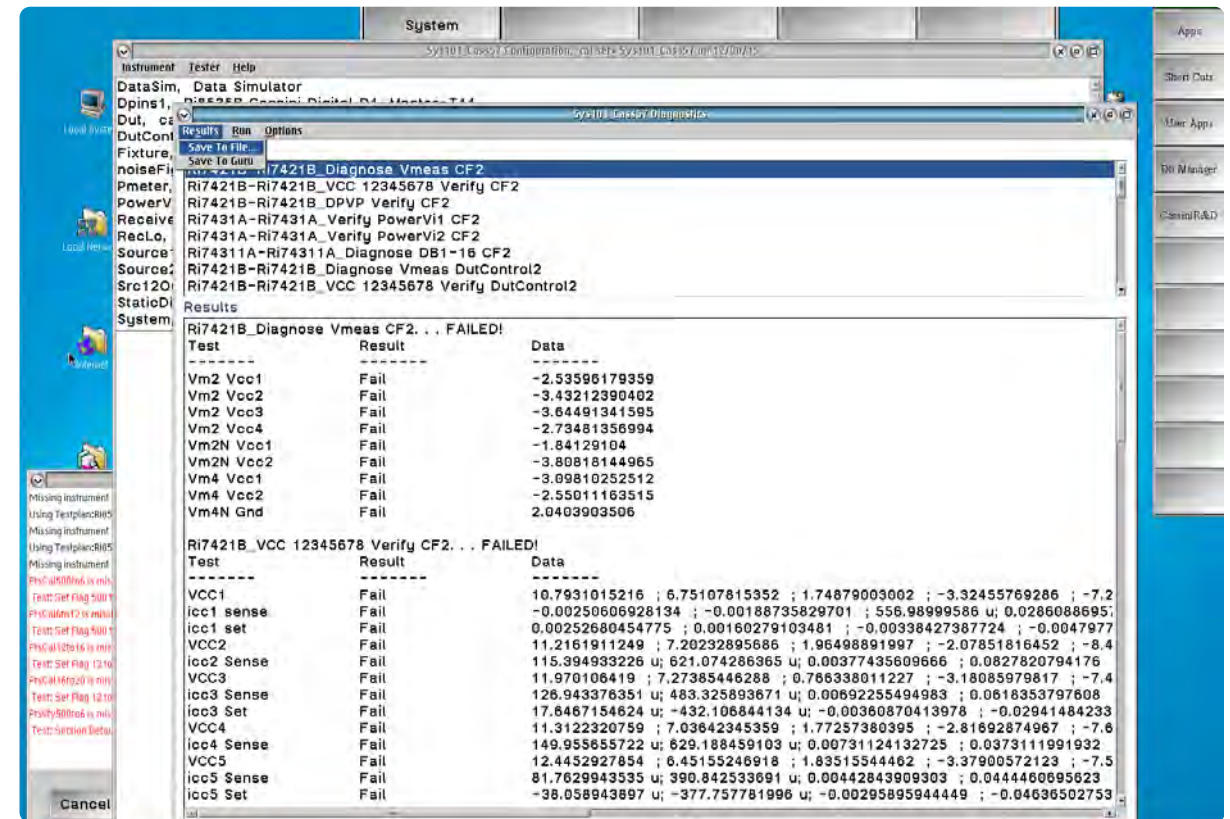

Results and measurement data from diagnostic tests can be saved to a .txt file from the Results menu.

SYSTEM CONTROLLER(EPC) DIAGNOSTICS

The RI8574 System Controller TIM contains a disk drive, either solid-state or a hard-disk, which hosts the Cassini’s operating system and test software. The system controller diagnostics use eComStation’s S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) monitoring system to detect and report on various indicators of reliability of the installed computer disk drives. This diagnostic test can be performed independently from the instrument diagnostics.


NOTE: System Controller (EPC) Diagnostic is not a prerequisite for Calibration.

To run the system controller diagnostics:

1. From the eCS Start button select **Desktop > Programs > Utilities > Problem Determination Tools > Hard File Monitor** to launch the utility as shown in [Figure 5.17](#).
2. The Disk File Monitor application shows all connected drives with a disk icon containing a red or green indicator to designate the drive status, reference [Figure 5.18](#):
Green - indicates that the disk drive is OK.
Red - indicates that the drive has an issue.
3. Select the drive icon with a LMB click or from the menu options select **Options > Drive Info** for more information such as the Drive Status, Model, and Serial Number.

If a failure or warning is reported by the S.M.A.R.T. monitor, the disk drive should be replaced to avoid system outage and/or data loss. Contact Roos Instruments support for assistance in replacing the EPC disk drive.

FIGURE 5.17 ACCESSING DISK DRIVE DIAGNOSTICS

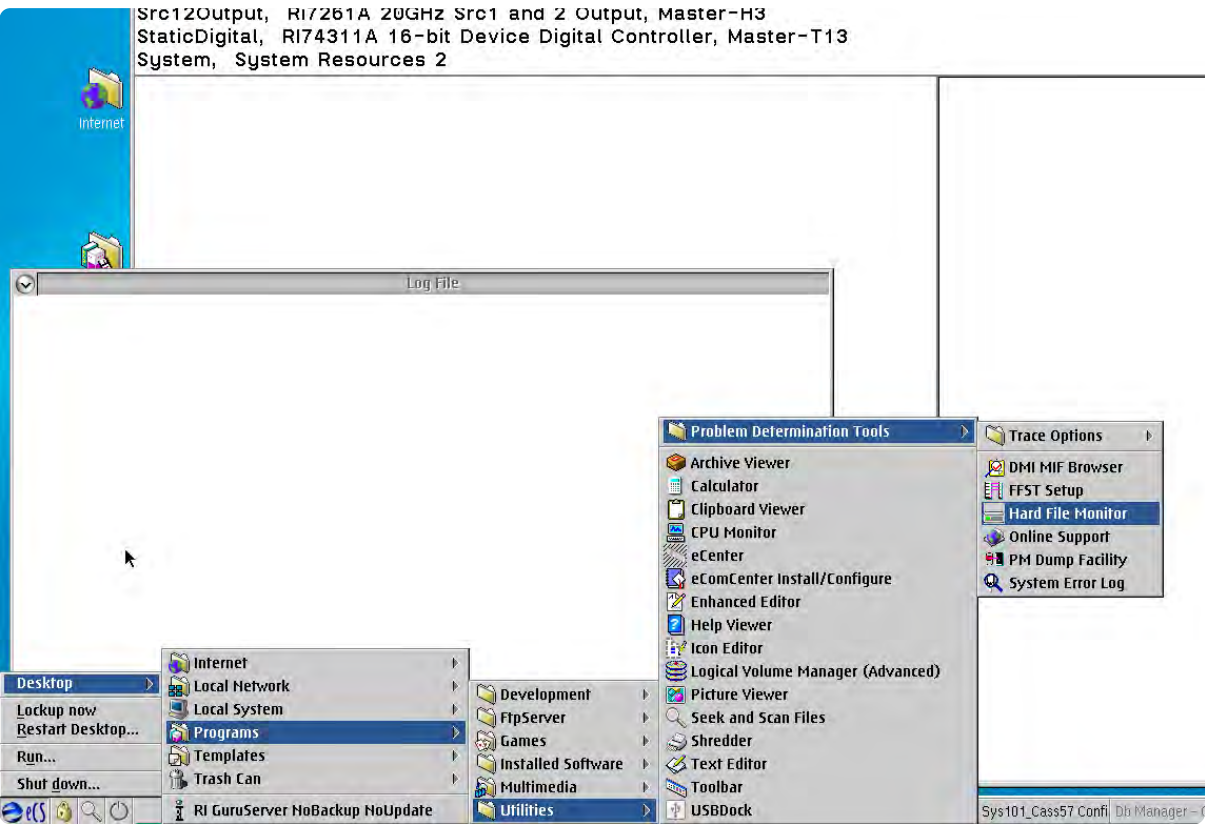

The system controller’s disk drive diagnostics can be accessed from the eCS start button menu.

FIGURE 5.18 SYSTEM CONTROLLER (EPC) DRIVE INFORMATION



The Hard File Monitor utility displays the status of disk drive in the System Controller(EPC). To advance to additional drives select 'Next Drive'. To close the Drive Information window select 'Cancel'.

CALIBRATION

General Reference
Information for Calibrating
Cassini Test Systems using
the Calibration Kit and
Diagnostic/Calibration
Interface Plate.



CASSINI SYSTEM CALIBRATION

PLAN FOR CALIBRATION

Calibrations should be scheduled yearly following the [Preventive Maintenance Schedule](#). The frequency can be adapted by the end-user's discretion. Calibrations can be safely postponed up to 6 months time if the system is in a thermally stable environment where the ambient temperature does not vary by more than 5° C.

Months or weeks before a scheduled calibration, check that all the equipment used to calibrate the system are calibrated themselves to the global [NIST electromagnetic standard](#).

Make sure that all calibration standards and instruments in a Cal Kit are in good working order. Look for straight pins, inspect center conductors for wear and clean connectors to remove any debris.

Inspect the Cal Kit definition to assure the item's serial numbers and calibration data are accurate by following the procedure to [Inspect and Modify Cal Standards](#).

Verify that all TIMs are functioning properly before starting the Calibration Procedure by following the [Run All Diagnostics](#) procedure.

NOTE: Performing a Calibration on a TIM that is failing may cause the Diagnostics to pass even though a component is not functioning up to specifications. ALWAYS Run All Diagnostics prior to following the Calibration procedure.

The Calibration Procedure can take about 4 to 6 hours for a typical system configuration to complete. Calibrations are interactive so the total time is dependent on the responsiveness of the operator and the model and configuration of TIMs.

Calibration should not be performed on a “cold” system, TIMs require at least 2 hours to stabilize enough to calibrate.

PREPARE FOR CALIBRATION

Use the following procedure to prepare the system for calibration:

1. If the Cassini main system window is not already open, turn on the system's main power and monitor.

CAUTION: *The system must be running for a minimum of 2 hours before starting this Calibration procedure. This warm-up time is required for the instruments' internal temperature to stabilize and minimize the affects on the Calibration data.*

2. If another user is already logged in, choose **System > Logout** from the Guru bar to change privileges. Select **Login** from the Guru control bar and log in as a user with "Maintenance" permissions.

Note: The user can safely log out and log on while Guru Apps continue to run.

3. If the Cassini main system window is not already open, select the appropriate shortcut from the **Short Cuts** button on the Guru control bar to open the Cassini main system window. If the RI Message Window displays an Error or Warning message, please correct the problem before continuing.
4. If a Fixture is attached, [unlatch and remove from the test head](#).
5. If not already completed, follow the [Run All Diagnostics](#) procedure to verify that all TIMs are functioning properly. DO NOT continue with calibration if any TIMs fail diagnostics.

6. Choose **System > Tester** from the Cassini main system window to open the configuration window.

ACTIVATE THE CALIBRATION COMPONENTS

The Diagnostic/Calibration (Diagnostic/Calibration) interface plate, Calibration Kit (Cal Kit), and Power Meter must be loaded into the configuration before the [Calibration Procedure](#) can be followed.

Dock and activate the Diagnostic/Calibration interface plate:

1. Before connecting the Diagnostic/Calibration interface plate to the testhead, visually inspect the fixture and test head connectors. Do not attach if any damaged pins are found.
2. Use the orientation arrow and four guide pins in the testhead to align the Diagnostic/Calibration interface plate with the testhead. Place the Diagnostic/Calibration interface plate downward onto the test head.
3. When the “Align” light turns from red to green, ensure all fingers are clear of the fixture and rotate the fixture switch to “Latch”.
4. Choose **System > Check** from the Cassini main system window to have the system load the Diagnostic/Calibration Interface plate into the system configuration. The item will appear as “*Fixture, <Cal Kit Name> Transient, Fixture Pwr*” in the configuration window.

Attach GPIB Instrument Pod and activate the Power meter:

1. Attach the GPIB Instrument Pod to the RIFL AUX ports on the back of the Testhead. Connect GPIB cable to power meter. Choose **System > Check** from the Cassini main system window to activate the GPIB Instrument Pod.

NOTE: If an AUX rack is used with a GPIB Instrument Pod, do NOT attach another GPIB Instrument Pod. Connect the GPIB cable from the power meter to the end of the GPIB cable bus attached to the Pod in the AUX rack.

2. Select **Instrument > Add Power Mtr** from the configuration window. Alternatively, the Power Meter can be loaded after launching the Cal Exec by choosing **Options > Add Power Mtr**.
3. Accept the default instrument name of 'Pmeter' by pressing **OK**, then accept the GPIB address of 13 by pressing **OK** again. On the power meter, the remote light should flash on, then off. The *Pmeter* instrument should now be visible in the configuration window.

NOTE: Roos Instruments always sets the power meter to use GPIB address 13. The facility may have a power meter used for calibrations set to a different GPIB address.

4. Attach the Power Sensor to the Power Meter and connect to the Power Sensor calibration port. Press **Zero/Cal** button on the Power meter and wait for the calibration to finish.

Add the Calibration Kit (Standards) to the configuration:

1. In the Configuration window, select **Instrument > Add cal Kit**. Alternatively, the Cal Kit can be loaded after launching the Cal Exec window by choosing **Options > Select Cal Kit**.

2. Select the appropriate calibration kit and choose **OK**.

NOTE: For a valid calibration, the calibration kit definition must match the Calibration Standards used in the Cal Kit. See the [Inspect and Modify Cal Standards](#) topic.

3. The Calibration Kit contains the coefficients for the open/short/load and noise standard calibration components. Contact support@roos.com for an updated calibration kit definition.
4. The calibration kit should now be in the Configuration window.

Once the Diagnostic/Calibration (Diagnostic/Calibration) interface plate, Calibration Kit (Cal Kit), and Power Meter are visible in the configuration window, continue on to the Calibration Procedure.

CALIBRATION PROCEDURE

After the Calibration components are loaded, the Calibration Executive window should be opened to begin calibrating the tester. The Calibration Executive window enables the user to run multiple calibration and verification test plans unique to the configuration and layout of TIMs. The Calibration Executive automatically saves the calibration data only if the verification test plan passes. Calibration and Validation plans should ALWAYS be run as a pair. The calibration data is reset (lost) when a Calibration service plan is compiled and the calibration data is only saved after the Validation plan passes.

WARNING: Do not exit the Calibration Executive window after running a Calibration service plan and Validation plan pair. Invalid Cal data may be saved and cause measurements to fail.

1. Open the Calibration Executive window by choosing **Tester > Calibrate** from the configuration window.
Alternatively, from the configuration window, highlight the 'System' instrument and choose **Instrument > Calibration > Calibrate**. Highlight the appropriate Cal List and press **OK** to open Calibration Executive window.
2. Select and run calibration and validate service plans in the order listed in the Calibration executive.

NOTE: The system only saves the Calibration factors after all selected plans have been run, so run only a few plans at a time. With this method, if an operator error occurs and a validate plan fails, then only the selected Calibration plans will have to be run again.

Run the Calibration and Validation plans in groups of 4 to 6 at a time:

1. Highlight the test plans in groups identified by their instrument name by clicking on the test plan name to select it. Don't select more than 6 plans and don't select a Calibration plan without it's Validation pair.
2. To run the selected tests, select **Run > Selected** from the menu bar.

NOTE: If the Cal Kit or Power Meter is not active, the Cal Exec will prompt the user to load them. Choose Options > Add Cal Kit and/or Options > Add Pwr Meter to add them to the configuration.

3. Follow the operator prompts provided by the test system while it runs the calibration plan.
4. Repeat steps 1 through 4 until all of the test plans have been performed. If the validation test plan fails, run the Diagnostic tests for the Instrument that failed.
5. After all instruments have been calibrated, the System Calibration is considered complete.

CALIBRATION DOCUMENTATION

If Roos Instruments performs the calibration, a "Calibration Certificate" that provides NIST traceable Model and Serial Numbers and "Calibration Sticker" will be sent via standard mail in 3-6 weeks after the calibration is completed. The "Calibration Sticker" should be attached to the system that was calibrated.

Schedule a calibration according to the [Preventive Maintenance Schedule](#), or appropriate frequency.

CALIBRATION KIT

CALIBRATION KIT

To calibrate a Cassini system two components are required appropriate for your Infrastructure (8-port or 16-port) and specific configuration of TIMs:

1. An 8-Slot or 16-slot Diagnostic/Calibration Interface (Diagnostic/Calibration) Plate (See [Figure 6.1](#))
2. A Calibration Standards Kit (Cal Kit) rated up to 20 GHz, 40 GHz, or 80 GHz. (See [Figure 6.2](#))

The Diagnostic/Calibration Interface Plate is included with delivery of a new Cassini system and includes the required fixed RF interconnect cables and blind mate blocks for the specific arrangement of TIMs as well as PKZ #12 cables needed to perform the calibration. The Cal/Diag plate can be used on any similarly configured Cassini system.

The Cal Kit includes a Power Meter and Sensor, Digital Volt meter, S Parameter Standards, Noise standard, Cables, RF Adapters, and RF Attenuators appropriate for either 20 GHz, 40 GHz or 80 GHz calibration.

The instruments and standards in the Cal Kit need to be calibrated regularly to [NIST standards for Electromagnetic Measurements](#). The customer is responsible for setting the duration of the calibration interval and maintaining documentation. The power meter, power sensor, and DMM are typically calibrated annually. The noise standard and OSL standards can be calibrated bi-annually. If available, use a calibration lab (Cal Lab) at your facility or one in your local area. If a Cal Lab is not available or can not calibrate a specific instrument or standard, it may have to be sent to the manufacturer for calibration. RI offers Cal Kit service as RIK0082A for 20 GHz cal kits. RI usually issues a NIST traceable calibration certificate only when a preventive maintenance and calibration (PMC) is performed. A calibration is performed when a major physical instrument is repaired or replaced, but a certificate is not always issued. For many types of TIMs, a full system calibration is not necessary when exchanged, factory Cal is sufficient.

If the Cal kit was purchased from RI, a USB stick with a '.gzp' file containing the Cal Kit definition is included. The calibration factors (a.k.a. coefficients) are stored in Guru as an "RiCalibrationKit" object class. If the Cal Kit is shipped to other locations, be sure to update the '.gzp' file on the USB stick whenever the Cal standard coefficients change.

NOTE: Be sure the correct coefficients are imported with Guru Browser prior to using a new Cal Kit.

FIGURE 6.1 DIAGNOSTIC/CALIBRATION INTERFACE PLATE



Diagnostic/Calibration Interface Plate kit is stored in a black transportable container and includes all required Cal Blocks and interconnections.

FIGURE 6.2 CALIBRATION KIT, 20 GHz




Calibration kit is stored in a black transportable container and includes all required instruments, adapters, and cables.

ADD CAL KIT TO CONFIGURATION

A Cal Kit must be added to the configuration before being used in the Calibration Procedure or before the calibration factors/coefficients can be updated. (See [Figure 6.3](#))

1. If it is not already running, login as a user that belongs to a group with Maintenance permission and launch Cassini with the latest available Short Cut.
2. When preparing for Cal or inspecting Cal Kit, open the System Configuration window by selecting **System > Tester** from the Cassini main system window. Choose **Instrument > Add CalKit**, then select the appropriate Cal Kit name from the list.
3. Alternatively, when performing a calibration, choose **System > Tester > Calibrate**. From the Calibration Exec window, chose **Options > Select Cal Kit**.

FIGURE 6.3 CAL KIT ADDED TO CONFIGURATION

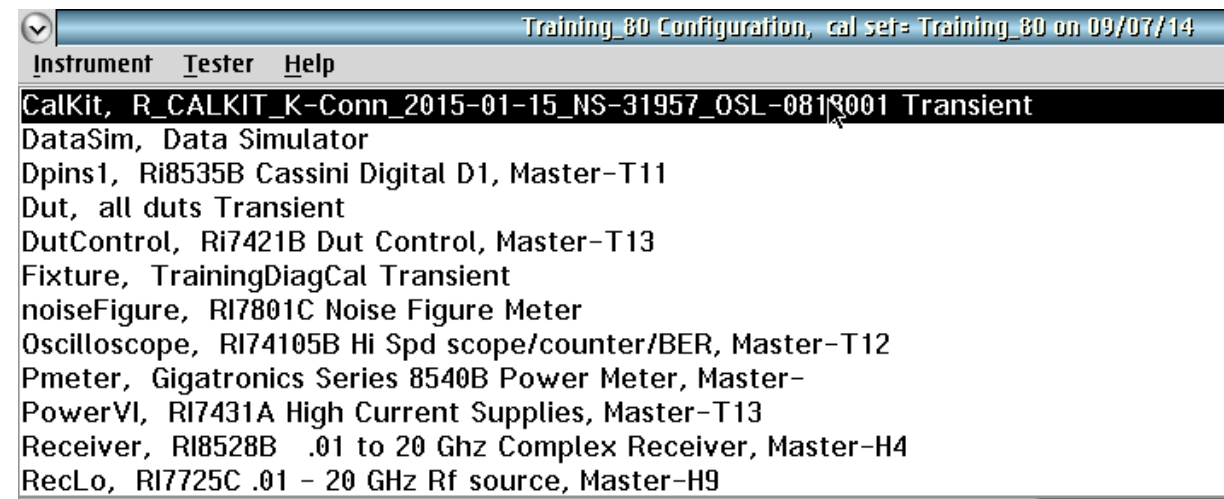

CalKit entry appears as a Transient instrument in the Configuration window.

INSPECT AND MODIFY CAL STANDARDS

Periodically, the cal kit coefficients may need to be changed after the Cal Kit Open, Short and Load standards and the Noise Source return from the scheduled calibration at a local Cal Lab.


To change the coefficients of a cal kit, use the following procedure:

1. Select the Cal Kit listed in the Configuration window.
2. In the Configuration window select **Instrument > Calibration > Inspect**. Double-click the appropriate element. Entries default to linear values. For logarithmic values, click the **lin** button.

NOTE: The lin/log button shows the current format, not the desired format. When displaying in linear format, the button shows 'lin'. Clicking on the button changes to log format, and the button changes to 'log.'

3. To change the coefficients for the Open, double click “open”. You will see coefficient values for 'C0', 'C1', 'C2', and 'C3' in "e" notation. Verify that these match the corresponding coefficients from Open standard. If not, change them directly in the text entry field on the right. Verify that the serial number in 'sn' matches the file's serial number and matches the serial number of the actual open. If not, change it.
4. For the Load and Short standards, the only thing to change is the serial number. Double-click on 'load'. Highlight 'sn'. Verify that it matches the serial number of the actual load. If not, change it so it

FIGURE 6.4 INSPECT CAL DATA FROM CONFIGURATION WINDOW

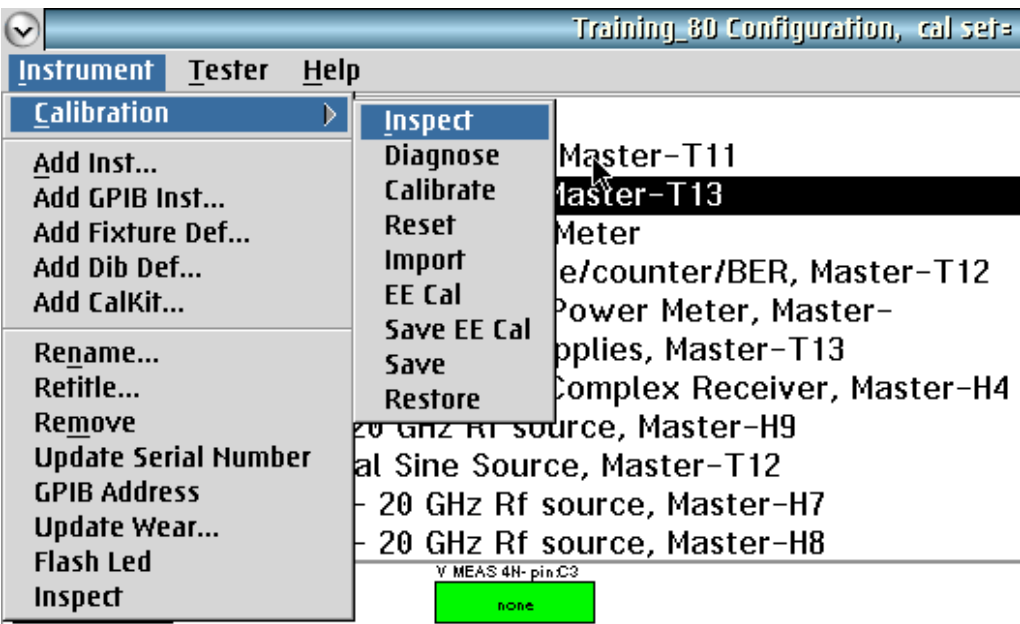

Changing the Cal Kit coefficients


- matches. Repeat this for the Short. After making any changes right click on the CalKit instrument and choose **Calibration > Save**.
5. Changing the Noise Source coefficients, Double-click on 'enrTable', then double-click on 'enr'.

There are normally 20 coefficients, corresponding to the 20 values on the noise source's label. Highlight '1'. Verify that the frequency is '10' (corresponding to the 10 MHz coefficient on the noise source's label).

Select 'Power'. Note that the power displayed is a log number.

- Change it to linear by selecting 'lin'. Confirm that this number exactly matches the coefficient on the noise source's label. If not, change it and select 'OK'.
- Repeat this process for ALL the other coefficients, then close this panel.
- Verify that the serial number in 'sn' matches the serial number of the noise source. If not, change it.
6. Close the panels. If the user has changed anything, right click on the CalKit instrument, select **Calibration > Save**.
 7. If the Cal Kit is shipped to other locations, export the Cal Kit with Guru Browser. Set ri.sys.ObjectClass to "RiCalibrationKit", then select and export (Right click, export Guru format) the most recently updated entry. Copy this .gzp to the USB stick included with the Cal Kit and/or email it to the other location.

FIGURE 6.5 INSPECT/MODIFY NOISE SOURCE COEFFICIENTS

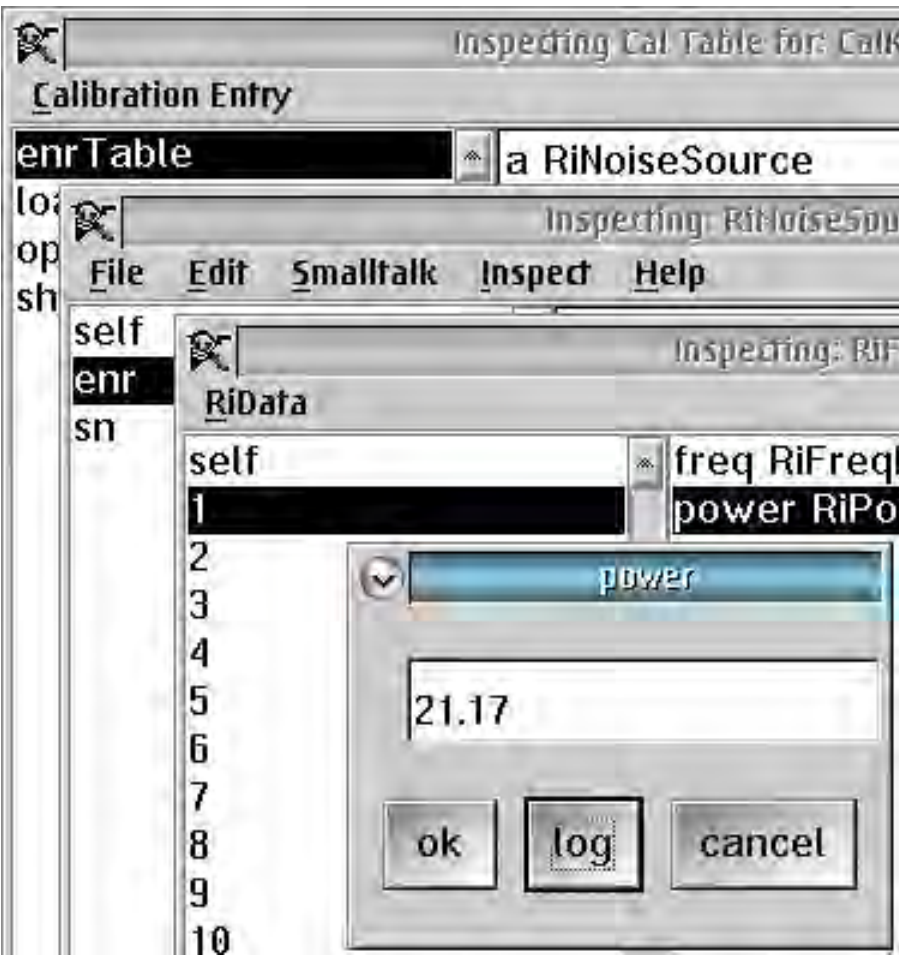

Window sequence for changing the cal kit coefficients.

TROUBLESHOOTING



Procedures for resolving problems with Cassini:

- System Debug Procedure
- Breakpoint and Control
- System Error Log
- Software Error Recovery
- EPC Errors and Recovery
- Guru Errors and Recovery
- Infrastructure Issues
- Test Head Issues
- Handler/Prober Issues

SYSTEM DEBUG PROCEDURE

This general procedure is to be used to diagnose and communicate system problems. Always carefully inspect each connection layer to rule out physical debris or missed connection. The 9 layers include: DUT, Socket, DIB, Fixture, TIM, Test Head, Infrastructure, Handler/Prober, Facility.

Most common problems are often related to improper docking. These can be quickly solved by inspecting Equipment Pool and removing then re-attaching a missing component. Always choose **System > Check** from the Cassini main system window when removing or adding each piece of equipment. This causes the system to inspect all components, identify them and load their software definitions and calibration data. Choose **System > Equip > Nodes** to view the Equipment Pool that shows the TIMs connected to the test head (T-ports) and AUX RIFL ports (H-ports).


To reduce production down time, RI recommends having at least one spare DIB (Quick-Lock™), Fixture and each model TIM on site to exchange. If a failure is identified, swap the DIB, Fixture or TIM to quickly return to production testing with minimal downtime.

Problems with the DUT and Socket should be reported internally and provided to RI upon request. Please report all problems beyond the DIB layer (including Fixture) to Roos Instruments support (support@roos.com), even if they are resolved in the field.

DEBUG PROCEDURE OVERVIEW

1. Confirm DUT FAIL with known good part (a.k.a. “Silver DUT”).
2. Collect information: Test Exec name (DUT), ShortCut name and version, Serial Number of System (Guru ID).
3. Inspect each of the 8 layers, fixing common issues: DUT, Socket, DIB, Fixture, Test Head, TIM, Infrastructure, Handler. If an issue is not identified, continue on to step 3.
4. Follow [Diagnose Procedure](#) to identify faulty TIM(s) with Diagnostic/Calibration interface plate. (See [Interactive 5.1](#)) If not faults are found, repeat step 2.
5. If TIM failure is identified, return to Roos Instruments for repair. Contact RI Support for a RMA, include problem description, all Diagnostic data, and serial numbers of the system (GuruID) and TIM.
6. Replace failed TIM, perform Targeted Diagnostic Procedure.
7. If Diagnostic Procedure fails, RF System Calibration is required.
8. After Calibration, after Diagnostic Procedure completes without a FAIL, release to production.

FIGURE 7.1 DEBUG PROCEDURE DIAGRAM

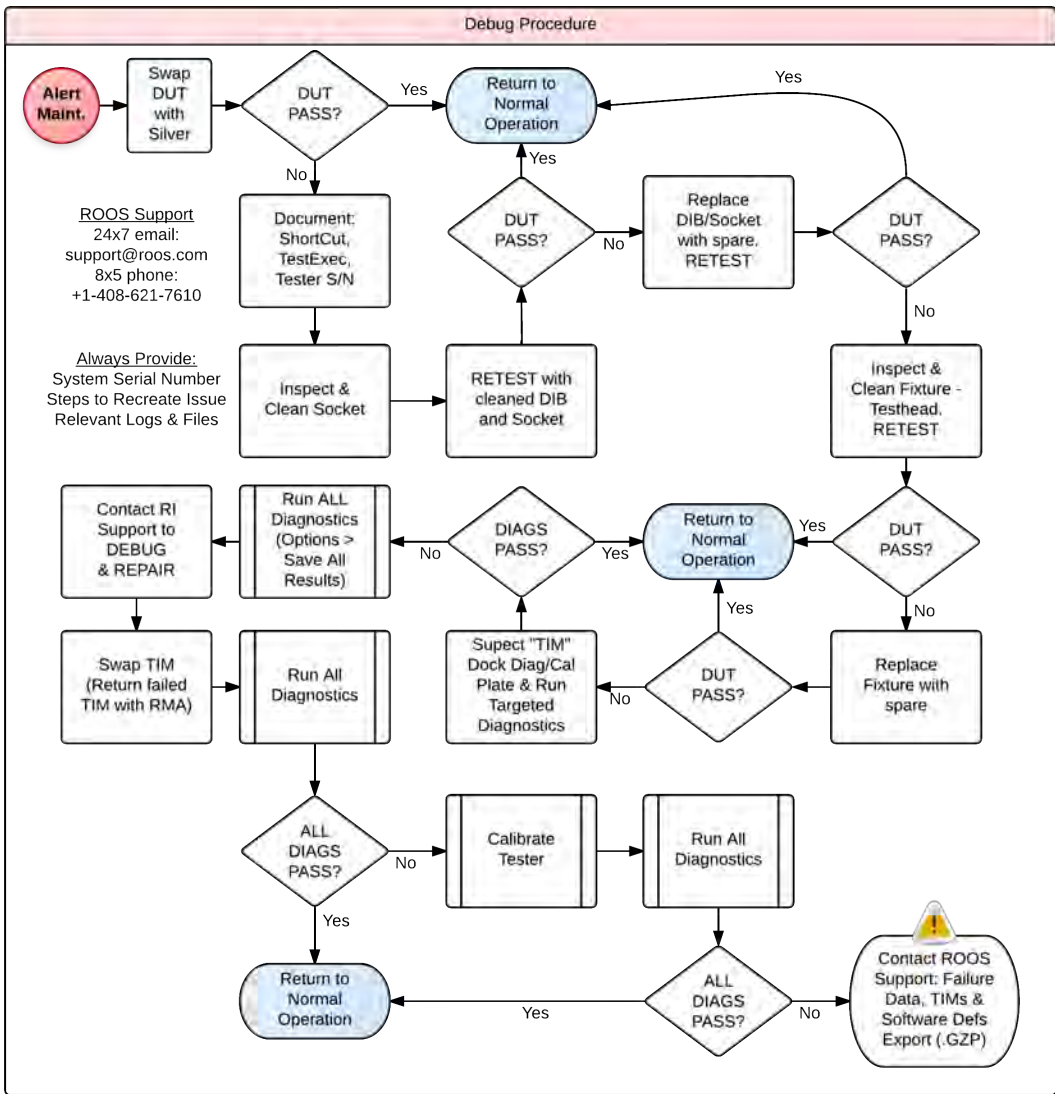

This procedural diagram should be followed to Debug problems on Cassini. Inspect or replace each of the 8 layers

System failures are normally suspected when DUT Yields drop below a normal failure rate (i.e. 5% failure). If 100% of the DUTs are failing, the problem could be with the DUT (unlikely) or with the System. Before removing the Fixture and preparing for the Diagnostic Procedure, visually inspecting the DUT, Socket, DIB and Fixture can solve many problems not associated with a TIM Failure. The Diagnostic Procedure should then be followed to identify and replace failed TIMs.

DUT INSPECTION

- Confirm ShortCut, Exec, DIB and Fixture appropriate for DUT
- DUT Issue, Use “Known Good” DUT (Silver or Gold part)

Confirm that the proper ShortCut and Test Exec is chosen for the active DUT, DIB and Fixture. ShortCut label is displayed in the title of Cassini’s main system window. Test Exec is chosen by the operator. DIB and Fixture are designed to work with a specific DUT or family of DUTs. If the model DIB is designed for another DUT, swap out the Quick-Lock™ system with the correct DIB model. If all appears correct, continue with Socket Inspection.

Manufacturing defects could cause the DUT to fail in such a way that it appears that the Socket or Fixture is failing. Always verify with a known good DUT that the problem is isolated to the tester, and not a problem with the DUT or Socket. Replace the DUT with a known good DUT and run the Test Exec again. If the part passes, then continue testing. If the part fails, continue with DUT inspection.

SOCKET INSPECTION

- Visually Inspect for Contamination, Clean Socket
- Sockets Have a Limited Lifetime, Repair Socket Pins
- Follow Manufacturer's Guidelines

Always visually inspect the DUT socket(s) connectors before docking the Fixture to the Handler, looking for damaged pins or contamination (dust or debris).

Each socket has a limited number of insertions and pins may be damaged by debris or Handler failures. Repair socket pins according to manufacturer's procedure.

CAUTION: Always follow the socket manufacturer's recommended guidelines for cleaning sockets and repairing pins.

DUT INTERFACE BOARD (DIB) INSPECTION

- Quick-Lock™ system: DUT Clamp, Pedestal Support & Pedestal
- Serialized DIB Identification, Test Exec Warning
- Swap with Spare DIB (if available)

The Quick-Lock™ system is used to quickly swap DIB boards to repair socket pins or change parts. Issues may be caused by using the wrong DIB for the DUT, improper DIB orientation, connection contamination, or a misidentified DIB serial number. Always visually inspect the DIB pads used for RF and DC connections before loading the DIB on the Fixture, looking for damaged pins or contamination (dust or debris).

A Test Exec Warning will appear if a DUT definition is not found. Either the serial number chip has been disconnected or damaged or it has not yet been associated with the DIB Calibration data. The DIB has a serialized chip connected to the "S/N" and "Ground" pins of the FIX block that is used to locate DIB Calibration data that matches the ID. Carefully inspect the DIB serial number chip for damage or follow the procedure for Calibrating a DIB. If available, swap with a spare DIB. If the DUT still fails, inspect the Fixture.

When changing DIBs, from the Cassini main system window, select **System > Check** to automatically identify devices that have been removed and devices that are now available. When properly loaded, the DIB will appear in the **System > Tester** configuration view.

FIXTURE INSPECTION

- Serialized Fixture Identification, Test Exec Warning
- Blind-mate Interface Connections (FIX, RF, DC, and Digital)
- Swap with Spare Fixture (If available)

WARNING: Never latch a Fixture with damaged or contaminated (dust or debris) blind-mate interface blocks. It can damage the TIM or Test Head and propagate damaged pins to other Fixtures.

Like DIBs, Fixtures also have a unique serial ID chip on the carrier board or attached directly to the “S/N” and “Ground” pins on the FIX block. The RI System Software reads this ID on system Startup and will attempt to locate Fixture Calibration data and definition that matches that ID.

A Test Exec Warning will appear if the proper Fixture and DIB are not identified. Either the ID chip is not connected properly or it is not yet associated with Fixture Calibration data. Carefully inspect the DIB serial number chip for damage or follow the procedure for Calibrating a DIB.

If available, swap with a spare Fixture. If the DUT still fails, continue by inspecting the TIMs.

When changing Fixtures, from the Cassini main system window, select **System > Check** to scan the devices. When properly loaded, the Fixture will appear in the **System > Tester** configuration view.

TIM INSPECTION

- Unidentified TIMs, Latching Issues
- Damaged Blocks, Fixture Plate Compatibility
- Diagnostic Failures

When properly loaded, all TIMs will appear in the Equipment Pool window (**System > Equip > Nodes**) in the appropriate T-location (i.e. T8). Confirm that the TIM is properly latched and fan is on. If TIM is not loaded, follow the procedure to [Install & Remove TIM](#). When changing TIMs, from the Cassini main system window, select **System > Check** to scan the devices. If all TIMs are present in the Equipment pool, continue with a visual inspection of the TIM blocks.

Visually inspect the TIM's blind-mate interface blocks, looking for damaged pins or contamination (dust or debris). If a TIM has a damaged blind-mate interface block, remove the TIM immediately and contact Roos Instruments support for a replacement and identify all Fixtures and inspect and replace any damaged blocks. If all TIM blocks look correct, continue on Test Head Inspection.

After inspecting the previous 4 layers and ruling out common problems, follow the [Diagnose Procedure](#) to identify a failing TIM. Continue on with Test Head inspection if TIMs are not loaded properly or another issue (like Handler communications) is affecting production.

NOTE: Use the correct Diagnostic/Calibration interface plate appropriate for the current configuration of TIMs when following the Diagnose Procedure.

TEST HEAD INSPECTION

- RIFL Communications (Hub)
- Fixture Latching (Pressurized Air)

If TIMs still do not appear in the Equipment Pool (**System > Equip > Nodes**), a RIFL top board may have failed. Test Head issues are often misdiagnosed as a TIM RIFL communication issue. Use the [RIFL Troubleshooting](#) topic to validate RIFL communications between the internal hub and the TIM. All TIMs should be installed in proper location. If a RIFL self test fails, contact Roos Instruments support and follow the procedure to replace the appropriate Test Head top board.

If a Test Head TIM slot is suspected as failing, move the TIM to another location and choose **System > Check**, then confirm the TIM is visible in the newly configured location. If the TIM appears in the new location but not the original location, the problem is with the Test Head top board, contact Roos Instruments support and replace. If the TIM still does not appear, the TIM should be replaced.

If the Fixture latch mechanism is slow or can not successfully latch a Fixture, inspect both the Infrastructure air connection and Facility's Air pressure. If not a facility problem, notify Roos Instruments support and work around issue by manually latching Fixture by pushing on the black Fixture latch plate.

Continue on to inspect the Infrastructure for issues before following the Diagnostic Procedure.

INFRASTRUCTURE INSPECTION

- Air or Power Supplies
- System Controller EPC
- Touchscreen UI

Infrastructure supplies Air and Power to the Test Head and holds the System Controller EPC. The compressed air source should not be leaking. Replace facility compressed air NTP connector if a leak is detected. The redundant power supplies are accessed from the Power Supply Access panel. Each power supply has a green light when functioning properly. Contact Roos Instruments support if a power supply failure is detected.

The System Controller EPC failures may be more subtle. The System Controller includes the RIFL Master that sets the system's 10 MHz reference clock. See [System Errors and Recovery](#) for more details. If a System Controller has failed, follow the [System Controller Install](#) instructions.

Touchscreen UI (Ergotron adjustable arm, ELO Touchscreen, Keyboard) can be replaced when any UI component fails. Contact Roos Instruments support for RMA and instructions for repair.

Continue on to the Handler/Prober inspection to rule out problems with the handler.

HANDLER/PROBER INSPECTION

- RIFL III to RIFL II Cable (Handler Pod)
- Handler Pod programming
- Grounding cable

Once configured, handler Pod and cables should not need to be replaced. The most common failure is a damaged RIFL III (H-port) to RIFL II (RJ45) cable. Visually inspect the cable for damage caused by rolling equipment, kinks, or broken insulation. The RIFL cable requires a shielded ground connection. Contact Roos Instruments support for a replacement cable and RMA number.

CAUTION: *Proper ground is important for reliable communications with the connected handler or prober. A grounding cable should be securely fastened to the Handler/Prober.*

Handler Pods are programmed once for a particular model and configuration of handler. All communication is handled by the Test Exec settings and are not intended for user modification. If a handler Pod is suspected of failing, contact Roos Instruments support for a replacement. Some Pods are opto-isolated and require a solid ground connection on the handler side to function properly.

Continue on to the Facility inspection process to rule out grounding, AC power or air pressure issues.

FACILITY INSPECTION

- AC Power, Ground
- Pressurized Air (Cassini 16 only)

The facility is required to provide a stable 120/220 AC power with reliable ground. Try to use the same breaker panel as the Handler/Prober to reduce grounding issues that may affect communication.

Pressurized air should meet minimum requirements according to [Site Preparation](#) guidelines.

Now that all easily identifiable problems are ruled out, continue on the [Diagnose Procedure](#) to isolate the failed TIM.

EXPORT SIMULATION

The export simulation feature is a useful tool to capture multiple software elements of an active test system configuration or Cassini simulation environment when troubleshooting an issue. Often times when running a test plan or measurement on the test system, the user has multiple software objects active:

- System short cut and software patches
- Fixture, DIB, and device control definitions
- Instrument configuration
- Calibration layers
- Test plan


The export simulation feature allows the user to capture all of these software objects into a single object called an RiSimulationDef. The RiSimulationDef can be exported and emailed to Roos Instruments support to re-create the exact test system configuration and software environment settings when assisting with application support and/or troubleshooting.

To export a simulation of an active test system or simulator:

1. From the Main System Window select **System > Equip > Save Sim** as shown in [Figure 7.2](#).
2. To access the SimulationDef Object, open a Guru Browser window. Reference [Figure 1.73](#) for accessing and launching Guru Browser.
3. Set the 'Key1' field to 'ri.sys.ObjClass' and choose 'RiSimulationDef' from drop down list.
4. In the search list of objects, LMB click the RiSimulationDef with the most recent creation date, i.e. - the one created by the Save Sim action, to highlight/select it.
5. From the Guru Browser menu options, select Export > Send to Export List as shown in [Figure 7.3](#).
6. The RiSimulationDef can then be [exported to a .GZP](#) and sent to RI support.


CAUTION: Do not export files to the C:/ drive. Save to an RI approved USB drive, networked drive, or to the D:/ drive (temporary option).

FIGURE 7.2 EXPORT SIMULATION

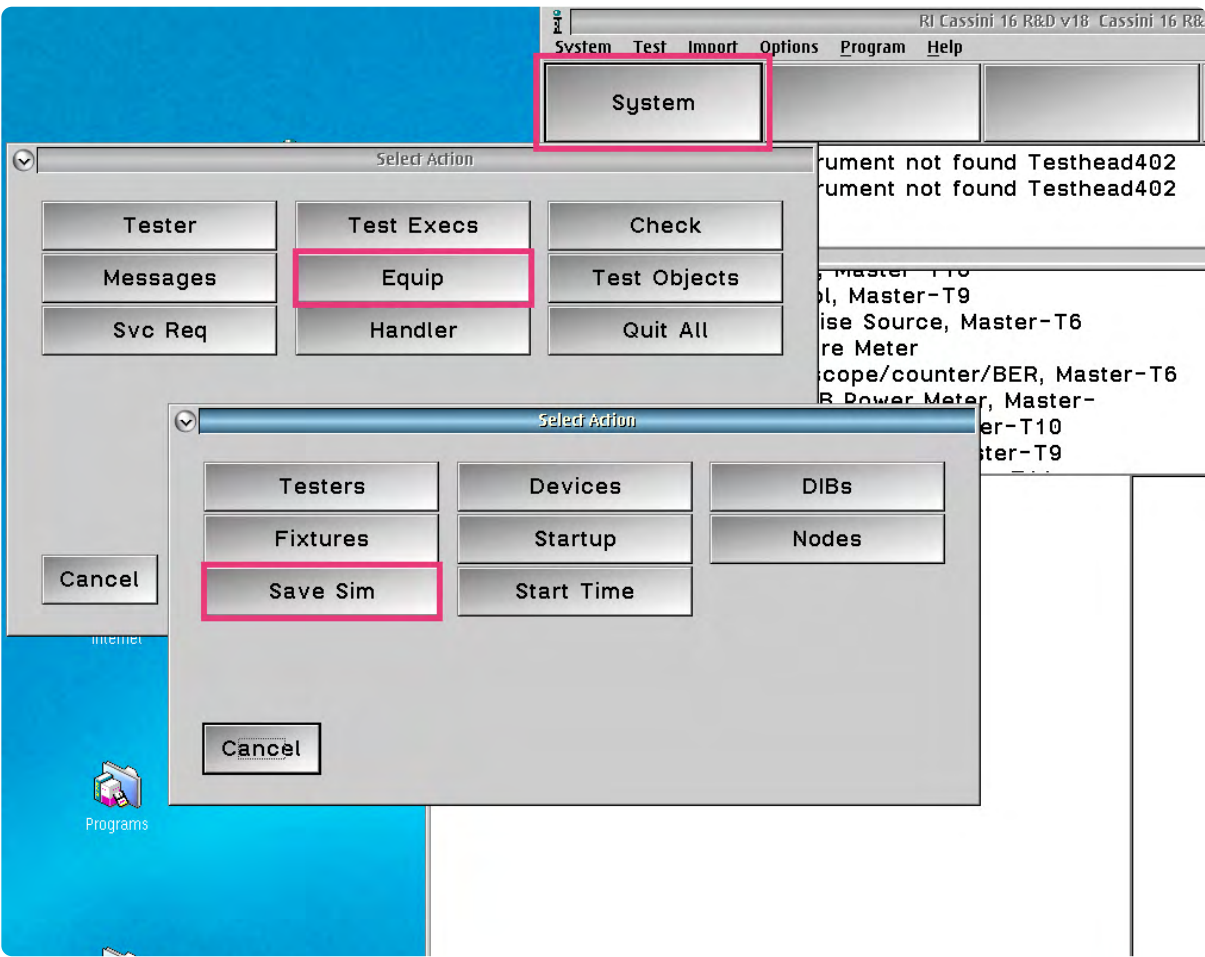

The screenshot above shows how to create a RiSimulationDef object of the current Cassini test system software configuration.

FIGURE 7.3 EXPORTING THE RiSIMULATIONDEF

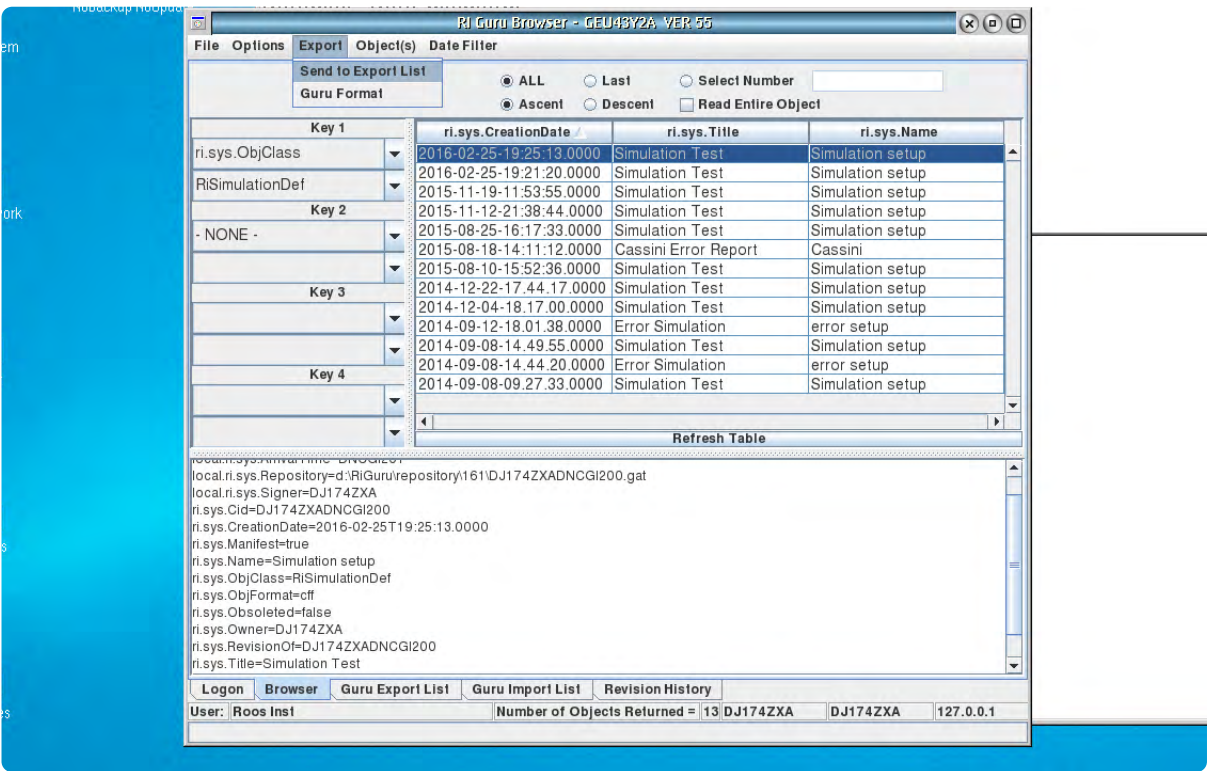

The screenshot above shows how to search Guru for a RiSimulationDef, organize the search results by creation date, and send the RiSimulationDef object to the export list.


BREAKPOINT & CONTROL

SET BREAK POINTS

- **Options > Set Break Point**
- Changes color at the break point
- Can only break on a test, not on Section or Global Defaults.
- Test Plan will stop after setting up the hardware and taking the measurements
- Only 1 break point per test plan
- Can continue, single-step, abort, or open the control panel

CAUTION: Do not perform a system startup while at a break point.

FIGURE 7.4 SETTING BREAKPOINT

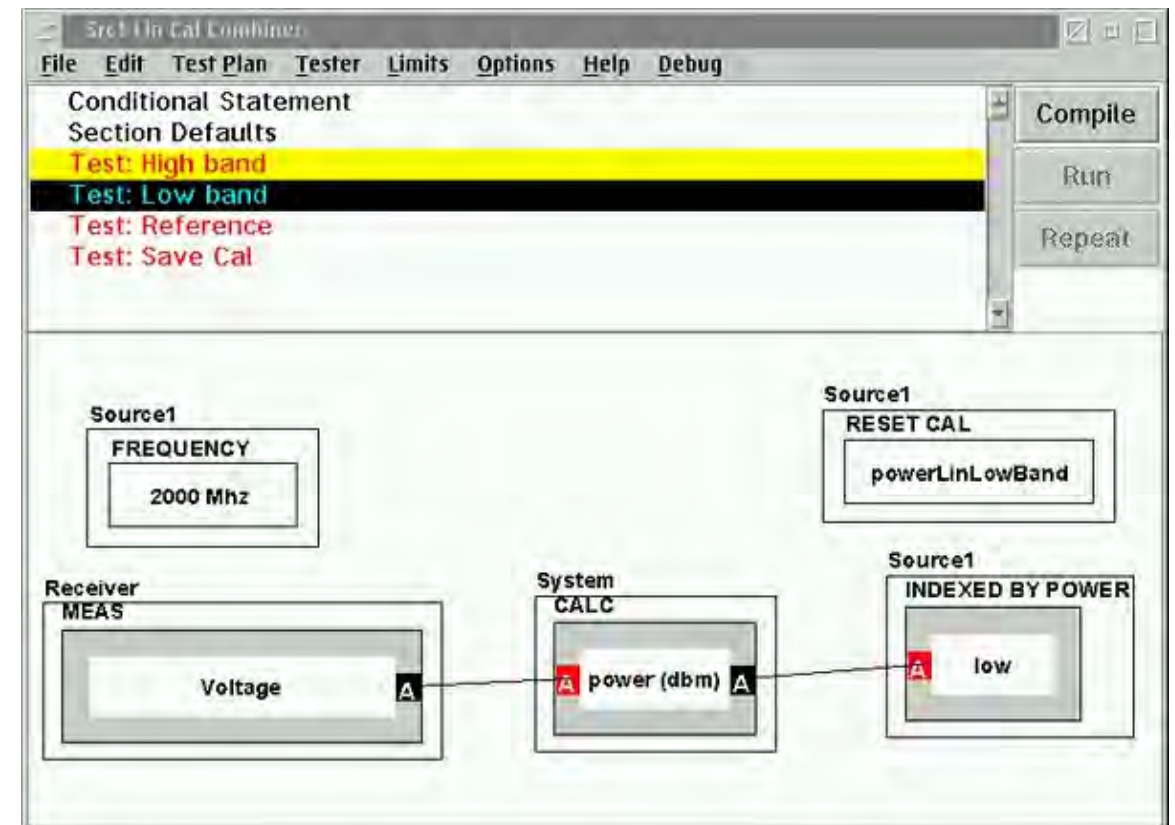

When setting a breakpoint, the line turns yellow indicating a breakpoint is present.

CONTROL PANEL

The control panel can be accessed by selecting **Options > Control** menu selections from the Main System Window or from selecting the **Control** button from a breakpoint pop-up window. If reached from a breakpoint, the control panel will reflect the settings at the breakpoint.

WARNING: The TIM settings are live and active at this point. The control panel allows for manual control of system instruments

DISABLING PARTS OF TEST SECTIONS

Disabling parts of test plans can increase speed or decrease confusion. The programmer message window will always say 'Fail' if any test or test section is disabled. To disable a section select **Edit > Disable/Enable** 'Selected' or 'Disable All' then re-enable selected sections.

There are a couple of reasons for disabling parts of a test during debug. One is to increase the speed of a test plan. This is particularly useful when doing a 'rattle' test. Another reason is to decrease confusion. If troubleshooting a problem, disabling a test or test section, will decrease the amount of data that needs to be processed while searching for a solution.

To disable a test, first click on the test the user wants disabled. Then, at the top of the test plan window, select **Edit > Disable/Enable selected**. This will disable the selected test. If the user wants to disable more than one test in a section, select **Edit > Disable All**. This will disable all the tests in that section. Then select the disabled tests the user wants enabled and select **Edit > Disable/Enable selected** to enable those selected tests.

ABORTING A TEST PLAN

- Validate, Verify, or Diagnose can be aborted if necessary
- Perform by pressing **Ctrl + Break**
- System will show a walk-back error. Select 'Abort'.
- From Main System Window, select **System > Reset**
- Always do a system reset after aborting a test plan
- Cals can be aborted, but **only if absolutely necessary**. Cal data will be invalid.

Sometimes it may be necessary to abort a test plan. The reasons can vary, from missing a step specified in a condition statement, cal standards put in the wrong port, etc. All test plans can be aborted. Cal plans should only be aborted if absolutely necessary.

To abort a test plan, press Ctrl + Break. A walk-back error will appear. Select 'abort'. Then, in the 'Programmer Message Window', select **System > Reset**. It is important to ALWAYS reset the system after aborting a test plan to clear any Cal factors from memory. Most calibration plans reset the cal data when they compile, then insert new cal data when they run. If a cal plan is aborted, compiled but not yet ran, the old cal data has probably been lost.

When a group of calibrations/validates are executed successfully, a message will display 'Saving Cal Data' within the executive window upon completion. If the 'Validate' fails, the cal data is not saved.

If either of the above has occurred and the cal data has not been saved, the old cal data can be retrieved by selecting **System > Equip > Startup**. This restarts the system, loading the latest version of any object (including the valid calibration data) from Guru, but does not reapply patches.

VIEWING DATA


VIEWING DATA WITH GRAPHS

Sometimes it is easier to interpret data as a graph rather than a string of numbers. As such, one of the more powerful troubleshooting tools is the test system’s ability to graph data.

Many graph types are possible, but the two that are mostly used are the rectangular graph and the moving strip chart. If a test creates multiple data points in one data save button (for example, if the test does measurements at multiple frequencies), then the rectangular graph should be used. If the test saves one point, then the test can be repeated, the moving strip chart is used to check repeatability. The moving strip chart is particularly useful for ‘rattle’ tests; testing for things that change with mechanical movement, such as loose cables.

To graph data, left click on **Data Save** or **Local Variable**. Select either rectangular for arrayed data or moving strip chart for CW data. The moving strip graph type can handle up to 500 measurements. If local variable, will need to format graph sort by **Index**, X value sort by **Index**

FIGURE 7.5 ACCESSING THE DATA VIEWERS

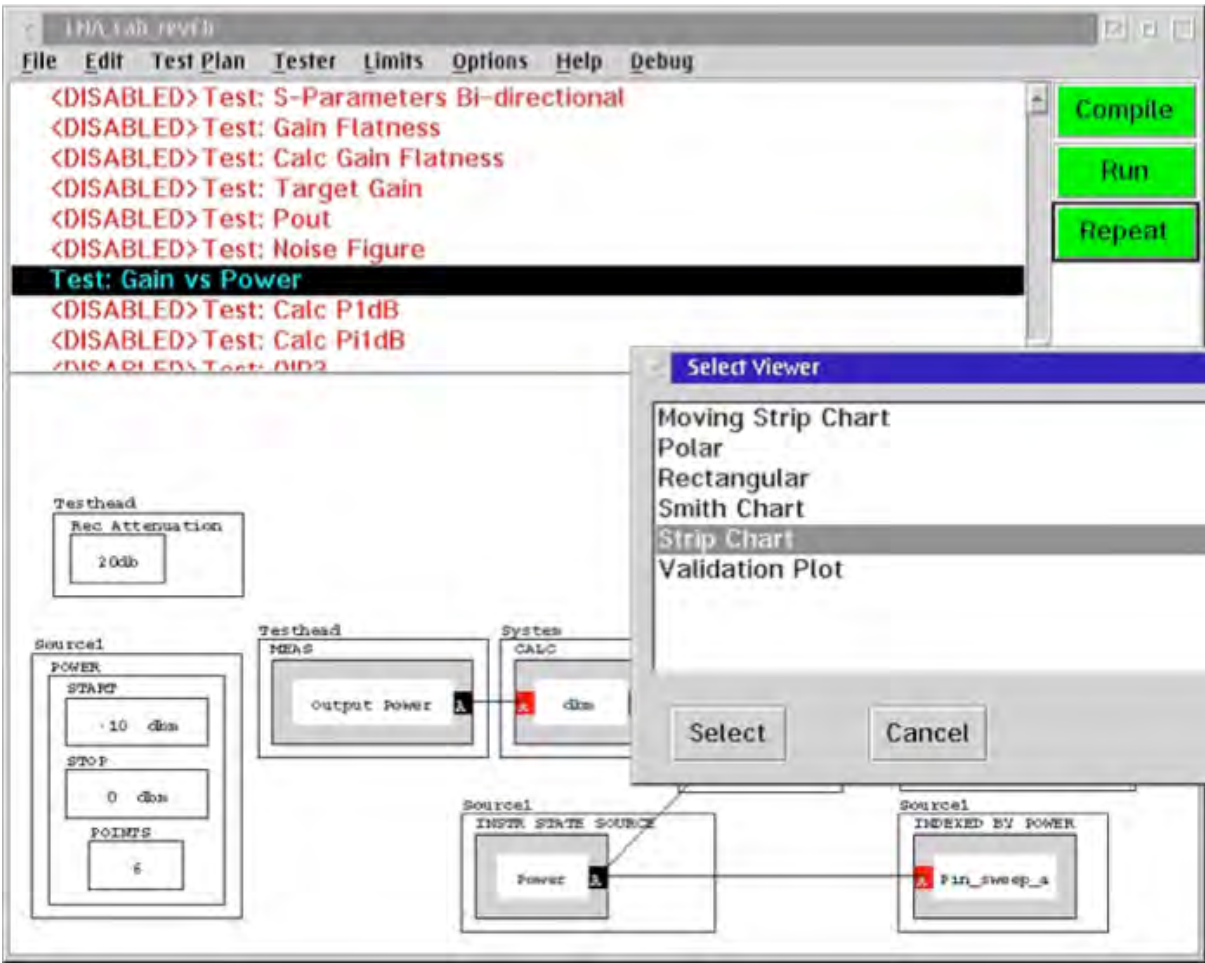

LMB click on any Data Saving button will bring up the option to select from the available viewers for that type of data. The Rectangular and Moving Strip Chart are the most useful for debugging.


NOTE: It is possible to graph Local Variable and Data Save blocks.

If a local variable is plotted, the data will be pre-sorted in a manner that is not useful. To view the data “as taken” on a local variable, it is necessary to tell the graph to sort by **Index**, and to sort the X value by **Index**. [Figure 7.7](#)

A word of caution regarding Y axis **Auto** scale. It is possible to take good data and make it look bad by selecting the **Auto** button. This button will increase the scale until the data fills the screen. Be sure to


A Strip Chart or Moving Strip Chart is very useful in examining single variable data over many runs looking for variance and repeatability issues. [Figure 7.6](#)

FIGURE 7.6 SINGLE DATA POINT VIEWER
FIGURE 7.7 RECTANGULAR X vs Y DATA VIEWER

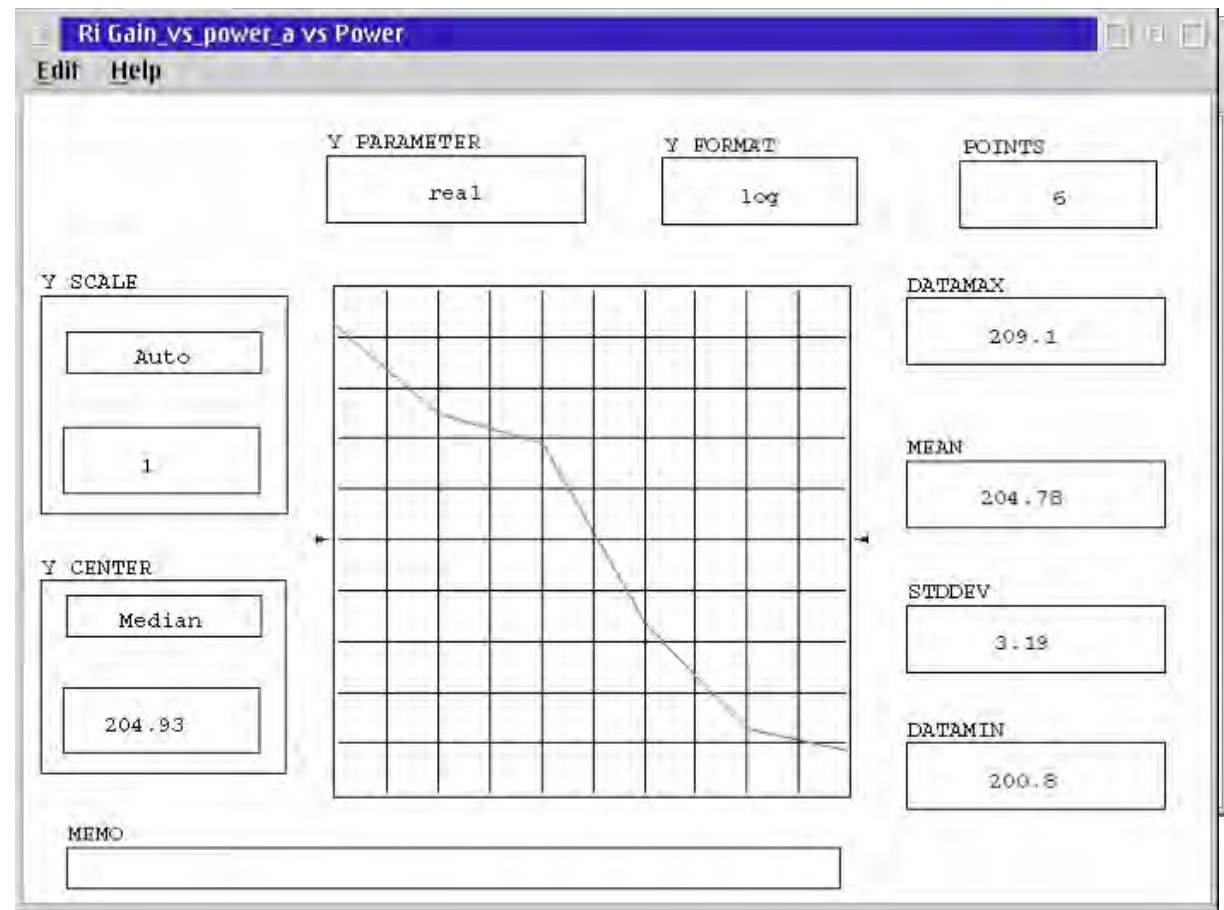


using the Sort by 'Index', X value sort by 'Index'
Single data points can be graphed over many runs to show repeatability.

check the units per division.

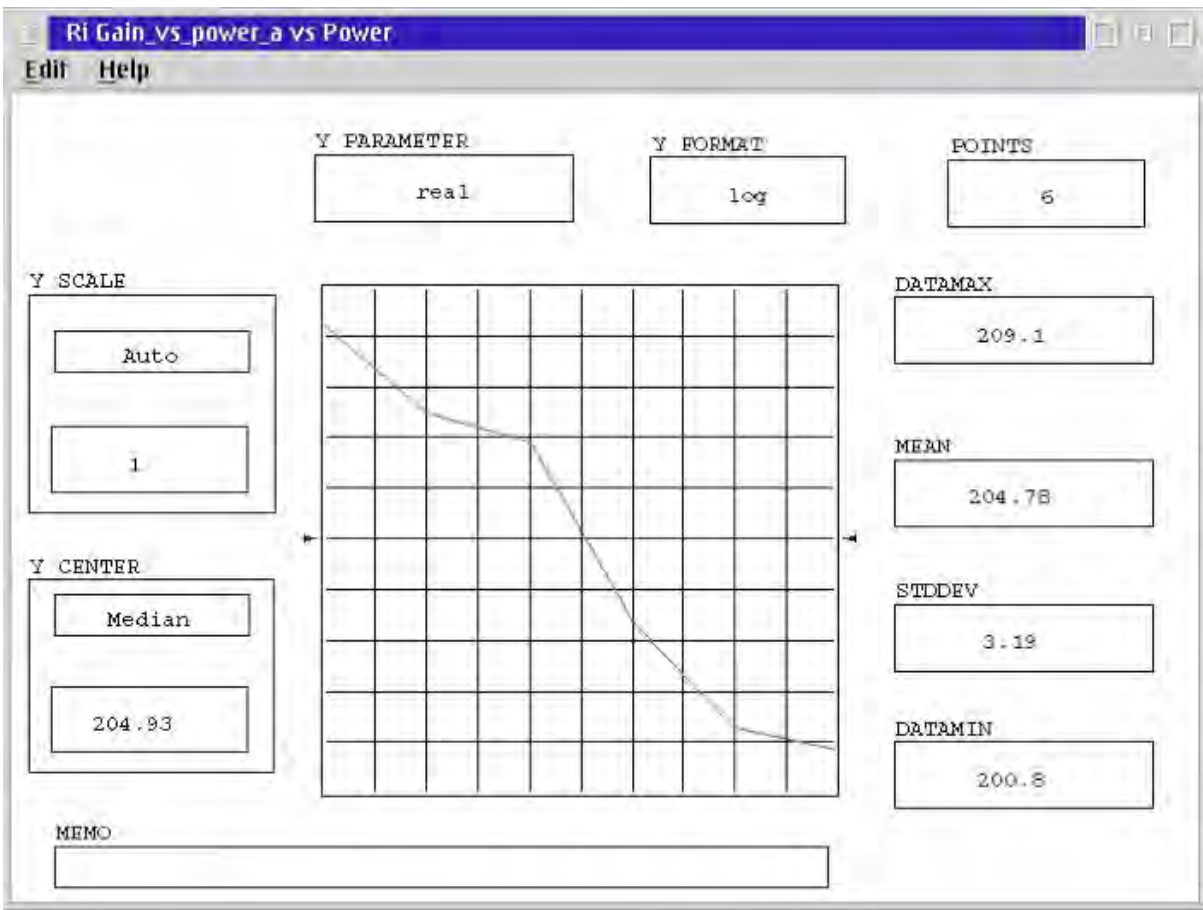

The overpaint function on the graph is enabled by RMB clicking on the graph itself and selecting **Overpaint** [Figure 7.8](#)

FIGURE 7.8 OVERPAINT FEATURE

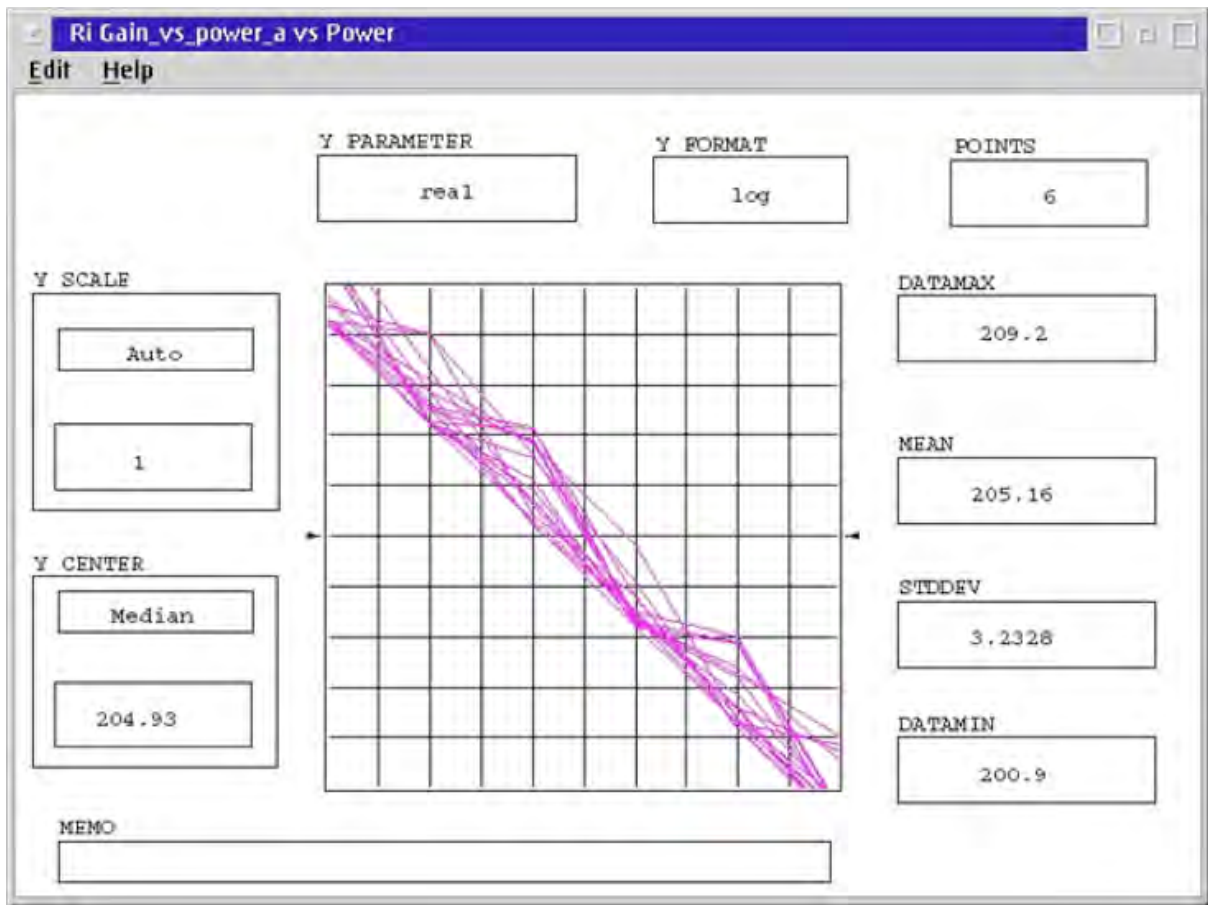

LMB click anywhere on the graph will allow for graph manipulations such as Overpaint.

CALIBRATION DATA


INSPECTING CALIBRATION DATA

Calibration data is stored as path names tied to an Instrument’s unique internal identifier and the TIM’s serial number. A TIM may contain multiple Instruments. Calibrations are saved only after every Validate PASS and may affect multiple instruments and TIMs.

Most problems are diagnosed by inspecting calibration data, setting breakpoints, and directly controlling the system for the suspected instrument.

- Choose **System > Tester**, to open the configuration window. Highlight the instrument to inspect calibration data.
- **Instrument > Calibration > Inspect** to open a Calibration Data viewer as seen in [Figure 7.9](#).
- Select a Calibration path name on the list on the left and RMB click and select **View** to see the Calibration data in the right hand pane. View the data with Graphs as described in the Diagnostics Chapter’s “[Viewing Data](#)” section.


FIGURE 7.9 ACCESSING CAL DATA

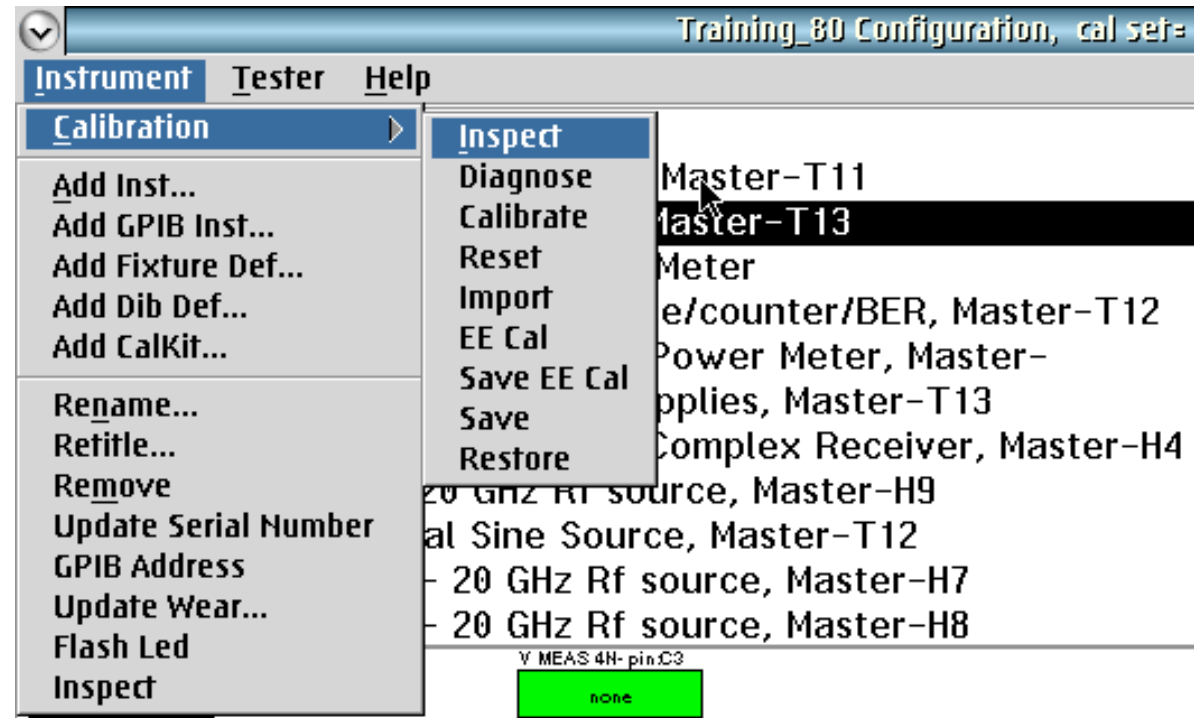

Inspect Calibration data for each instrument using the Variable Inspection Window

CAUTION: Do not edit calibration data. Altered calibration data can cause erroneous signal outputs, measurements, and/or unexpected software errors.

FIGURE 7.10 ACCESSING CAL VARIABLES DATA

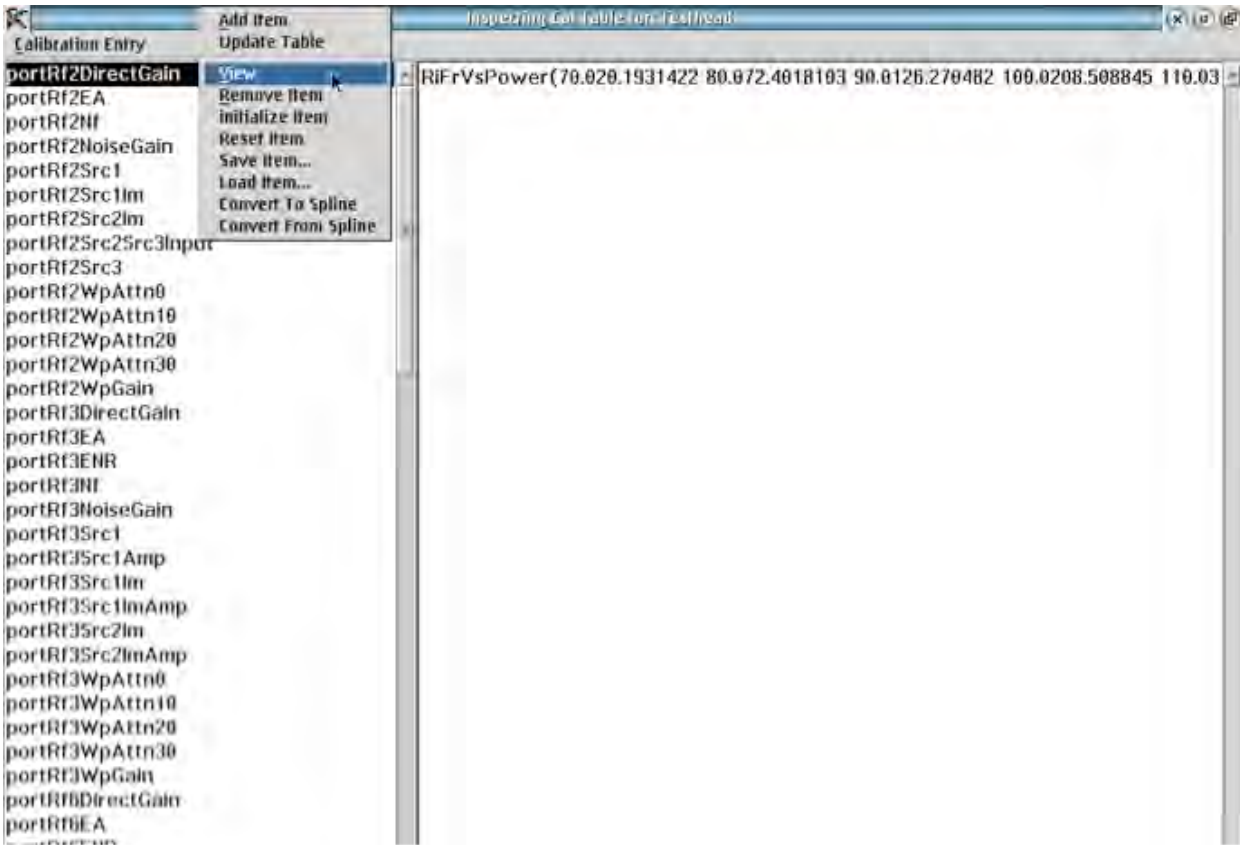

RMB click on any Calibration variable allows for viewing of that data for each instrument using the data viewers.

VIEWING DATA WITH GRAPHS

For more information about Graphs, [see Viewing Data section](#) of the Diagnostics Chapter.

CHECKING FOR VALID CALIBRATION DATA

OVERVIEW

Invalid Calibration Data can cause a fully functioning TIM to report a Fail result when performing Diagnostics. Use the Configuration window to confirm that the Date and Time of the Cal Data is valid. (See [Calibration and Diagnostic Information](#))

If the TIM was recently installed from a factory repair, the Date and Time should be less than a week. If the TIM participates in the RF System, all TIM instruments should have the similar Date and Time that is not earlier than the system's last Calibration date.

CAUTION: Using the Calibration > Restore function can change Cal Data. Always “cancel” the restore when only inspecting the Date and Time.


To inspect the Instrument's Calibration Date and Time:

1. Open the Tester Configuration window by choosing **System > Tester** from the Cassini main system window.
2. Select any Instrument, RMB click and choose **Calibration > Restore**. Confirm by pressing **OK** button, even though we will

NOT be changing the Cal Data. The Date and Time at the bottom of the list represents the currently loaded Cal data.

3. Choose **cancel** to close the window without affecting the Cal Data. If **select** was pressed, a new Cal Data entry will appear with the current date and time. Data is never deleted, only saved as the most recent.

FIGURE 7.11 INSPECTING CAL DATA FOR INSTRUMENT

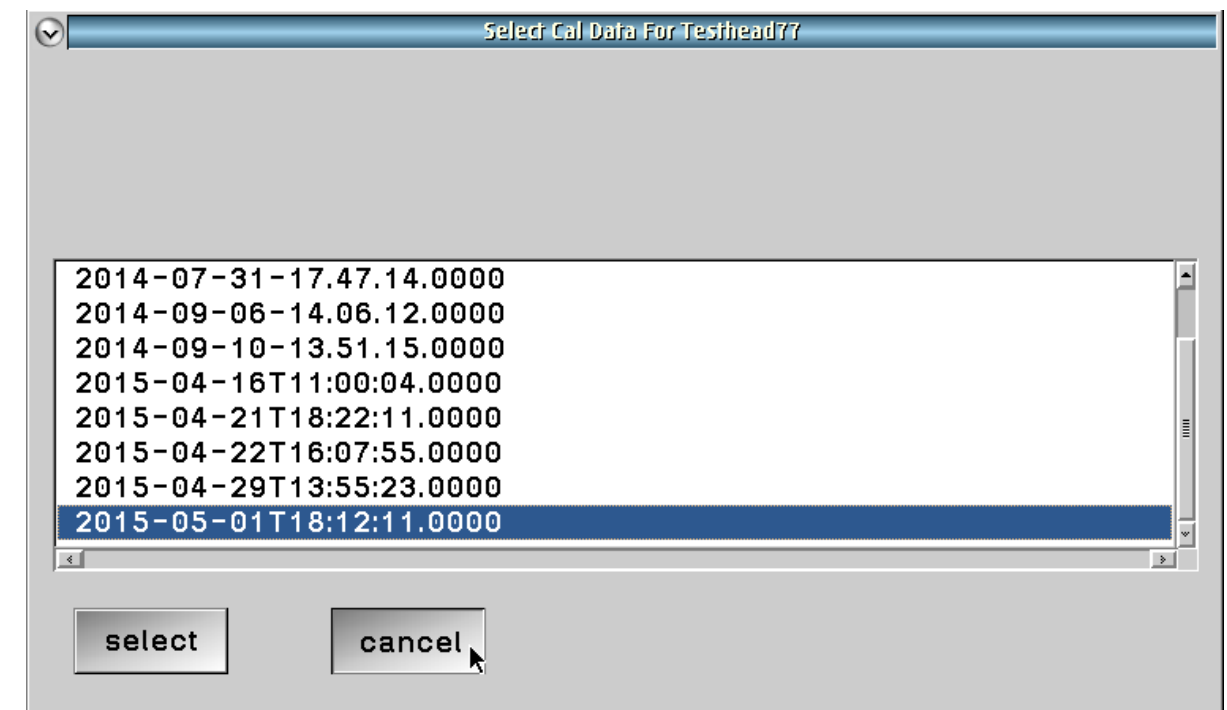

The last Date and Time listed is the current Cal Data that is loaded. If that date is before the last know system Cal Date or before the date it was sent to RI for repair, try loading the Cal Data from RI or follow the Calibration Procedure for the stand alone TIM or all the RF System TIMs.

ERROR AND WARNING MESSAGES

MESSAGES WINDOW

The System Software displays warning and error messages in the Messages Window or Log File that acts as the console for the system software. The message window will appear automatically when messages are first displayed. New messages appear at the bottom and will scroll old messages up.

This window can be opened by selecting **System > Messages** from the Cassini main system window.


Choose the **Cancel** button to close the Log File menu.

Use the **Less** button to scroll down to the most recent message, **More** button to scroll up to the oldest message and **Clear** button to erase all messages.

Choose **Text** button to convert the current log into a text file that can be saved or edited.

NOTE: Important error and warning messages appear in red.

FIGURE 7.12 LOG FILE WINDOW

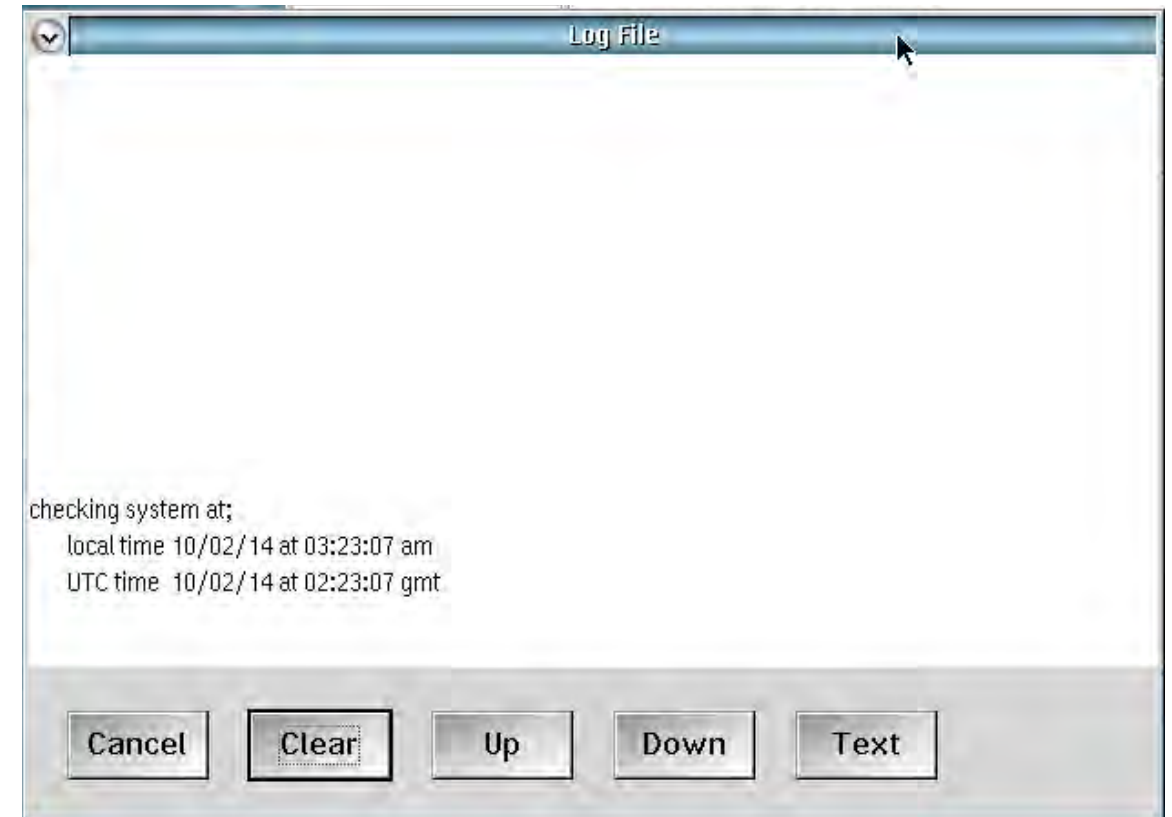

This window displays warning and error messages as well as standard console messages.

SOFTWARE ERRORS AND RECOVERY

RI SOFTWARE EXECUTION ERROR HALT

1. When an Error Dialog box appears select "Save". A vRtError.log file is automatically created and is located in the D:\RiApps\GuruApps\GF10RC2A directory. This will assist RI Support in recreating the conditions of the issue.
2. If developing Test Plans using the Test Plan editor, select **File > Clear Compile**. This will clear out the memory allocated to the Test Plan and reset the pointers so the Test Plan will be ready to compile again. If the error persists check your Test Panels for errors and then move to step 3.
3. In the Cassini application window, select **System > Reset**. This will reset all the system variables, including reloading calibration data, and terminates multithreaded processes. If a hardware error exists, it must first be cleared and the reset process repeated.
4. Attempt your task again, if the issue persists, contact RI Support.

SOFTWARE RECOVERY - FIRST ATTEMPT

If a hardware issue cannot be resolved by closing the offending program, it may be necessary to interrupt the operating system to remedy the issue. Follow the instructions below for terminating unresponsive programs.

1. Press and hold Ctrl+Break. This will halt any running RI Application program and display an error dialog box.
2. Select "Save" to close the Failure dialog box.
3. From the Cassini main system window, select **System > Reset**. This will reset all the system variables and terminates multithreaded processes. If a hardware error exists, it must first be cleared and the reset process repeated starting at step 1.
4. If the issue persists, Contact Roos Instruments support (support@roos.com) including the vRtError.log file located in the Guru application directory as well as the procedure to recreate the issue. This will assist RI in recreating the conditions of the issue.
5. Select the Cassini application window then select **System > Quit**. A dialog box will appear that asks, "Are you sure?", select 'YES'.
6. Restart the Cassini application and follow the standard startup procedure.

SOFTWARE RECOVERY - SECOND ATTEMPT

In the event that a hardware or RI system software issue is not resolved, it may become necessary to interrupt the frozen RI system software and have the eCS operating system terminate its operation.

1. Press and hold Ctrl + ESC. This will display a Window List (system process) dialog box will be displayed.
2. Right click on the Cassini application, then select Close from the pop-up menu. Click 'Yes' to terminate the RI System software.
3. Once the system CPU monitor goes to zero, restart the RI System Software.

SOFTWARE RECOVERY - FINAL OPTION

If a hard operation system crash occurs, it becomes necessary to interrupt the frozen User Interface and have the BIOS terminate the operating system.

1. Press and hold Ctrl+Alt+Delete keys. A blue recovery screen will appear.
2. Use "Top" (Press "T") to identify and kill any processes that are consuming CPU resources. Press "K" and enter a process number. After killing any processes, press ESC twice to return to the User Interface.
3. If problem persists, press Ctrl + Alt + Delete Key and try to Reset WPS (Press "W"), then press ESC to return to the User Interface.

4. If the UI is still not responding, Press CTRL + ALT + DELETE Key once to get the blue recovery screen and then CTRL+ALT+DEL keys again to reboot.
5. Once the system controller restarts, start the RI System Software again.

NOTE: The RI System saves each part's test data after all of that part's tests have been performed. Lot data is saved to Guru periodically (every 100 parts), so that most test data for a lot can often be recovered using the STDF Recovery agent.

DOCUMENTING SOFTWARE ISSUES

If a user reports a software anomaly, please help us make the product better by e-mailing support@roos.com with the following information:

- ShortCut used.
- Description of the issue found.
- Procedure to duplicate the issue.
- Text copies of any error messages and the error save file, vRtError.log from the D:\RiApps\GuruApps\GF10RC2A directory.

NOTE: Error logs are saved in the program's directory organized by Guru ID, use the Guru App table on the next page to identify common product IDs.

SYSTEM CONTROLLER (EPC) ISSUES

SYSTEM CONTROLLER (EPC) ISSUES

- Startup Failure? Access Recovery Menu (ALT + F1 to enter recovery menu)
- Press "1" to restore desktop (restore factory UI, all Guru Apps settings preserved)
- Press "F2" to enter command prompt
- TIM swap for hardware failure (including HDD)

WARNING: Always contact Roos Instruments support prior to attempting any of the following troubleshooting steps.

Roos Instruments support may instruct the user to enter the command line and be given specific instructions on what to change. If the system controller (EPC) fails to load, press ALT + F1, then press "1" to restart from the factory configured Archive.

There are two function key combinations that can be activated while the white blob appears on the screen followed by the word OS/2. These are Alt+F1 which will interrupt the boot process and take the user to a recovery menu, and Alt+F2 which will continue the boot while displaying the name of each device driver as it is loaded to help identify the driver causing problems.

The recovery menu that comes up when the user presses Alt+F1 contains options to help star the system, although in some cases the system may still not be recoverable. Options contained in this menu include:

- **ESC** to continue with the normal boot process
- **1, 2, or 3** to restart from one of the last three archives that the user created.

NOTE: The restored archive does not affect any Guru settings.

- **F2** to boot to a command line without starting the graphical interface. From here "MAKEINI" can be ran to rebuild the desktop or use "TEDIT" (a small command line editor) to fix corrupted configuration files.
- **F3** to reset the video mode back to VGA, bypassing the installed graphics driver. A useful option if the video driver gets corrupted or is set up incorrectly.

- **F4** to restart the system with a maintenance desktop. From here selective reinstall options can be used to rebuild the corrupted part of the system.
- **F5** enables FULL hardware detection.
- **F6** disables hardware detection. This is useful if there are problems with plug and play adapters.
- **0** recovers from the original archive of the system setup that was taken when the system was first installed.

GURU SERVER (VM OR LINUX) ISSUES

- Reload Guru: From "Guru bar" select **System > Shutdown**
- Guru Server ("startApp.sh" and "es" processes)
- Kill process: "**ps -A > grep es**" to see PID, "**kill -p <PID>**" for each PID

WARNING: Always contact Roos Instruments support prior to attempting any of the following troubleshooting steps.

The Guru Server runs on a Virtual Machine or native Linux server. A dedicated user "riguru" should be created on the host OS. The program is installed in the "\$HOME/RiApps" directory or "~/RiApps/" folder and data stored in "~/RiGuru/" folder.

The process is launched by a "startApp.sh" that should be added to the GUI's desktop (KDE or Gnome) standard auto-start location.

NOTE: A GUI is required because Guru Server cannot launch without a GUI.

When Guru starts, the program files are always copied fresh from the "guruServer.zip" container and then launched. This step assures consistency and prevents any random HDD read or write errors related to aging from interfering with the program launch. If the script fails to properly unpack the program from the guruServer.zip file, the script launches the version that remains on the disk.

To prevent Guru from restarting, kill the "startApp.sh" process. Normally the Guru Server application automatically restarts when the user selects **System > Shutdown**. This prevents the service from being inadvertently shutdown.

If the Guru server is unresponsive or needs to be stopped for any reason, the user can open a command window as root and issue "**ps -A > grep es**" command to see the process ID (PID) of the Guru server. Force the process to stop with "**kill -p <PID>**" for each process identified. If the problem persists after a restart, copy "guruServer.zip" from a known working backup. If the problem continues, try restarting the host OS. Some OS upgrades may remove or relocate critical system files and may require a symlink ("ln -s /path/to/file") to be created to maintain backward compatibility.

If a walkback occurs, select "SAVE" from the dialog box and send the error log (~\RiApps\vterror.log) to support@roos.com.

GURU CLIENT (SYSTEM CONTROLLER) ISSUES

- Reload Guru: From "Guru bar" select **System > Shutdown**
- If Guru Client hangs: Ctrl + ESC, select "Guru" window, hit DEL
- Still not responding? CTRL + ALT + DEL, TOP, "guruServer" process

WARNING: Always contact Roos Instruments support prior to attempting any of the following troubleshooting steps.

The Guru client runs on the RI System Controller powered by eComStation (eCS). No user accounts are required on the host OS. The program is installed on "D:\RiApps" and the data directory is "D:\RiGuru".

The process is launched by the **Local System > Startup** folder as "RI Guru" (or similar).

When Guru starts, the program files are always copied fresh from the "guruServer.zip" container and then launched. This step assures consistency and prevents any random HDD read or write errors related to aging from interfering with the program launch. If guruServer.zip is corrupted, the program will eventually attempt to launch the previous unpacked version.


To prevent Guru from restarting, kill the "Guru Server Startup" process. The Guru Server application automatically restarts when "Shutdown", this is how Guru is automatically upgraded and prevents the service from being inadvertently shutdown. The Guru Client application will automatically restart when Shutdown, this is to prevent users from accidentally closing Guru.

RECOVER FILES WITH GURU BROWSER

The Guru Browser application allows the user to browse, recover, import, and export files from the Guru database as Guru objects.

After logging on to Guru, select **Apps > Guru Browser**.

FIGURE 7.13 SELECTING GURU BROWSER

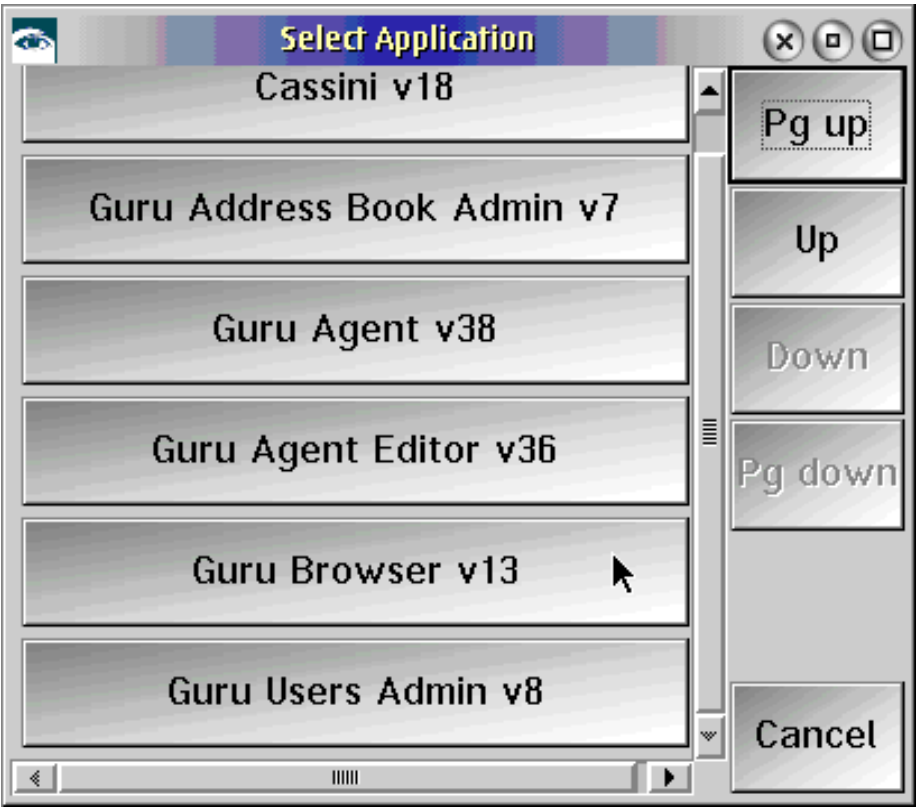


BROWSING GURU OBJECTS

Upon opening the Guru Browser, the user should specify a search parameter or 'Key 1' to identify which Guru object attribute the user would like to browse, by default this is set to ri.sys.ObjClass.

For example, if the user wants to browse the RiPatch objects, choose the RiPatch from the list and all available RI Patches are displayed to the right side of the window.

FIGURE 7.14 GURU BROWSER

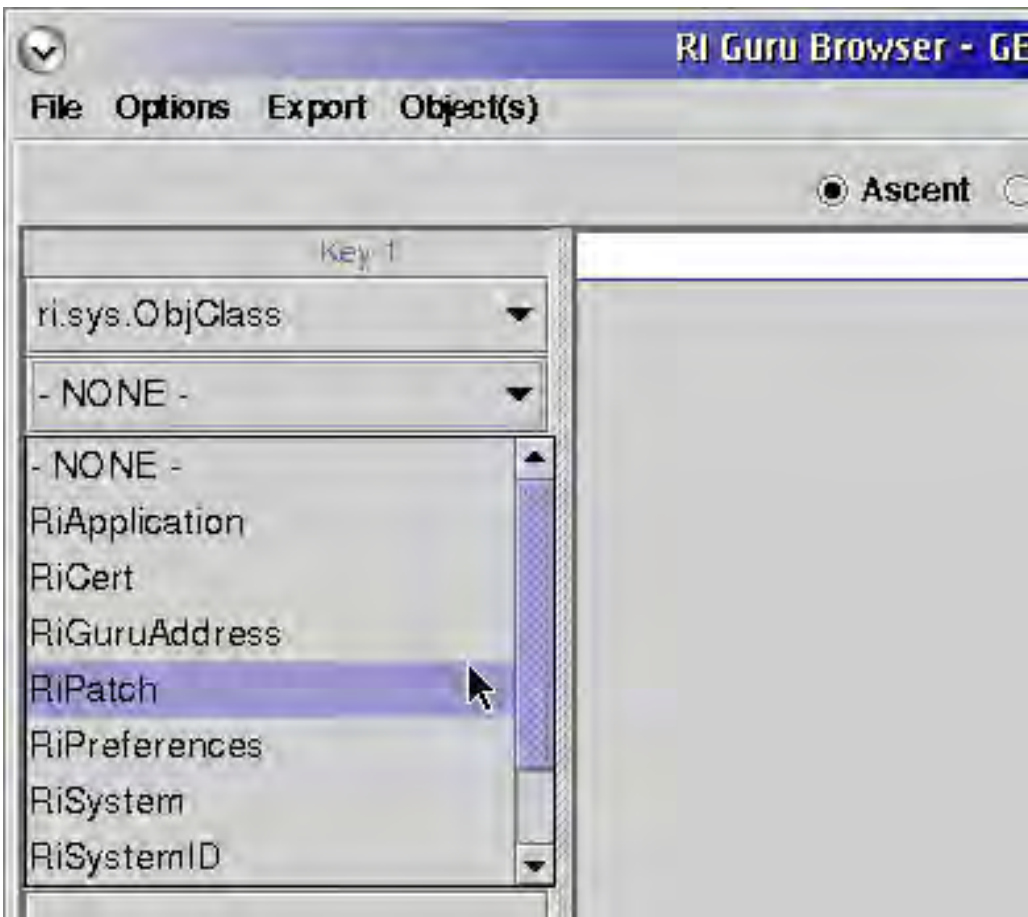

By default the Guru Browser is set to ri.sys.ObjClass


To specify what information is displayed select **Options > Config Table View**. The default window displays the ri.sys.Name and ri.sys.CreationDate information. The information can be sorted by selecting **Ascent** or **Descent**. Select **Refresh Table** below the object list to refresh the table and apply the sorting selection. The user can also choose to display all of the available objects by choosing **All**, or only display the last object by choosing **Last**, or specify how many objects are displayed by choosing **SelectNumber** and entering the maximum number of objects to display.

FIGURE 7.15 BROWSING RIPATCH GURU OBJECTS



The right side of the window shows the Guru Objects

FIGURE 7.16 CONFIG TABLE VIEW

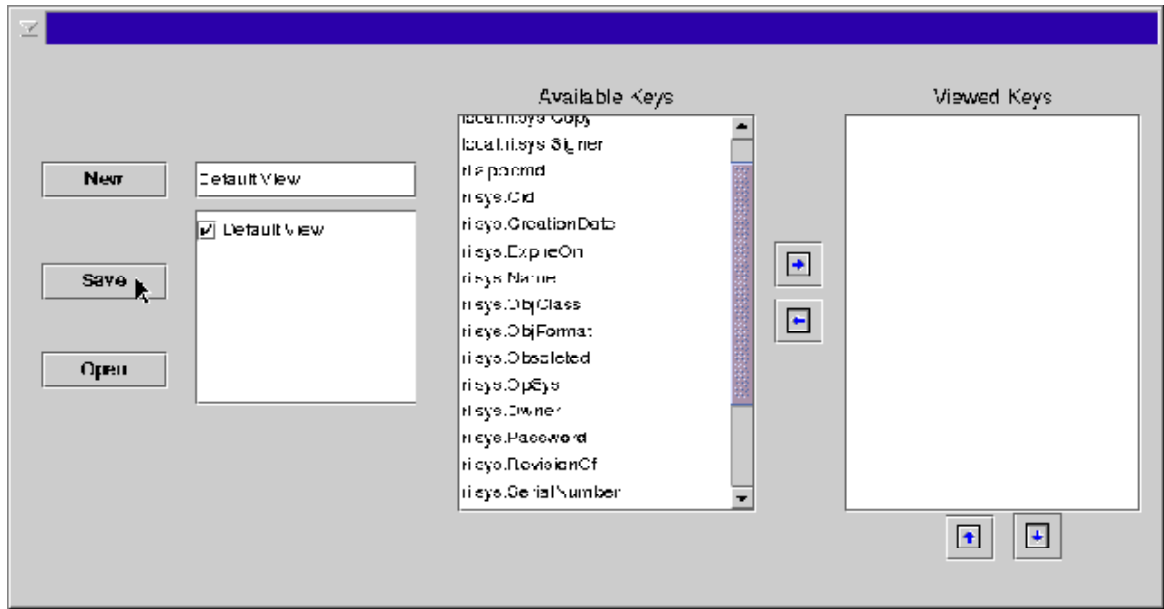

The Available Keys column displays what information is available. Selecting an Available Key and clicking the arrow pointing right will add the key to the Viewed Keys. To remove select the key in the Viewed Keys column and click the arrow pointing left. To reorder the keys in the Viewed Keys column click the up and down arrows. When done, select **Save**.

EXPORTING A GURU OBJECT

To export a Guru object using the Guru Browser application, select the object to be exported. Right click the object, and select **Export > send to Export List**. At the bottom of the RI Guru Browser window, select the **Guru Export List** tab. It is possible to export more than one Guru objects at a time. When finished adding all of the Guru objects to be exported, select **Export**. Enter any comment the user would like to add to the export objects.

Select a directory the user wants to save the exported file at by selecting the 'Look in:' field; and enter a filename in the 'File name:' field. Typically, the user would leave the file type as default (.gzp). When done making your selections, click **Export**. This will create a Guru Zip file that includes all the objects that were selected and can now be saved, stored or transported to another Guru. This is very useful for sending files or objects to RI for support questions etc.


IMPORTING A GURU OBJECT

To import a Guru zip file that includes Guru objects, use the Guru Browser application. Select the **Guru Import List** tab of the Guru Browser window. Click on the **Get Import File(s)** button to select which Guru objects to import to the local Guru. Select the directory and filename for the imported file, then click on the Import button. Press the "Import" button in the Guru Browser to add the selected files to the local Guru.

RECOVER A GURU OBJECT

To recover a Guru object using the Guru Browser application, select the object the user wants to recover and make it the last revision. The following window displays an example of recovering RiTest Plan object with title of test plan01. First, 'key1' is set to ri.sys.ObjClass and select RiTest Plan as the object class. Then, select test plan01 from the list. Once a Guru object has been selected, click the Revision History page the bottom of the window.

FIGURE 7.17 RECOVER A GURU OBJECT

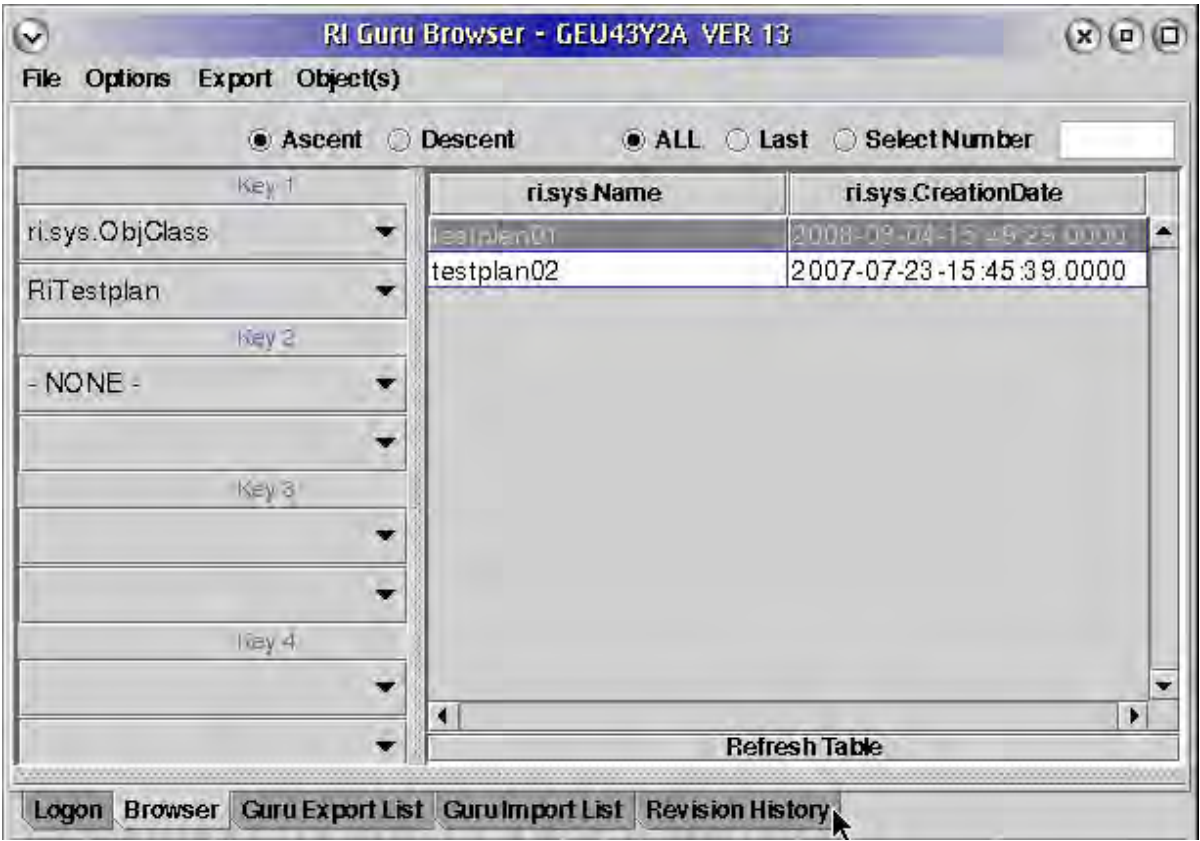

Select the desired object and select the **Revision History** tab

The window now displays the list of the available versions of the selected Guru object. Select the one to recover from, right click, and select **Make Last RevisionOf**. This step makes the selected object the latest version in Guru. **DO NOT** use this to revise application objects (i.e. use a previous version of the Device Connection Editor) without specific instructions from RI Support.

FIGURE 7.18 RECOVER A GURU OBJECT



Right click the desired version and select **Make Las RevisionOf** to make that version the latest in Guru.

GURU NETWORK ISSUES

The Guru Address Book Admin application allows the user to create and update Guru Server network addresses which are used to connect Guru Clients (the Cassini System Controller or Virtual Workstation) to a Guru server. After logging on to Guru, select **Apps > Guru Address Book Admin**. The user must belong to a group with "Admin" permission to see the Address Book application.

CREATING A NEW GURU ADDRESS

Select **New Remote Address**. Enter the **Name** for this Guru address, for example, 'Update01'. Enter the host name or static IP Address of the Guru which the user wants to connect to in the **Address** field. The **Port** field should be specified as 50000. The server should be located on your local network. The **Address Type** field can be specified as "backup", "update", or "general". The "backup" type stores all of the local objects for later retrieval. The "update" type is reserved for servers that are to be checked regularly for updates. Standard configurations use the same server for both "update" and "backup" types to function properly. The "datalog" type is for transferring data logs. The "clone" type is used exclusively for

Guru Servers. The "general" and "admin" types are used for temporary connections with some Guru Apps.

When done specifying all the fields, click the **Save** button. When done adding the Guru address(es), the Guru process will need to shutdown and restarted. To shutdown the RI Guru process, select **System > Shutdown** to shutdown the RI Guru process. The RI Guru will restart automatically.

UPDATE AN EXISTING GURU ADDRESS

Select the Guru address which the user wants to update. Select **Edit Selected**. Update all the necessary fields, then click **Save**. When finished adding the Guru address(es), the Guru process will need to be shutdown and restarted.

REMOVING AN EXISTING GURU ADDRESS

Select the Guru address which the user wants to remove, then click **Delete Selected**. Click **OK** if the user really wants to remove the selected Guru address(es). The Cancel button will abort the deletion process. When finished removing the unwanted Guru address(es), the Guru process will need to shutdown the RI Guru process and restart it.

20 GHz SOURCE SELF TEST

OVERVIEW

Subtle problems with the RI7725 20 GHz Source TIMs can be identified with Self Test.

Execute Self Test

The test system’s primary instrument diagnostics can be accessed from the Configuration Window by selecting **Tester > Diagnose** from the menu options as shown in [Figure -.-](#). This launches the Diagnostic Executive (Exec.) and loads the factory-installed diagnostic test plans for the test system (see [Figure 5.14](#)). The diagnostic tests are listed in order of ascending instrument number and grouped by TIM.

NOTE: Self Test is not a prerequisite for Calibration.


Choose **Run > Self Test** menu selection from the Diagnostic Exec window. The Self Test does not need to be run unless the 20 GHz Sources are suspected.

Viewing Self Test Results

The results of the Self Test appears in the Message window (see [Figure 1.67](#)) instead of the Results pane. Although all instruments may include an embedded “self test”, only the RI7725 model sources have nontrivial results.

If the 10 MHz clock and internal phase lock components are functioning properly, the Message window will display “<Tester Name> self test Passed” at the end of a long list of instrument names passing their self tests. If the Message window displays “<Tester

FIGURE 7.19 SELF TEST FAILED RESULT

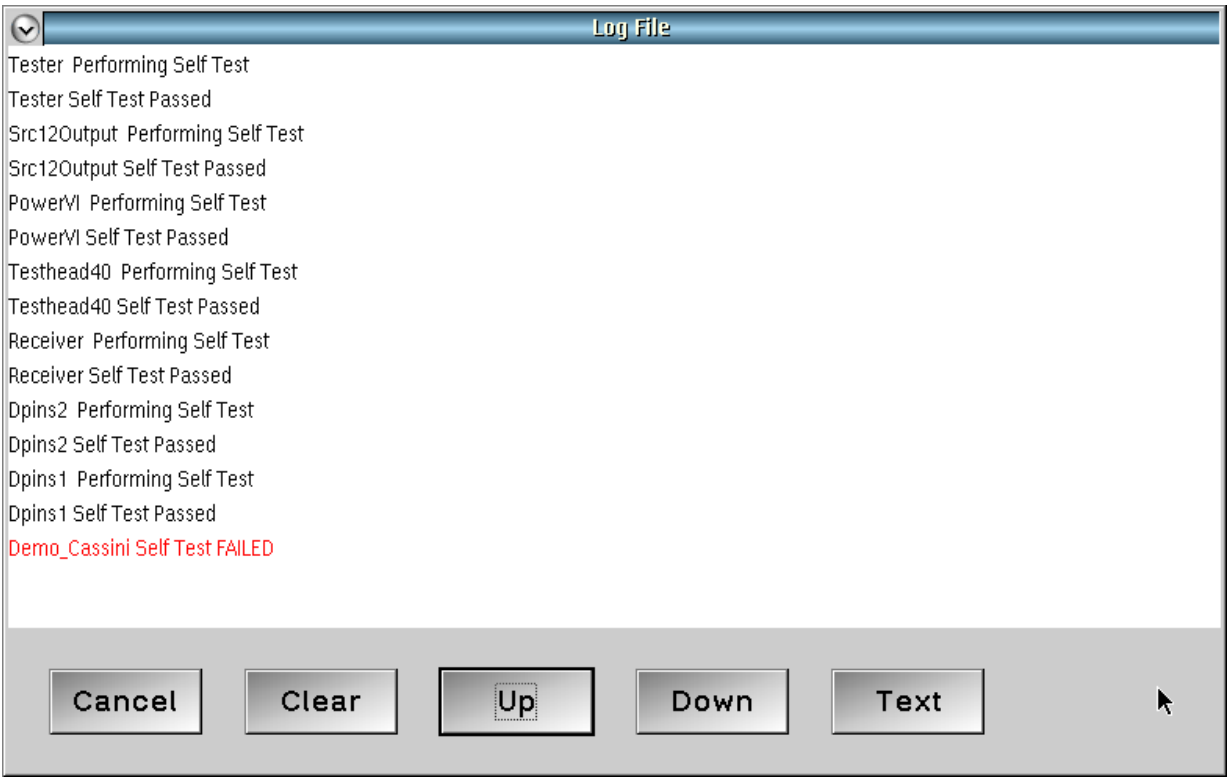


If any failure was detected, the last line displays a message with the system name followed by “Self Test FAILED” in RED.

Name> self test FAILED!” in red, then press **Text** button to see the instrument name that has an issue.

Use **File > Save** to create a file to send to RI Support to assist in resolving the issue.

FIGURE 7.20 20 GHz SOURCE SELF TEST FAILURE DETAILS

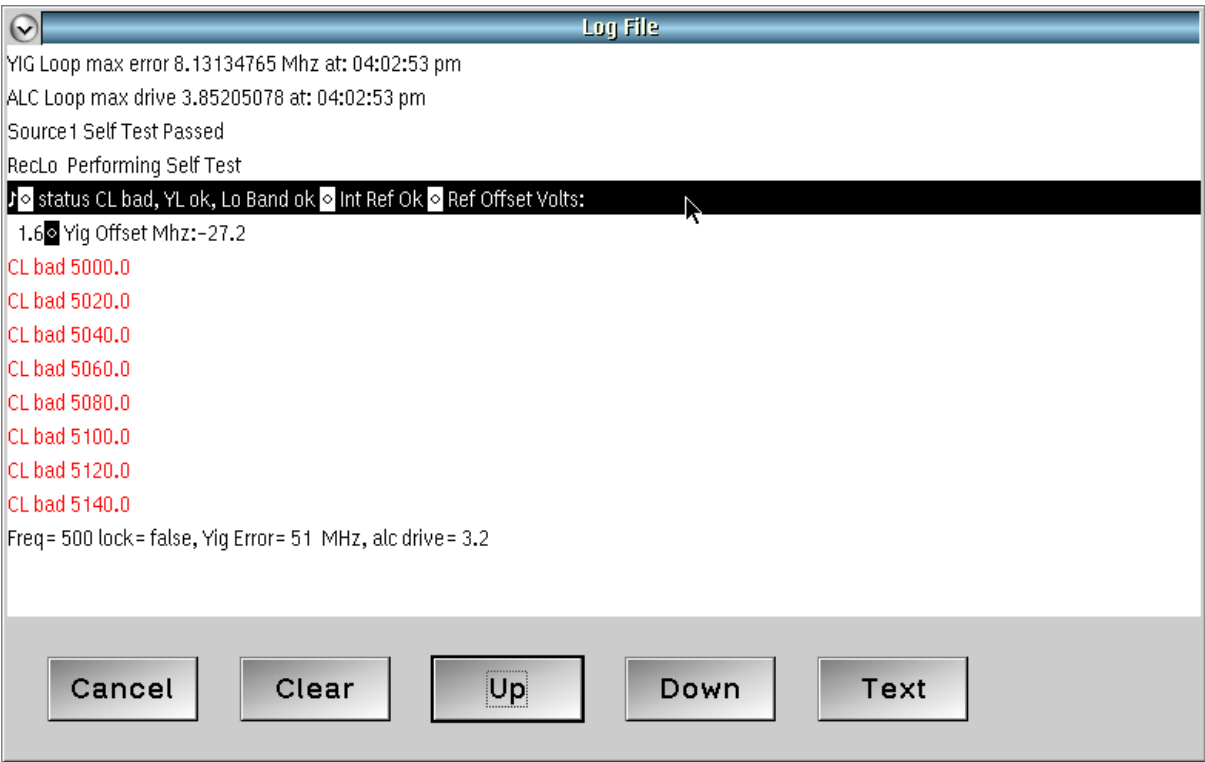

Choose the **UP** button to see the details of the Self Test failure.

INFRASTRUCTURE POWER DISTRIBUTION

The Cassini 16 Infrastructure provides three access panels to service various parts of the Cassini infrastructure.

Contact Roos Instruments support at support@roos.com for specific instructions for diagnosing or replacing damaged or suspected malfunction of infrastructure components. For servicing the Small Cassini or Large Cassini infrastructures, contact Roos Instruments support at support@roos.com for instructions for diagnosing or replacing damaged or suspected malfunction of infrastructure components.

BEFORE SERVICING ANY PART OF THE INFRASTRUCTURE:

- Exercise proper ESD procedures with the Cassini test system, fixtures, TIMs, and auxiliary equipment.
- Undock the test system from handlers or probers and disconnect any Handler/Prober or GPIB pods.
- Remove any fixtures or diagnostic/calibration plates from the test head.

- Lock the test head manipulator arm in the 'Maintenance Position.'

BEFORE SERVICING THE INFRASTRUCTURE CHASSIS:

- Exercise proper ESD procedures with the Cassini test system, fixtures, TIMs, and auxiliary equipment.
- Remove any TIMs, fixture or diagnostic/calibration plate, and auxiliary equipment from the test head.
- Lock the test head manipulator arm in the 'Maintenance Position.'
- Rotate and lock the test head into the upright position.
- Follow the shutdown procedures outlined in the [Operator & Safety Information](#) section.
- Verify that the 'Main Breaker' is switched to the OFF position before performing any infrastructure maintenance.

WARNING: Failure to power down the test system and set all circuit breakers to their OFF position before servicing can result in damage to components and possible injury to service personnel.

POWER SUPPLY ACCESS PANEL


The power supply access panel, shown in [Figure 7.21](#), provides access to the AC/DC switching power supply modules. To access the supplies, remove the two 4-40 retaining screws of the panel with a #1 Philips screwdriver.

Every Cassini 16 system is configured with two power modules to provide a primary 48V supply and secondary 48V supply as a backup as shown in [Figure 7.22](#). The modules have two green status indicator lights. The upper light(closest to the mounting screw) indicates that the module is connected to AC power. The second light indicates that module is functional and producing 48V supply. These supply modules can be independently replaced as needed and should be checked in accordance with the recommended preventative maintenance schedule.

To replace a module:


1. Power down the test system in accordance with the [Shutdown procedures](#).
2. Unscrew the module's mounting screw with a #2 Phillips head screwdriver.
3. Insert the new module ([Figure 7.23](#)) in the corresponding location and tighten the mounting screw.
4. Replace the access panel and secure it with the two 4-40 screws.

FIGURE 7.21 REMOVING THE POWER SUPPLY ACCESS PANEL

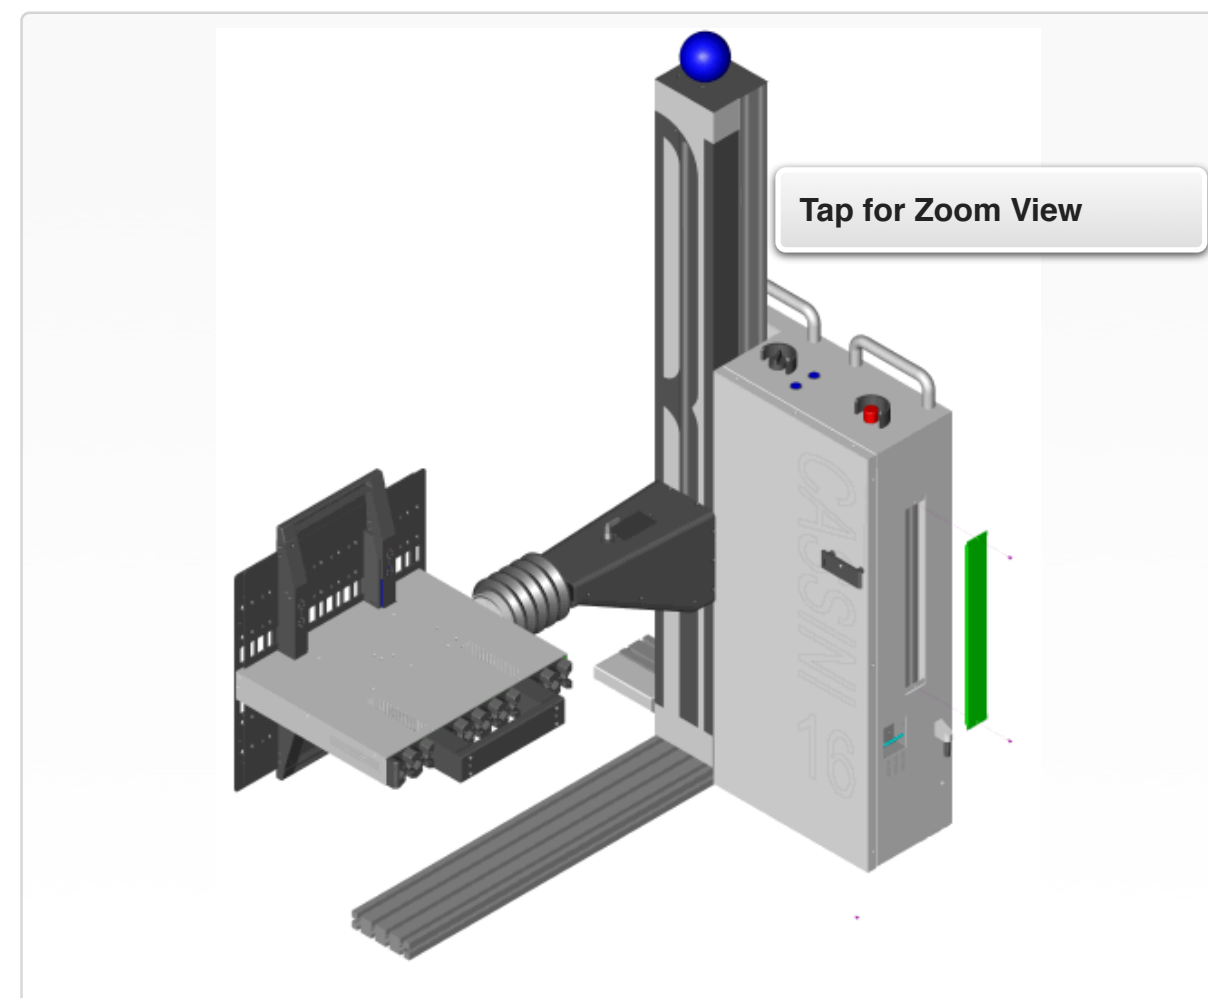

Screw locations for removing the power supply access panel are shown above. Use a #1 Philips screwdriver to remove the screws.

FIGURE 7.22 SWITCHING POWER SUPPLY MODULES LOCATION

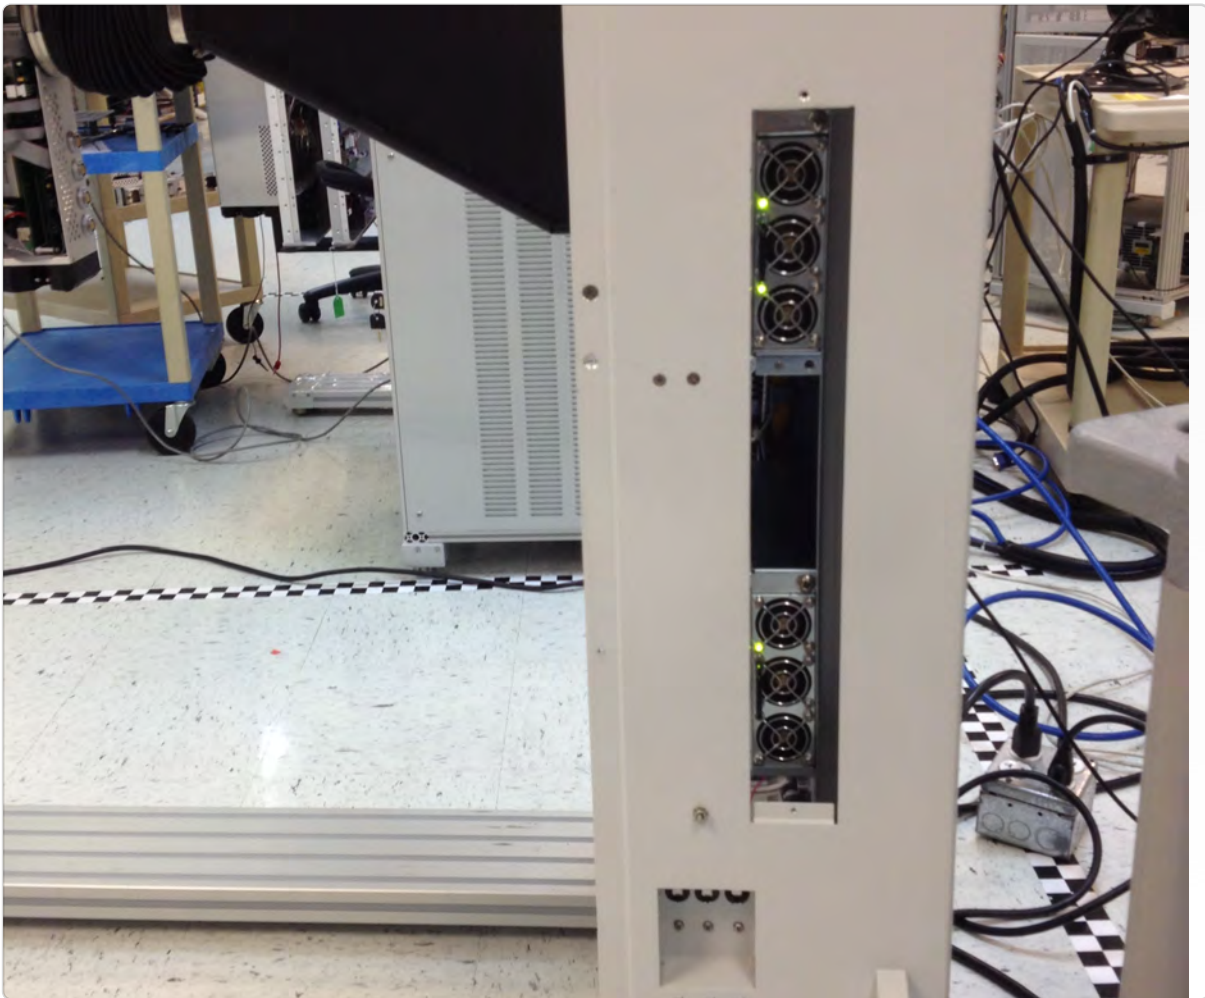

The above pictures shows the location of the redundant switching power supply modules of the Cassini 16 test system. The two green LED lights on the top modules indicates normal operation. The lower module with only one green LED light active indicates a failed or malfunctioning module.

FIGURE 7.23 SWITCHING POWER SUPPLY MODULE



MAINFRAME ACCESS PANEL


The mainframe access panel, shown in [Figure 7.24](#), provides access to the AC/DC switching power supply unit, RIFL bus, pneumatic fixture docking system's air ducts, and control boards for the manipulator's elevator lift, EMO switch, and infrastructure.

WARNING: Never tamper with or attempt to service components in the infrastructure without support or assistance from Roos Instruments engineers or technicians.

To access the main frame components:


1. Unscrew the six 4-40 Philips head screws, two Allen head screws, and Auxiliary Rack mount plate from the front of the panel.
2. Slide the panel away from the chassis by pulling outward as shown in [Figure 7.24](#).

FIGURE 7.24 REMOVING THE MAINFRAME ACCESS PANEL

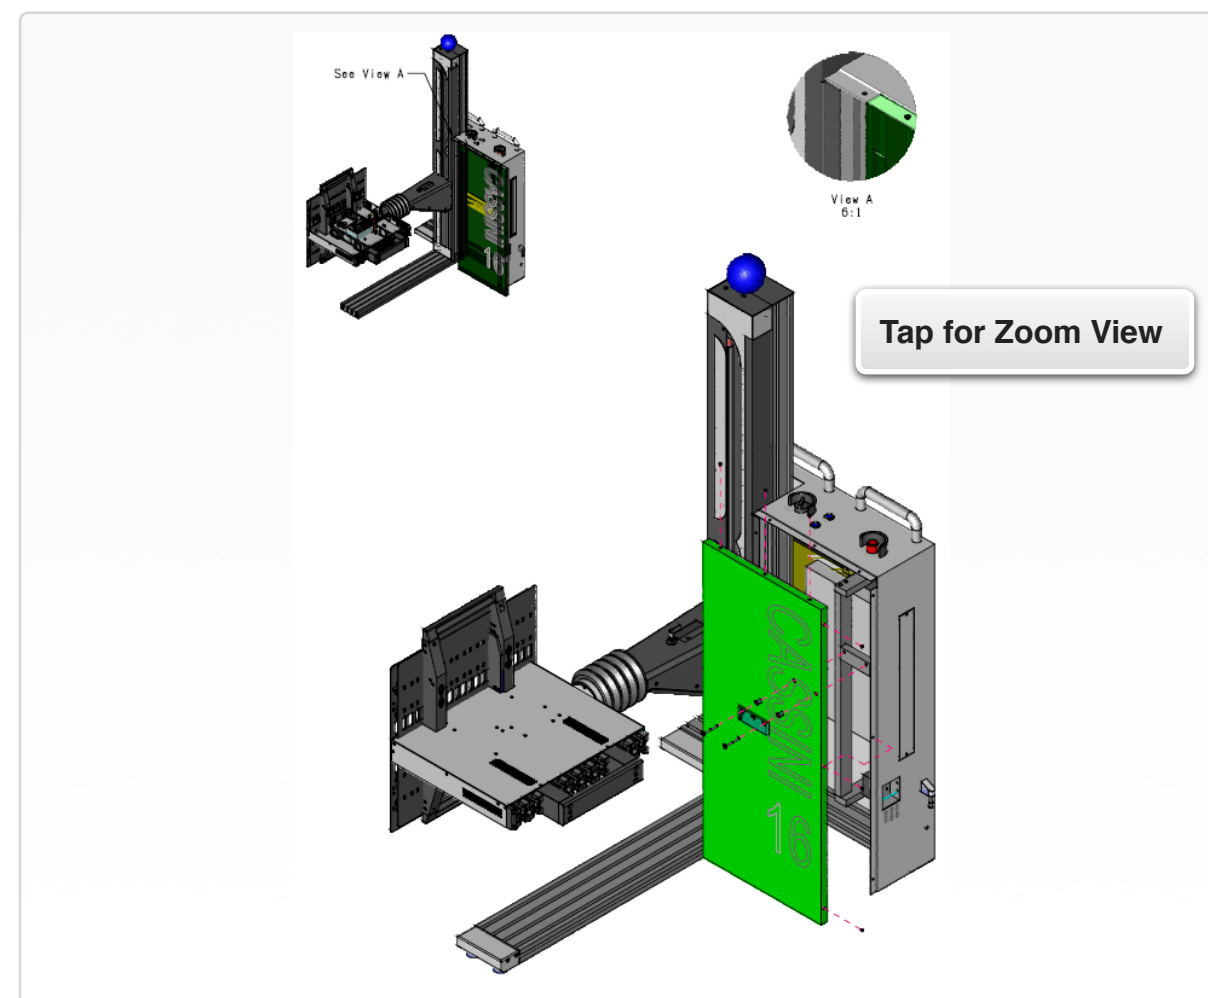

Screw locations for removing the mainframe access panel are shown above. Use a #1 screwdriver for removing and inserting the panel screws. Use a 5/32 in Allen wrench to remove and reinsert the auxiliary rack mount plate screws.

FIGURE 7.25 INFRASTRUCTURE CHASSIS INTERNAL VIEW

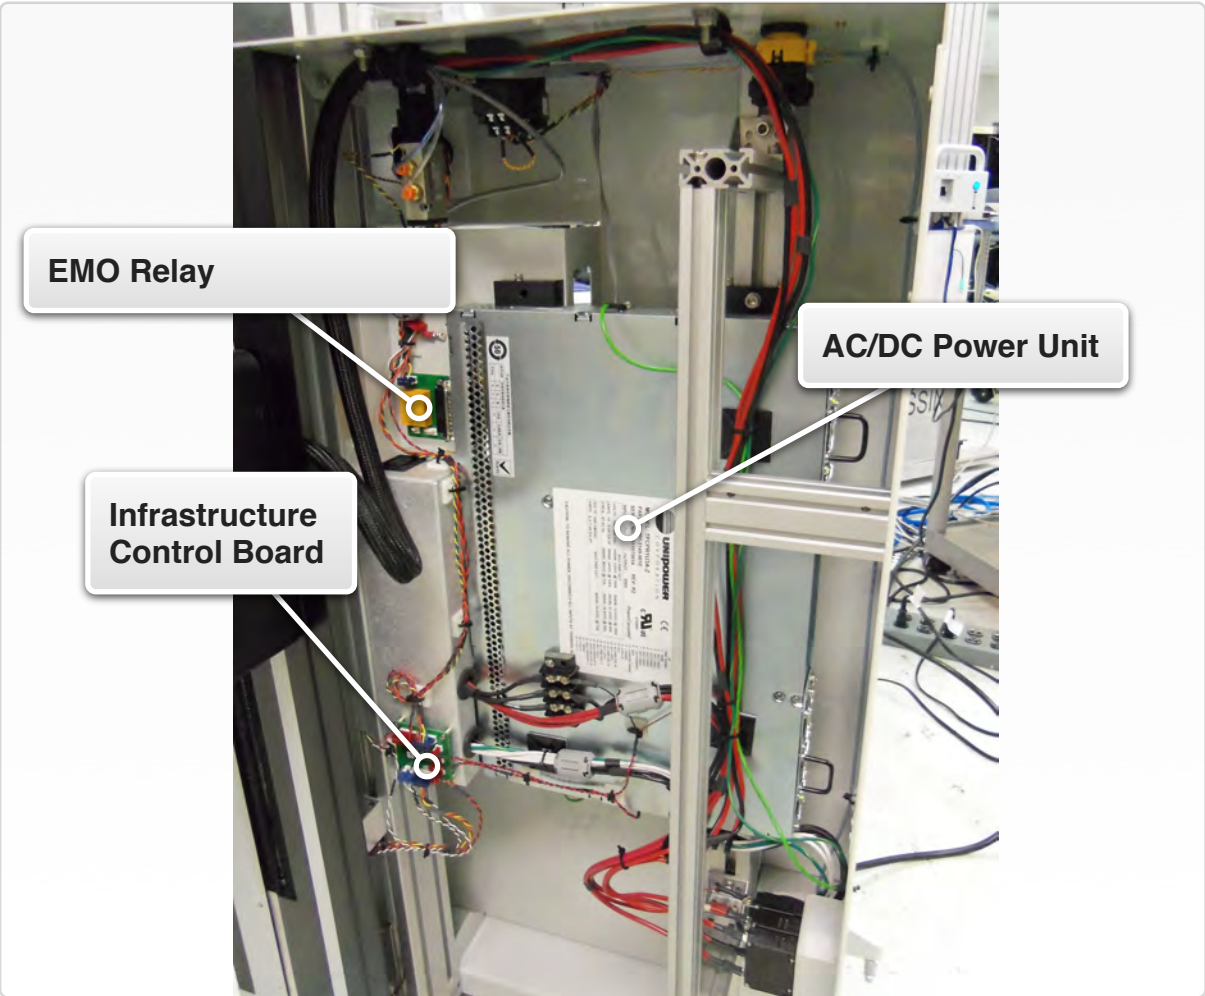

The above pictures shows the internal components of the infrastructure chassis with the mainframe access panel removed.

TEST HEAD ISSUES

The Cassini 16 test head contains the external RIFL hub, front and rear test head RIFL hubs, 48V supply distribution, and the pneumatic/mechanical components of the fixture docking system. This section provides steps and guides for accessing and servicing the test head resources. Reference the [Block Diagram 8.10](#) for the test head wiring block diagram.

Contact Roos Instruments support at support@roos.com for specific instructions for diagnosing or replacing damaged or suspected malfunction of test head components. For instructions on diagnosing, servicing, and replacing damaged or suspected malfunction of components of the Small Cassini or Large Cassini test head, contact Roos Instruments support at support@roos.com.

BEFORE SERVICING ANY PART OF THE TEST HEAD:

- Exercise proper ESD procedures with the Cassini test system, fixtures, TIMs, and auxiliary equipment.
- Undock the test system from handlers or probers and disconnect any Handler/Prober or GPIB pods.

- Remove any fixtures or diagnostic/calibration plates from the test head.
- Lock the test head manipulator arm in the 'Maintenance Position.'

BEFORE SERVICING THE TEST HEAD:


- Remove all TIMs from the test head.
- Rotate and lock the test head into the horizontal position to access the service panel and/or RIFL test head hubs as shown in [Figure 7.26](#).
- Power down the test head 48V by switching the secondary breakers to their OFF positions (Reference [Figure 1.19](#) for locations).

NOTE: For early model Cassini, switch the TIM FRONT, TIM REAR, and Test Head breakers to their OFF positions to disconnect 48V from the front test head RIFL hub, rear test head RIFL hub and external test head RIFL hub located inside the test head. For late model Cassini, switch the HEAD breaker to the OFF positions to disconnect 48V from the front test head RIFL hub, rear test head RIFL hub and external test head RIFL hub located inside the test head.

- Verify that power has been removed from the test head by checking that the ALIGN and DOCK indicator lights on the side of the test head are both off. If the indicators lights are still ON, power down the entire test system as described in the [Operator & Safety Information](#) section.

WARNING: Failure to power down the test head before servicing can result in damage to components.

FIGURE 7.26 REMOVING THE TEST HEAD ACCESS PANEL

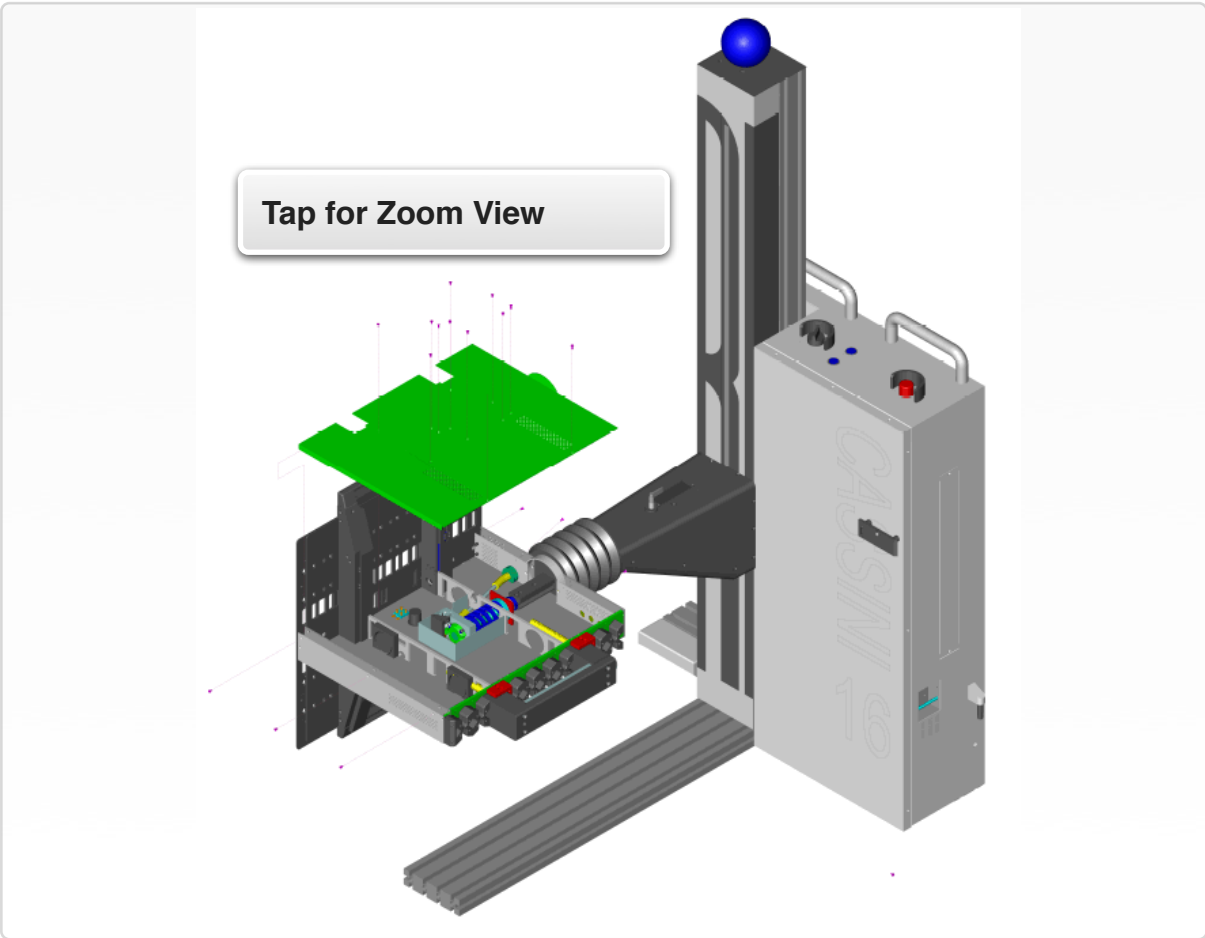


Screw locations for removing the test head access panel. Use a #1 Philips screwdriver to remove the screws.

TEST HEAD SERVICE PANEL

The test head service panel, shown in [Figure 7.26](#), provides access to the test head internals: external RIFL hub, 48V power supply distribution, front and rear test head RIFL hubs, pneumatic fixture docking components, test head fans, and manipulator arm mechanical components. The diagram shows the location of the sixteen 4-40 type screws that must be removed from the panel to access the test head.

[Figure 7.27](#) shows the inside of the Cassini 16 test head. The swivel joint assembly connects the test head to the manipulator arm to provide pivotal movement for handler/prober docking alignment and mechanical compliance. The External RIFL hub stack distributes the RIFL bus to the front and rear RIFL test head hubs, and to the fixture power supply board to route out to the fixture RIFL interface block. The Fixture Power Supply is connected to the Fixture RIFL interface block to provide the +28V, $\pm 15V$, $\pm 5V$ power supplies and RIFL communication bus. The pressurized air supply routes from the infrastructure to the air manifold for distribution to the fixture docking system. Restrictor

FIGURE 7.27 CASSINI 16 TEST HEAD INTERIOR

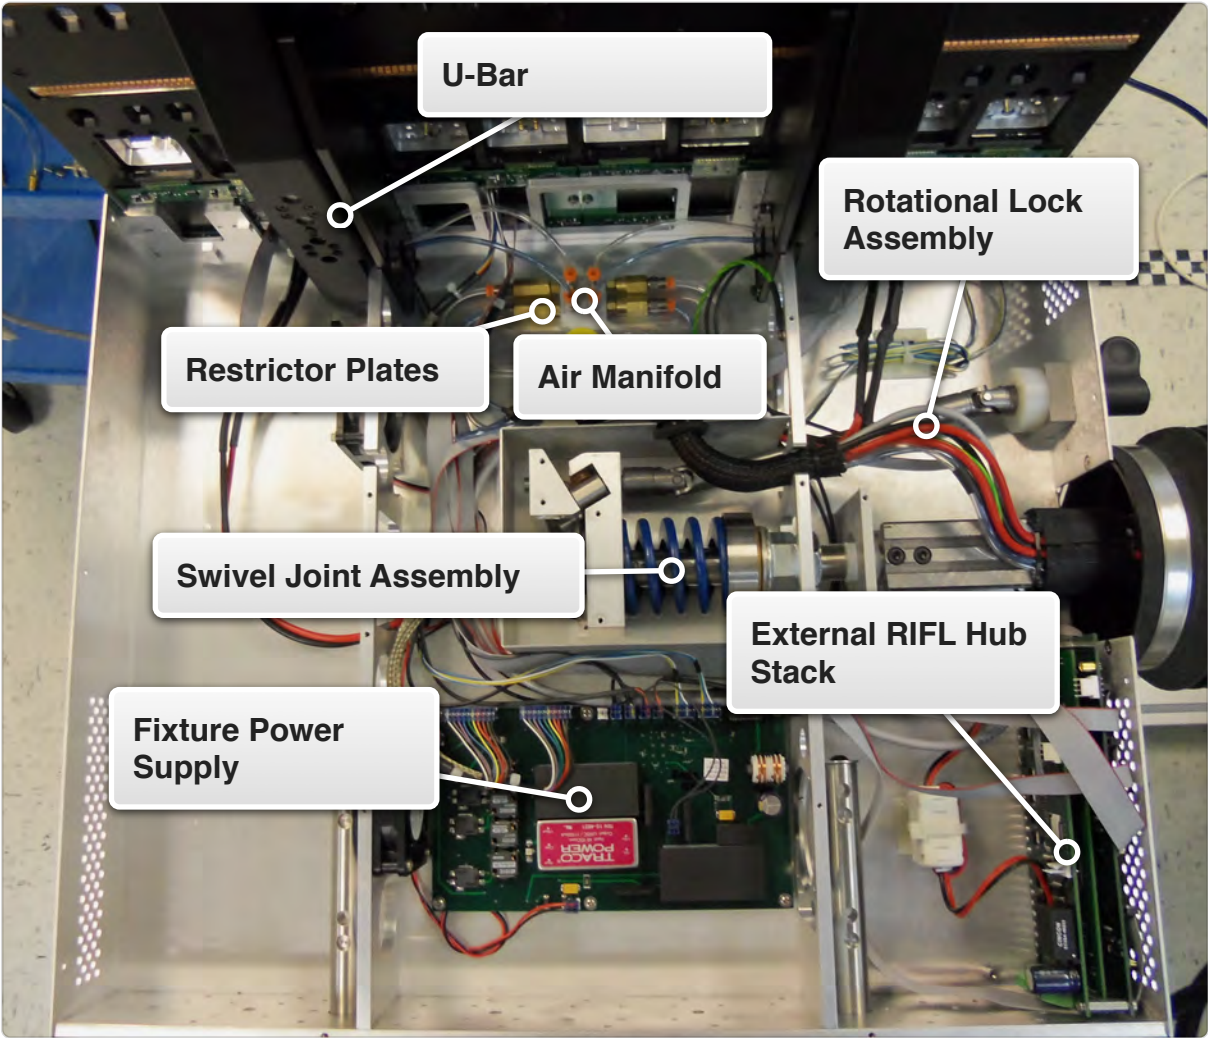

The above pictures shows the Cassini 16 test head components and their functions.

RIFL ISSUES

OVERVIEW

Each RIFL node is checked by performing simple I/O and loopback tests. The test head contains RIFL Hubs that distribute RIFL packets between the RIFL Master in the System Controller (EPC) and any installed TIMs, Fixture Modules, and Handler/Prober/GPIB Instrument Pods. Diagnosing RIFL communication issues are done from the [Equipment Pool](#).


NOTE: RIFL Diagnostic is not a prerequisite for Calibration. RIFL communications can be tested for all nodes or a specific node.

To diagnose RIFL Master and all RIFL nodes:

1. Open the Messages window by choosing **System > Messages** from the main Cassini window. Press the **Clear** button to remove any previous messages.
2. Open the Equipment Pool by choosing **System > Equip > Nodes** from the main Cassini window.

3. Highlight the “Master” element (usually the top of the list), RMB click and select **Rifl Test** from the menu. (See [Figure](#))
4. Enter “1” in the Times to Repeat dialog and choose **OK**. Increase this number if a failure is not identified or is suspected to be intermittent.
5. The Message window displays a black “passed” message or a red “failed” message each tested node as seen in [Figure 7.29](#). Use **Less** to scroll up to see any failures that may have scrolled off the top of the Message window. If a “failed” message is displayed, choose **Text** then **File > Save** to send to Roos

FIGURE 7.28 DIAGNOSE RIFL MASTER

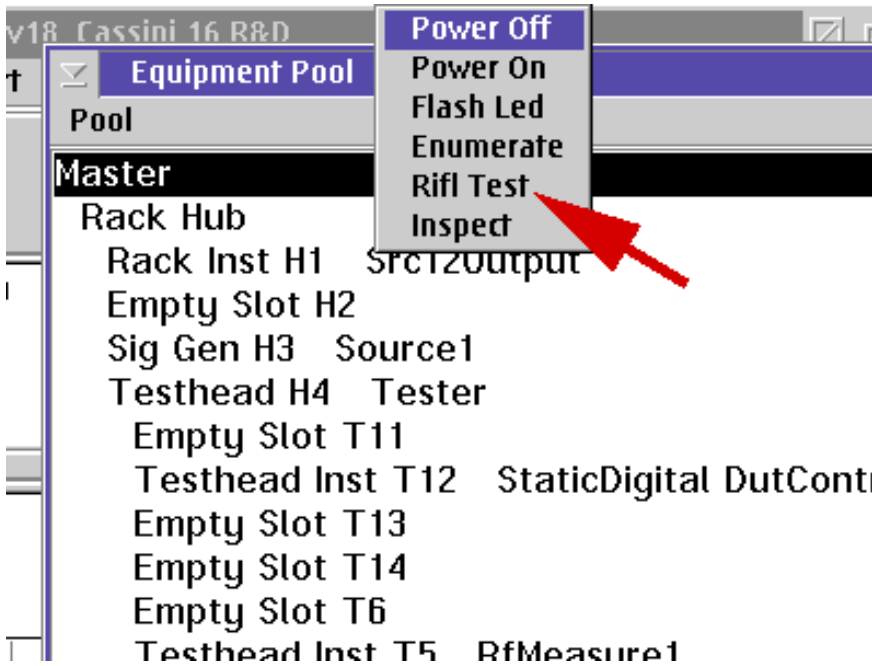


Choose RIFL Test from the RMB click menu from Master entry in the Equipment Pool window.

Support to resolve the issue. See [Example A](#) to help identify a failed instrument by node number.

To Diagnose a specific RIFL node:

- 1. Highlight the desired node from the Equipment Pool window, RMB click and select **Rifl Test**. If a Hub is selected, each attached TIM, Pod, or Fixture Module is tested.
- 2. Enter “1” (or more) in the Times to Repeat dialog and choose **OK**.


FIGURE 7.29 RIFL TEST RESULTS

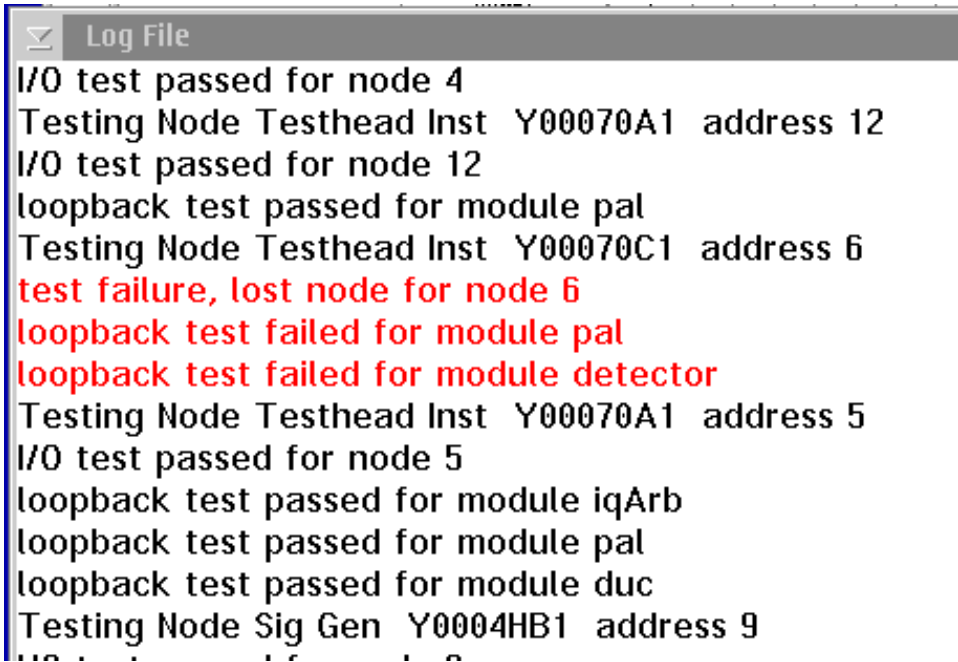

Failures are identified by red text in the Message window.

To identify which TIM corresponds to a failed node, highlight an instrument in the Equipment Pool and identify the Address in the lower pane. See [Example A](#)) showing the “Testhead Inst T5 RfMeasure1” instrument that corresponds to the failed node number “6”. Nodes are assigned based on how quickly they respond to the RIFL Master and may change any time the system is started or when a **System > Start Up** is run.

EXAMPLE A RIFL TEST NODE IDENTIFICATION

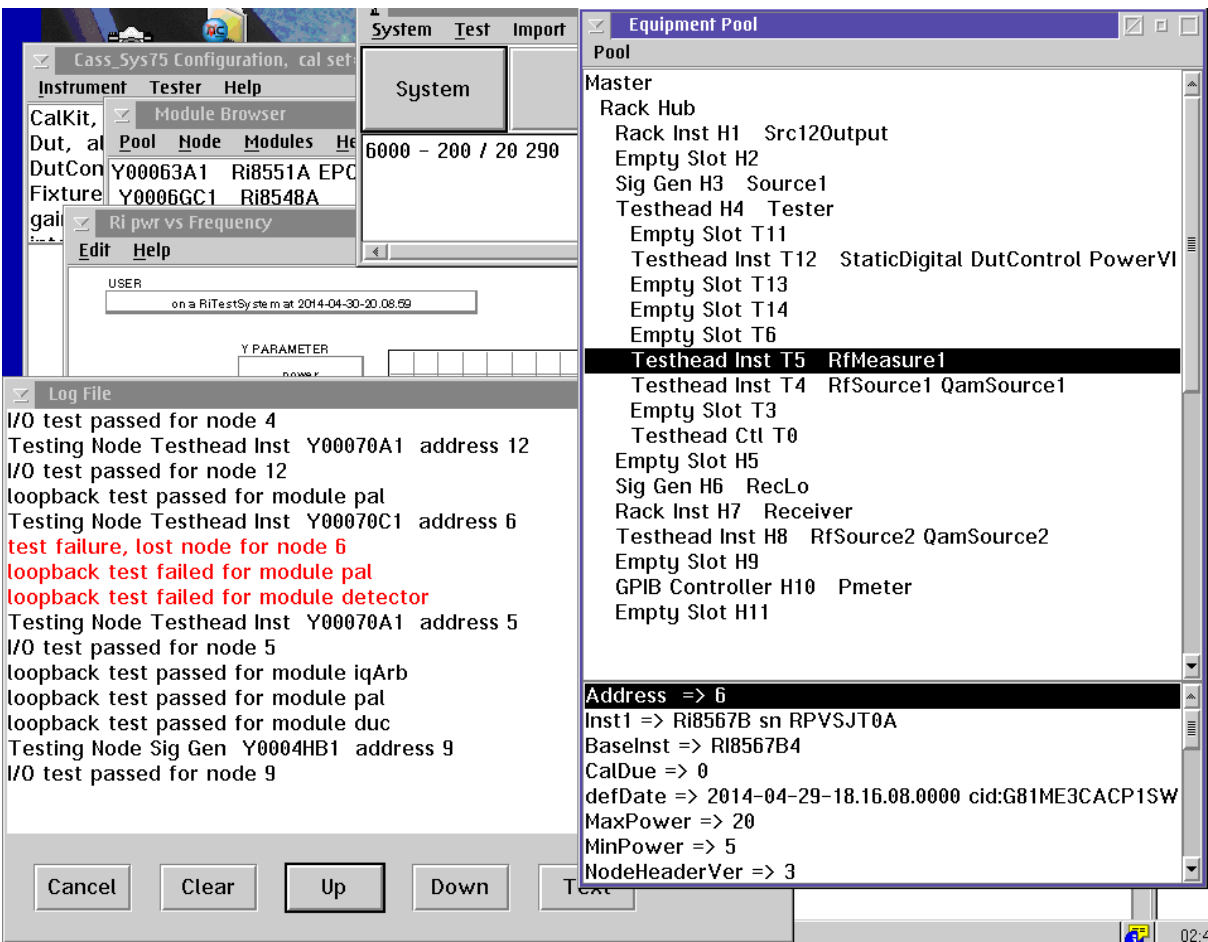

The failure at node 6 corresponds to the Equipment Pool Address => 6 entry which is the 'RFMeasure1' instrument in test head location T5

HANDLER ISSUES

The Handler Pod is configured at the factory and has its configuration stored on the device itself. Handler Pods are available with different interface options: Parallel (RI8517A), Serial (RI8516A), or GPIB (RI8552A). Handler issues are generally resolved by checking the connection between the handler and the RI ATE System or by reconfiguring the handler. A ground wire may be necessary between the test system and the handler to prevent power spikes.

In the case of irregular handler operation, first check the RIFL cable that goes from the Handler Pod to the Handler's tester interface port for kinks or damages. Make sure that the cable is NOT a standard RJ-45 ethernet cable; it must have shielding. Most handlers have an opto-isolator built into the tester interface that needs to be connected to the tester power through the interface cable. Use a Voltmeter to verify that the required voltages are present and that all the connections are made.

Make sure the Handler and Tester are grounded to the same earth ground (same AC outlet) so that no ground potential exists between the Handler and Tester. If there is a possibility of ground potential,

connect a 16 gauge or higher ground wire from the Handler Chassis to the System's rack.

To test a Handler Interface Pod, connect the pod, using the supplied RIFL III cable, to the connector on the test head and the handler to the pod with the custom handler cable.

From Cassini select **System > Equip** to open the Equipment Pool window.

From Equipment Pool window, select **Nodes > Pool > Control Modules** to open the Module Browser window.

In the Module Browser window find and highlight the Handler Interface Module. It should look like, "RiXXXX Name" (Name would be the name of the handler e.g. "Delta"). In the middle section highlight "Handler". In the lower section there are 3 boxes in the lower left. These will be used to control the Handler pod signals and provide a way to test the control logic with the Handler attached.

HANDLER POD TROUBLESHOOTING

If the user does not have a RI Monitor Handler Interface (M6XHRF1A), the user can check bins 1 and 2:

1. Send a Bin and EOT signal to the handler by selecting the box marked "PULSE BIN".
2. In the "Choose" window, select a Bin (1 or 2).
3. The Bin and EOT lights should flash.

If the user does have a RI Monitor Handler Interface (M6XHRF1A), it's possible to check the bins:


- 1. Connect the Monitor Handler Interface.
- 2. Send a Bin and EOT signal to the handler by selecting the box marked "PULSE BIN".
- 3. In the "Choose" window, select a Bin.
- 4. Watch for the Bin and EOT lights flash on the Monitor Handler Interface (and on the handler pod for bins 1 and 2).

If a start signal can be sent to the handler pod, it's possible to test if the handler is sending a start test signal to the Roos system using the box marked "WAITFORSTART". To use this feature click on the box. In the "Choose" window, select a Bin. This Bin number will be sent from the tester to the handler after the handler pod receives a 'start test' signal from the handler. Enter 1 for "How many to run". The tester will now display in the main message window "waiting for start" and wait for a 'start of test' signal from the handler. When tester receives a 'start of test' signal it will send the selected Bin and EOT to the handler.

CONNECTIONS FOR RI 8503A0 HANDLER INTERFACE

25 Pin Female D Sub type

Pin	Function	Circuit Type
1	Bin1	Open Collector Output
2	Bin2	Open Collector Output
3	Bin3	Open Collector Output
4	Bin4	Open Collector Output
5	Bin5	Open Collector Output
6	Bin6	Open Collector Output
7	Bin7	Open Collector Output
8	Bin8	Open Collector Output
10	Start Test	TTL Input
11	+V(H)	Handler +V for Pull Up ¹
12	GND	Ground
13	+5V	System +5V
14	RI8503A0 is +5V	System +5V
15	Input2	Misc TTL Input, Not Used
16	Input3	Misc TTL Input, Not Used
17	Input4	Misc TTL Input, Not Used
22	Bin9	Open Collector Output
23	Bin10	Open Collector Output

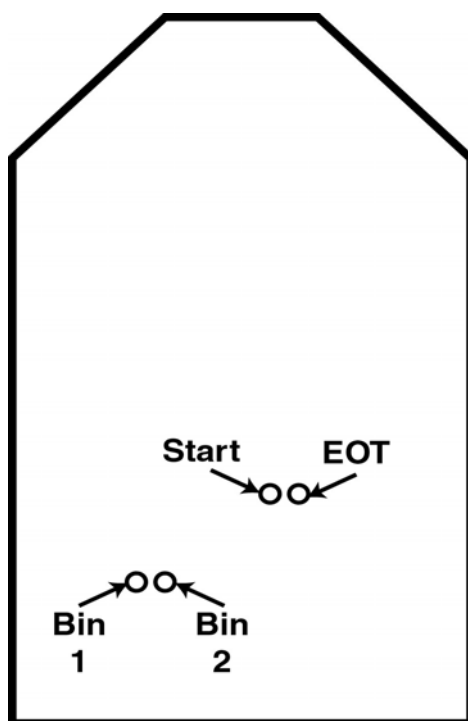FIGURE 7.30 HANDLER POD TROUBLESHOOTING

NOTE: Pin 11 must be connected to the +V from the handler, Pin13, Pin 14.

GPIB ISSUES

- GPIB cable length limit (4 Meters)
- Don't extend GPIB cables to make a longer run
- Instrument made "inactive" if it fails at Startup
- GPIB instruments must have a unique address
- GPIB address must match stored address in Tester software object

If there are any non-RI instruments that have been added to the RI ATE System that are controlled through the general purpose GPIB bus, an inspection of the connections should be routinely made. These types of instruments have a tendency to be a shared resource and therefore the probability of an error being introduced is greater every time the instrument is reconnected. When a GPIB instrument is selected to be available to the system, a system startup should be executed to check if the instrument is connected correctly and it's GPIB address is correct. If there is any issue with the GPIB programming of the instrument, it will be marked "Inactive" and a warning message will be placed in the Message Window.

If there is a GPIB issue always check:

- The GPIB Address
- That there is no "Daisy Chain" of the GPIB Cables
- The correct driver was selected

The following list shows the basic thoughts to always keep in mind when troubleshooting the Cassini Test System.

1. Is the problem in the source path or receive path?
2. Does the problem:
 - Change with respect to frequency?
 - Change with respect to power?
3. Problems are commonly compounded

- One problem can cause multiple failures
- Be sure to look for the right problem

4. When troubleshooting, the following steps should be taken.

- Run Diagnostics (all of them)
- Review failed data
- Look for patterns (only 1 port, direct receive path, etc.)
- Pull up test plan
- Rename to 'Junk'
- Set breakpoint
- Run to breakpoint
- Open Controller
- Manipulate settings through controller
- Begin 'halving' signal path
- Isolate bad component

To diagnose RF problems, it is necessary to run all the tests, then look for the patterns in the failures. For example, if a problem occurs at RF3, but not RF2, 6, or 7, then the problem must be in some area that's unique to RF3. If the problem occurs at RF2, 3, 6, and 7, then the problem must be with something that is common to all those

ports. Using this process of elimination, it is possible to diagnose the problem to a couple of possibilities before connecting any test equipment.

TOOLS REQUIRED FOR TIM MODULE REPAIR

EXAMPLE TOOLS REQUIRED AT FACILITY

The following standard tools may be required to clean connectors or replace TIM modules and are not included with Diagnostic Kit or Calibration kit. (See [Figure 7.31](#))

- 5/16 inch SMA Torque Wrench set to 7–10 in·lb (0.8 to 1.1 N·m)
- Crescent Wrench Set (**ISO Metric** and/or **ANSI Imperial**)
- Allen Wrench sets (ISO Metric and/or ANSI Imperial)
- Phillips head Screwdrivers (ISO Metric and/or ANSI Imperial)
- Flat head Screwdriver
- Pliers (needle nose)
- Wire Cutters
- Flashlight
- Sharp Pointed tool (pick)

FIGURE 7.31 EXAMPLE TOOLS REQUIRED AT FACILITY




Example of tools that should be available at the facility and not provided by Roos Instruments. These tools may be required to clean connectors or field repair TIMs.

APPENDIX

This section provides TIM:

- **Descriptions**
- **Dimensions and Locations**
- **Block Diagrams**
- **Software Instruments**
- **Performance Specifications**
- **Endnotes**

RI7725: 0.01 TO 20GHz MICROWAVE SOURCE

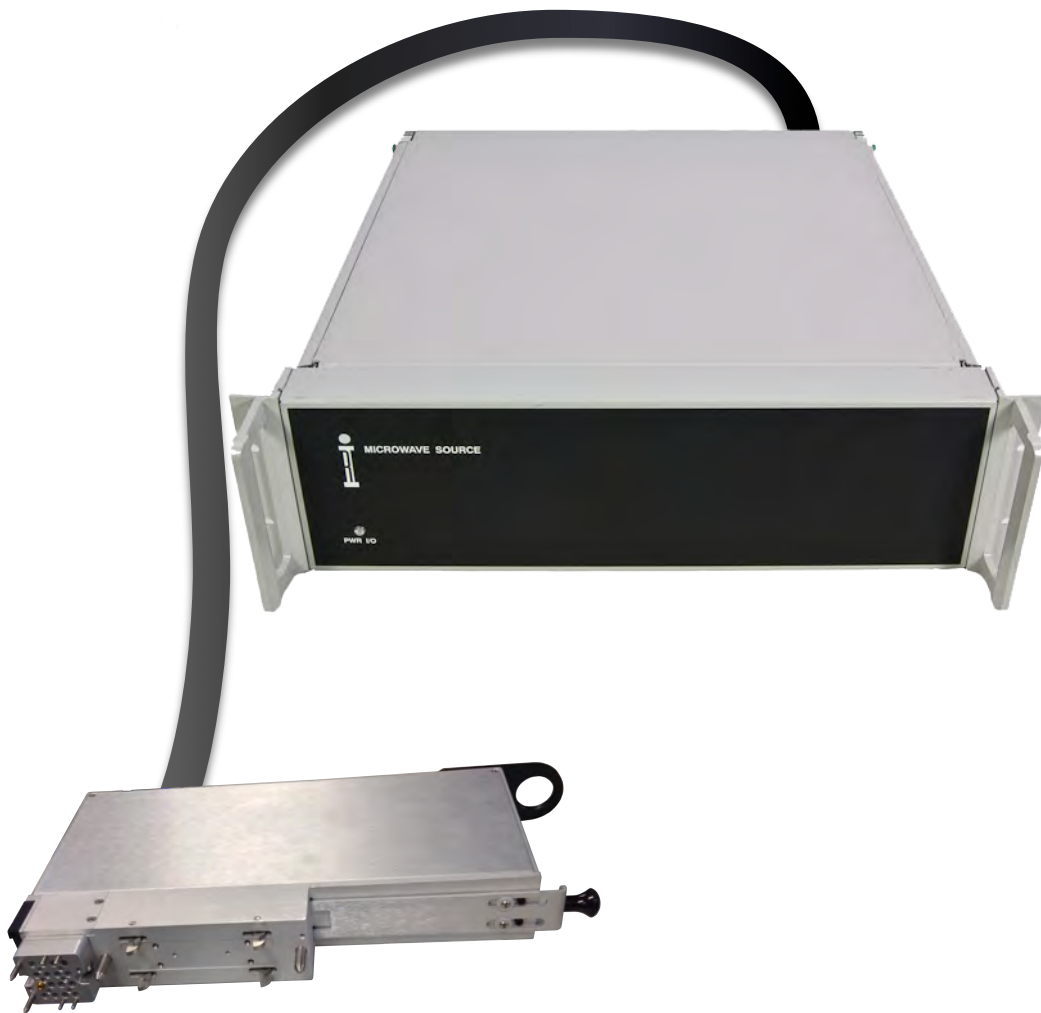

DESCRIPTION

The RI7725 Microwave Source is a signal generator that produces sinusoidal signals from 10 MHz to 20 GHz. The RI7725 provides microsecond switching speed, high output power, low phase noise, and excellent spectral purity sine wave signals. The source provides +23 dBm at 20 GHz with -86 dBc/Hz phase noise at 10 kHz offset. The RI7725 requires the use of a remote TIM to route signal resources from the auxiliary rack to the Test Head.

KEY FEATURES

- 100 dB Dynamic Signal Range
- Microsecond Frequency Hopping & Settling

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as “Source1”, “Source2”, “Source3” in the panel dialog windows. This instrument can also be used as the Local Oscillator (L.O.) for the system’s Receiver, identified as “RecLO”

Model and Name as it appears in the Tester Configuration:

- Source1, RI7725x .01 - 20 GHz Rf source

NOTE: The “1” in Source1 represents the enumeration of the RI7725 in the system configuration. Multiple RI7725 instruments are enumerated incrementally by the system as “1”, “2”, “3”, etc., in the configuration, edit, and control panels(i.e - Source1, Source2, Source3, etc.). The “x” in RI7725x denotes the model revision number.

TIM LOCATION


The RI7725 is located in the Auxiliary Rack and uses an auxiliary rack TIM, also referred to as a Remote TIM, to route resources to the test head. Remote TIMs are typically placed closest to the Auxiliary Rack (slots T1, T2, T15, T16). In a typical application, the source resources are routed via RF semi-rigid interconnect cables on the fixture bottom plate or interface plate to Test Set and/or Receiver TIMs.

NOTE: Always calibrate the named paths after modifying the layout (bends) in the cable to maintain maximum signal fidelity.

TIM OPERATIONS

Reference the [RI7725 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.1

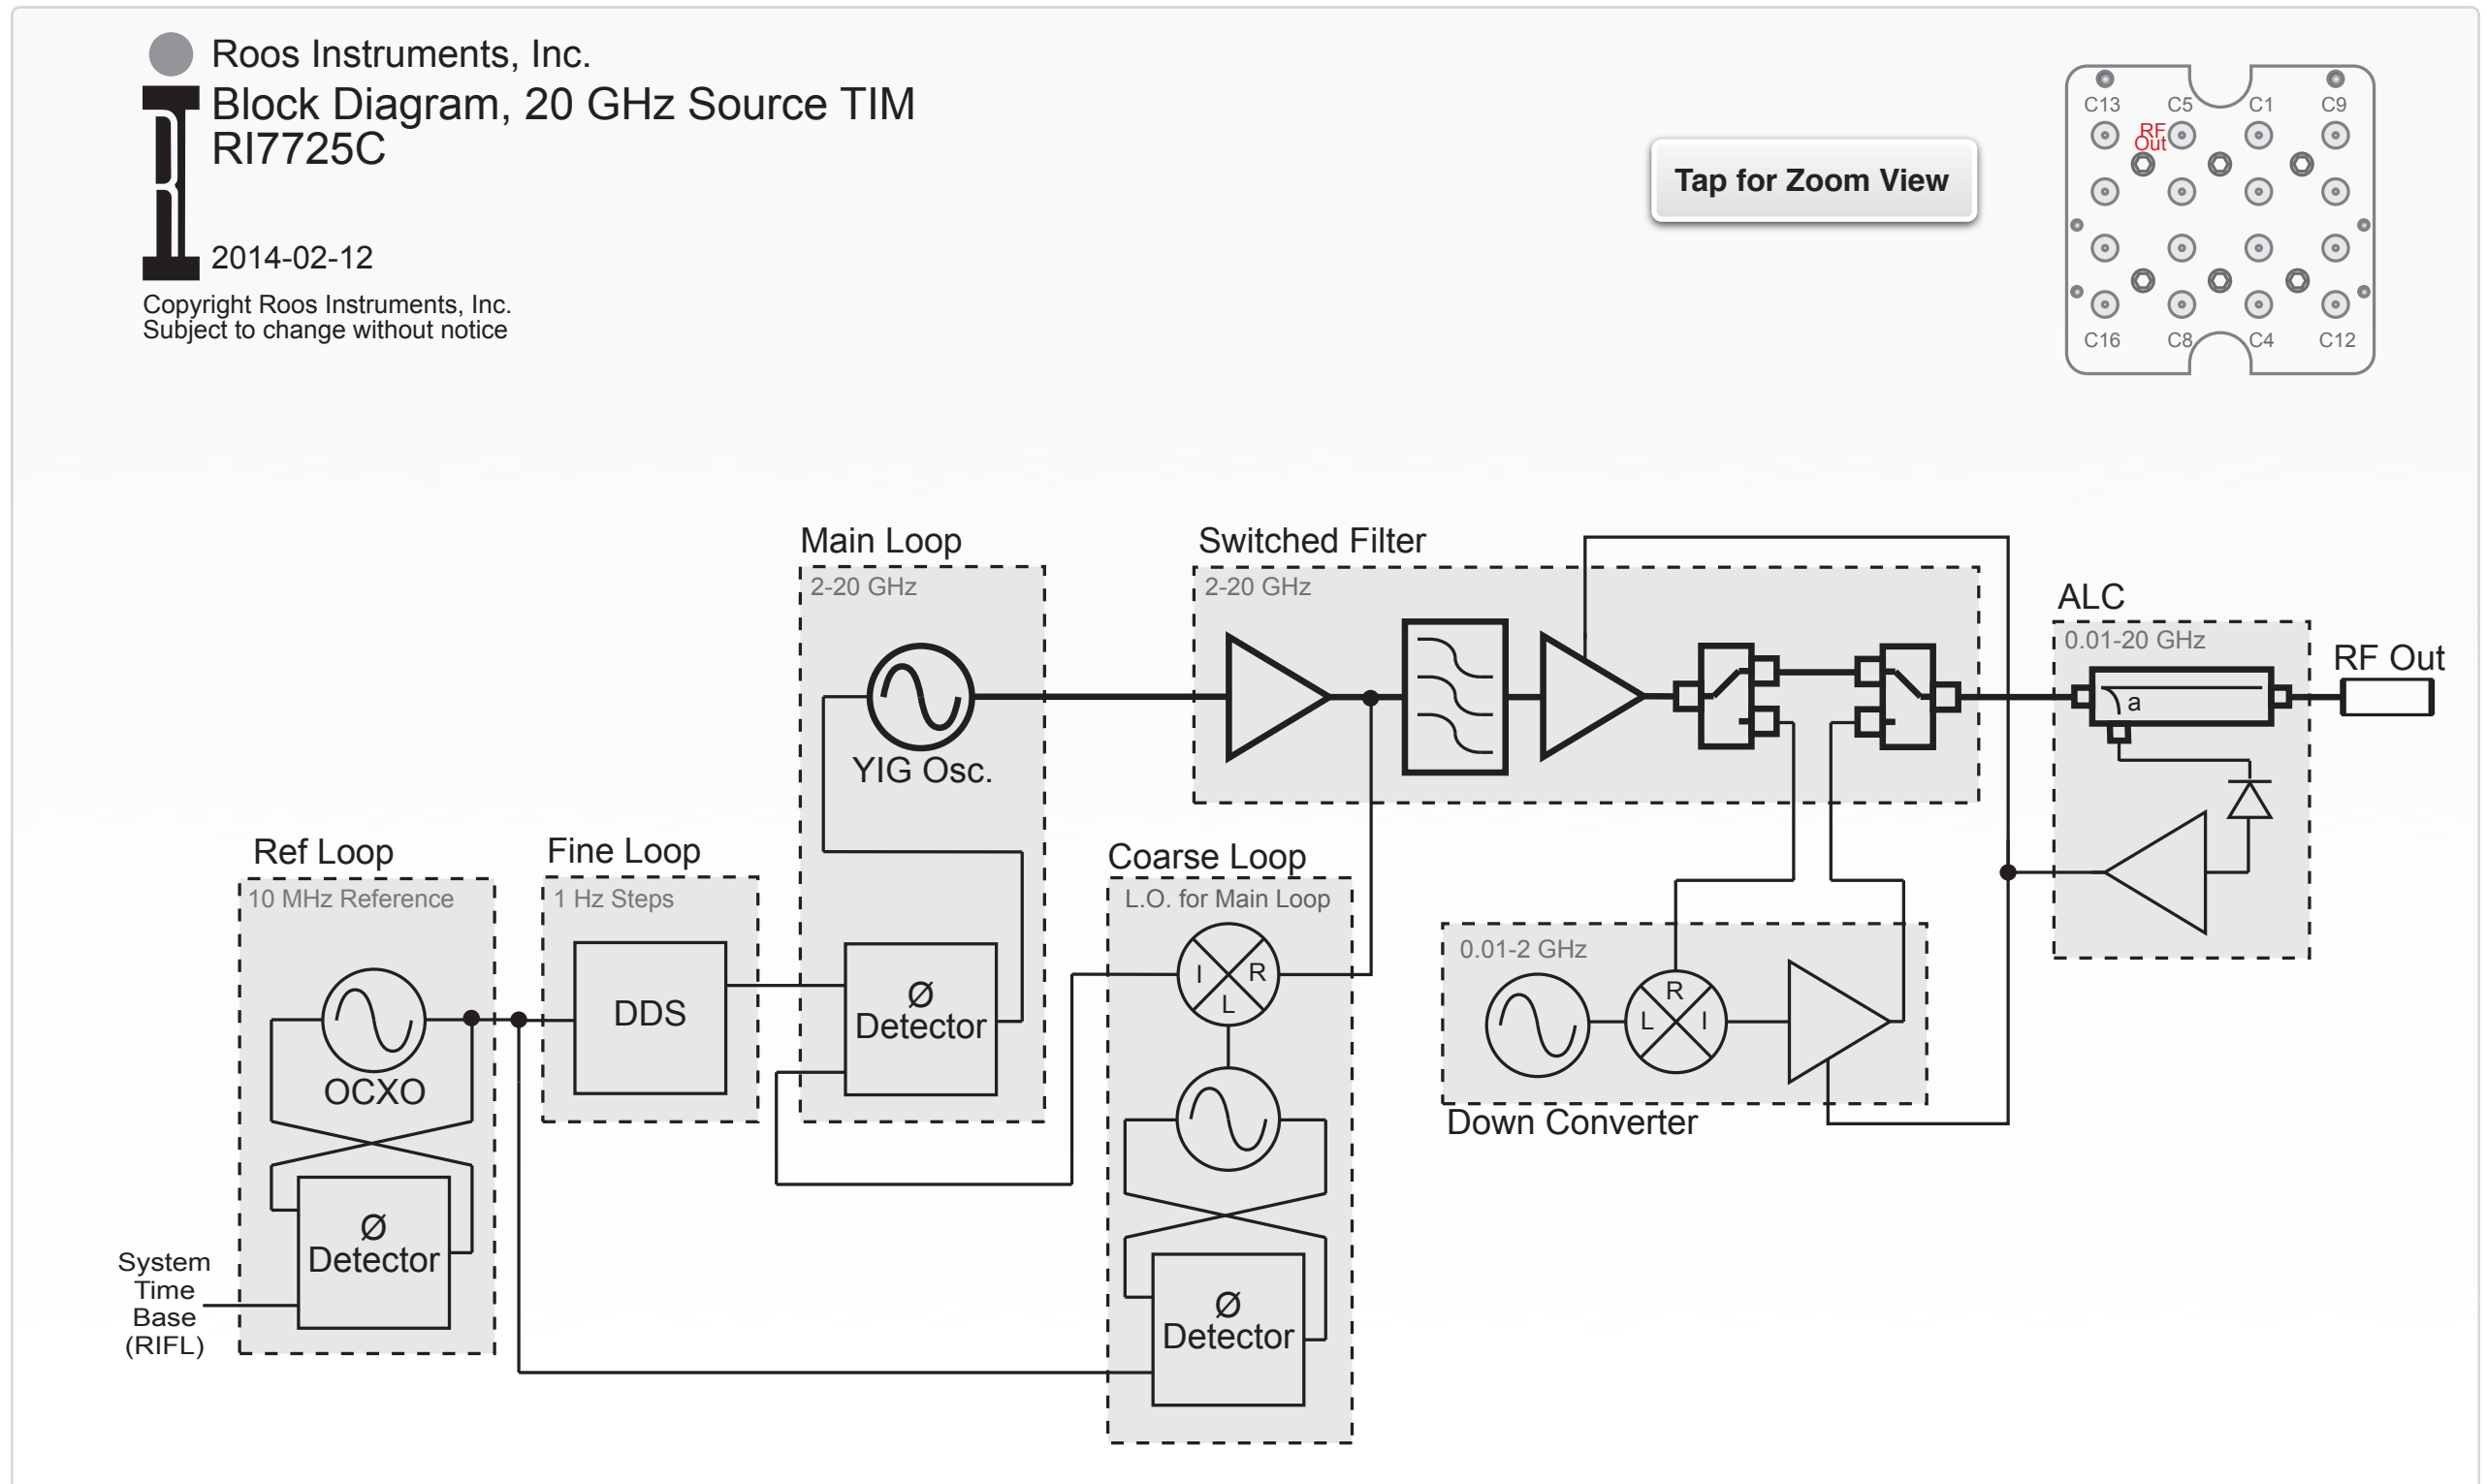


PERFORMANCE SPECIFICATIONS

Source	
Frequency Range	10 MHz to 20 GHz
Frequency Resolution	1 Hz
Power Range ²	-25 dBm to +3 dBm
Power Accuracy ²	± 0.1 dB

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

² Typical performance with an RI8587 Receiver

RI8508: RF MODULATED SOURCE

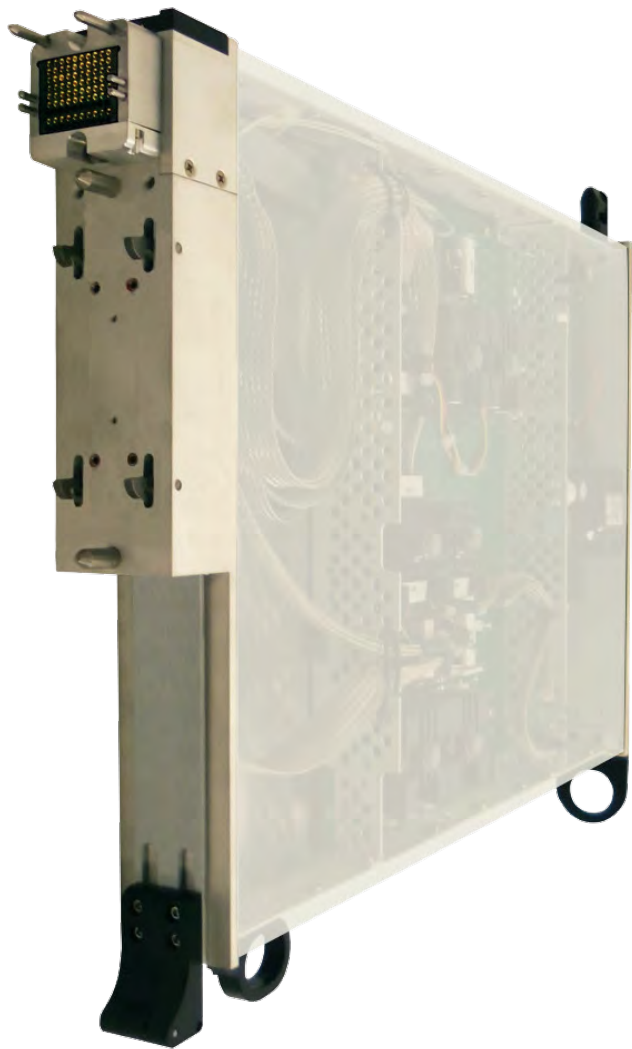

DESCRIPTION

The RI8508 RF Source provides two dedicated signal ports of modulated signal generation for applications in the 100 kHz to 6 GHz band. The instrument features a precision Quadrature Digital Upconverter (QDUC) that delivers over 100 dB of dynamic range for high-performance, complex baseband modulation from 100 kHz - 400 MHz. The 140 MHz to 6 GHz RF source supports Continuous Wave (CW) tone generation, frequency hopping, and complex carrier modulation up to 80 million samples per second with 14 bits of precision. With built-in RF switching and calibrated signal paths, the RI8508 delivers power-corrected signals and seamless modulation capability across the entire 100 kHz to 6 GHz band for maximum application flexibility.

KEY FEATURES

- 100 dB Dynamic Signal Range
- 10 Million Sample/Symbol Modulation Rate
- Microsecond Frequency Hopping & Settling
- Modulation Pattern Import Tools

INSTRUMENTS PROVIDED BY THIS TIM

The subset instruments in this TIM appear as **QamSource1** and **RFSource1** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- QAMSource1, Ri74212x QAM Generator
- RFSource1, RI8508x .1 - 6GHz Rf Source

NOTE: Multiple RI8508 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - RFsource1,QAMSource1; RFsource2,QAMSource2 ; RFSource3,QAMSource3 ; etc). The “x” in RI8508x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8508 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.2

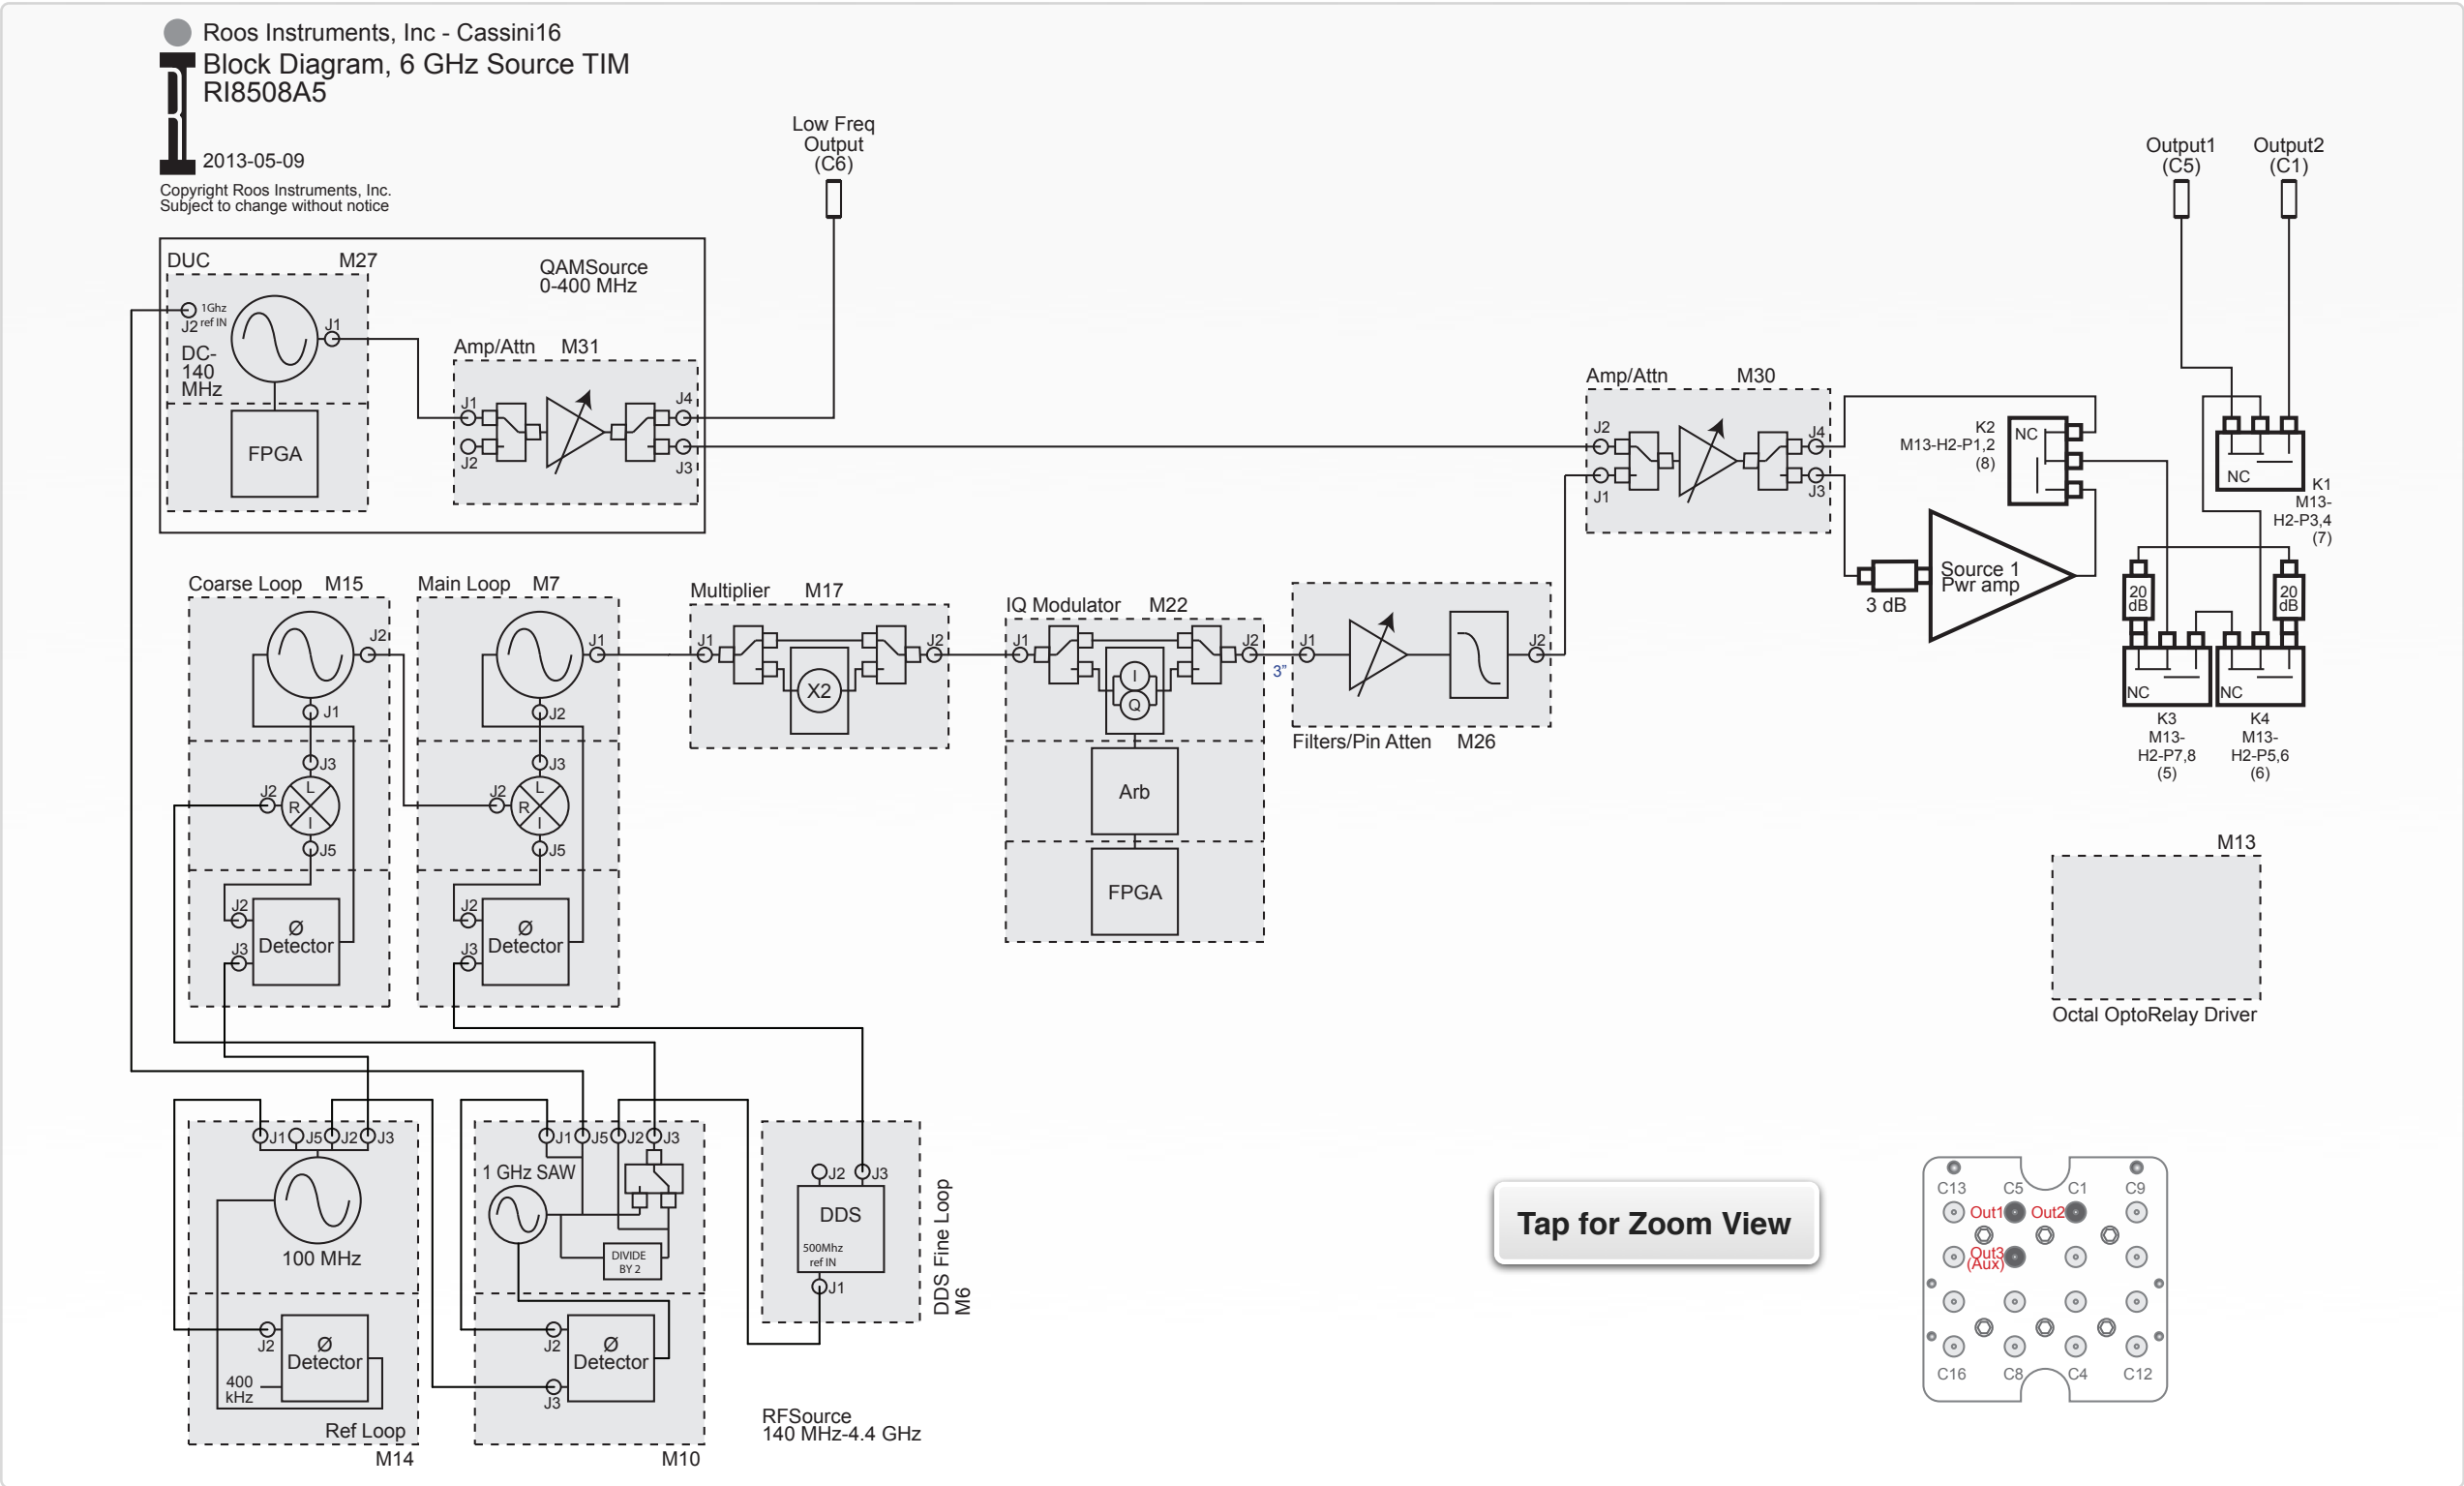

PERFORMANCE SPECIFICATIONS

RF Source

Frequency Range	140 MHz to 6 GHz
Power Range	-100 dBm to +14 dBm / +20 dBm (CW)

QAM Source

Frequency Range	100 kHz to 400 MHz
Power Range	-100 dBm to +10 dBm
Clock Rate	80 MHz

IQ Modulator

Modulation Rate	80 Msps
Analog Bandwidth	5 MHz

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

RI8535: UNIVERSAL DIGITAL



DESCRIPTION

The RI8535 Universal Digital instrument provides a complete digital subsystem with configuration options of 40, 80, or 120 synchronous pins. The instrument architecture uses dedicated digital cores for native Vector, Scan, I2C, SPI and JTAG protocols. Every pin also incorporates parametric test capability for fundamental voltage and current measurement, continuity, and frequency counter.

Comprehensive integration with Cassini's test development software brings protocol-aware programming and device interaction with register and data format support for WGL, CSV, TP, and Verilog files.

KEY FEATURES

- Device Control with Digital Protocol Engines
- Pattern Import and Logic Analysis Tools
- Pattern Generation on the Fly
- Native JTAG Support

INSTRUMENTS PROVIDED BY THIS TIM

This TIM provides digital pins in banks of 20 up to a possible 120 depending on the model. The instruments in this TIM appear as **DPins1**, **DPins2**, ... **DPins6** in the panel dialog windows. A 16 slot Cassini can hold up to 16, 120 pin RI8535 Universal Digital TIMs, providing up to 1,920 digital pins.

Additional TIMs appear as DPins1_#, where the “_#” represents the 2nd, 3rd, etc... TIM. The Owner Names will be referred to a DPins2_1, ... DPins6_16

Model and Name as it appears in the Tester Configuration:


- Dpins1, Ri8535x Cassini Digital D1
- Dpins2, Ri8535x Cassini Digital D2
- etc...

NOTE: The “1” is replaced with a “2” or “3”... depending on how many pin cards (40, 80, 120) are loaded in each TIM. If there are more than one Dpins TIM in the configuration, then an underscore followed by the TIMs (2-16) number is appended to the Owner Name. (DPins1_2, DPins2_2, etc.) The “x” in the model number denotes the revision of the Instrument.

TIM OPERATIONS

Reference the [RI8535 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.3 1 OF 2

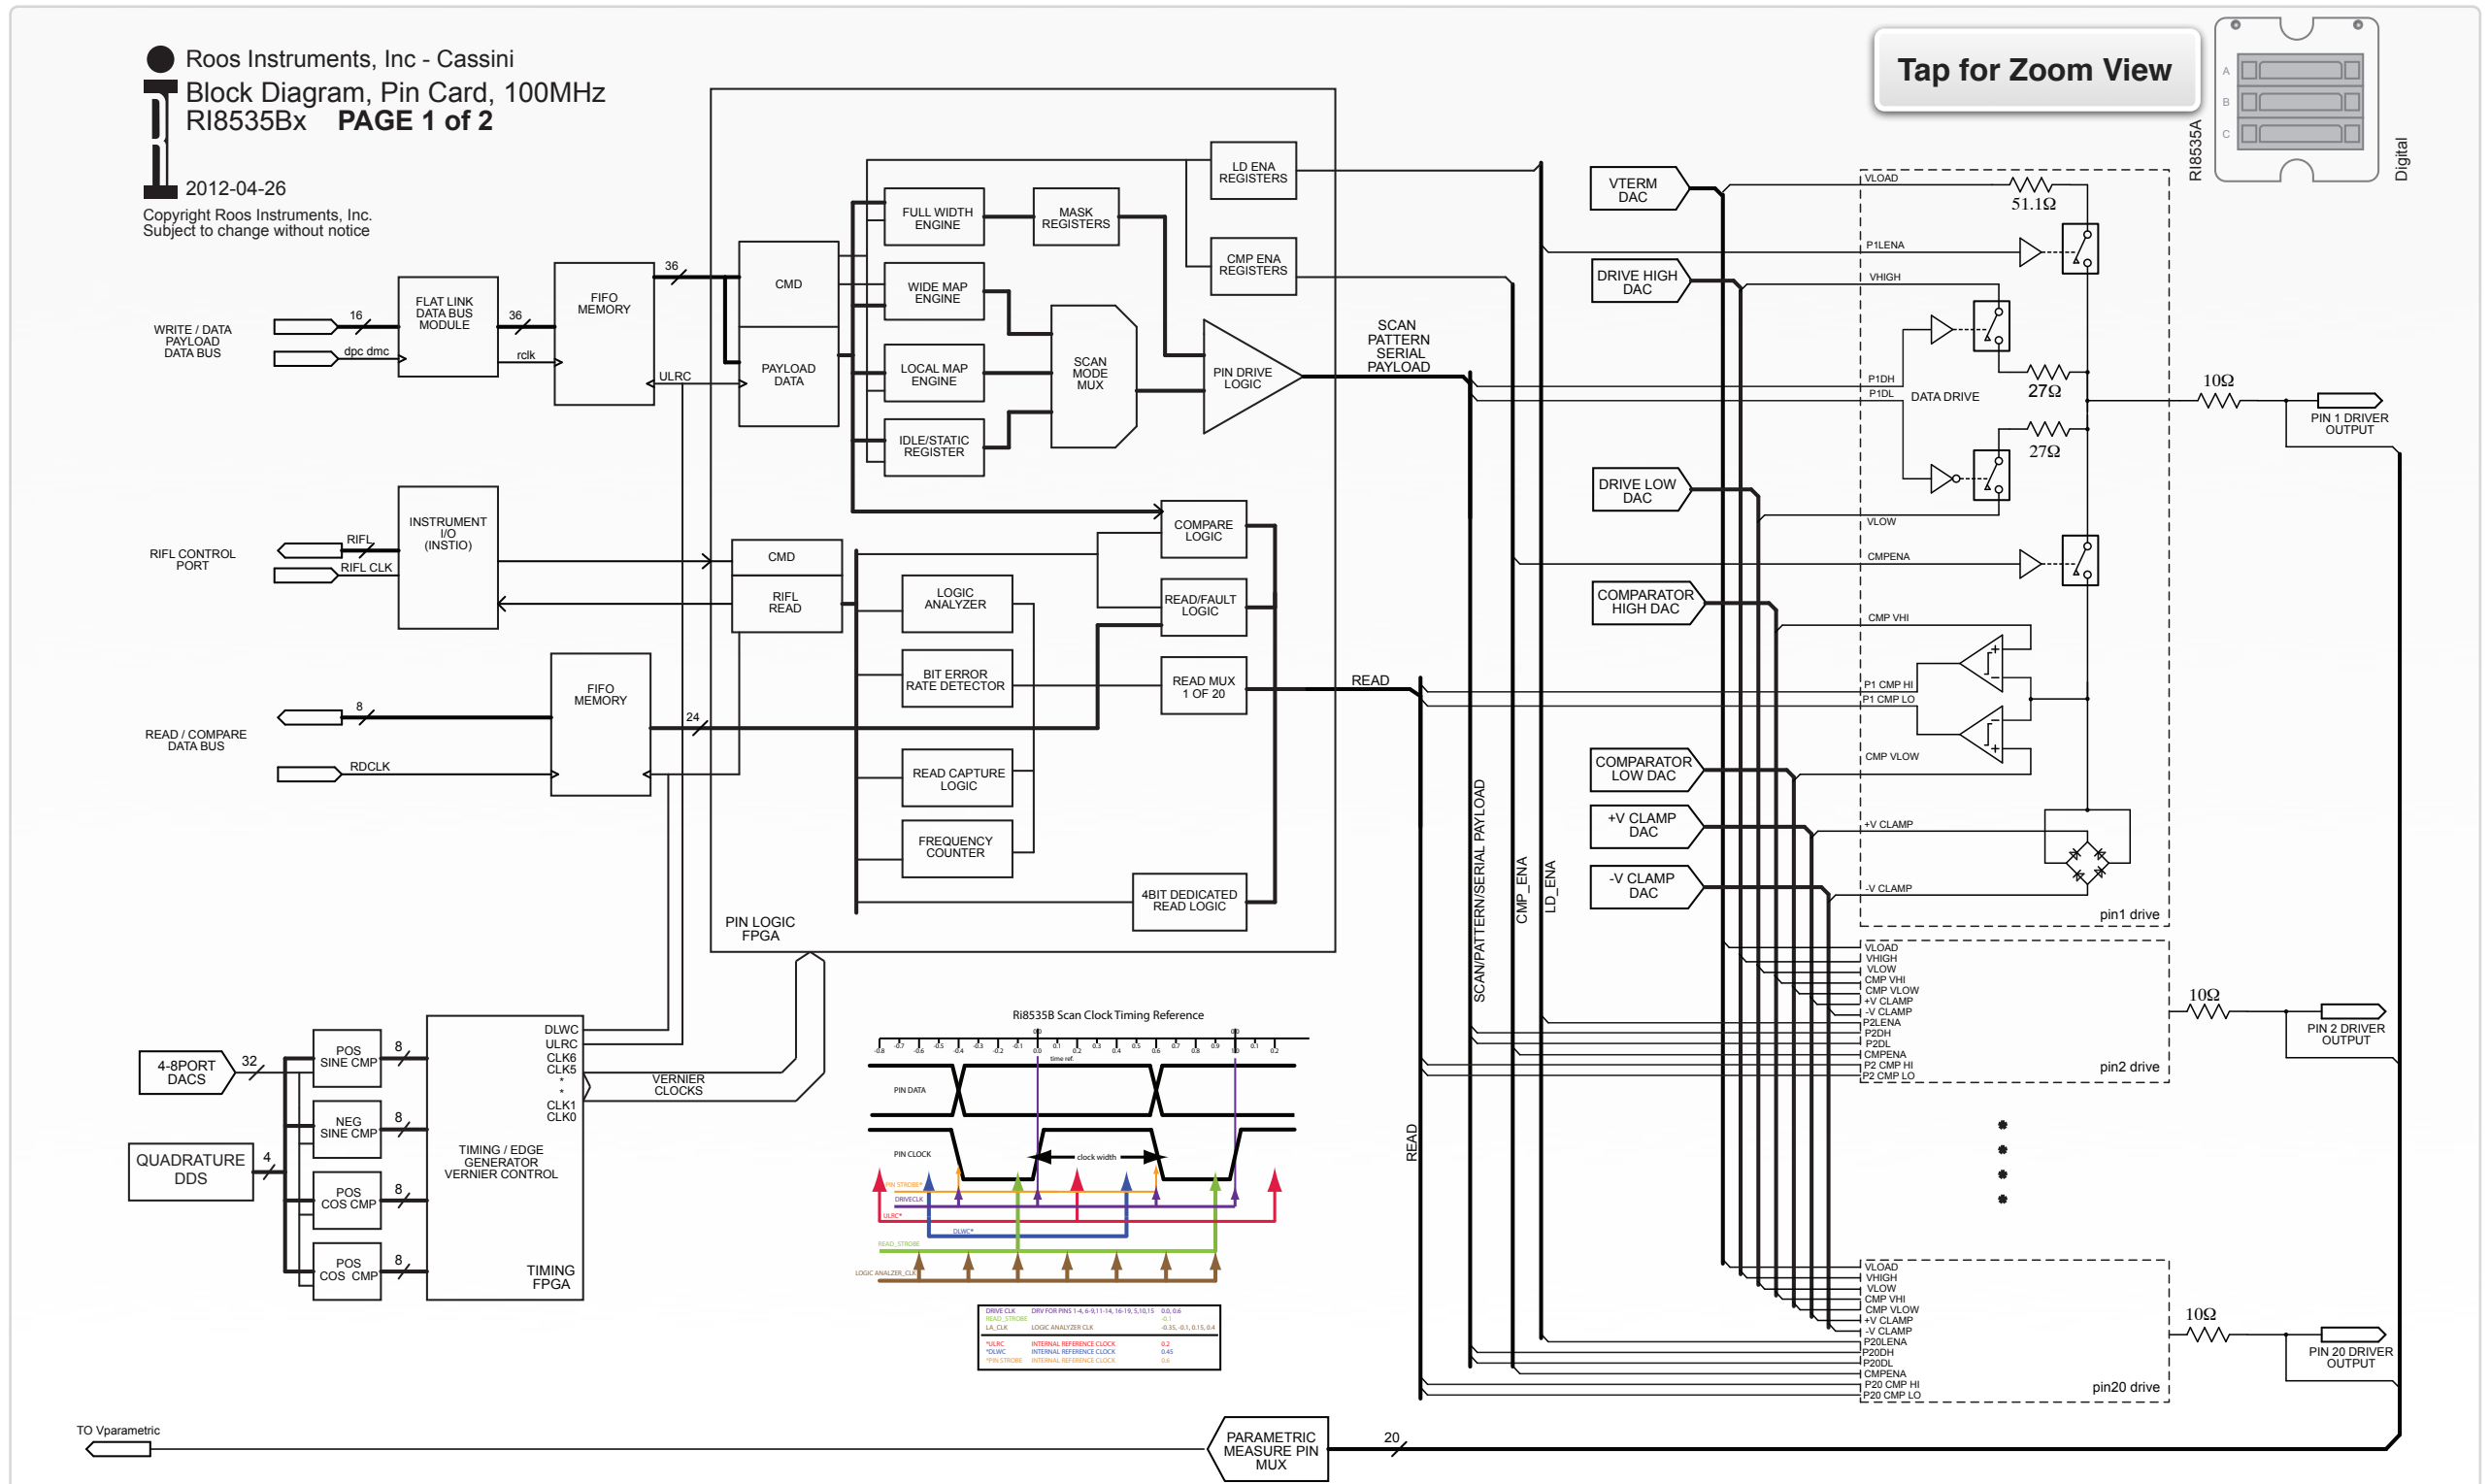

BLOCK DIAGRAM 8.4 2 OF 2


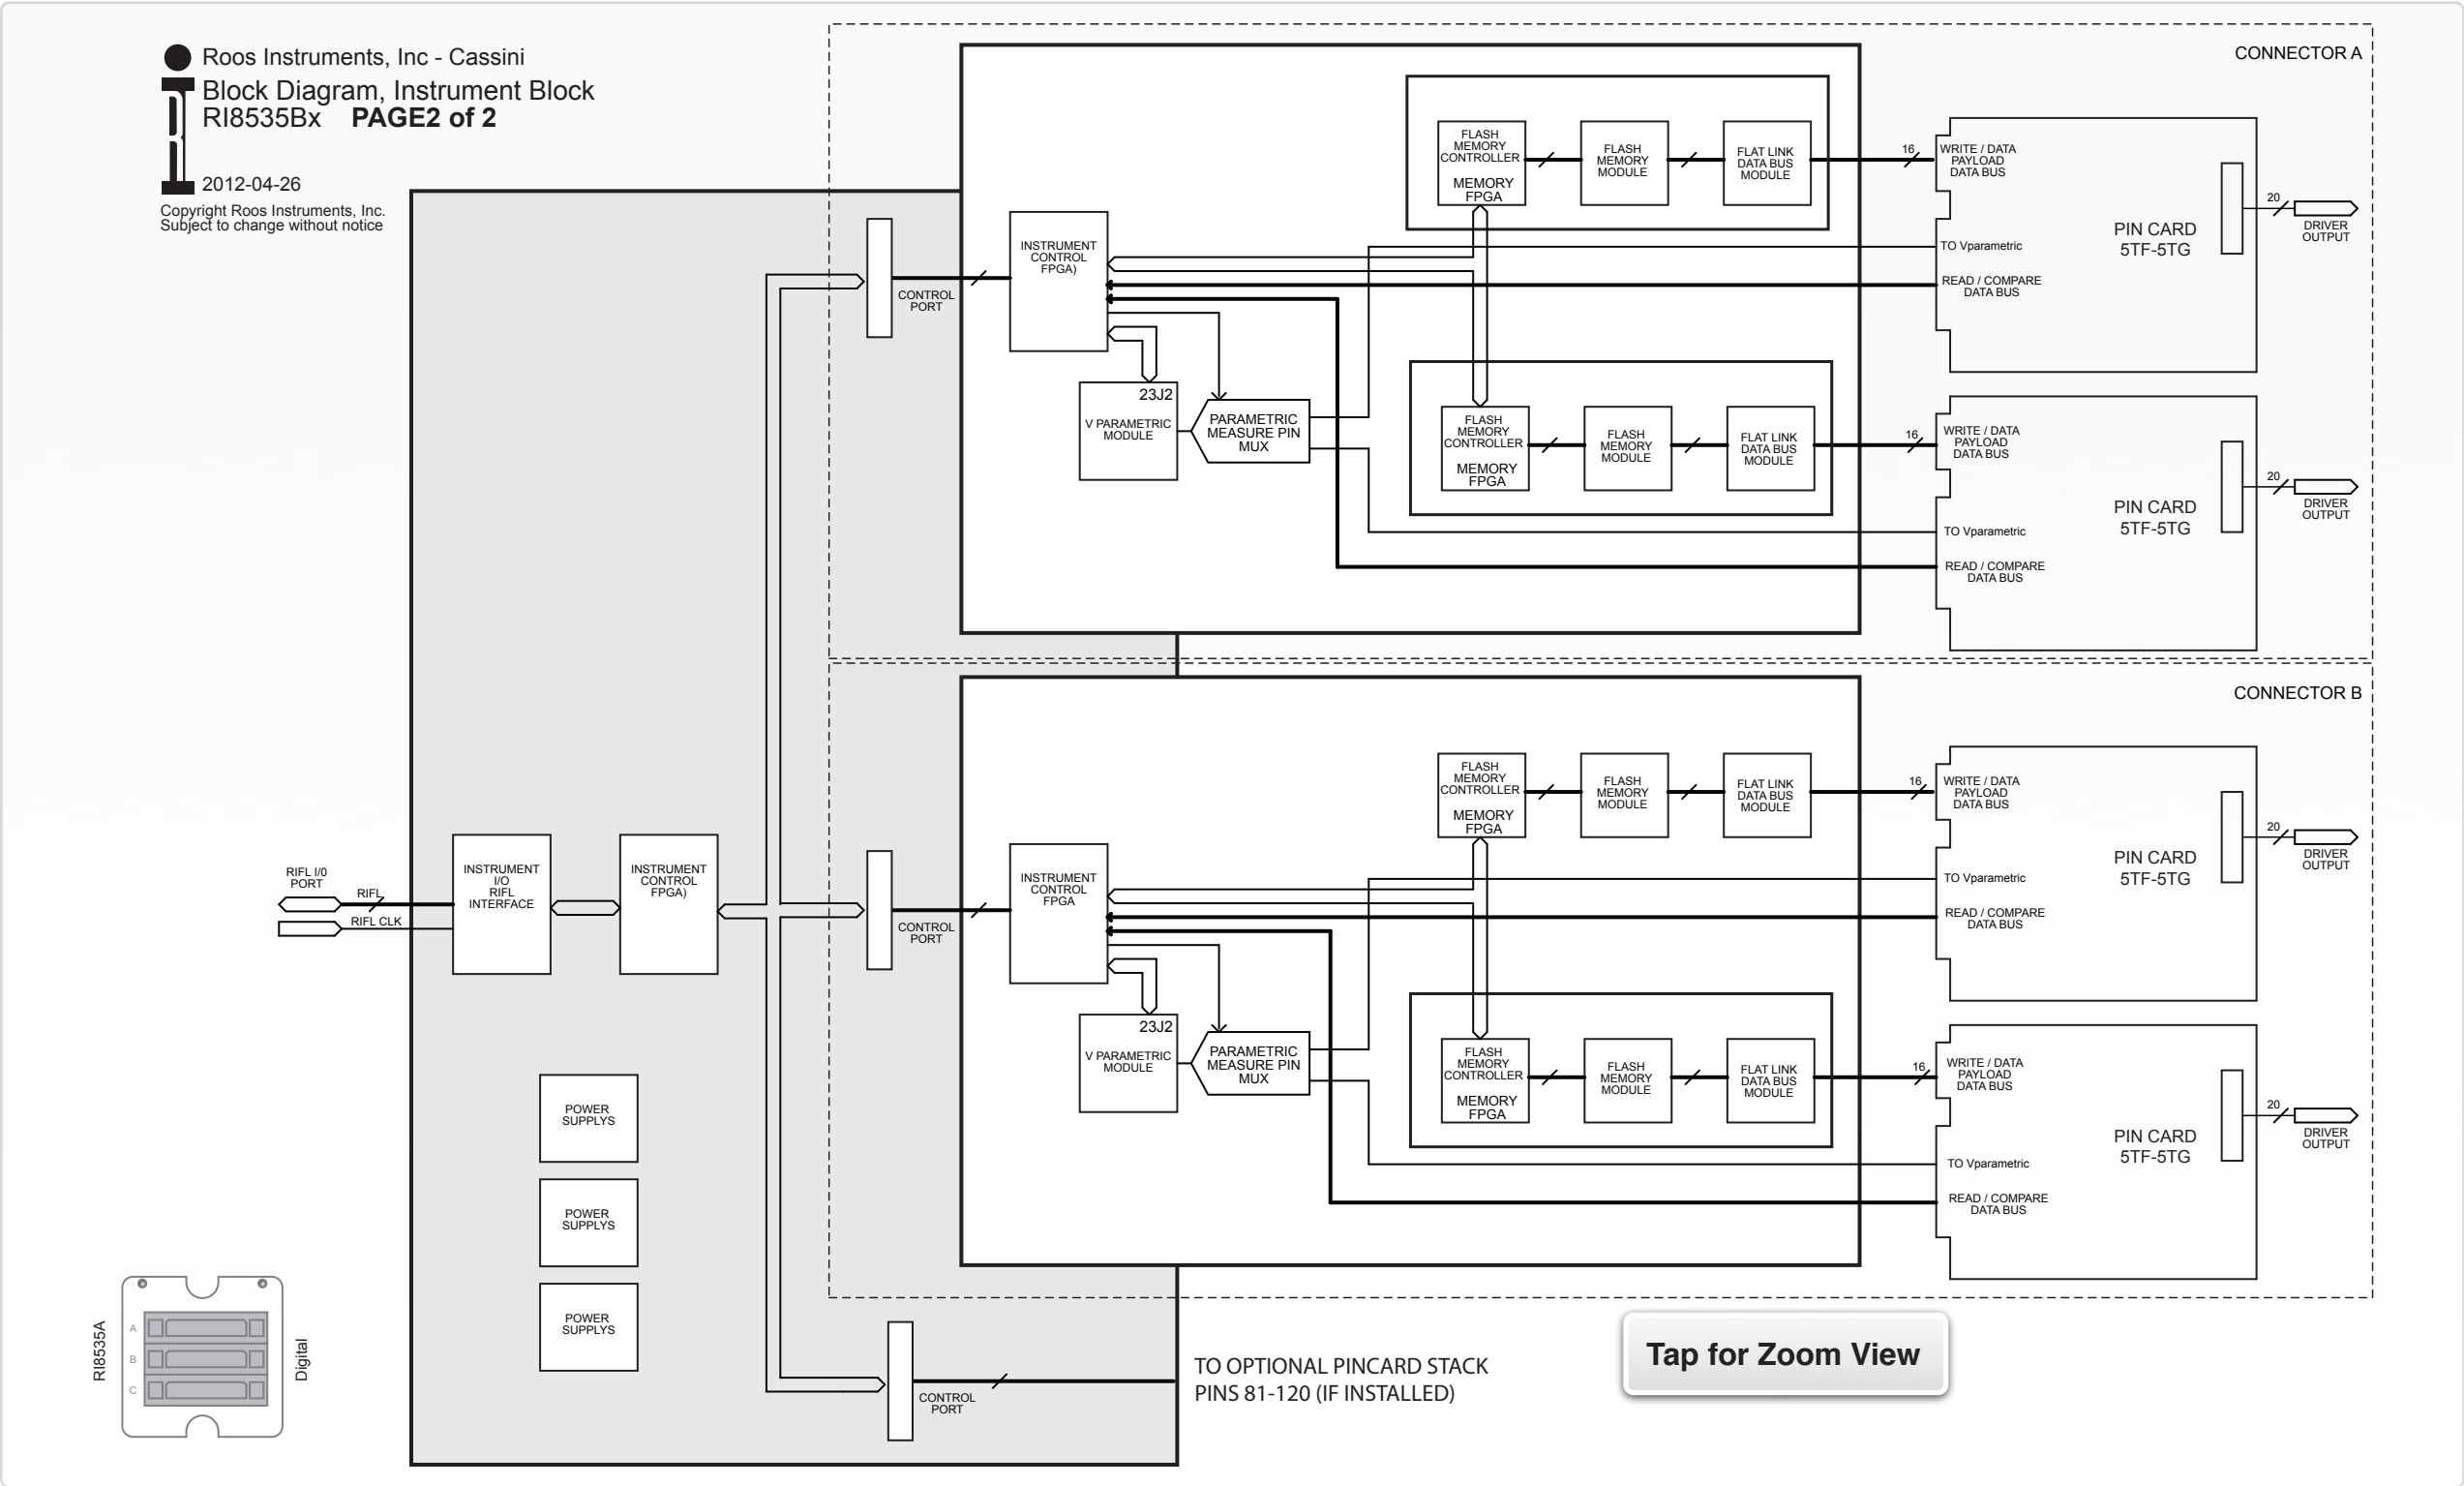


DIAGRAM 1 SCAN CLOCK TIMING REFERENCE

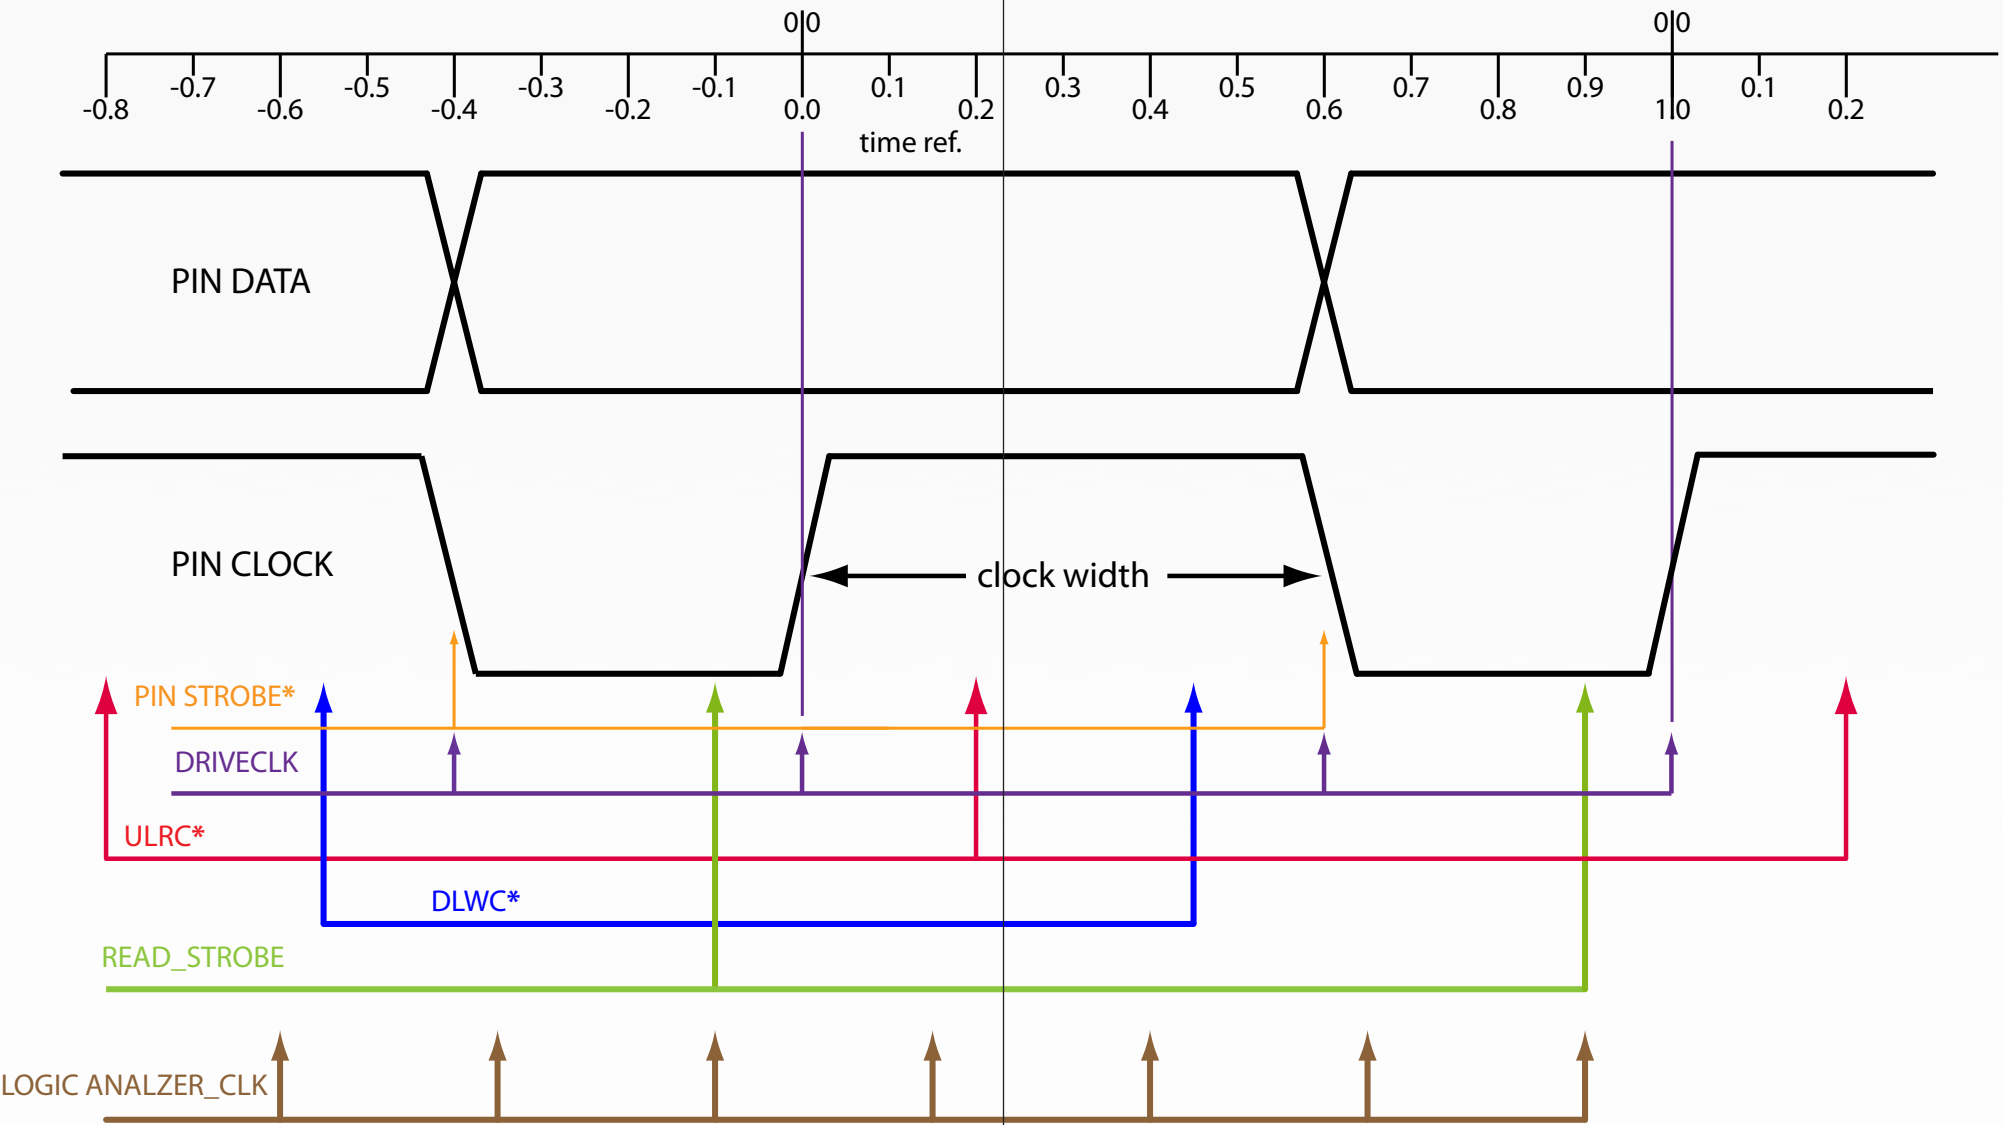

Tap for Zoom View

DRIVE CLK	DRV FOR PINS 1-4, 6-9,11-14, 16-19, 5,10,15	0.0, 0.6
READ_STROBE		-0.1
LA_CLK	LOGIC ANALYZER CLK	-0.35, -0.1, 0.15, 0.4
*ULRC	INTERNAL REFERENCE CLOCK	0.2
*DLWC	INTERNAL REFERENCE CLOCK	0.45
*PIN STROBE	INTERNAL REFERENCE CLOCK	0.6

PERFORMANCE SPECIFICATIONS

Digital

Clock Rate	1 kHz to 100 MHz ± 0.1 Hz
Rise/Fall Times	2 ns
Drive/Compare	0 V to +30 mV (50 Ω) ± 0.25 % 0.03 V to +4.0 V (50 Ω), ± 1 mV

Memory


Depth	128 Mb / 16 Mb (optional / standard)
Fail Memory	32k Vectors

Parametric

V_{Force} Measure	Continuity Mode: -1.5 V to +3.0 V $\pm 0.25\%$ Leakage Mode: -1.0 V to +4.0 V $\pm 0.25\%$ ± 3.0 to +5 V $\pm 0.1\%$
I_{Force} Measure	± 20 mA $\pm 0.25\%$ 20 mA to 20 μ A $\pm 0.4\%$

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

RI8545: 0.1 TO 20 GHz TESTSET

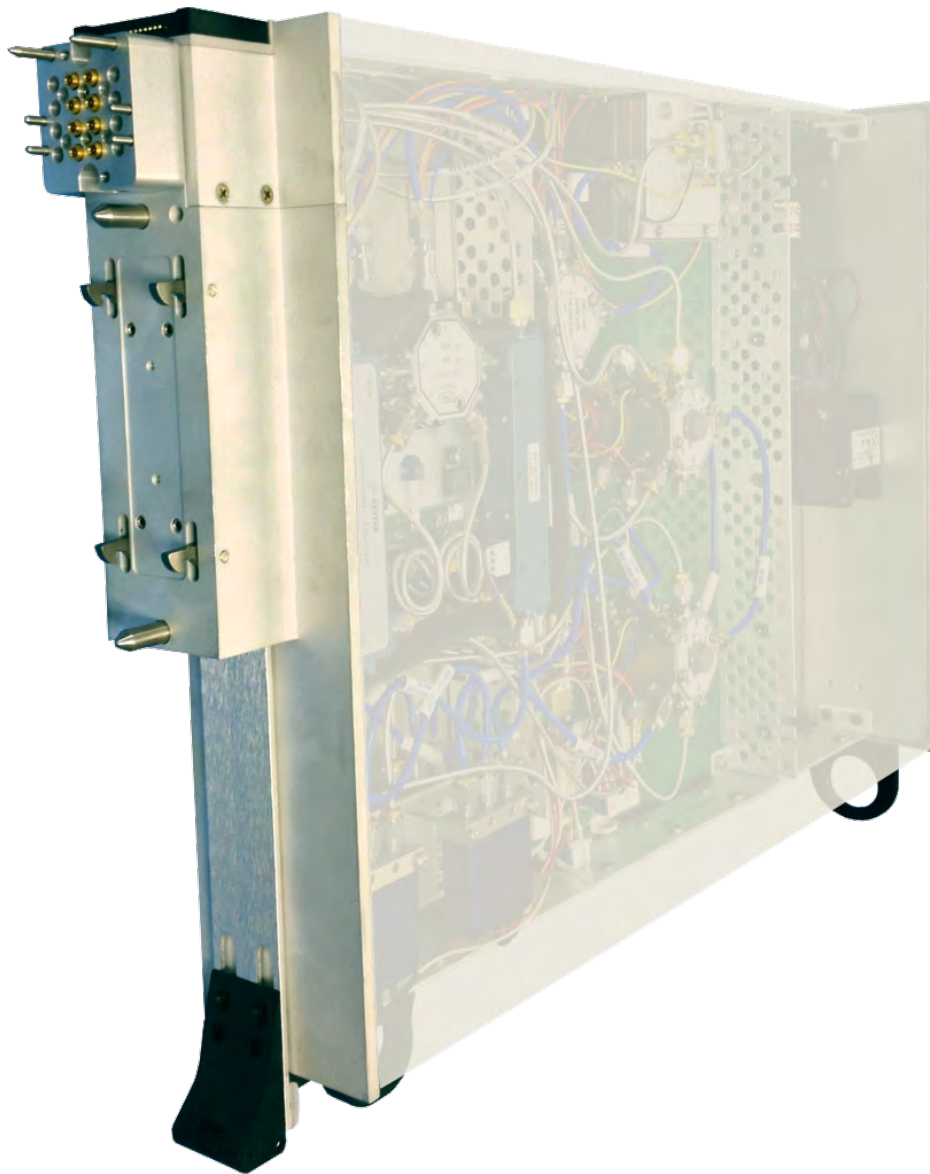

DESCRIPTION

The RI8545 Test Set is a microwave instrument used for precision power, phase, and vector RF measurements across 0.1 to 20 GHz. The multichannel architecture interfaces with a Cassini microwave source and receiver instrument to create a 4-port, vector analyzer with enhanced dynamic range and pin resource switching capability. The instrument enables calibrated and error-corrected 2 or 4 port s-parameters, signal power and harmonic measurement, noise figure, and distortion test.

KEY FEATURES

- 4 Vector Microwave Source & Receive Channels
- NIST Calibrated Noise Source & Vector Error Correction
- Measure Noise Figure, P1dB, Abs. Power & Phase Noise
- Bilateral 2 & 4 Port S-Parameters

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Test Head** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- Test Head, RI8545x 4 port Testset

NOTE: Multiple RI8545 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head, Test Head2, Test Head3, etc). The “x” in RI8564x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8545 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.5

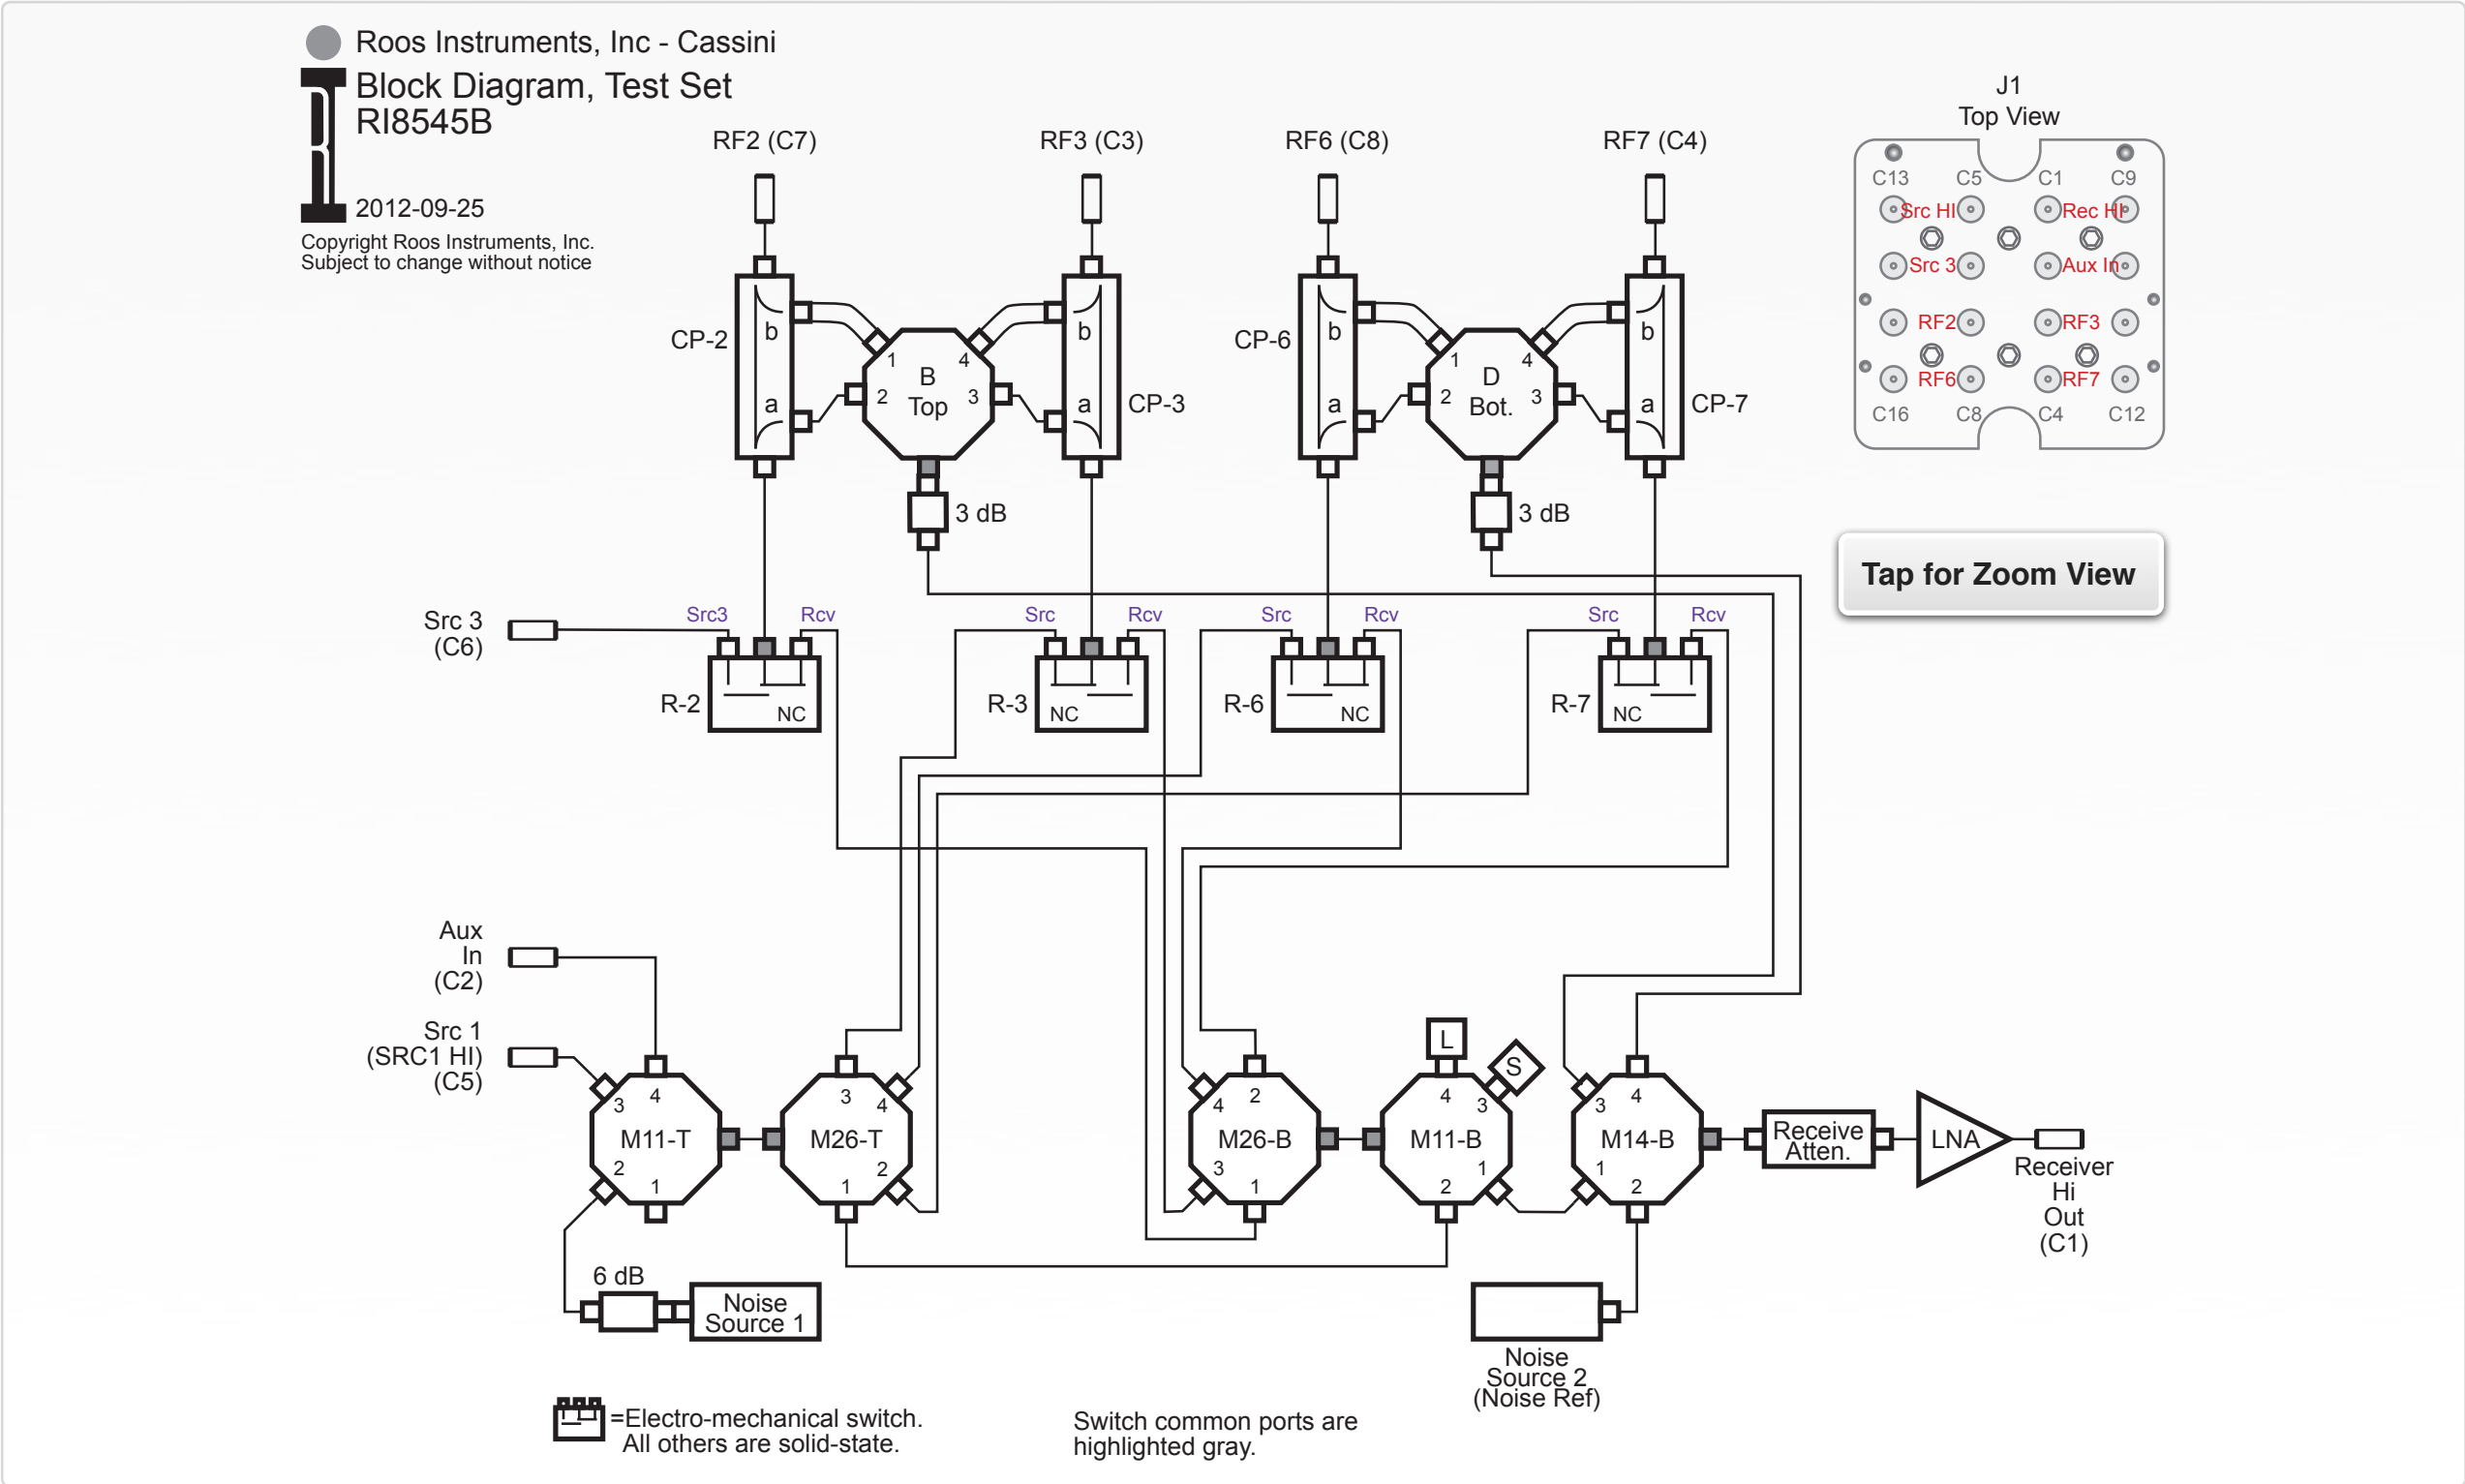


PERFORMANCE SPECIFICATIONS

Frequency Range	0.1 GHz to 20 GHz
Signal Power Range ¹	-120dBm to +30dBm
Noise Source ENR	+18dB @ 2 GHz
Power Accuracy	± 0.1dB

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

¹ Typical performance with an RI8587 Receiver

RI8546: DEVICE POWER/ MEASURE

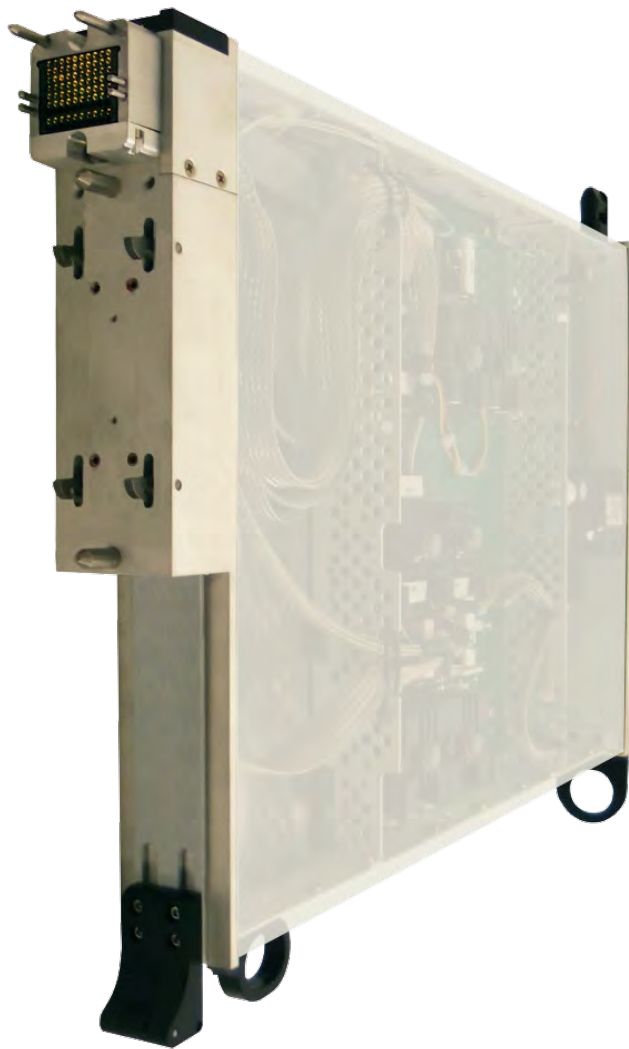

DESCRIPTION

The RI8546 Device Power Instrument provides precision voltage and current supply, digital pin control, and parametric DC measurement in a single instrument. Two high-current power supplies, eight mid-range power supplies, and four low current power supplies provide fast settling voltage and sense feedback for optimal performance in test applications. Eight voltage measure inputs can be configured for differential device applications or ground-referenced multimeter measurements. The internal digital subsystem supports native SPI and I2C protocols along with static pin voltage, continuity and current monitoring.

KEY FEATURES

- 2 x 3A High Power Supplies, 8 x 200 mA Supplies, 16 Static Digital with Parametric Measure
- Protocol-Aware Digital Pin Programming
- 8 Precision Voltage Measure Inputs

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **DutControl**, **PowerVI**, and **StaticDigital** instruments in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- DutControl, RI7421x Dut Control
- PowerVI, RI7431x High Current Supplies
- StaticDigital, RI74311x 16-bit Device Digital Controller

NOTE: Multiple RI8546 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - DutControl,PowerVI,StaticDigital ; DutControl2,PowerVI2,StaticDigital2; DutControl3,PowerVI3,StaticDigital3 ; etc.).

The “x” in the instrument names denotes the model revision number.

The DUTControl instrument provides essentially three independent voltage supply and measure resources behind various switching schemes to provide a flexible resource routing network within the TIM:

- 16 device power pins (DP1..DP16) capable of sourcing and measuring DC voltage and current. These pins are subdivided into two banks of eight, with each bank being driven by two independent DC supplies: DP9..DP16 by $VCC1 \pm 10\text{ V}$, 200 mA and $VCC2 \pm 10\text{ V}$, 200 mA; DP1..DP8 by $VCC3 \pm 10\text{ V}$, 200 mA; $VCC4 \pm 10\text{ V}$, 200 mA). Each pin in the bank of eight can use one of the two supplies with different voltage values, or both can be

used in parallel with the same voltage value for increased current capacity. Each of the four independent supplies has an internal current or voltage measurement resource (*Meas I/V 1/2/3/4*), allowing for current or voltage measurement. An additional *Monitor* line on the device power pins allows a precision measurement resource (*DPVP Meas I/V*) to be switched in to the pin resource to measure voltage, current, or perform continuity type measurements (force current, measure voltage; force voltage, measure current)

- 4 dedicated DC supplies ($VCC5 \pm 10\text{ V}$, 200 mA; $VCC6 \pm 10\text{ V}$, 200 mA; $VCC7 \pm 10\text{ V}$, 200 mA; $VCC8 \pm 10\text{ V}$, 200 mA) that drive supply pins $VCC5F$, $VCC6F$, $VCC7F$, $VCC8F$ with an external sense line pin for each: $VCC5S$, $VCC6S$, $VCC7S$, $VCC8S$. These four independent force and sense pin resources can provide additional, high-precision DC voltage at a DUT pin using voltage-sense feedback to compensate for any ohmic losses through the device interface.
- 8 voltage measure pins provide single-ended (ground-referenced) or differential voltage measurement. A switching network between the measure pins and *Meas V $\pm 10\text{ V}$* resource allows for flexible resource routing.

The PowerVI instrument provides two independent, high-current voltage supply and measure resources:

- Voltage or Current supply from $VI1\ 0\text{-}10\text{ V}$, 3 A and $VI2\ 0\text{-}10\text{ V}$, 3 A are available on the TIM's output pins via $VI1F(H\text{-}3)$, $VI1F(H\text{-}5)$, $VI2F(H\text{-}8)$, and $VI2F(H\text{-}10)$. Sense pin resources $VI1S(H\text{-}4)$ and

VI1S (H-9) compensate for any ohmic losses through the device interface.

The StaticDigital instrument provides a basic digital communication subsystem and digital pin resources for low-level DUT control, communication, and measurement:

- 16 device bit pins (DB1..DB16) provide static-voltage supply, measure, and can be configured as data, clock, and strobe lines for I2C and serial communications. These pins are subdivided into two banks of eight, with each bank being driven by two independent DC supplies ($V_{ON} \pm 10\text{ V}$, 2 mA ; $V_{OFF} \pm 10\text{ V}$, 2 mA) to define the 'on' and 'off' voltage states for each bank of 8 pins (high and low bits). A *Monitor* line on the device bits allows a precision measurement resource (*DPVP Meas I/V*) to be switched in to the pin resource to measure voltage, current, or perform continuity type measurements (force current, measure voltage; force voltage, measure current).
- The subset of DB pins listed support higher speed communication up to 1 MHz clock speeds on their respective supply banks: DB1 and DB9 - High-speed Read Pins; DB2 and DB10 - High-speed Write Pins; DB3 and DB11 - High-speed Clock Pins




TIM OPERATIONS

Reference the [RI8546 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.6

Roos Instruments, Inc - Cassini
Device Power
RI8546A/B/C
2012-08-24
Copyright Roos Instruments, Inc.
Subject to change without notice

Notes:
1) GS, VCC5-8GS and VI*GS are the ground references. They should be grounded at the DUT.
2) VI RTN are the high current return for VIs. They should be grounded at the DUT with heavy wire.
3) Values are for reference only.
Refer to specifications for complete performance values.

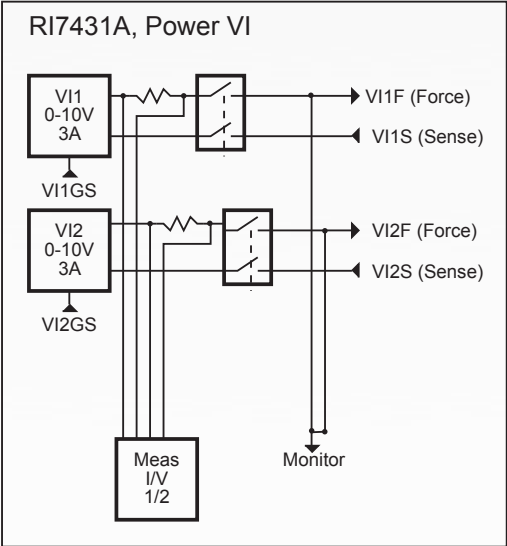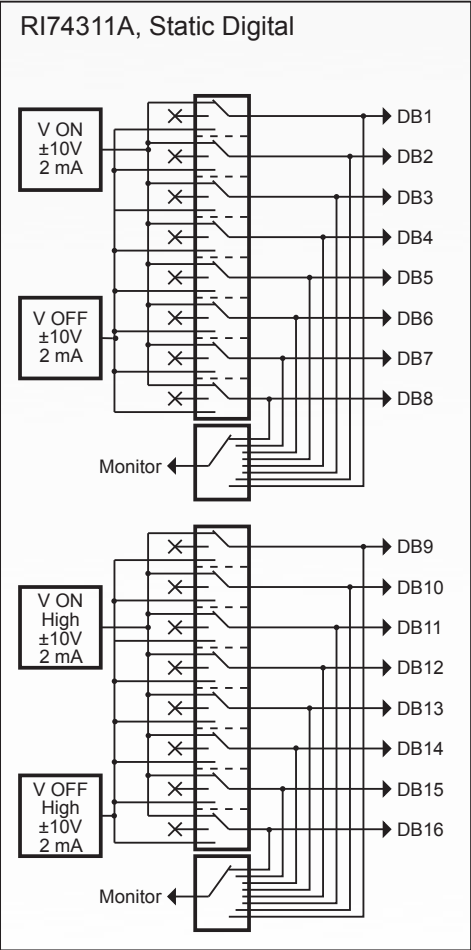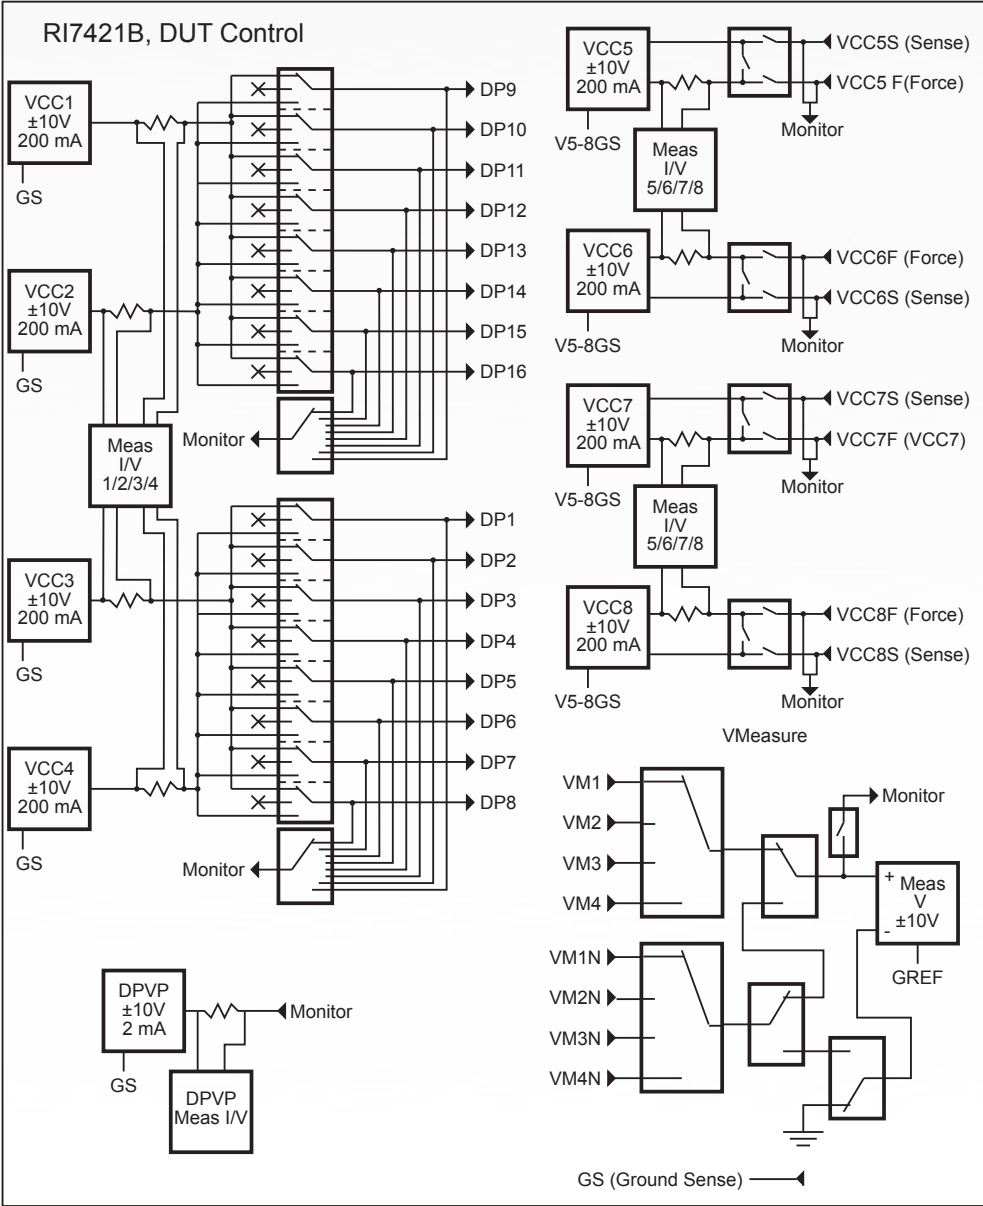

A1	1	2	3	4	5	6	7	8	9	10	A10
A	RTN (M13-1)	DB1 (M13-2)	DB2 (M13-3)	DB3 (M13-4)	DB4 (M13-5)	DB5 (M13-6)	DB6 (M13-7)	DB7 (M13-8)	DB8 (M13-9)	RTN (M13-10)	
B	RTN (M9-1)	DB9 (M9-2)	DB10 (M9-3)	DB11 (M9-4)	DB12 (M9-5)	DB13 (M9-6)	DB14 (M9-7)	DB15 (M9-8)	DB16 (M9-9)	RTN (M9-10)	
C	RTN (M15-1)	GS (M15-2)	VM1N (M15-3)	VM3N (M15-4)	VM2N (M15-5)	VM1N (M15-6)	VM4 (M15-7)	VM3 (M15-8)	VM2 (M15-9)	VM1 (M15-10)	
D	V5-8GS (M14-1)	VCC5F (M14-2)	VCC5S (M14-3)	VCC6F (M14-4)	VCC6S (M14-5)	VCC7F (M14-6)	VCC7S (M14-7)	VCC8F (M14-8)	VCC8S (M14-9)	RTN (M14-10)	
E	RTN (M30-1)	DP1 (M30-2)	DP2 (M30-3)	DP3 (M30-4)	DP4 (M30-5)	DP5 (M30-6)	DP6 (M30-7)	DP7 (M30-8)	DP8 (M30-9)	N/A (M30-10)	
F	RTN (M26-1)	DP9 (M26-2)	DP10 (M26-3)	DP11 (M26-4)	DP12 (M26-5)	DP13 (M26-6)	DP14 (M26-7)	DP15 (M26-8)	DP16 (M26-9)	N/A (M26-10)	
G											
H	V11R (M29-1)	V11GS (M29-2)	V11F (M29-3)	V11S (M29-4)	V11F (M29-5)	V12R (M29-6)	V12GS (M29-7)	V12F (M29-8)	V12S (M29-9)	V12F (M29-10)	
I											
I1											I10

Tap for Zoom View

PERFORMANCE SPECIFICATIONS

	Supply ¹		Measure ¹	
	Range	Precision	Range	Resolution
Device Power	±10 V ±200 mA	0.3 mV 10 µA	±10 V 0.250 mA to 250 mA	0.3 mV 36 nA
High Power	0 V to 10 V 2.5 A (max) 3 A (pulsed)	10 mV	0 V to 10 V 30 mA to 3 A	10 mV 44 µA
V Measure	±10 V ±2 mA	5 mV 1 µA	±10 V ±2 µA to ±2 mA ¹	1.5 mV 12 pA to 290 µA ¹
Static Digital	±10 V ±2 mA (max)	± 0.1dB	Protocol	
			SPI	60 kbits / 2.5 Mbits
			I ² C	60 kbits / 2.5 Mbits

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

¹ Range/Resolution limits set by instrument mode.

RI8556: SMALL CASSINI INFRASTRUCTURE



DESCRIPTION

The RI8556A model infrastructure is commonly referred to as the Small Cassini or Cassini 8. It includes a test head with 8 slots and manipulator arm with 4 degrees of freedom: vertical lift, rotation, horizontal extension, and pivotal movement. The integrated instrument rack houses AC/DC power supply, the system controller, and supports Cassini 8 instrumentation.

RI8556A INFRASTRUCTURE DIMENSIONS

- Height: 1590 mm (62.6 in)
- Table Surface Height: 925 mm (36.4 in)
- Depth: 733 mm (28.9 in)
- Width: 853 mm (33.6 in)
- Max Shipping Weight: 250 Kg (550 lbs)

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appears as **Tester** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Tester, Ri8549x Cassini 8 Slot Tester

TESTER VOLTAGE SPECIFICATIONS

Tester instrument provides power to the Fixture, Fixture Modules and any active components installed on the DIB.

Voltage (V)	Max Current (A)
+5	1.51
+15	0.5
+28	0.5
-15	0.5
-5	1.5

INSTRUMENT LOCATION

The FIX block is located in the center of the Test Head . A Harness Block or Pin Block is used to access resources provided by the Tester instrument.

INSTRUMENT OPERATIONS

Reference the **Tester** instrument in the [RI8574 System Controller section](#) of the Graphical Programming chapter for configuration, edit and control panels.

FIGURE 8.1 RI8556A INFRASTRUCTURE DIMENSIONS

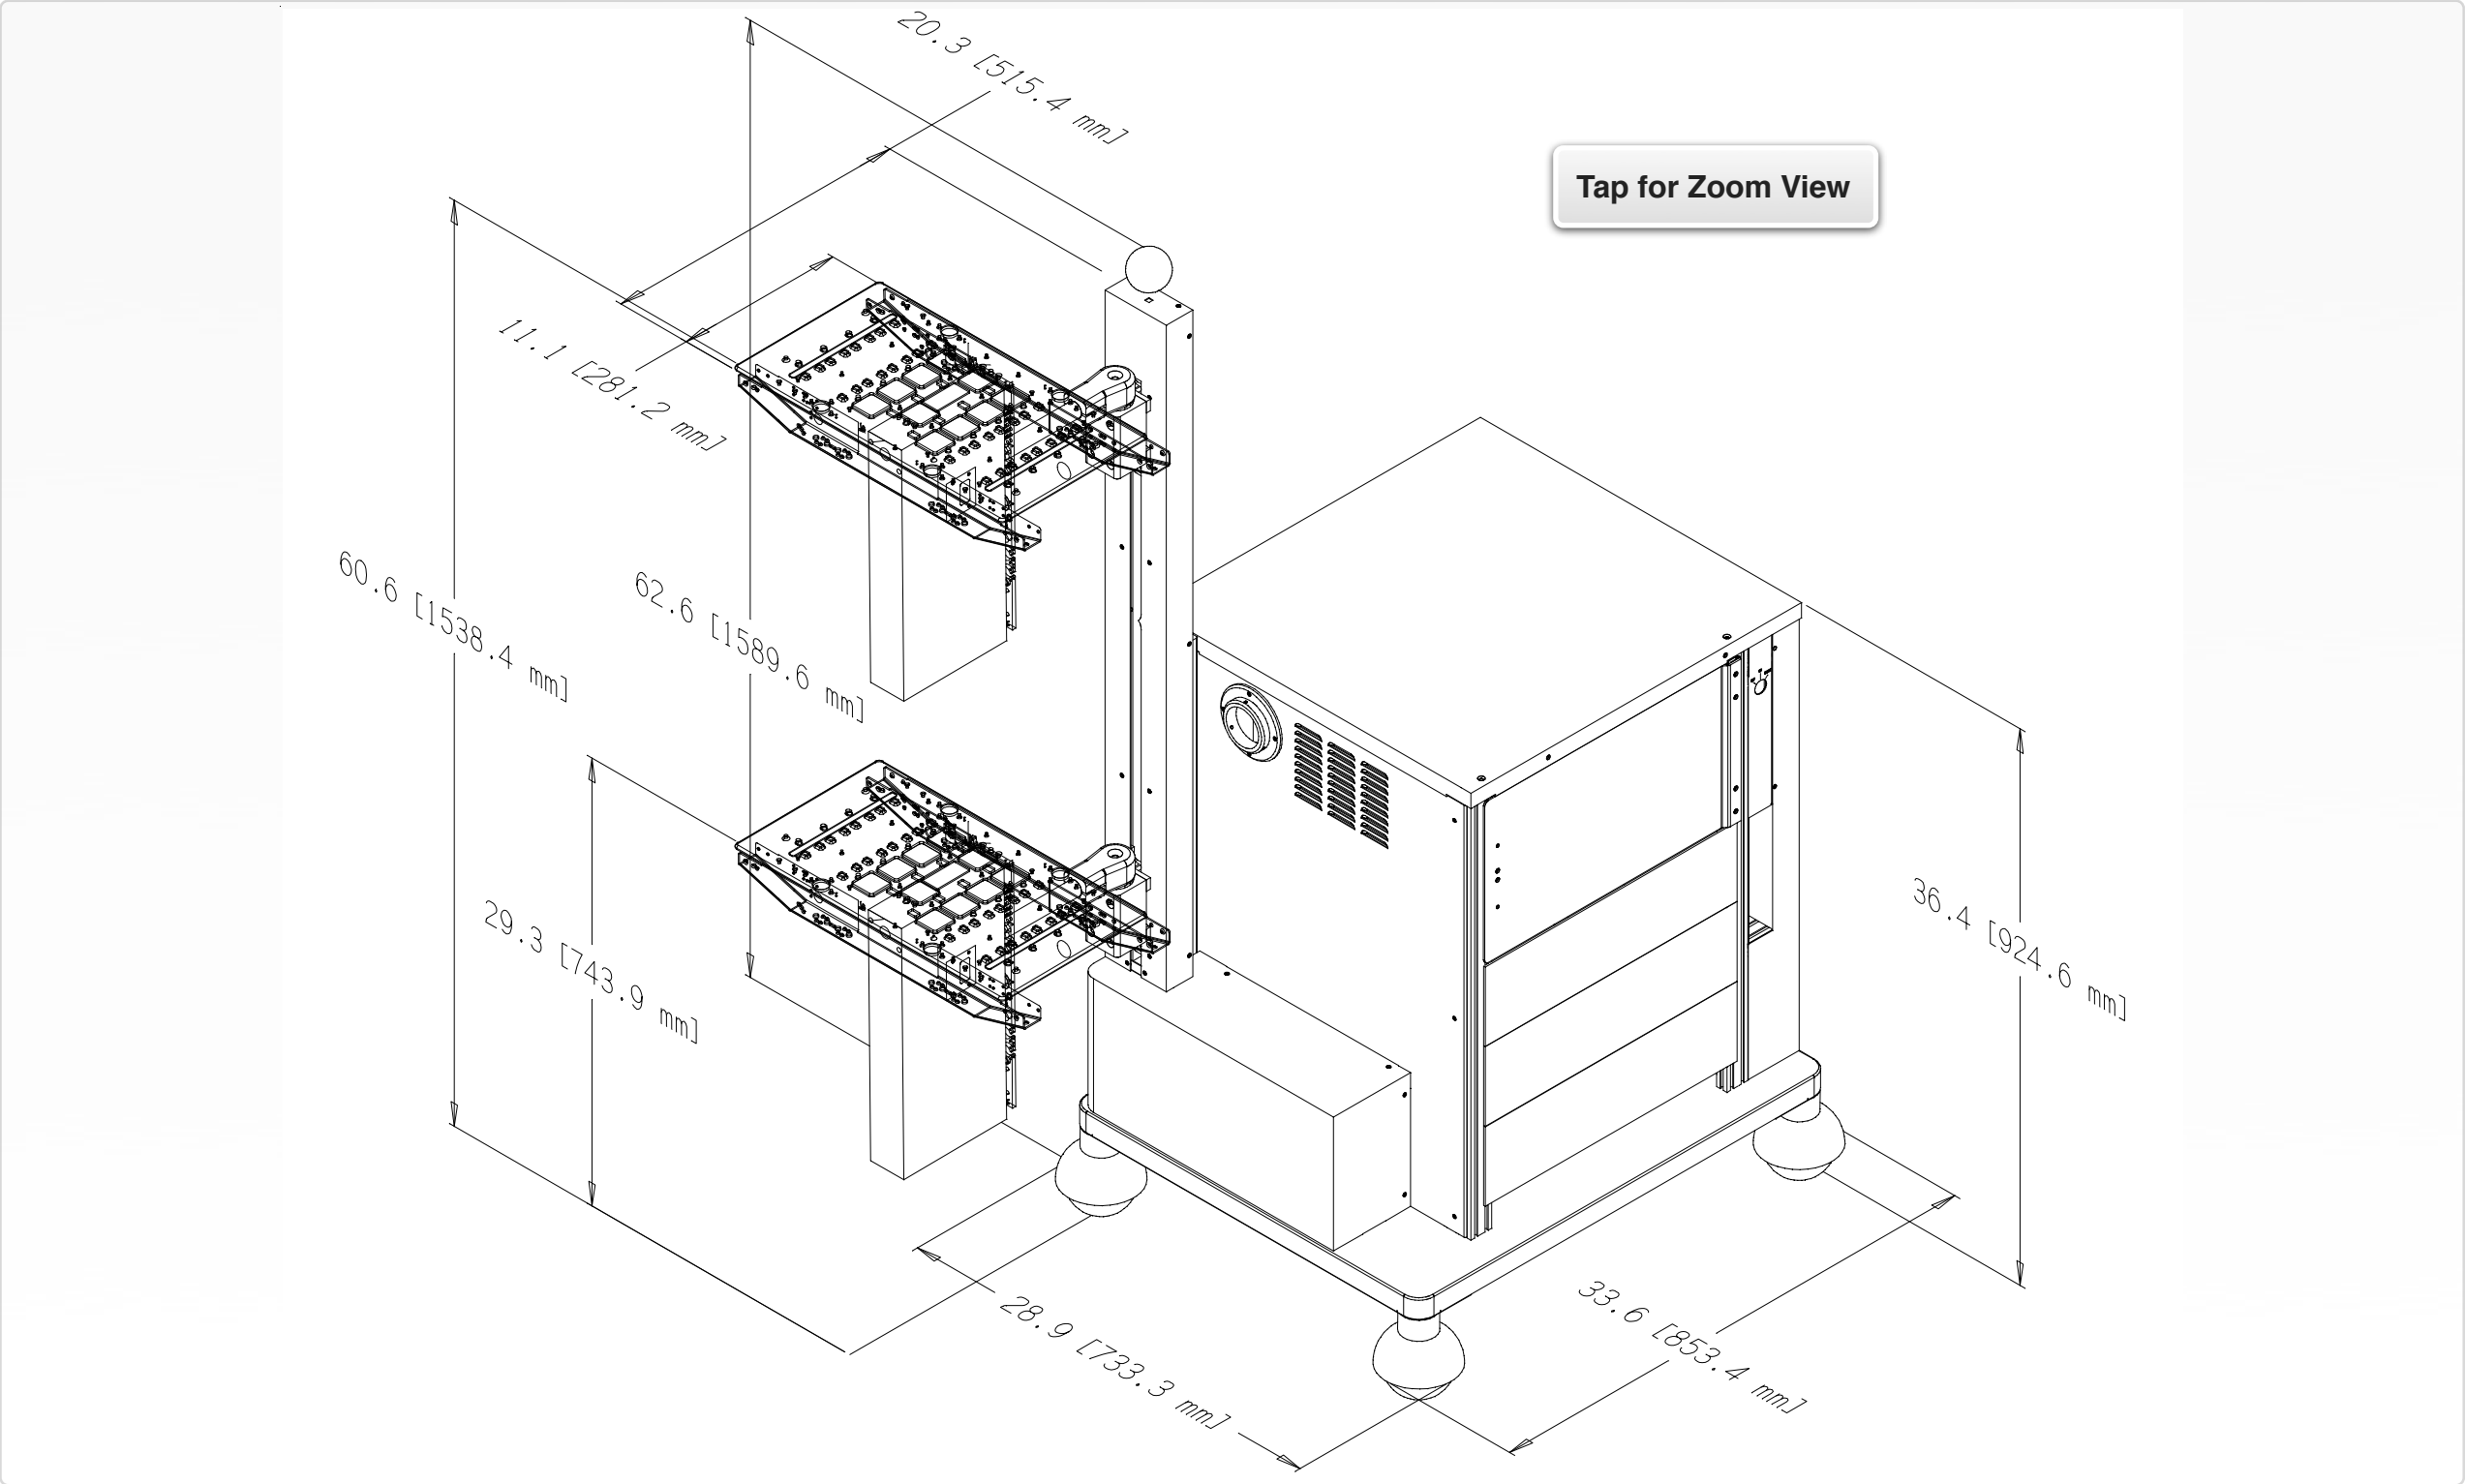


FIGURE 8.2 RI8556A TEST HEAD TRAVEL


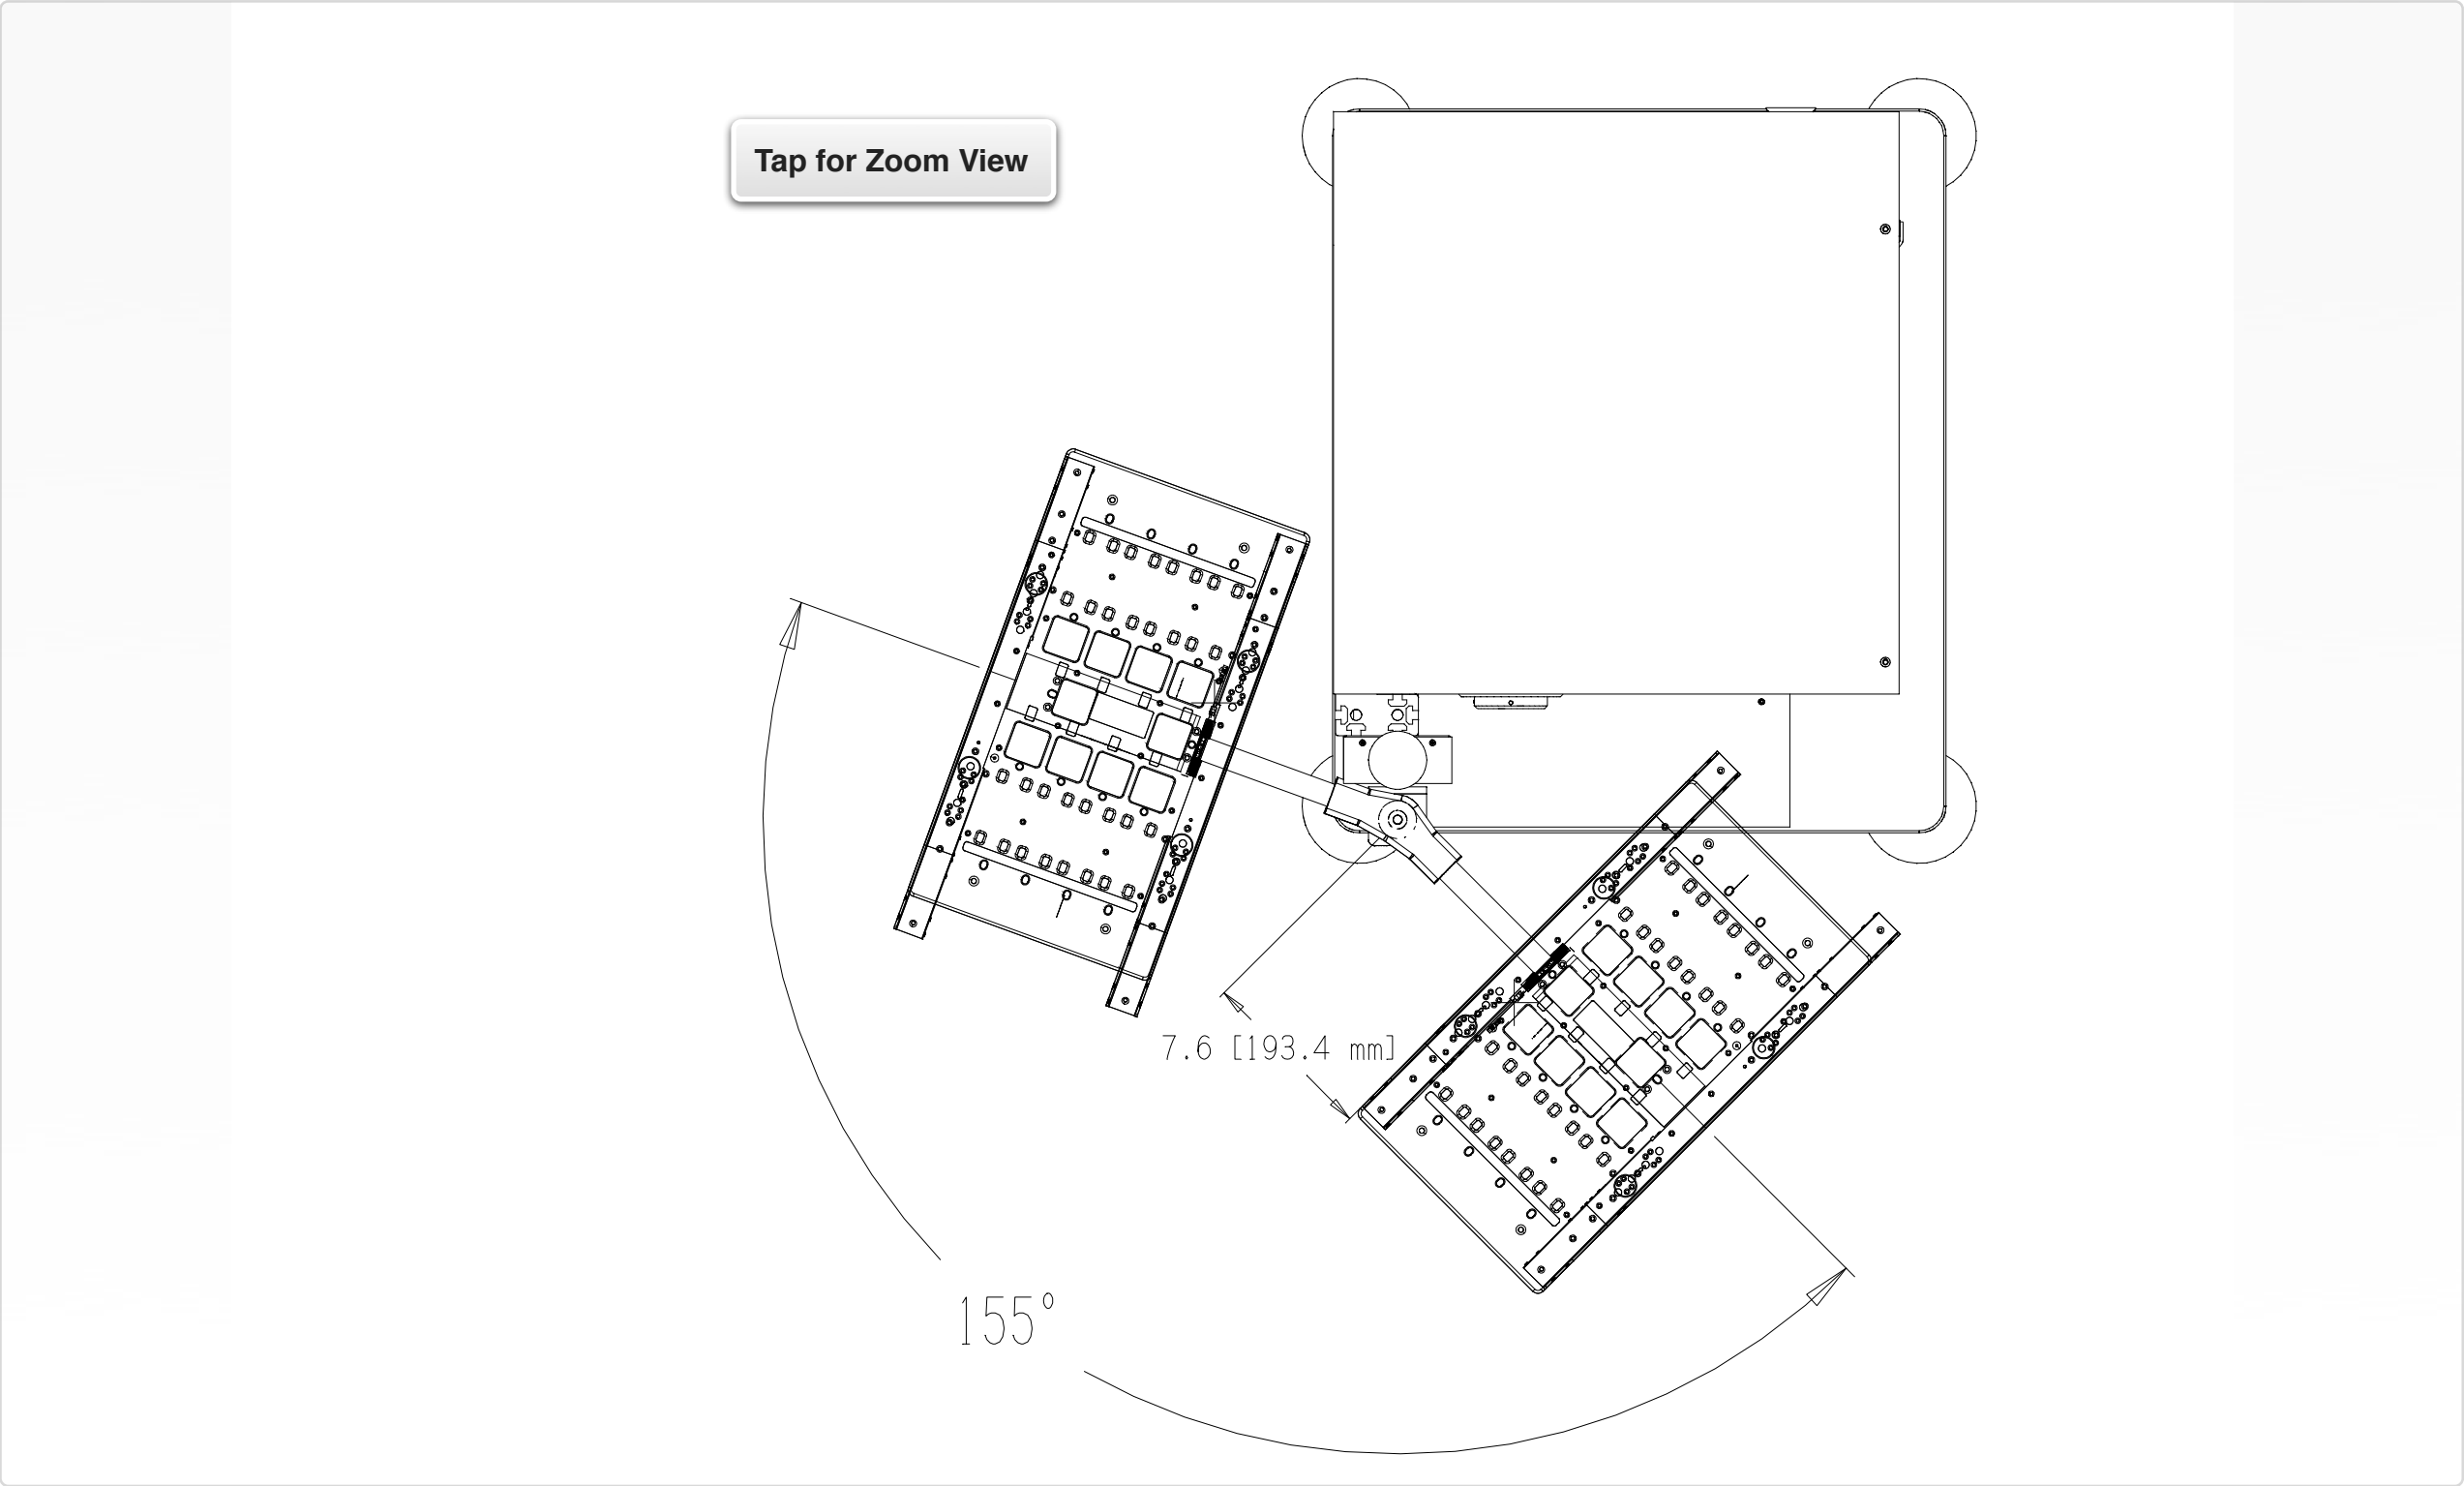


FIGURE 8.3 RI8556A TEST HEAD ROTATION



RI8557: LARGE CASSINI INFRASTRUCTURE

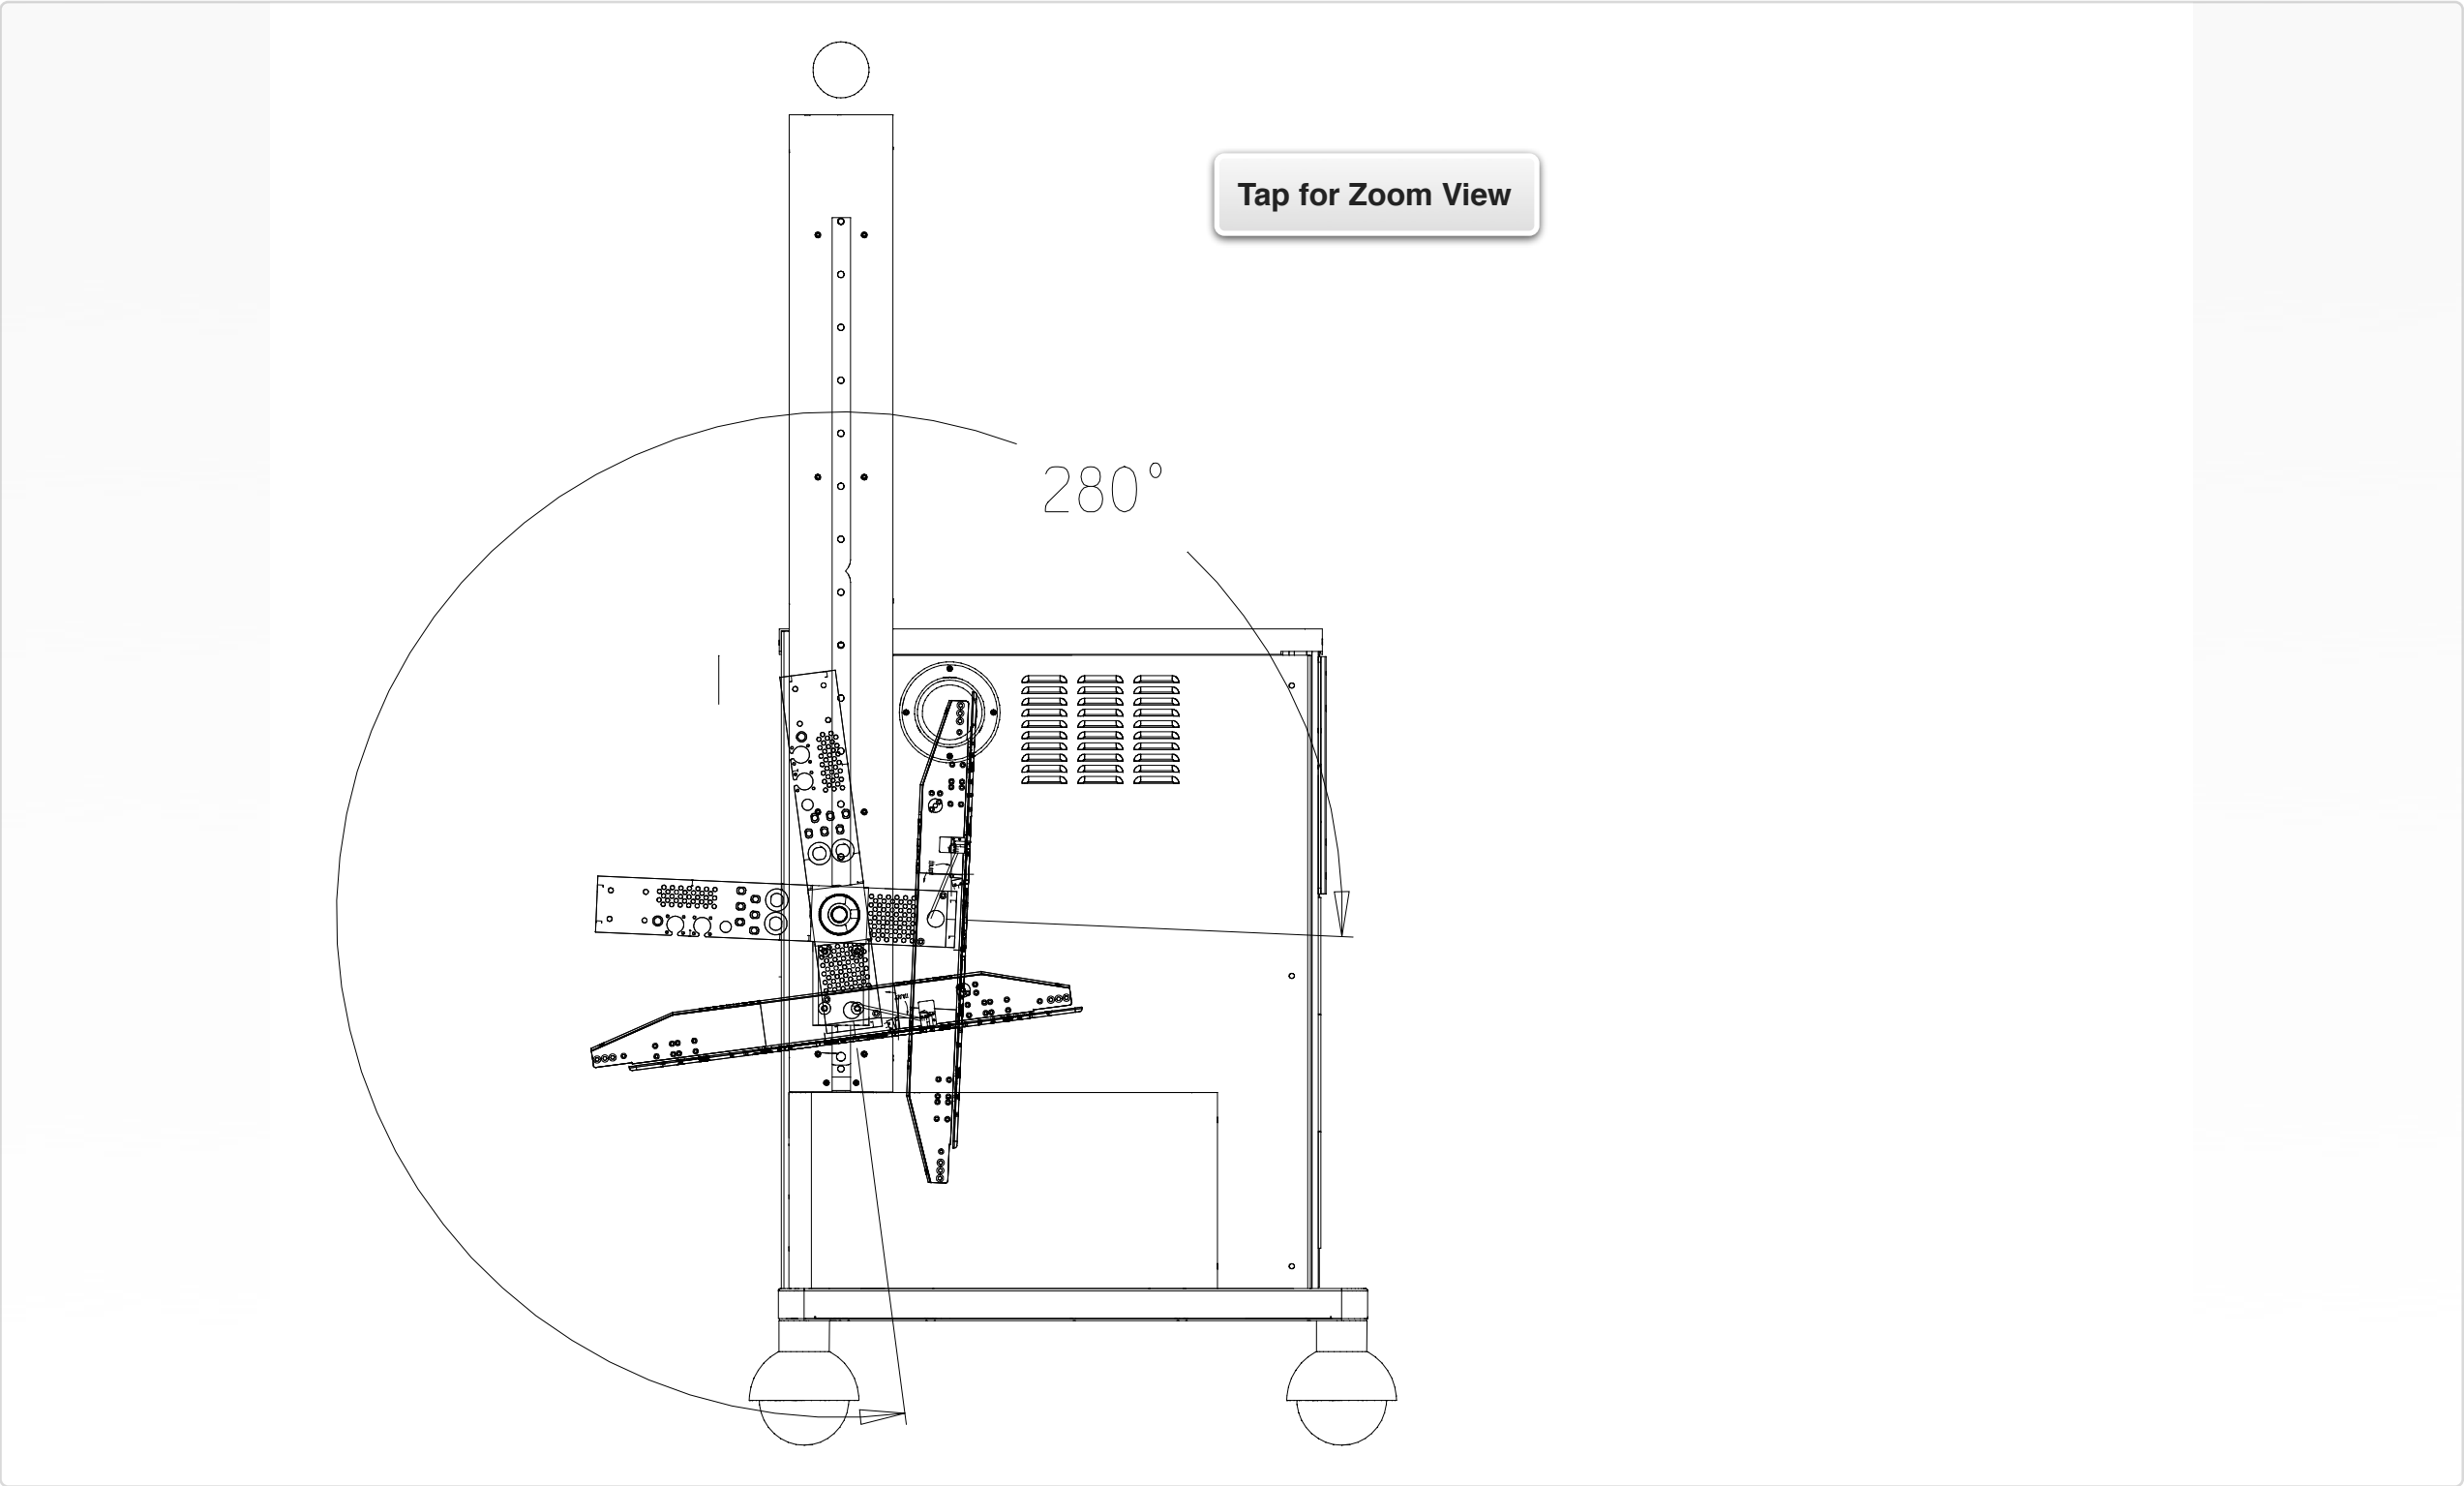

DESCRIPTION

The RI8557A model infrastructure is commonly referred to as the Large Cassini, Big Cassini, Tall Cassini or RI7100C. It includes a test head with 8 slots and manipulator arm with 4 degrees of freedom: vertical lift, rotation, horizontal extension, and pivotal movement. The auxiliary rack houses AC/DC power supply, the system controller, and Test Head holds 8 Cassini TIMs.

RI8557A INFRASTRUCTURE DIMENSIONS

- Height: 1698 mm (66.9 in)
- Depth: 900 mm (35.4 in)
- Width: 838 mm (33.0 in)
- Max Shipping Weight: 300 Kg (660 lbs)

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appears as **Tester** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Tester, Ri8549x Cassini 8 Slot Tester

TESTER VOLTAGE SPECIFICATIONS

Tester instrument provides power to the Fixture, Fixture Modules and any active components installed on the DIB.

Voltage (V)	Max Current (A)
+5	1.51
+15	0.5
+28	0.5
-15	0.5
-5	1.5

INSTRUMENT LOCATION

The FIX block is located in the center of the Test Head . A Harness Block or Pin Block is used to access resources provided by the Tester instrument.

INSTRUMENT OPERATIONS

Reference the **Tester** instrument in the [RI8574 System Controller section](#) of the Graphical Programming chapter for configuration, edit and control panels.

FIGURE 8.4 RI8557A INFRASTRUCTURE FOOTPRINT

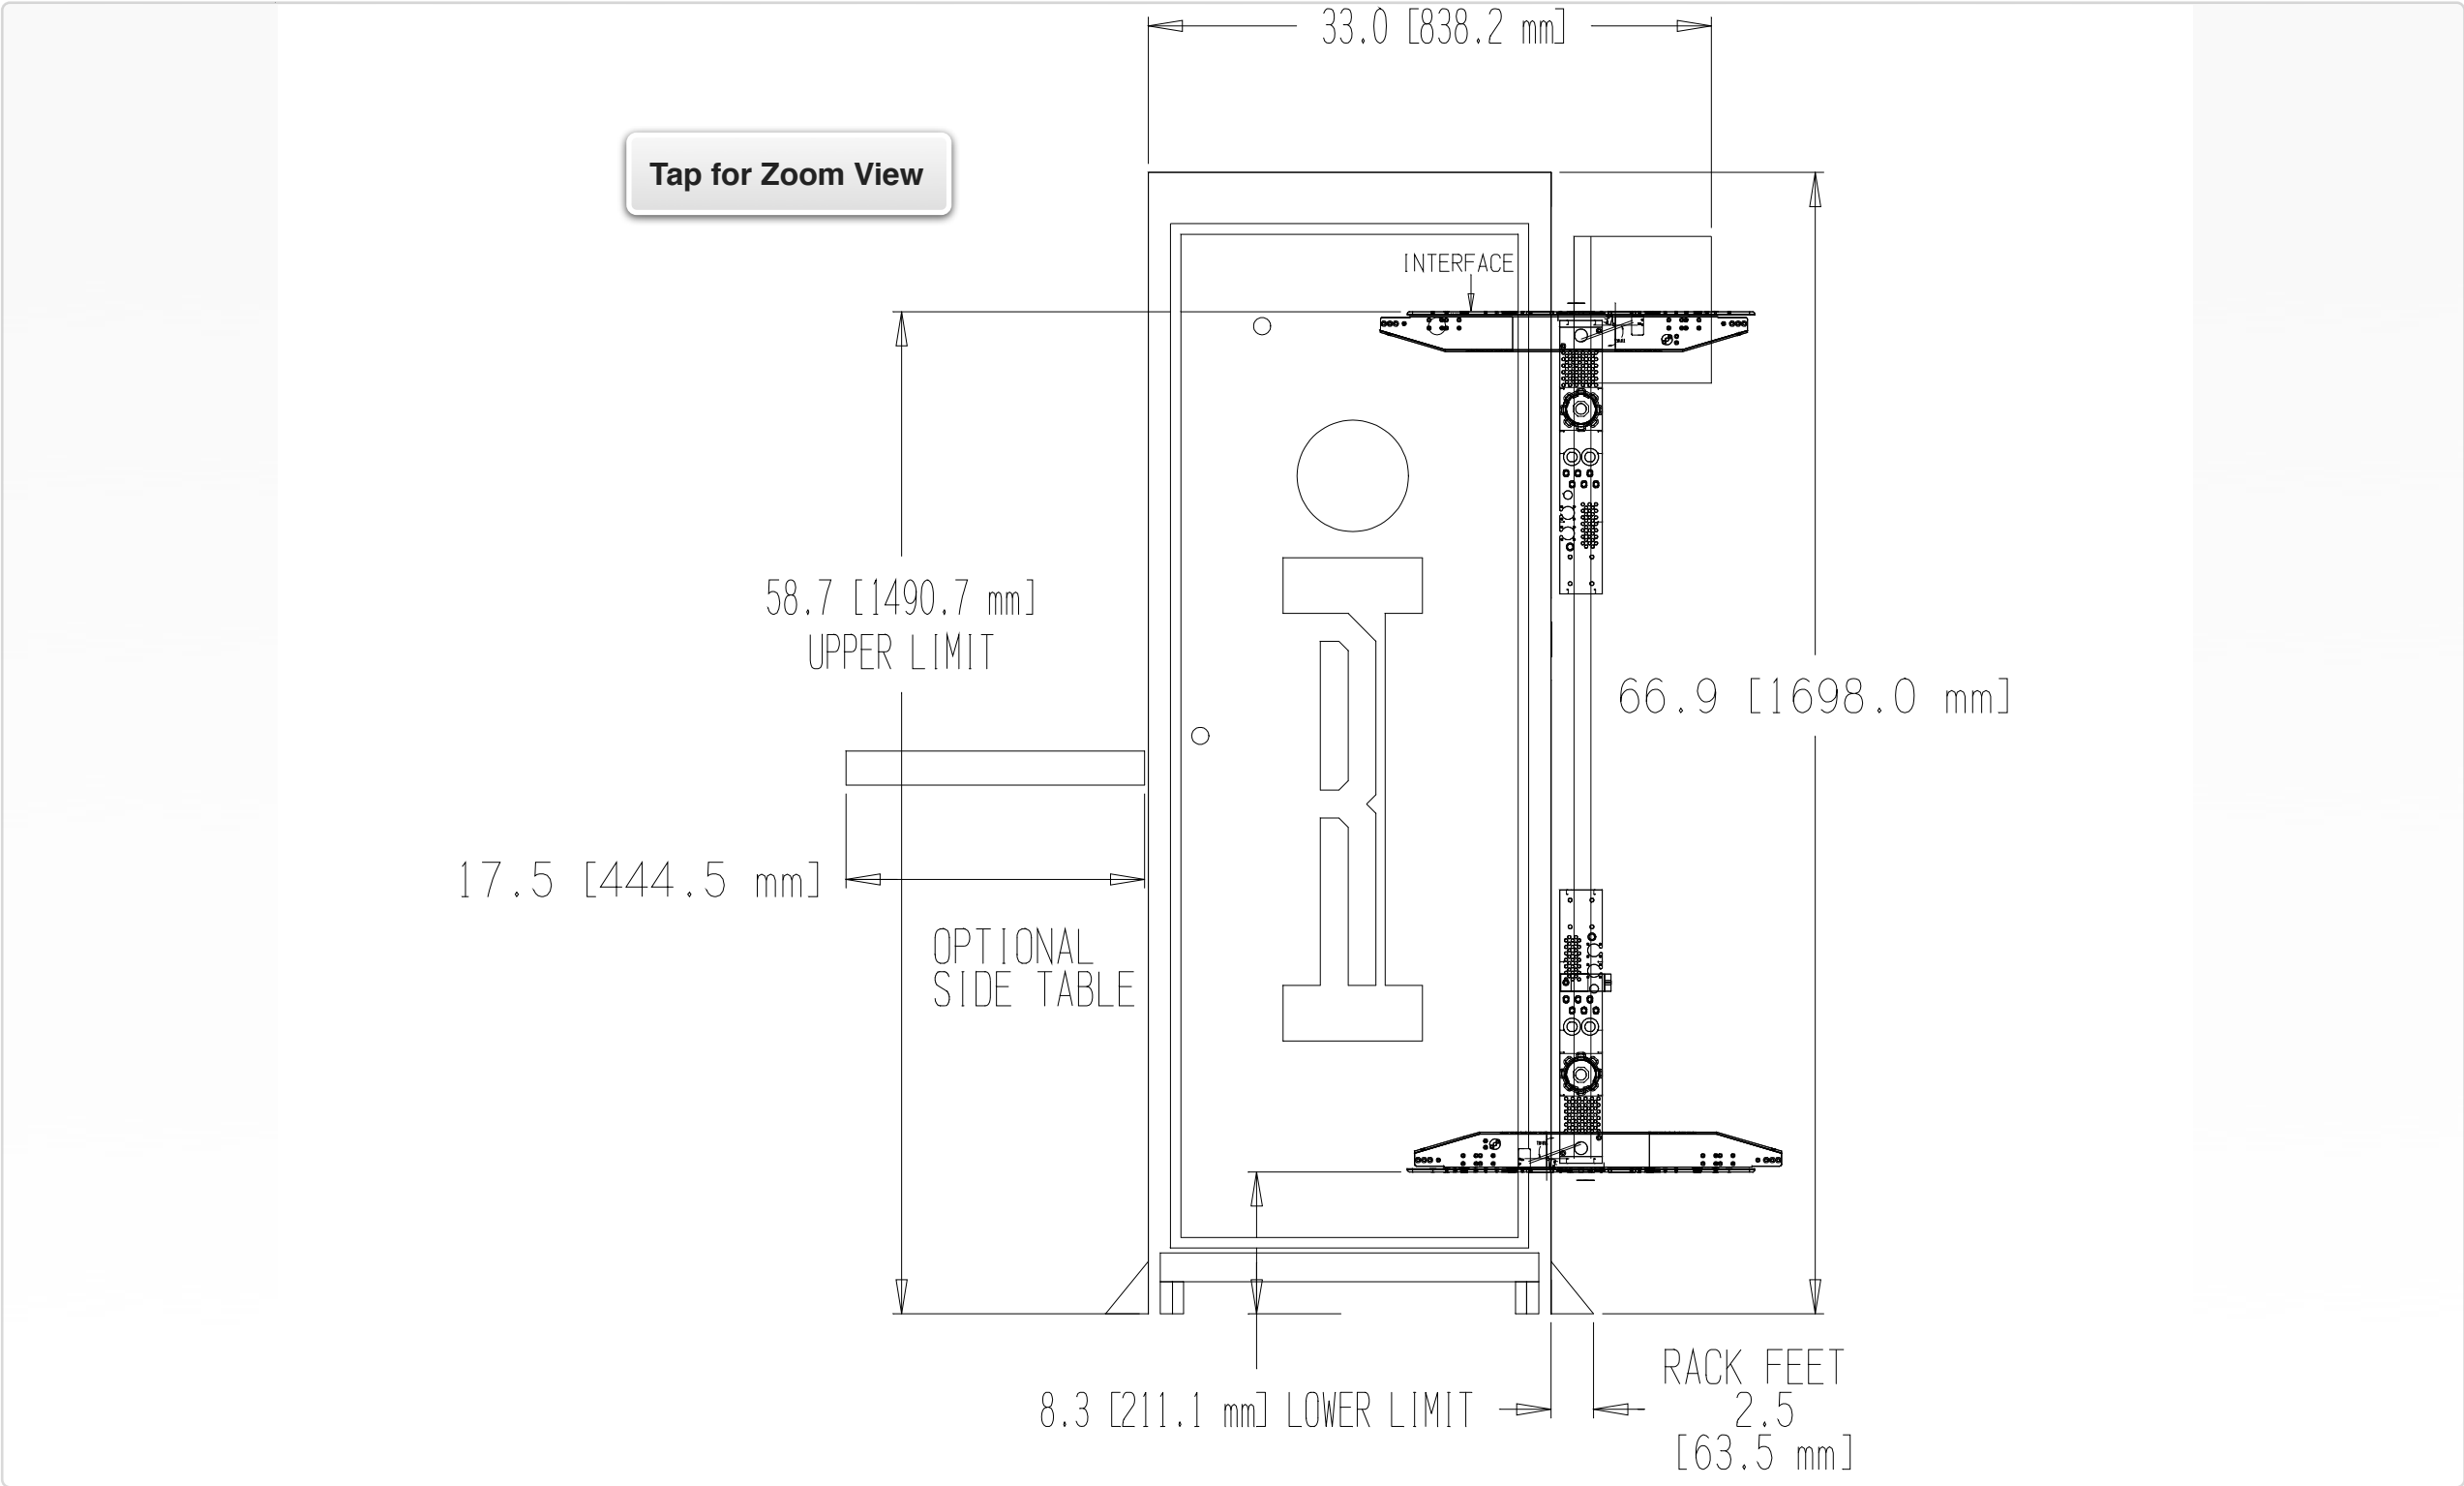


FIGURE 8.5 RI8557A TEST HEAD ROTATION COMPLIANCE

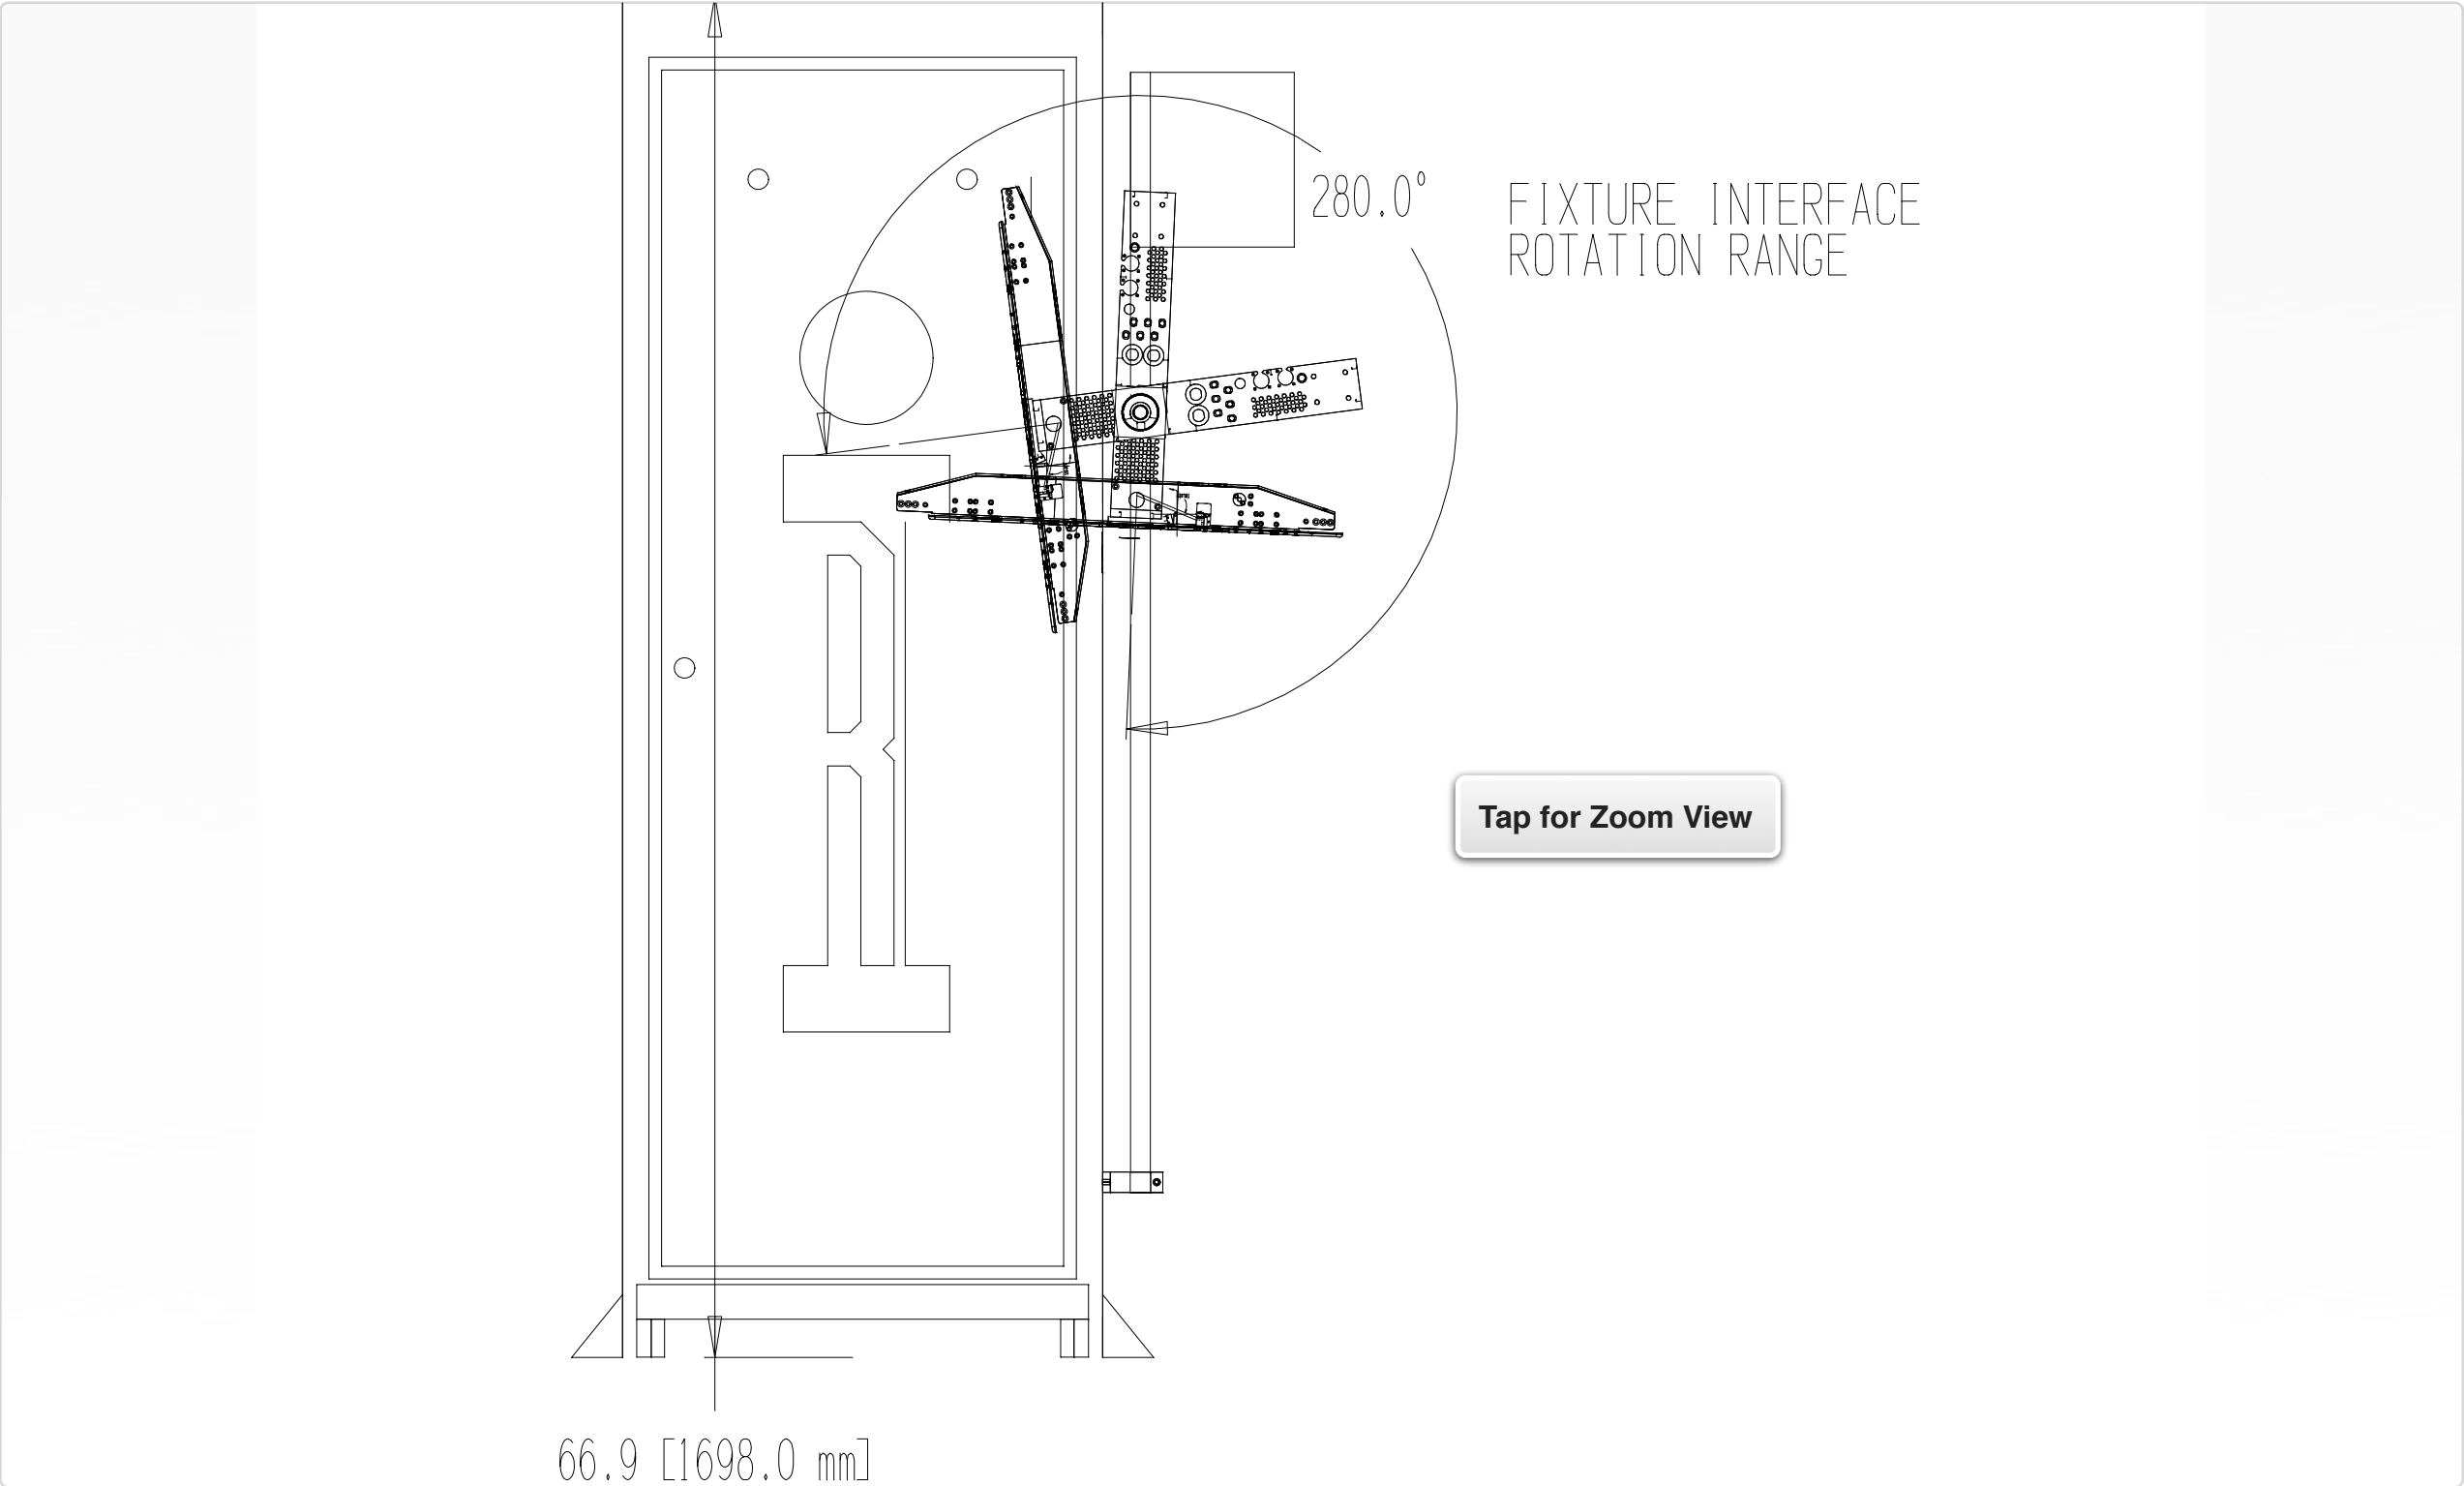


FIGURE 8.6 RI8557A TEST HEAD PIVOTAL COMPLIANCE



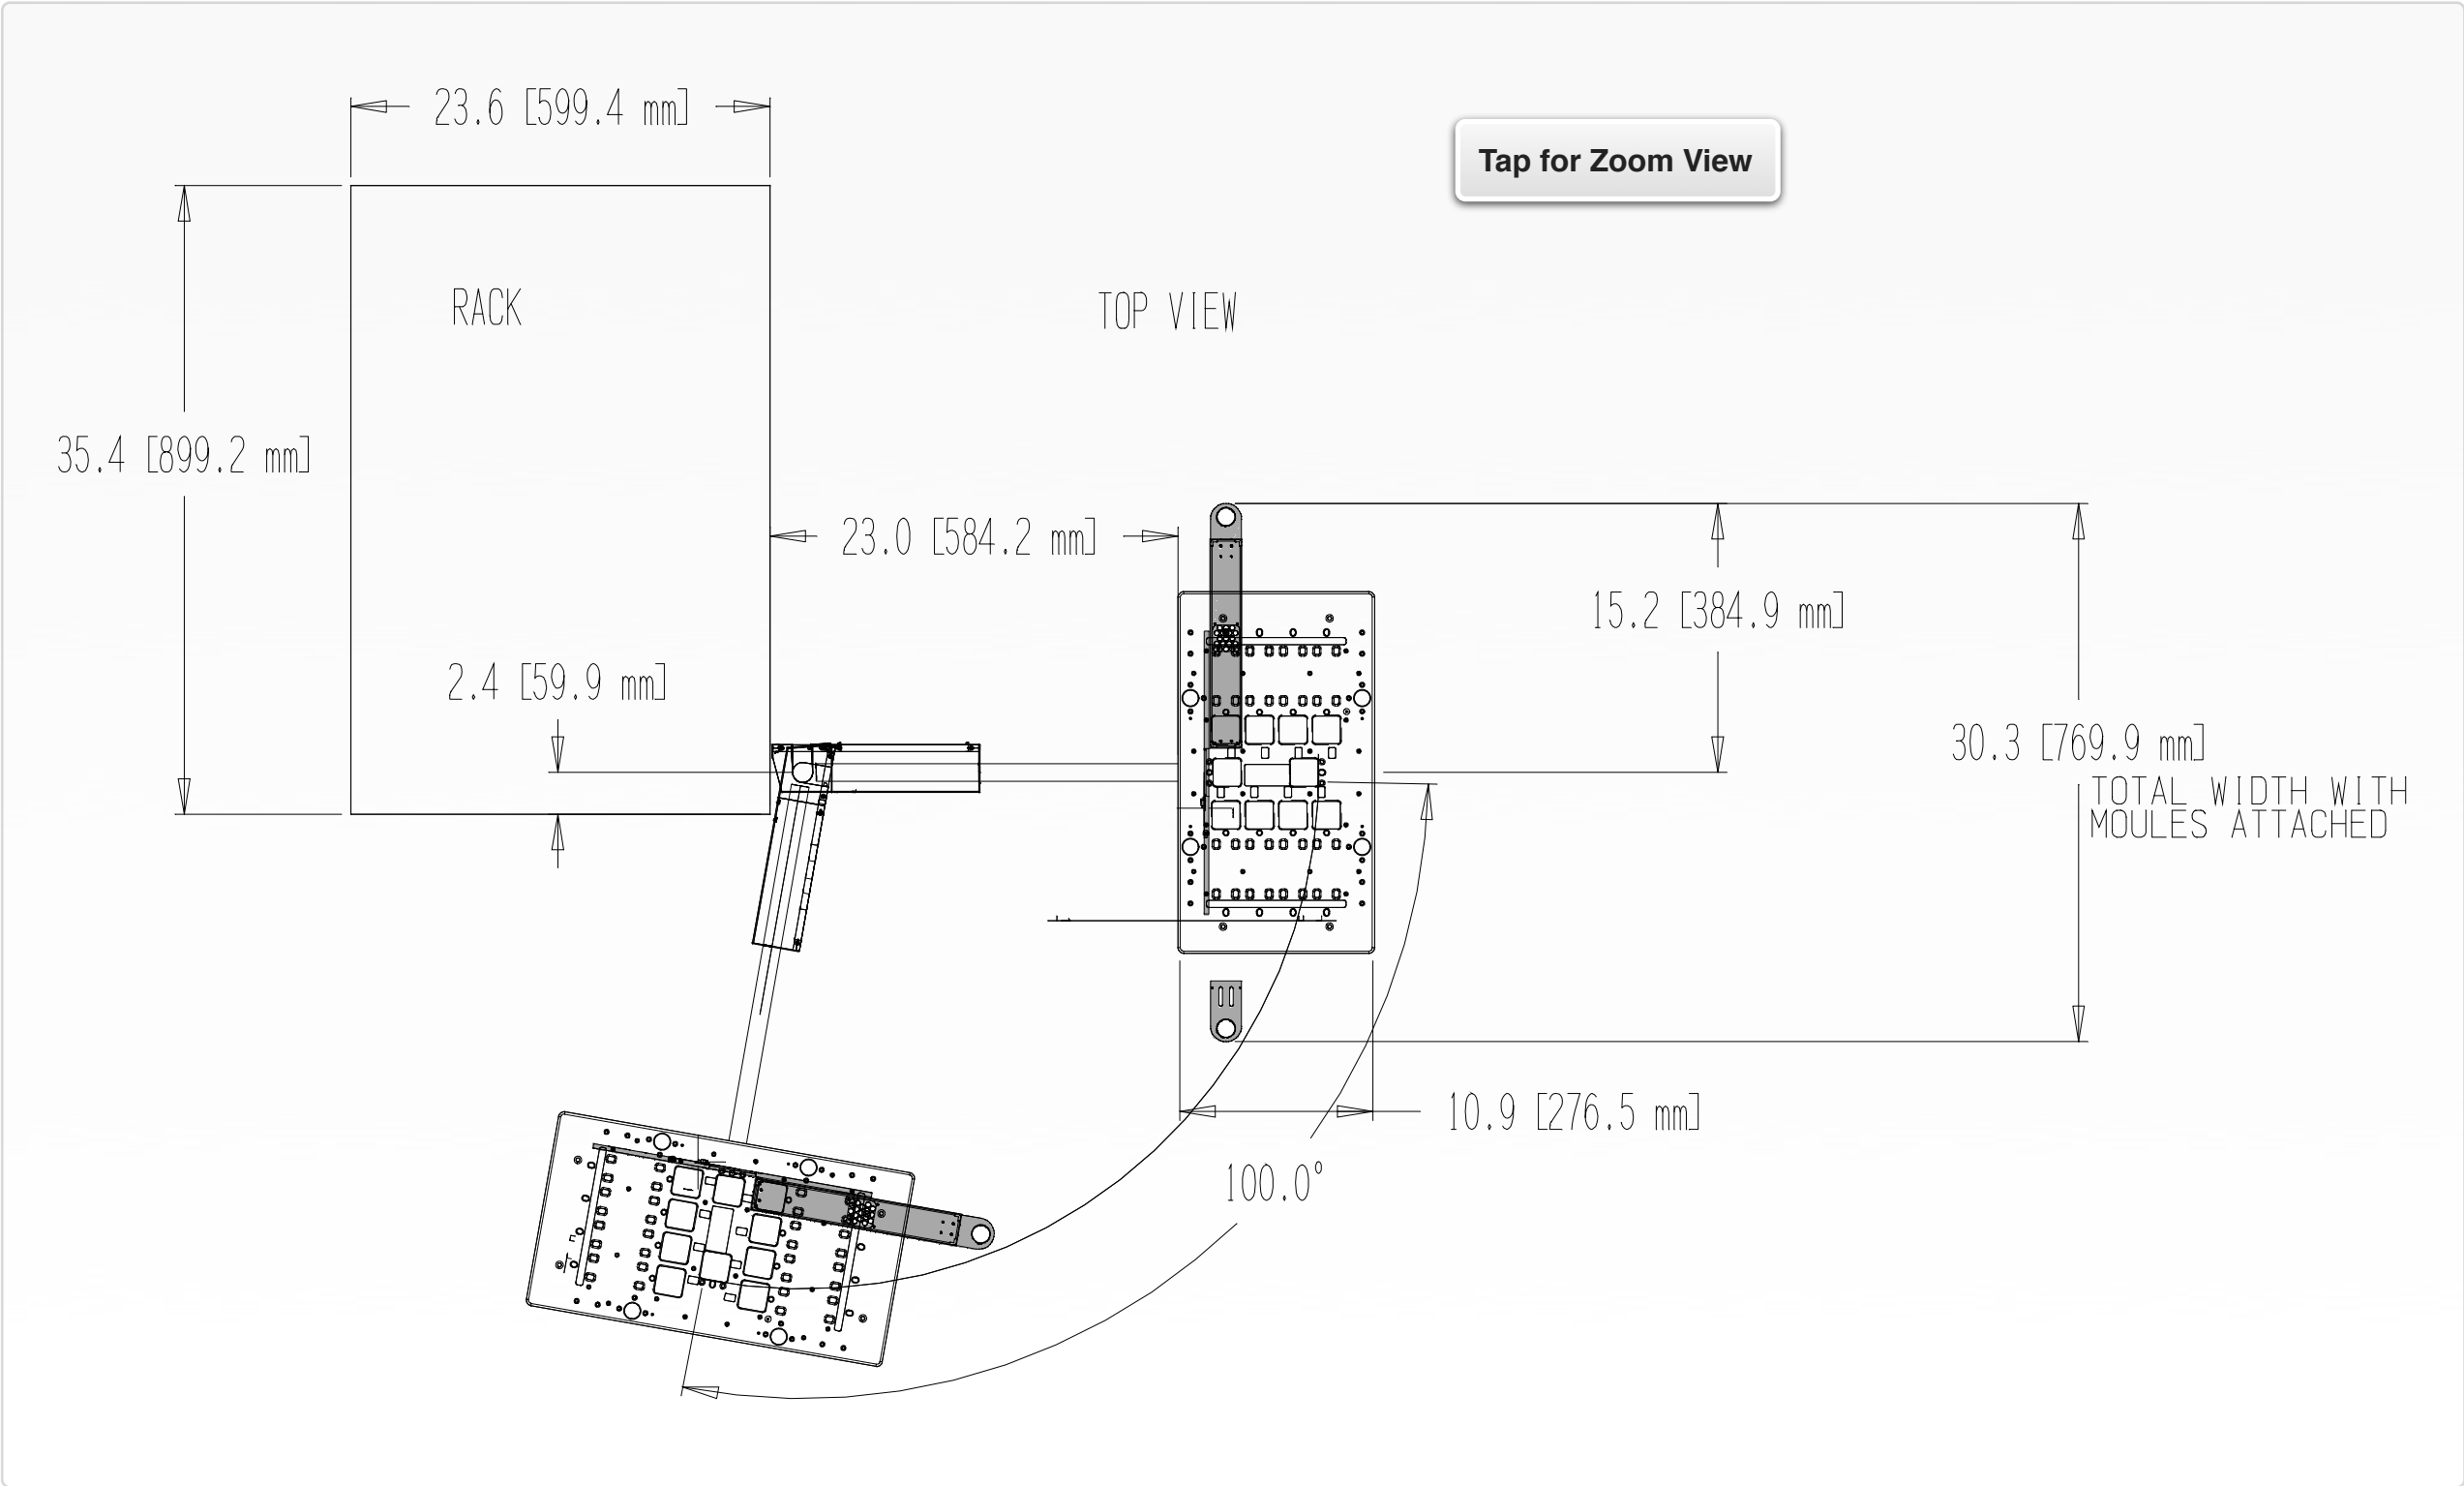


FIGURE 8.7 RI8557A OPTIONAL COMPUTER CART DIMENSIONS

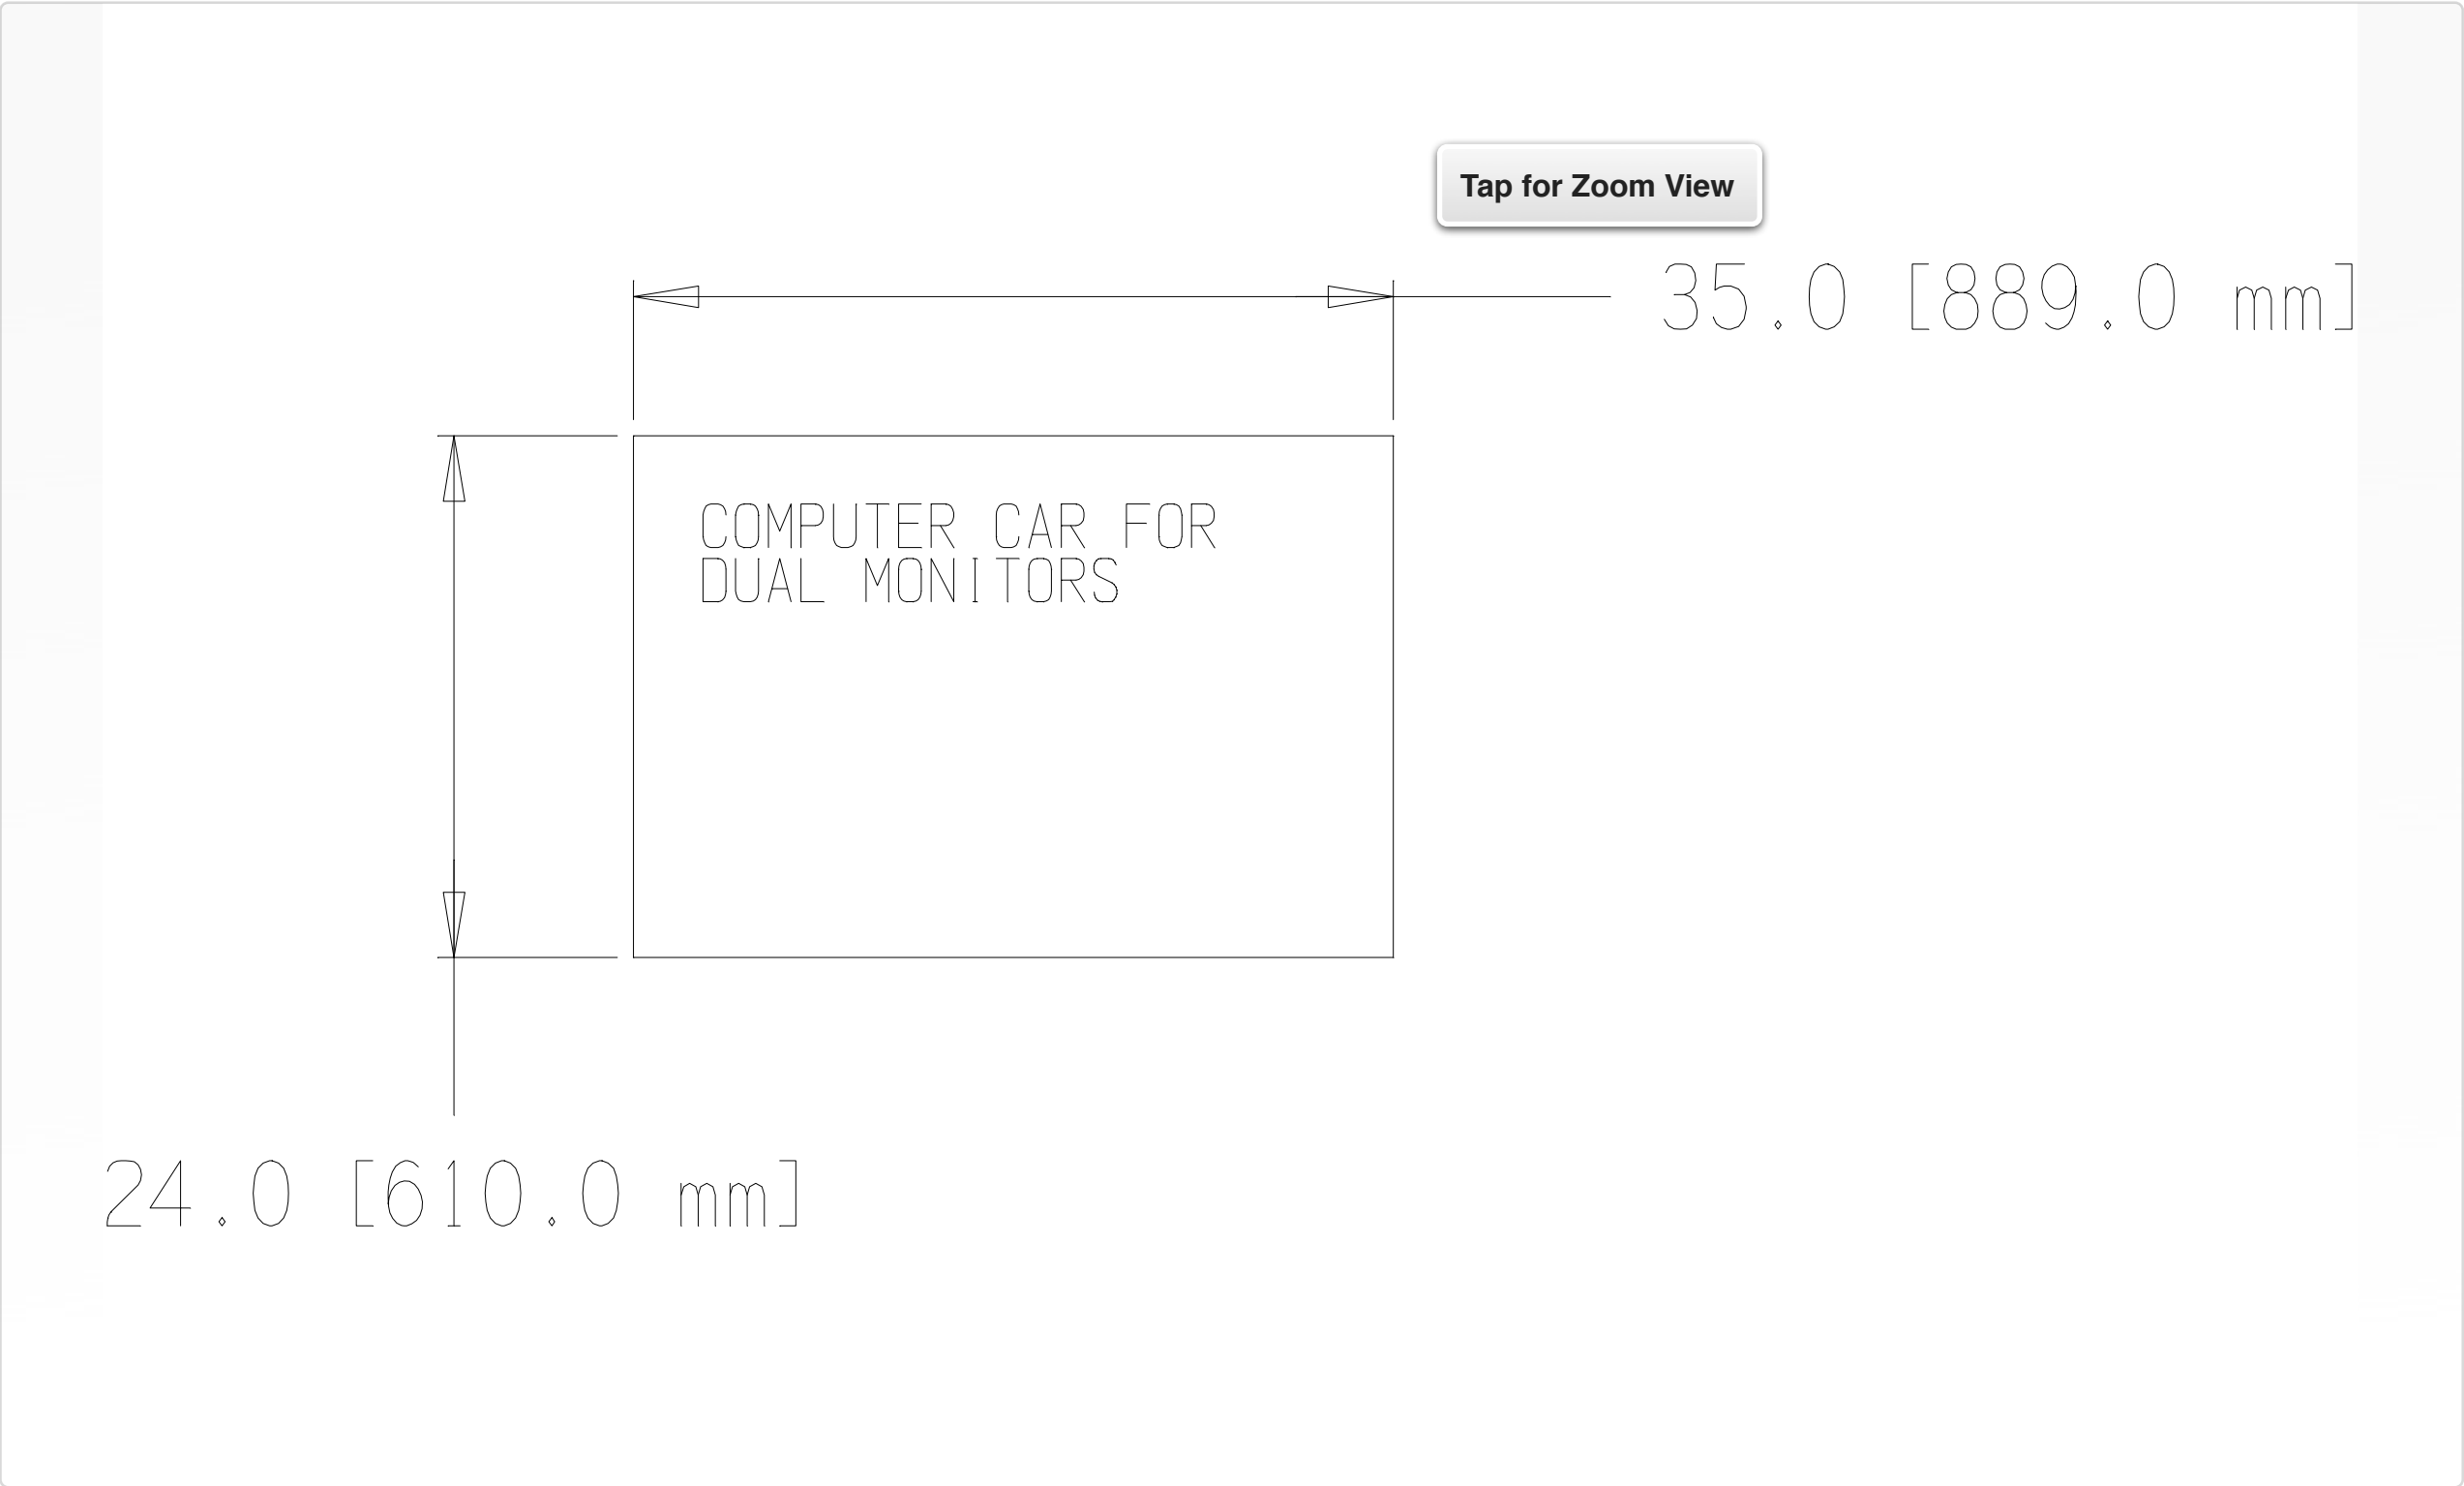

RI8563: 4GHz TO 40.5GHz TESTSET

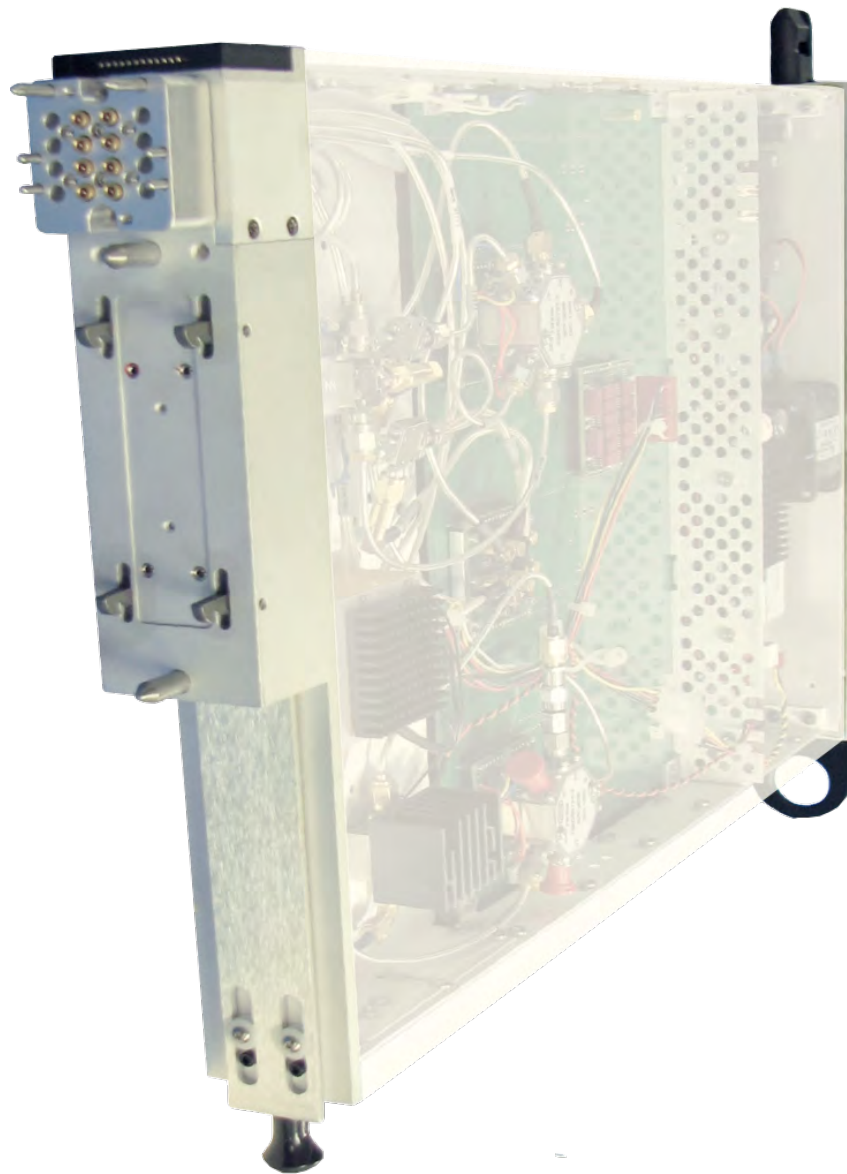

DESCRIPTION

The RI8563 Test Set extends the frequency and application capability of Cassini's 2-port vector measurements to the 4 GHz - 40.5 GHz range. Calibrated RF paths deliver precision source and measure of signal power, distortion test, s-parameters, and harmonic measurement. Designed to interface with a Cassini receiver and source instrument, the RI8563 can be shared across multiple microwave I/O for fast, precision measurements and maximum channel utilization.

KEY FEATURES

- S-Parameters from 4 GHz to 40.5 GHz
- NIST Calibrated Noise Source & Vector Error Correction
- Measure Noise Figure, P1dB, Abs. Power & Phase Noise
- Bilateral 2 & 4 Port S-Parameters

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Test Head40** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- Test Head40, RI8563x 4-40.5 GHz Test Set

NOTE: Multiple RI8563 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head40, Test Head402, Test Head403, etc). The “x” in RI8563x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8563 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.7

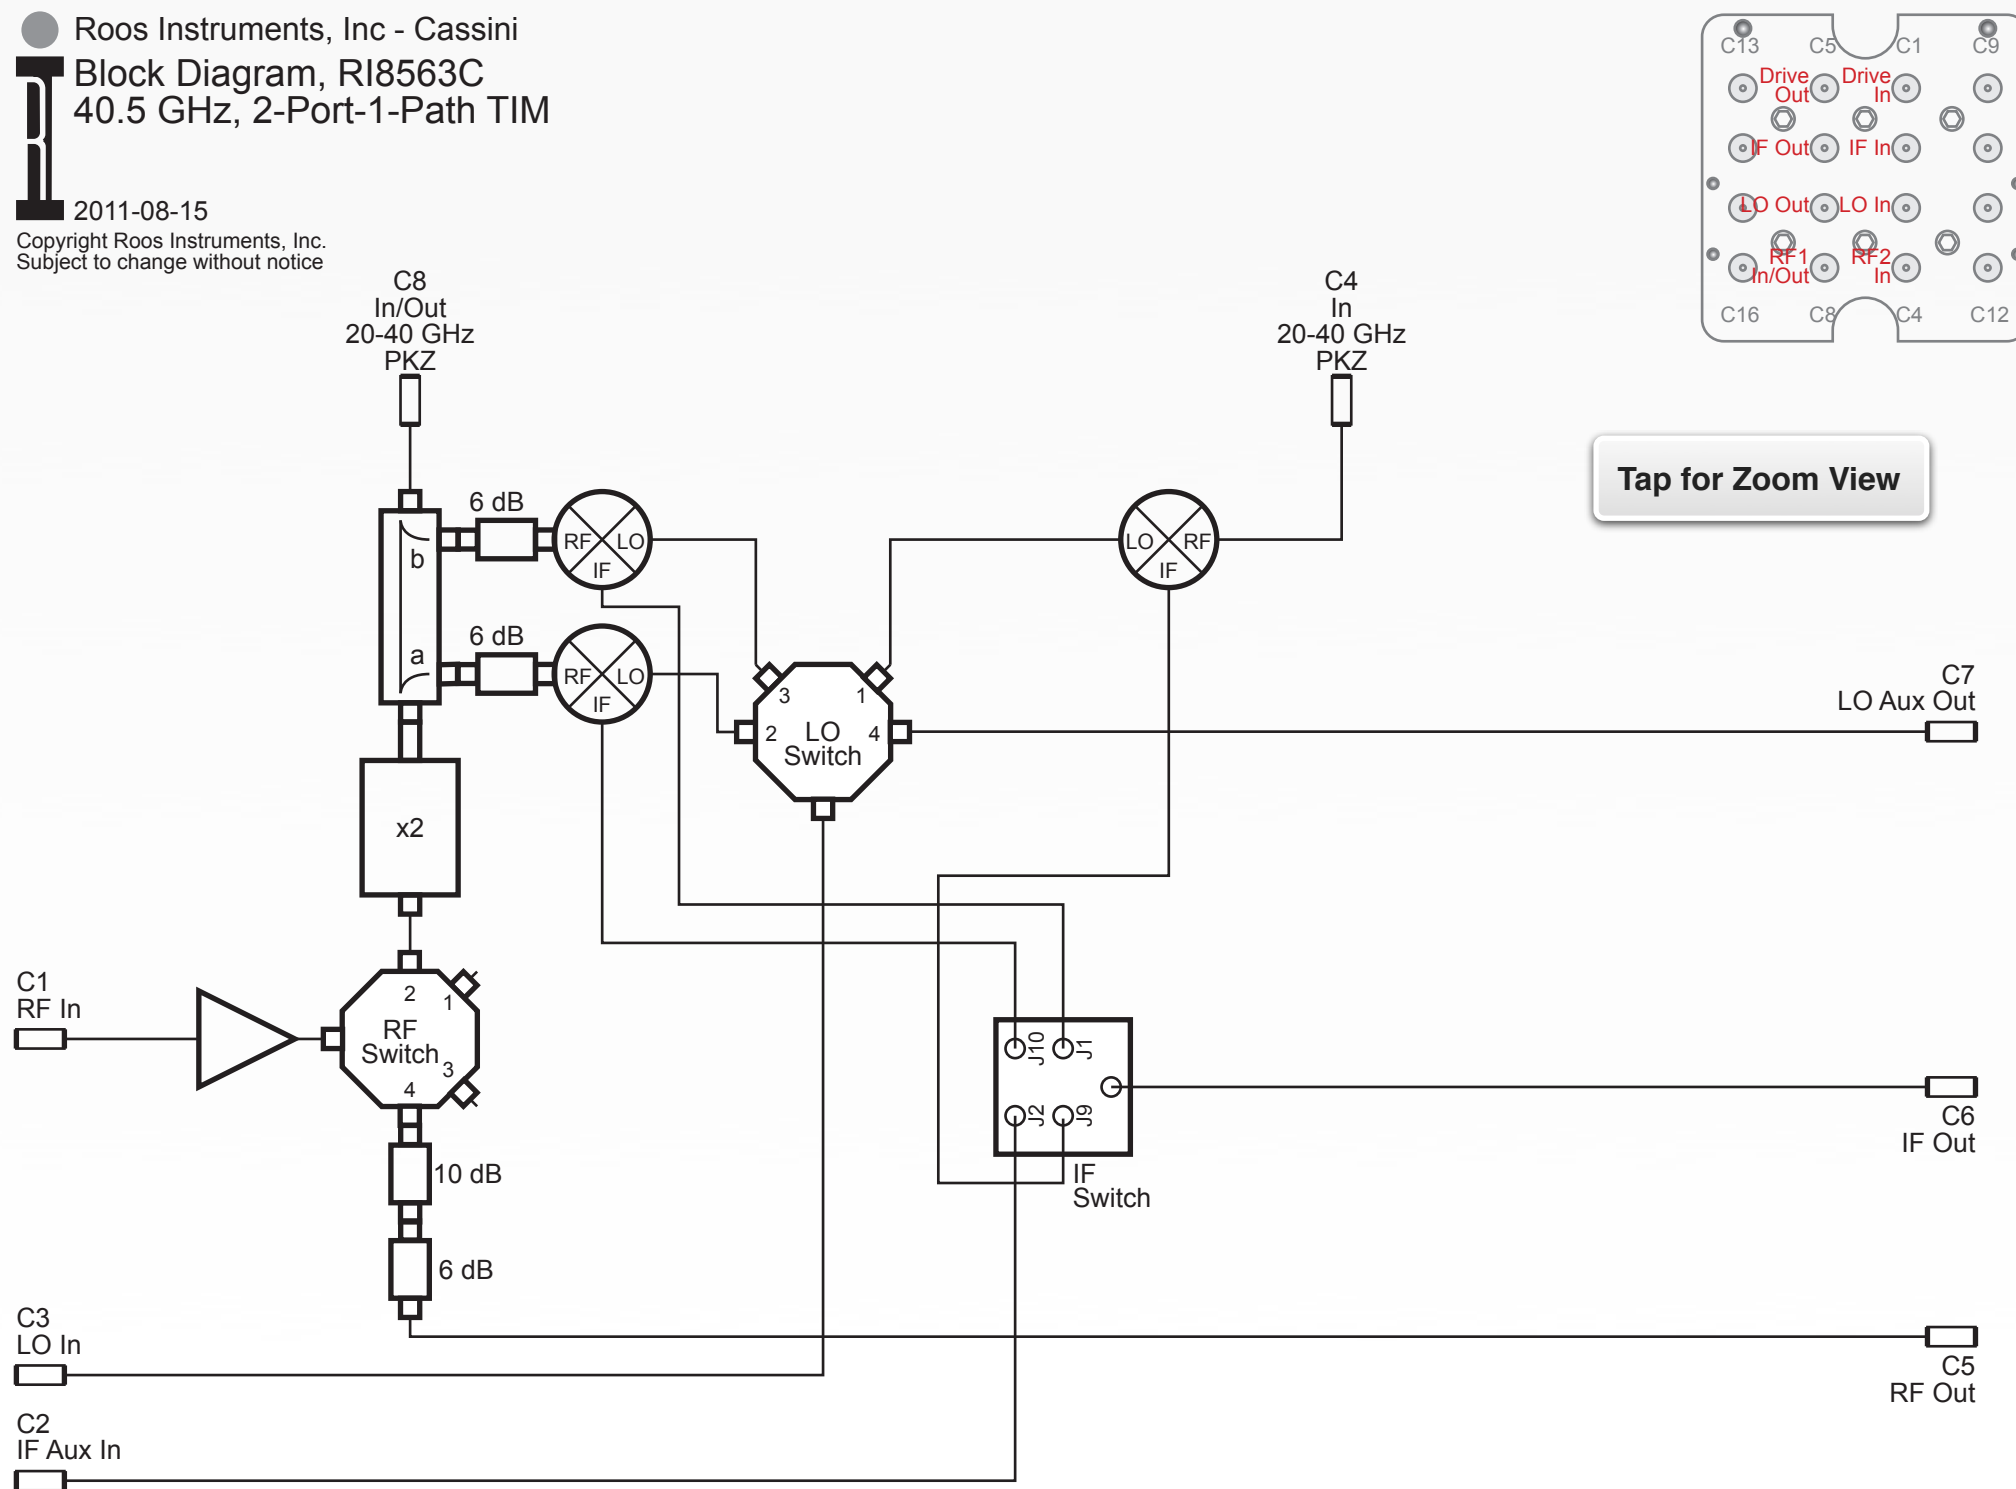


PERFORMANCE SPECIFICATIONS

Source	
Frequency Range	4 GHz to 40.5 GHz
Frequency Resolution	2 Hz
Power Range ²	-25 dBm to +3 dBm
Power Accuracy	± 0.1 dB
Measure	
Frequency Range	4 GHz to 40.5 GHz
Power Range	-115 dBm to +20 dBm

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

² Typical performance with an RI8587 Receiver

RI8564: 75GHz TO 81GHz TESTSET

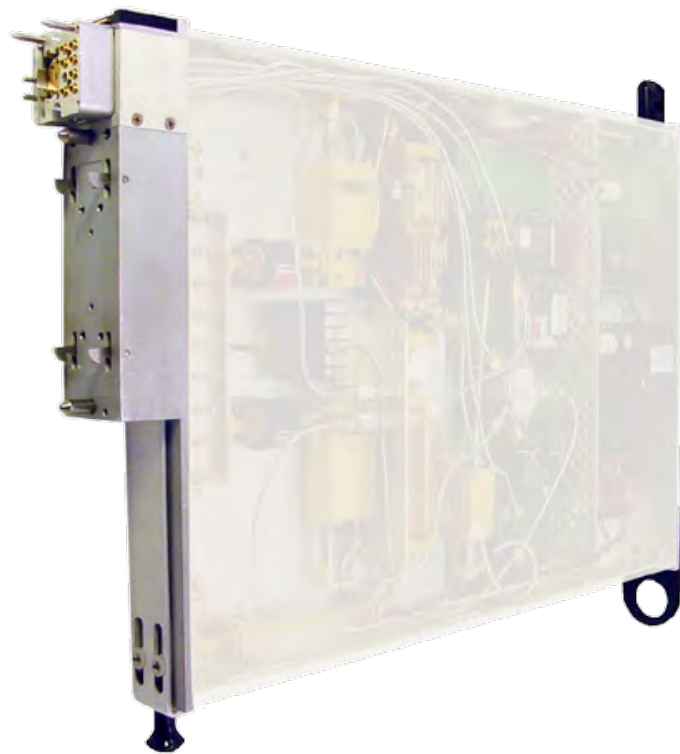

DESCRIPTION

The RI8564 mmWave test port TIM extends the frequency and application capability of Cassini's vector measurements to the 75 GHz to 81 GHz range. Calibrated RF paths deliver precision source and measure of signal power, distortion test, s-parameters, and harmonic measurement. Designed to interface with a Cassini receiver and source instrument, the RI8564 can be shared across multiple microwave I/O for fast, precision measurements and maximum channel utilization.

KEY FEATURES

- S-Parameters from 75 GHz to 81 GHz
- NIST Calibrated Noise Source & Vector Error Correction
- Measure Noise Figure, P1dB, Abs. Power & Phase Noise
- Waveguide S-Parameter Port

INSTRUMENTS PROVIDED BY THIS TIM


The instrument in this TIM appear as **Test Head77** in the panel dialog windows. (See [Graphical Programming](#) chapter)

Model and Name as it appears in the Tester Configuration:

- Test Head77, RI8564x 81 GHz Test Set

NOTE: Multiple RI8564 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head77, Test Head772, Test Head773, etc). The “x” in RI8564x denotes the model revision number.

BLOCK DIAGRAM 8.8

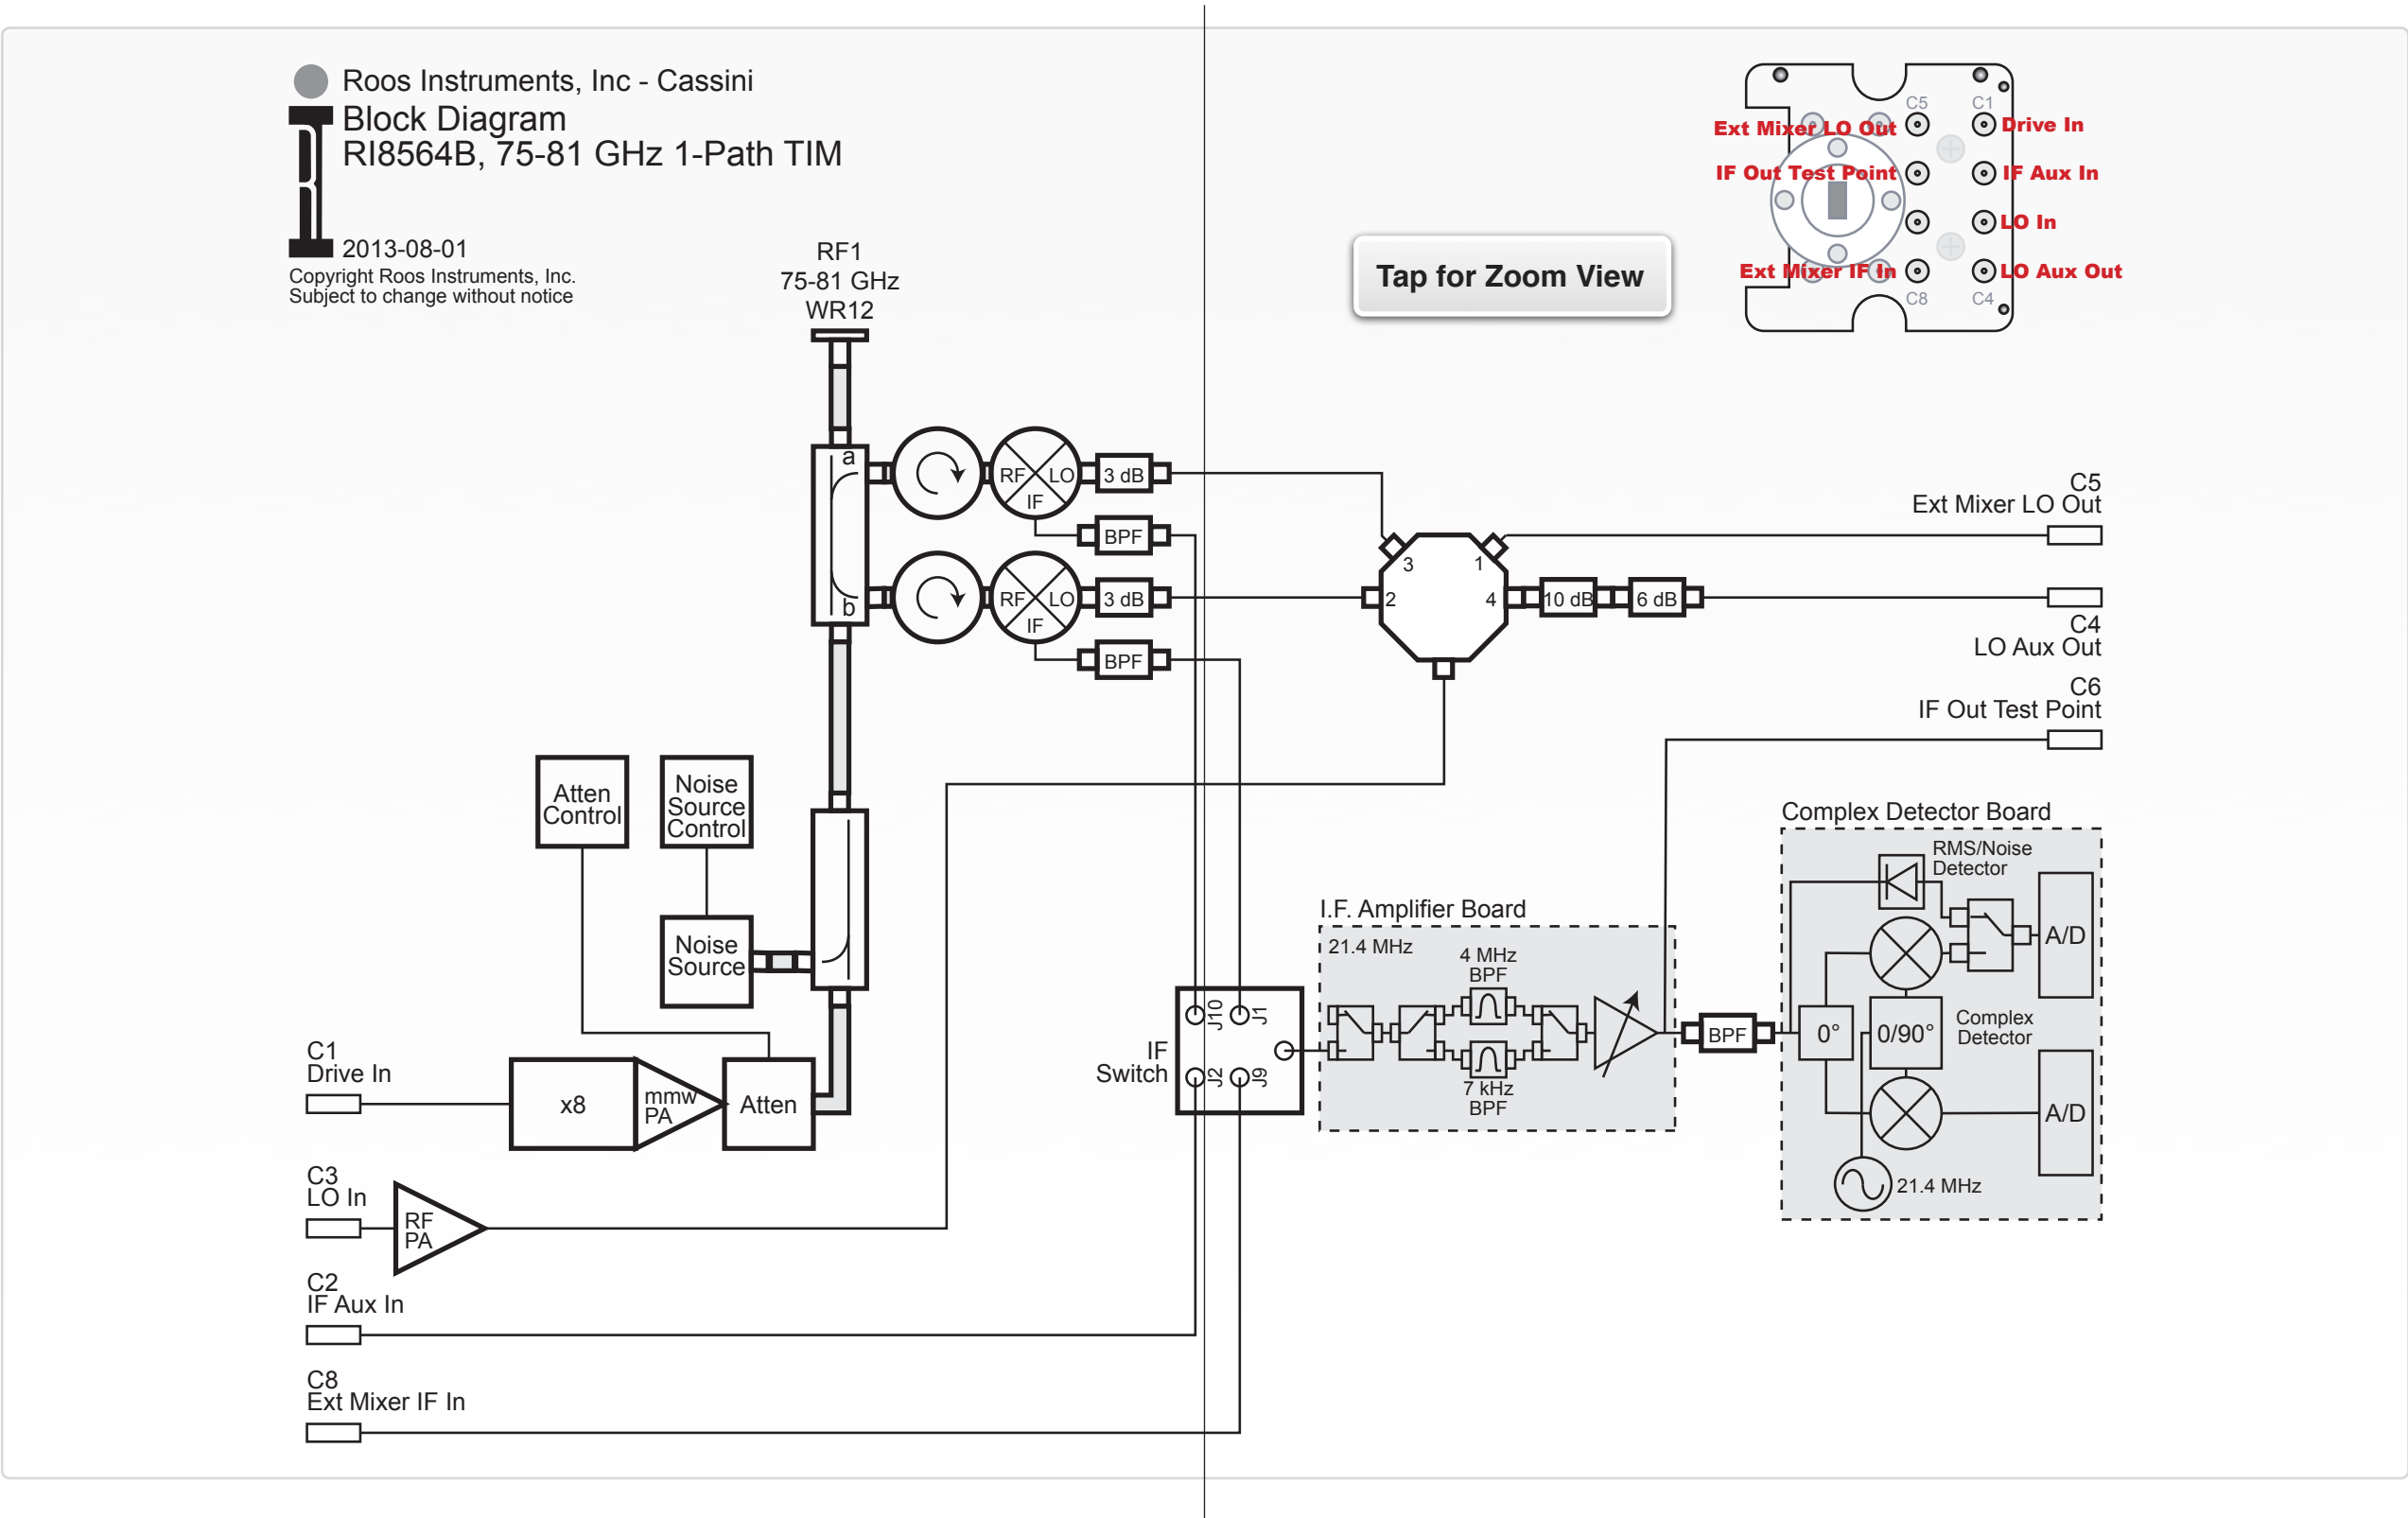

PERFORMANCE SPECIFICATIONS

Source	
Frequency Range	75 GHz to 81 GHz
Frequency Resolution	8 Hz
Power Range ²	-20 dBm to +5 dBm
Power Accuracy	± 0.2 dB
Measure	
Frequency Range	75 GHz to 81 GHz
Power Range	-110 dBm to +10 dBm

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

² Typical performance with an RI8587 Receiver

RI8567: 0.01 TO 12GHz TESTSET



DESCRIPTION

The RI8567 instruments combines a 2-port RF vector Testset and a complex RF Receiver in a single TIM. The front-end includes a versatile, solid-state RF switch network for hot-swappable, adaptive transmit and receive topologies. The built-in receiver uses a synchrodyne back-end that provides precision RF vector measurements and fast settling times. High-linearity mixers and a selectable analog filter bank in the receiver provide the user with up to 7 MHz of instantaneous detection bandwidth and signal measurement sensitivity down to -100 dBm.

KEY FEATURES

- 2 S-Parameter ports that cover 100 MHz to 12 GHz range
- Base-band vector receiver with SyRF Core DSP capability
- Integrated LO with Microsecond Frequency Locking
- Dual Measurement Engines, True RMS & Vector I & Q
- Production-Speed RF Resource Switching Capability

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **RFMeasure1** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- RfMeasure1, RI8567x 2 port Testset+Receiver

NOTE: Multiple RI8567 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - RFMeasure1, RFMeasure2, RFMeasure3, etc). The “x” in RI8567x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8567 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.9

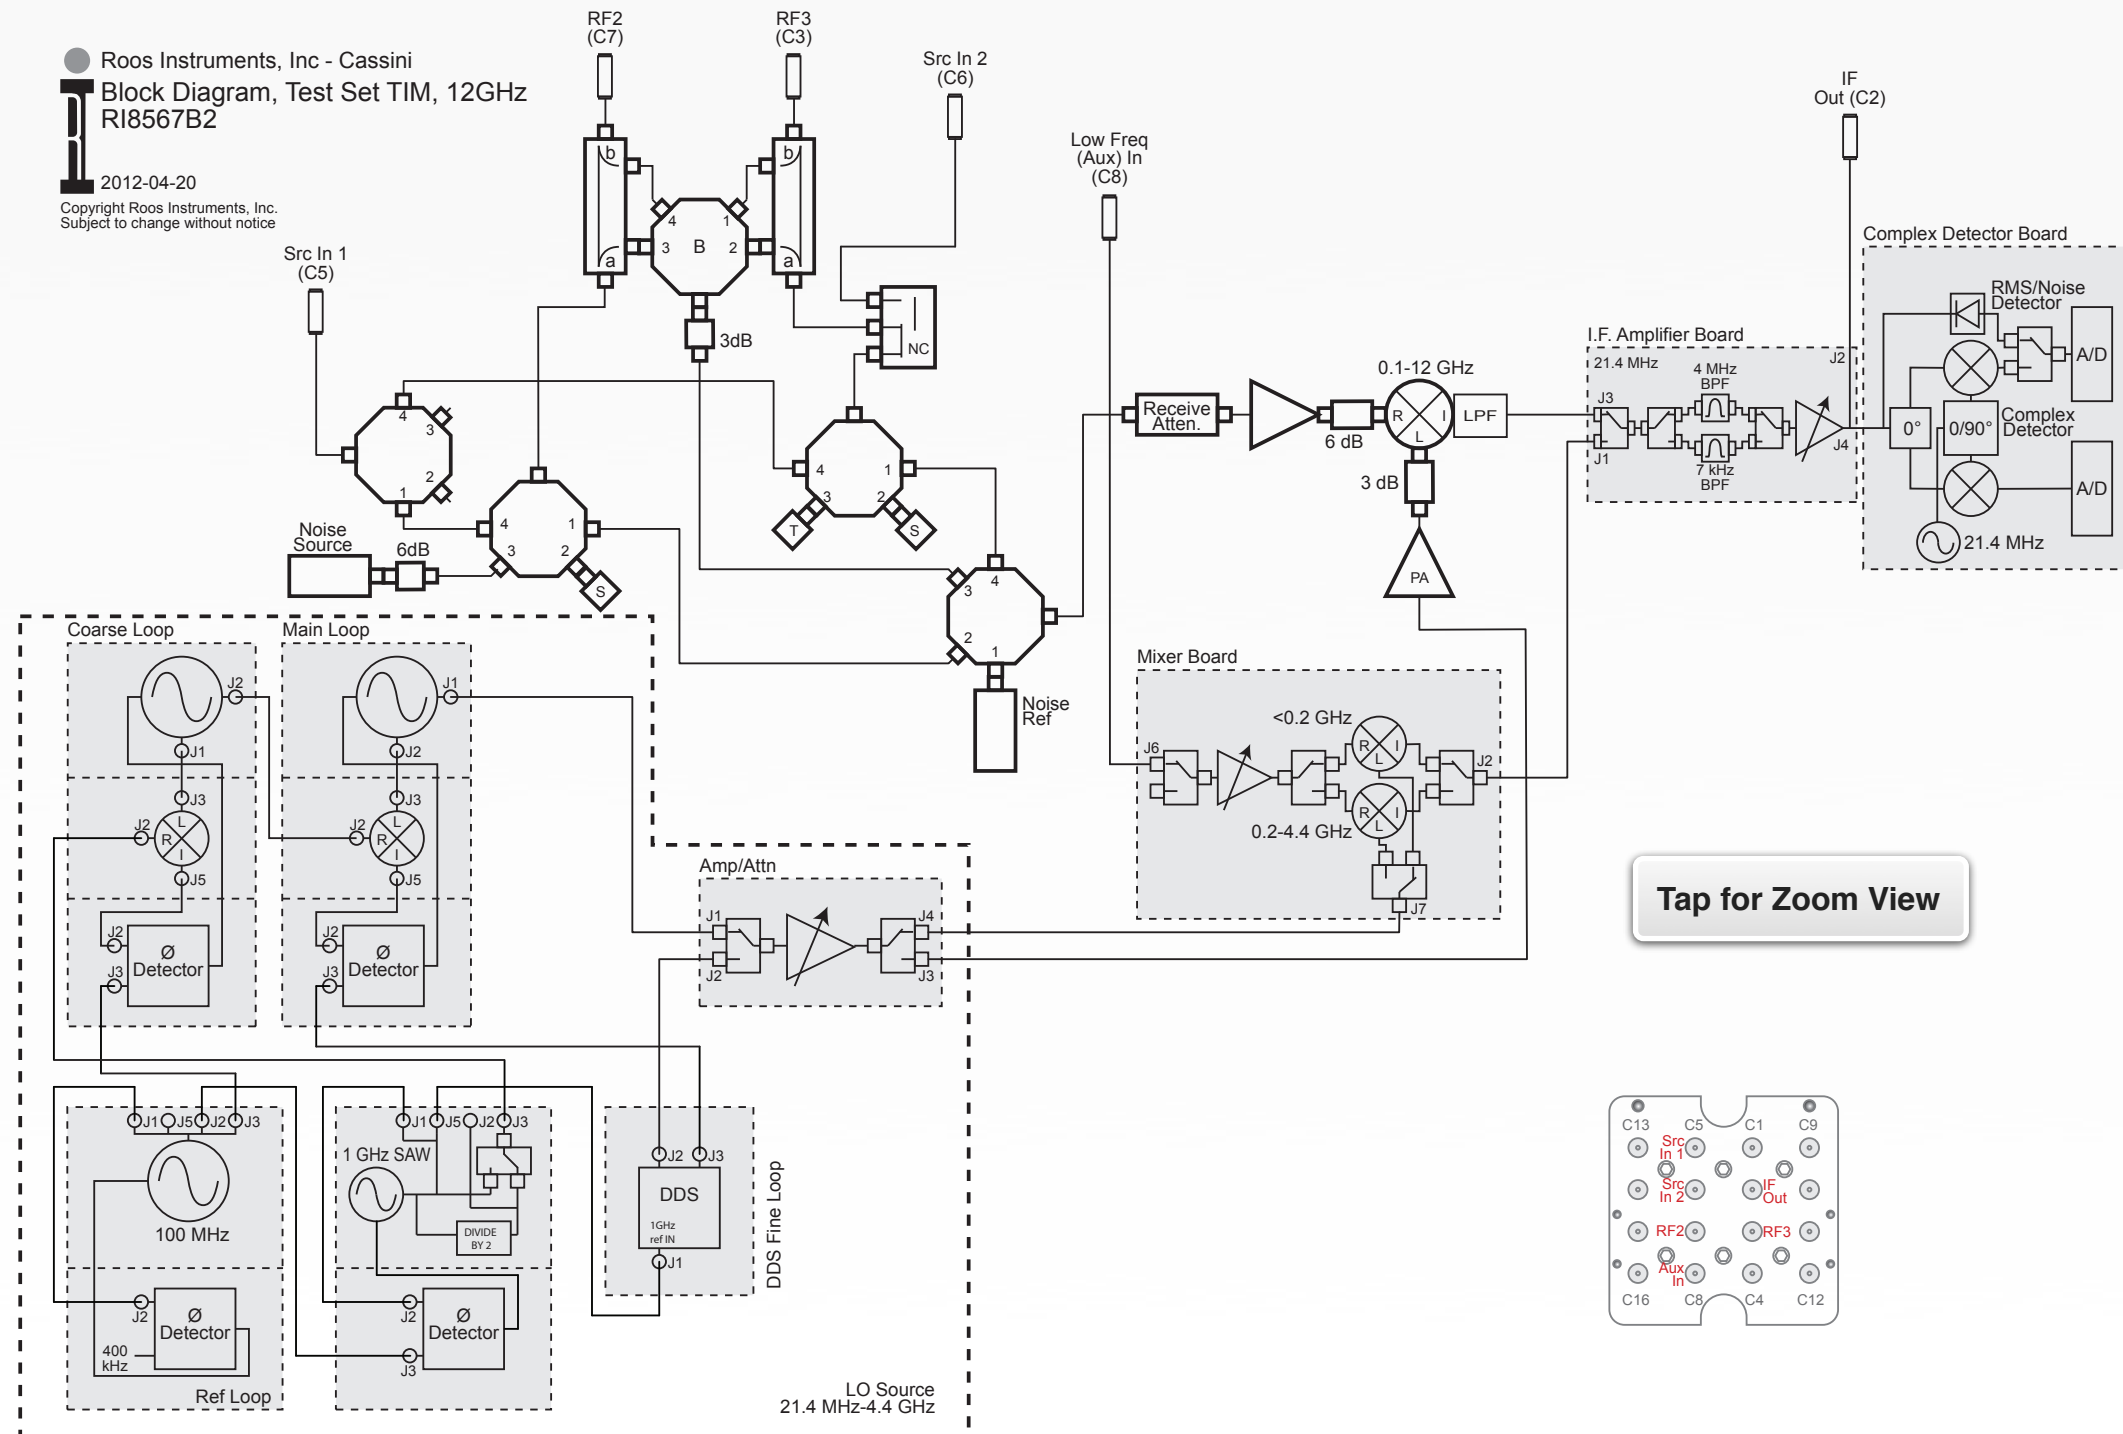

PERFORMANCE SPECIFICATIONS

Vector Analyzer

Frequency Range	100 MHz to 12 GHz
Frequency Resolution	0.1 Hz
Power Range ²	-100 dBm to +30 dBm
Power Accuracy	± 0.1 dB

Receiver Measure

Frequency Range	100 kHz to 12 GHz
Power Range	-115 dBm to +20 dBm
Analog Bandwidths	7 kHz, 200 kHz, 5 MHz (user Selectable)

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

² Typical performance with an RI8587 Receiver.

RI8568: CASSINI 16 INFRASTRUCTURE



DESCRIPTION

The RI8568B model infrastructure is commonly referred to as Cassini 16. It includes a 16 slot test head with pneumatic device interface docking and manipulator arm with 6 degrees of freedom: vertical lift, test head rotation, 2-axis planar movement, and 2-axis pitch movement. The infrastructure provides a minimal test floor footprint and compliance with multiple handler and prober setups. The chassis includes standard pneumatic hook ups and attachment options auxiliary rack instruments. Desktop or TouchUI Production options can be selected depending on the primary use. **Values are subject to change without notice.**

RI8556A INFRASTRUCTURE DIMENSIONS

- Height: 1,740 mm (68.5 in)
- Depth: 1,208 mm (47.6 in)
- Width: 844 mm (33.2 in)
- System Weight: 105 Kg (230 lbs)
- Typical/MAX Shipping Weight: 250 Kg (550 lbs)/385 Kg (850 lbs)

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appears as **Tester** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Tester, Ri8568x Cassini 16 Slot Tester

TESTER VOLTAGE SPECIFICATIONS

Tester instrument provides power to the Fixture, Fixture Modules and any active components installed on the DIB.

Voltage (V)	Max Current (A)
+5	1.51
+15	0.5
+28	0.5
-15	0.5
-5	1.5

INSTRUMENT LOCATION

The FIX block is located in the center of the Test Head . A Harness Block or Pin Block is used to access resources provided by the Tester instrument.

INSTRUMENT OPERATIONS

Reference the **Tester** instrument in the [RI8574 System Controller section](#) of the Graphical Programming chapter for configuration, edit and control panels.

FIGURE 8.8 RI8568B (CASSINI 16) FOOTPRINT

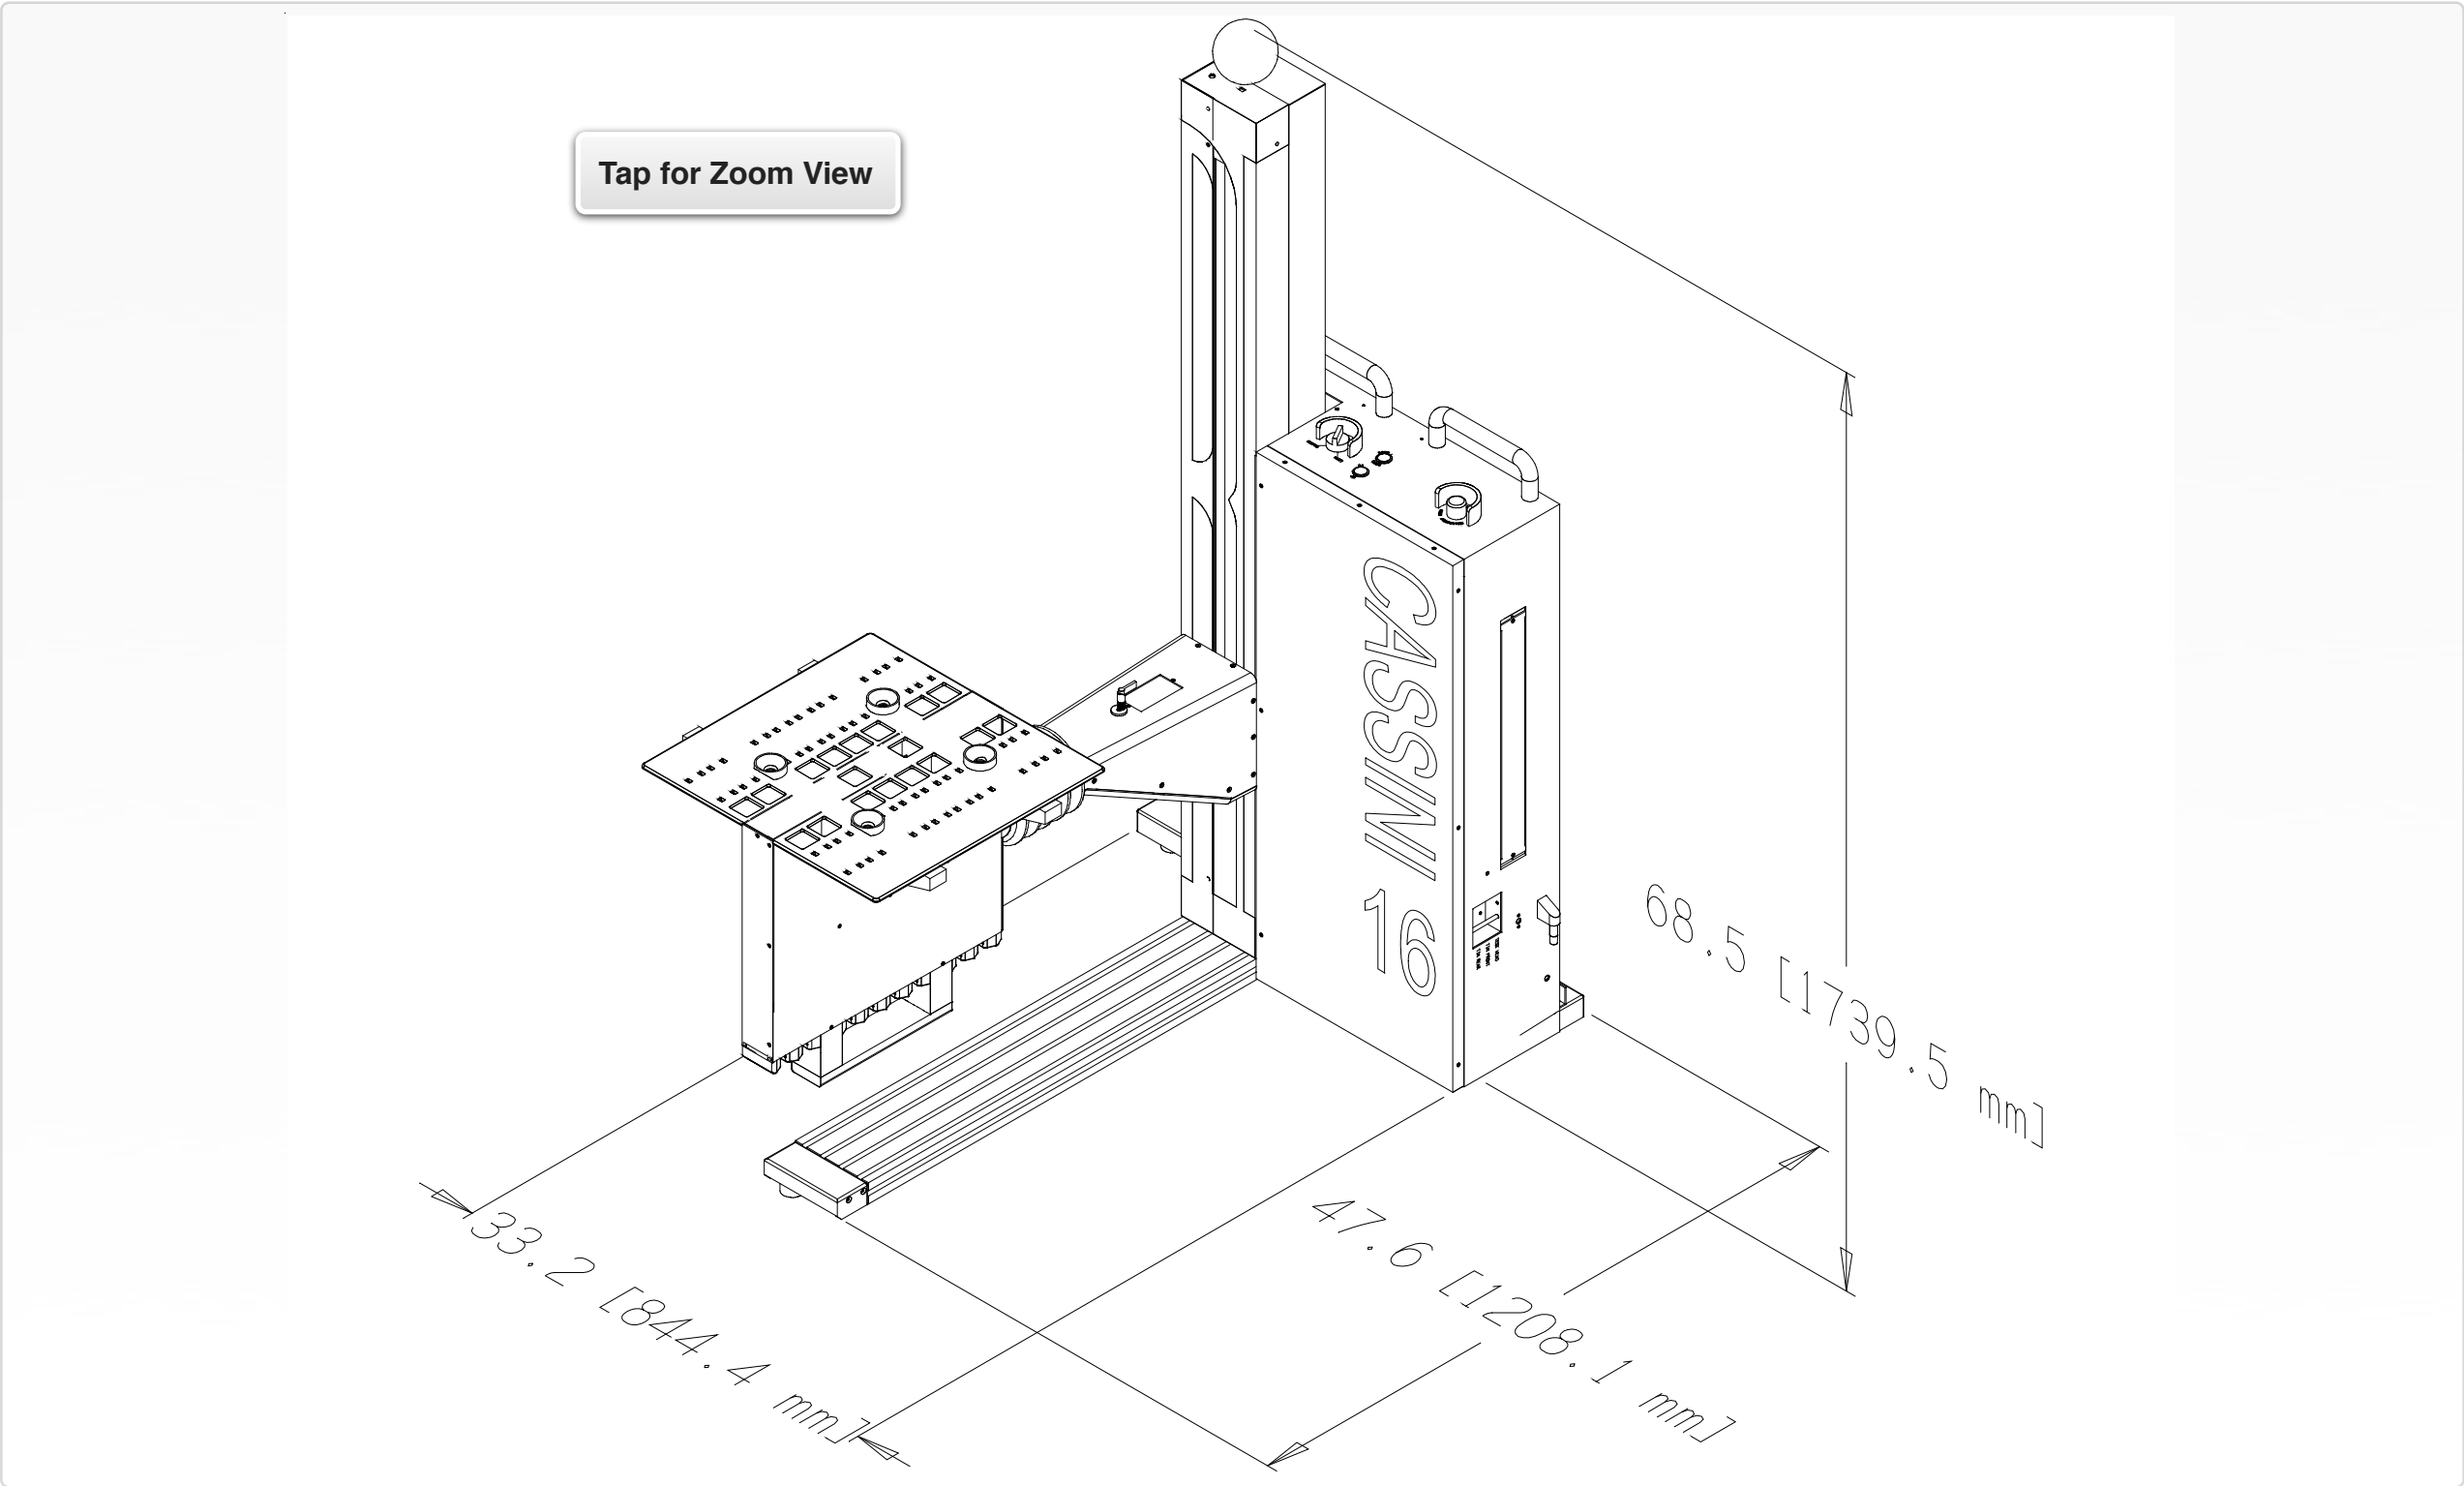


FIGURE 8.9 RI8568B UPPER AND LOWER LIFT LIMIT

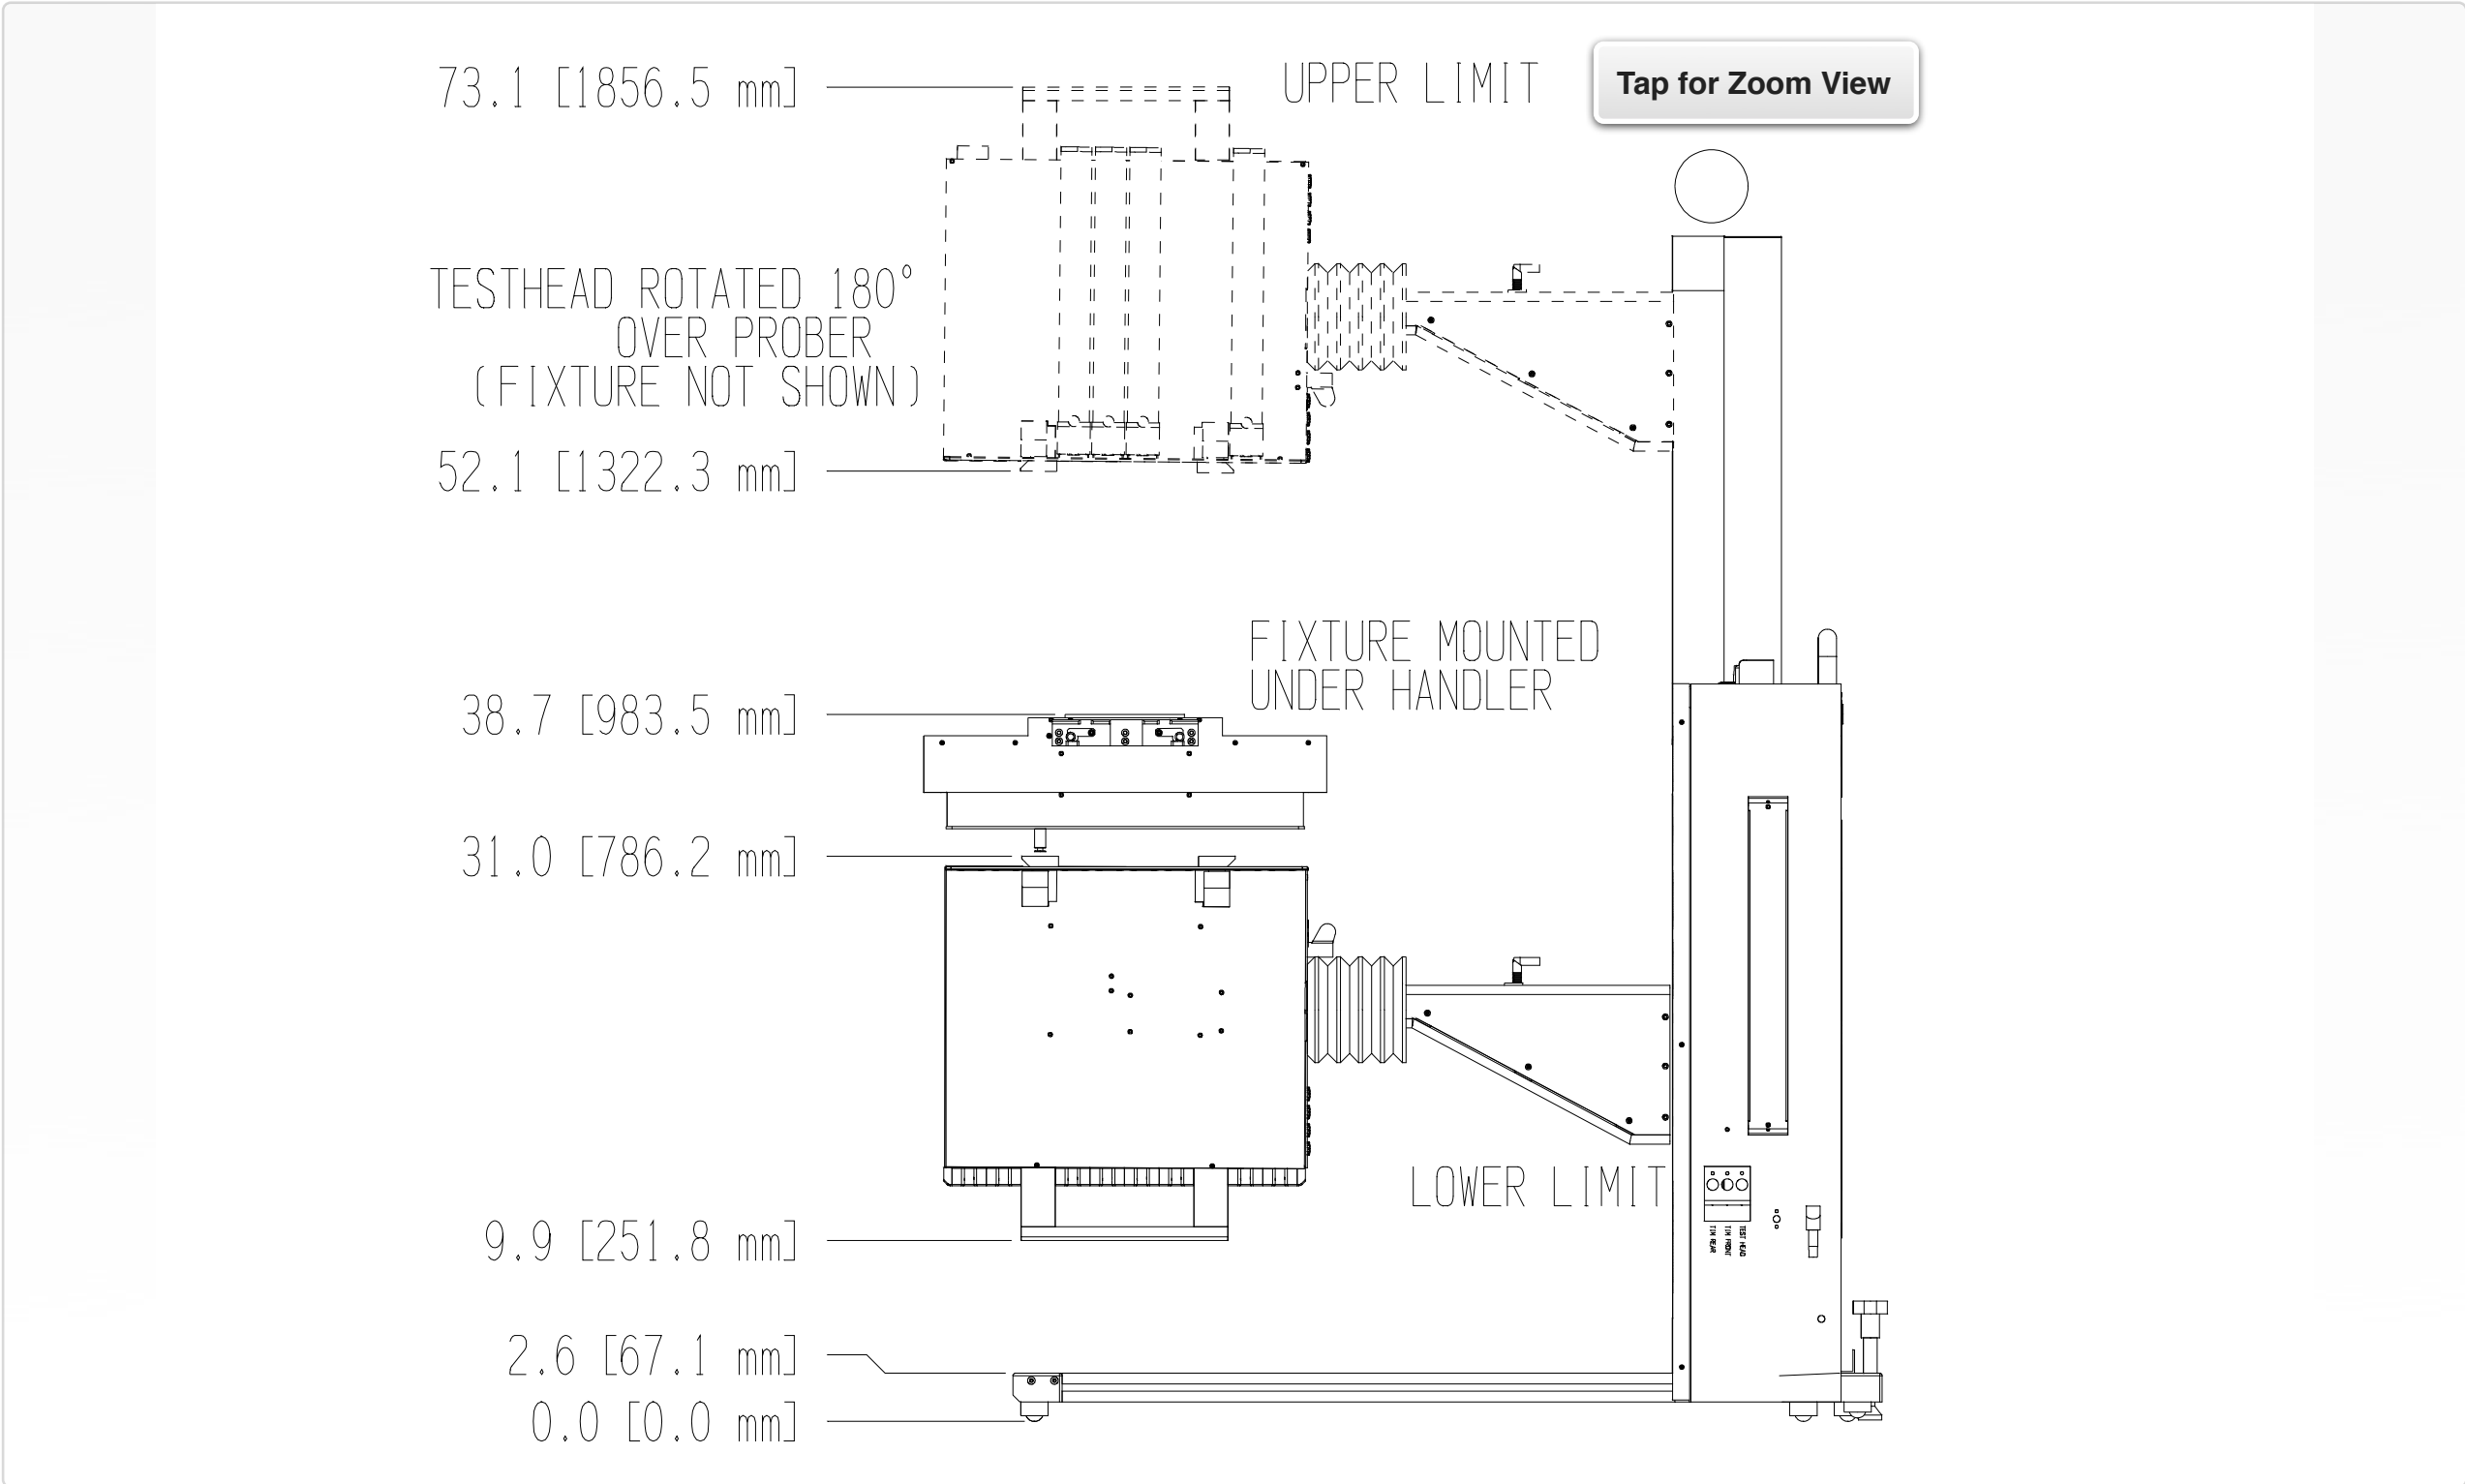


FIGURE 8.10 RI8568B TOTAL HEAD ROTATION

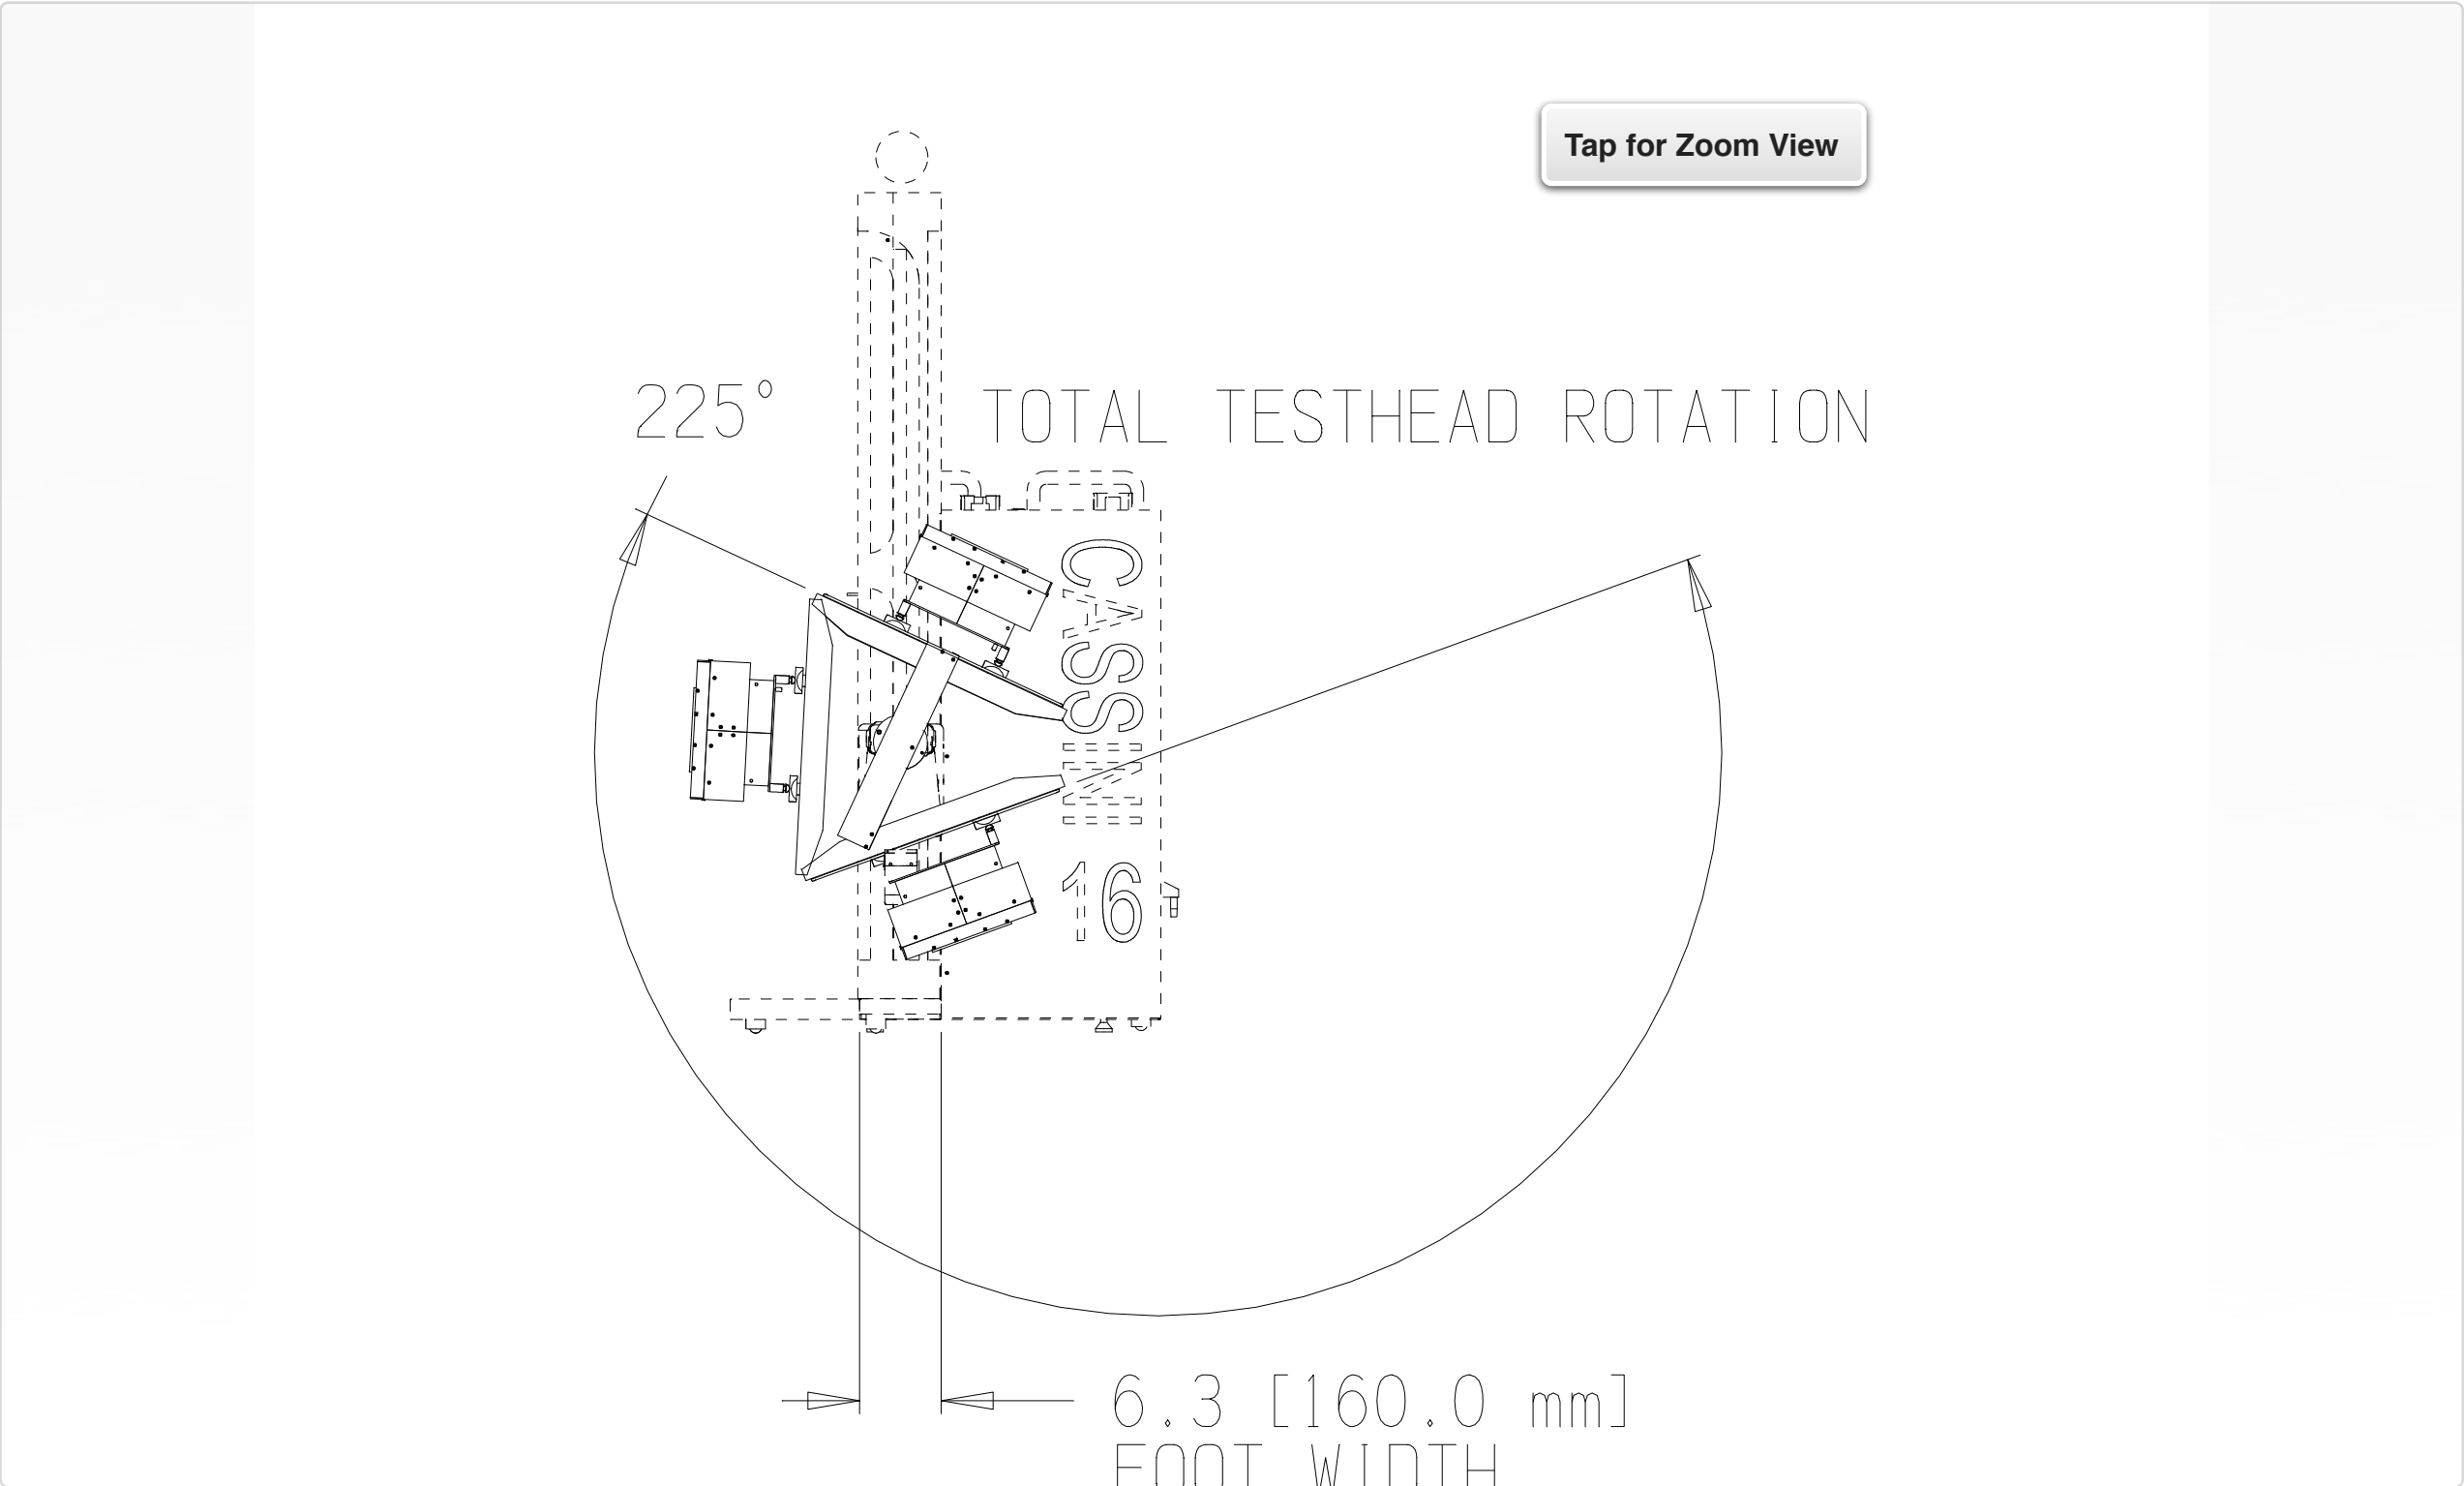


FIGURE 8.11 RI8568B TOP-VIEW WITH AUXILIARY CART (CONFIGURATION 1)

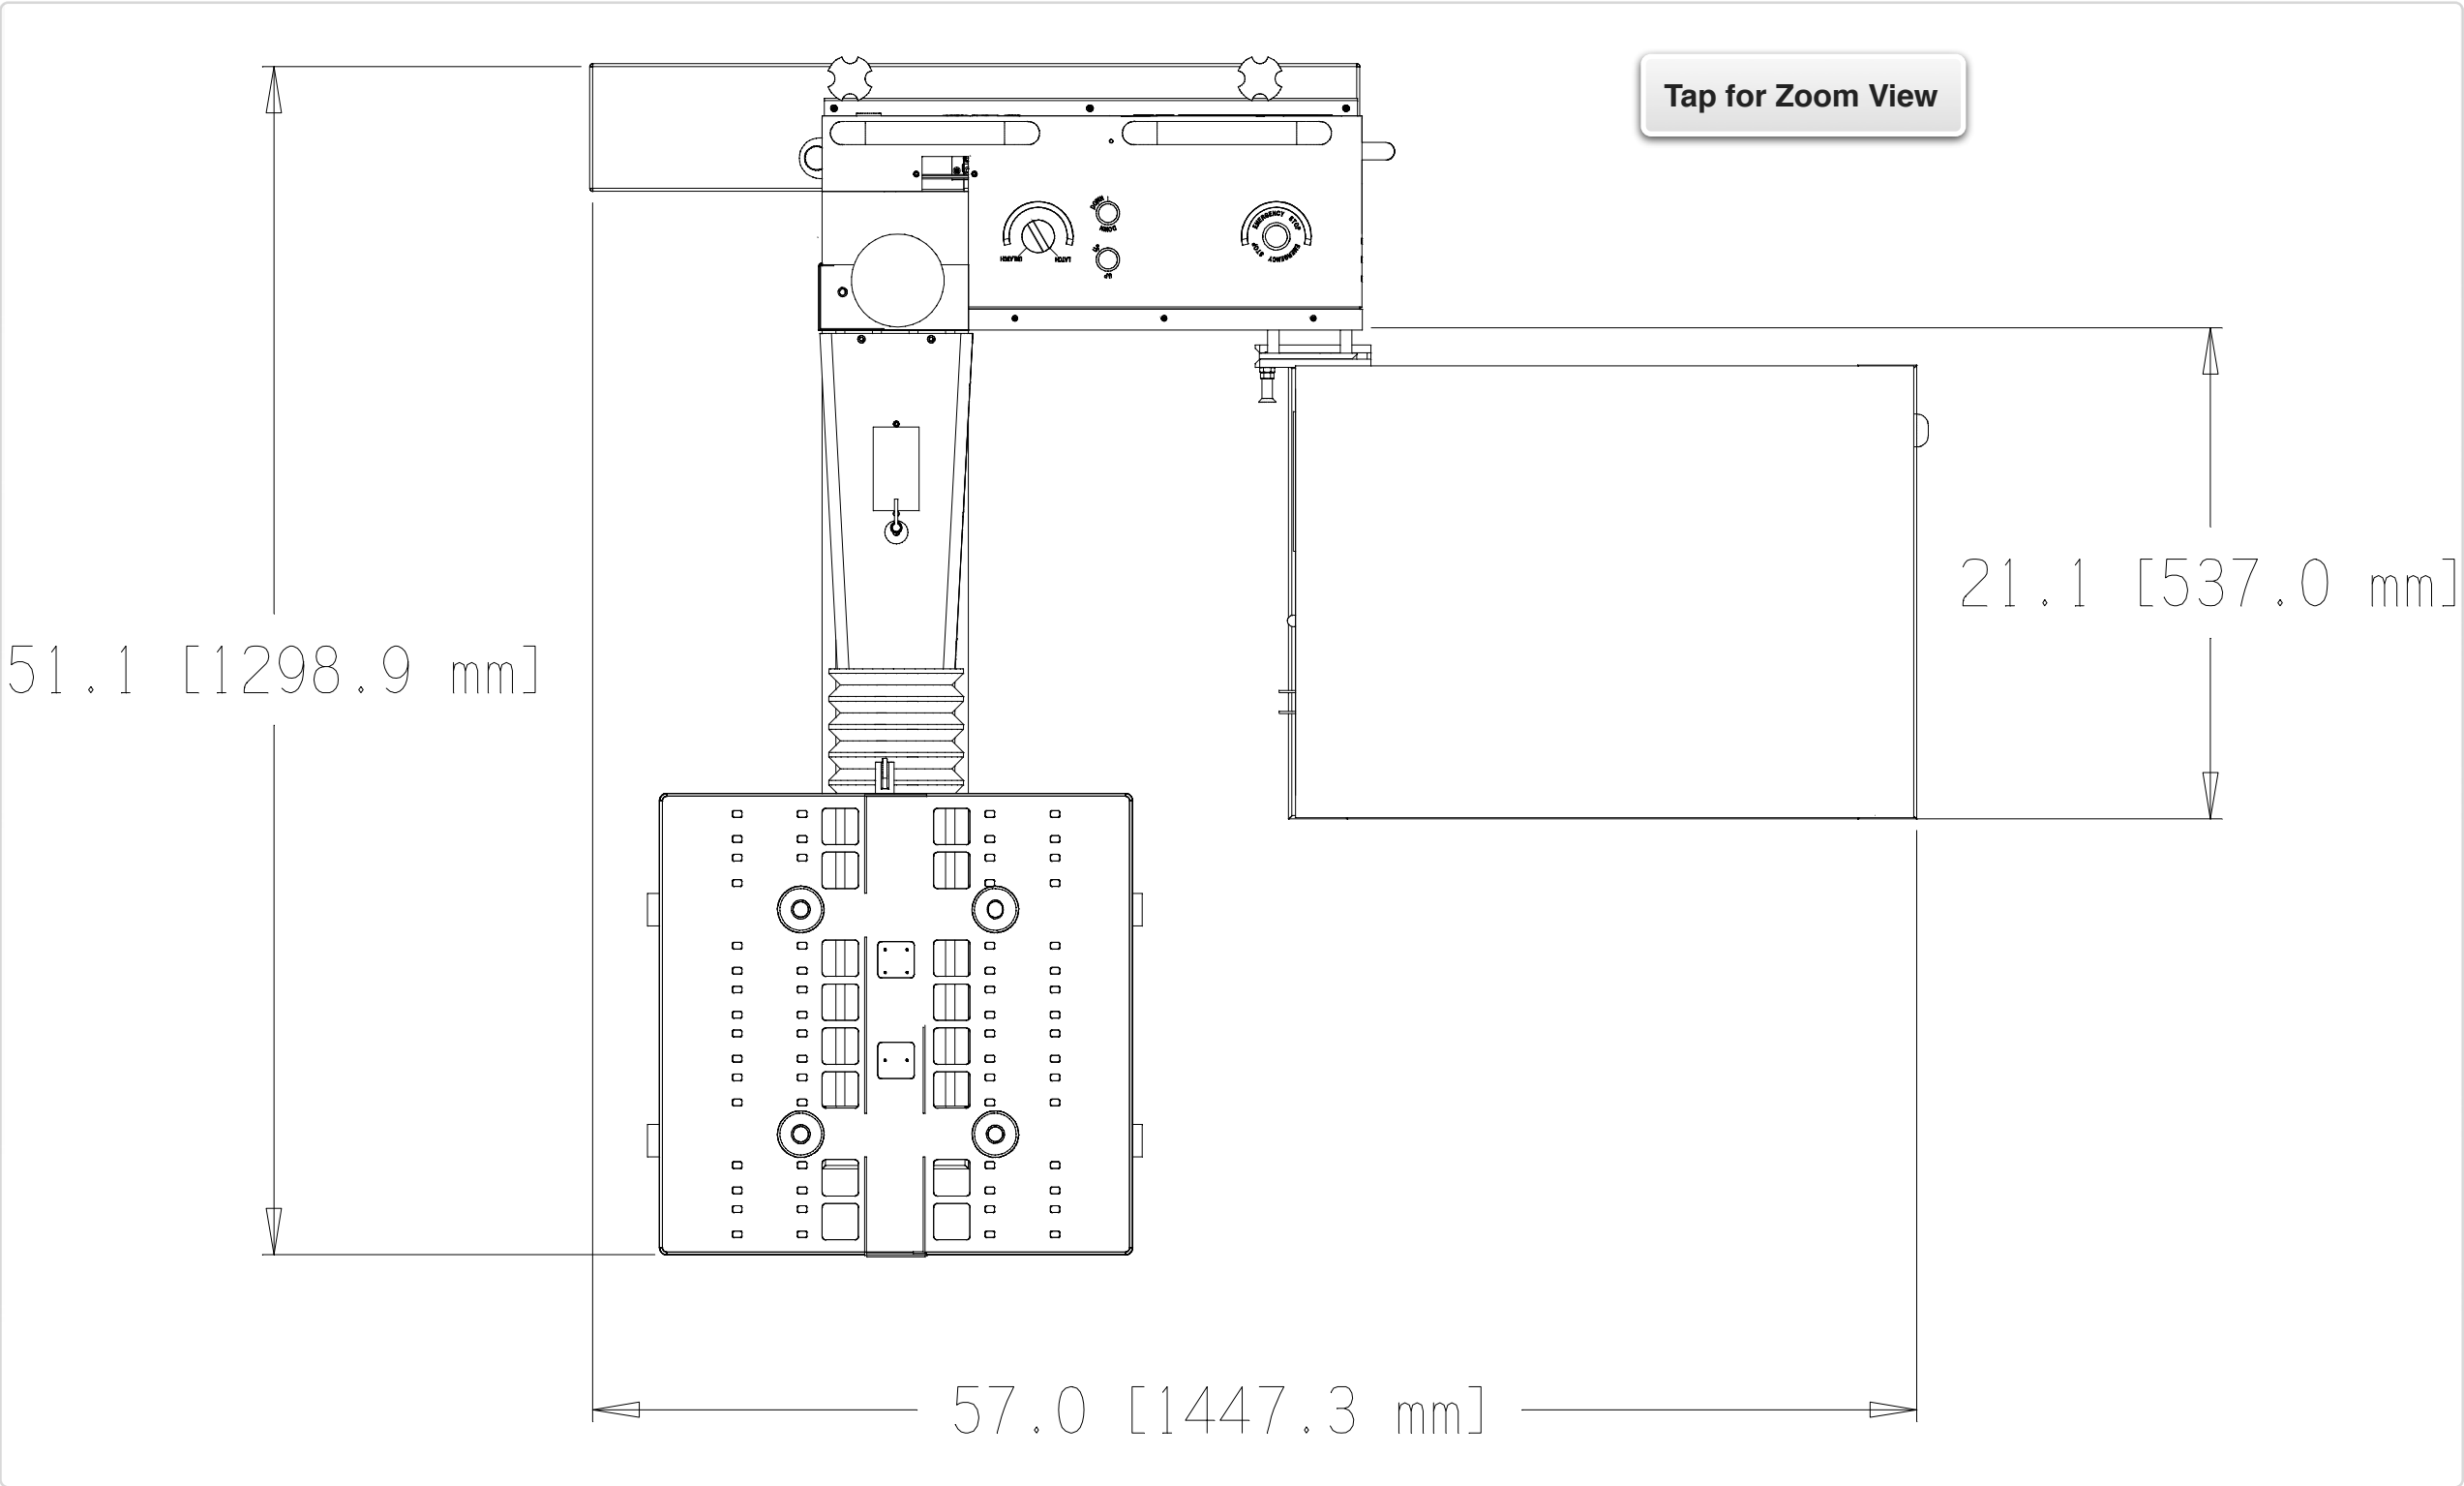


FIGURE 8.12 RI8568B TOP-VIEW WITH AUXILIARY CART (CONFIGURATION 2)



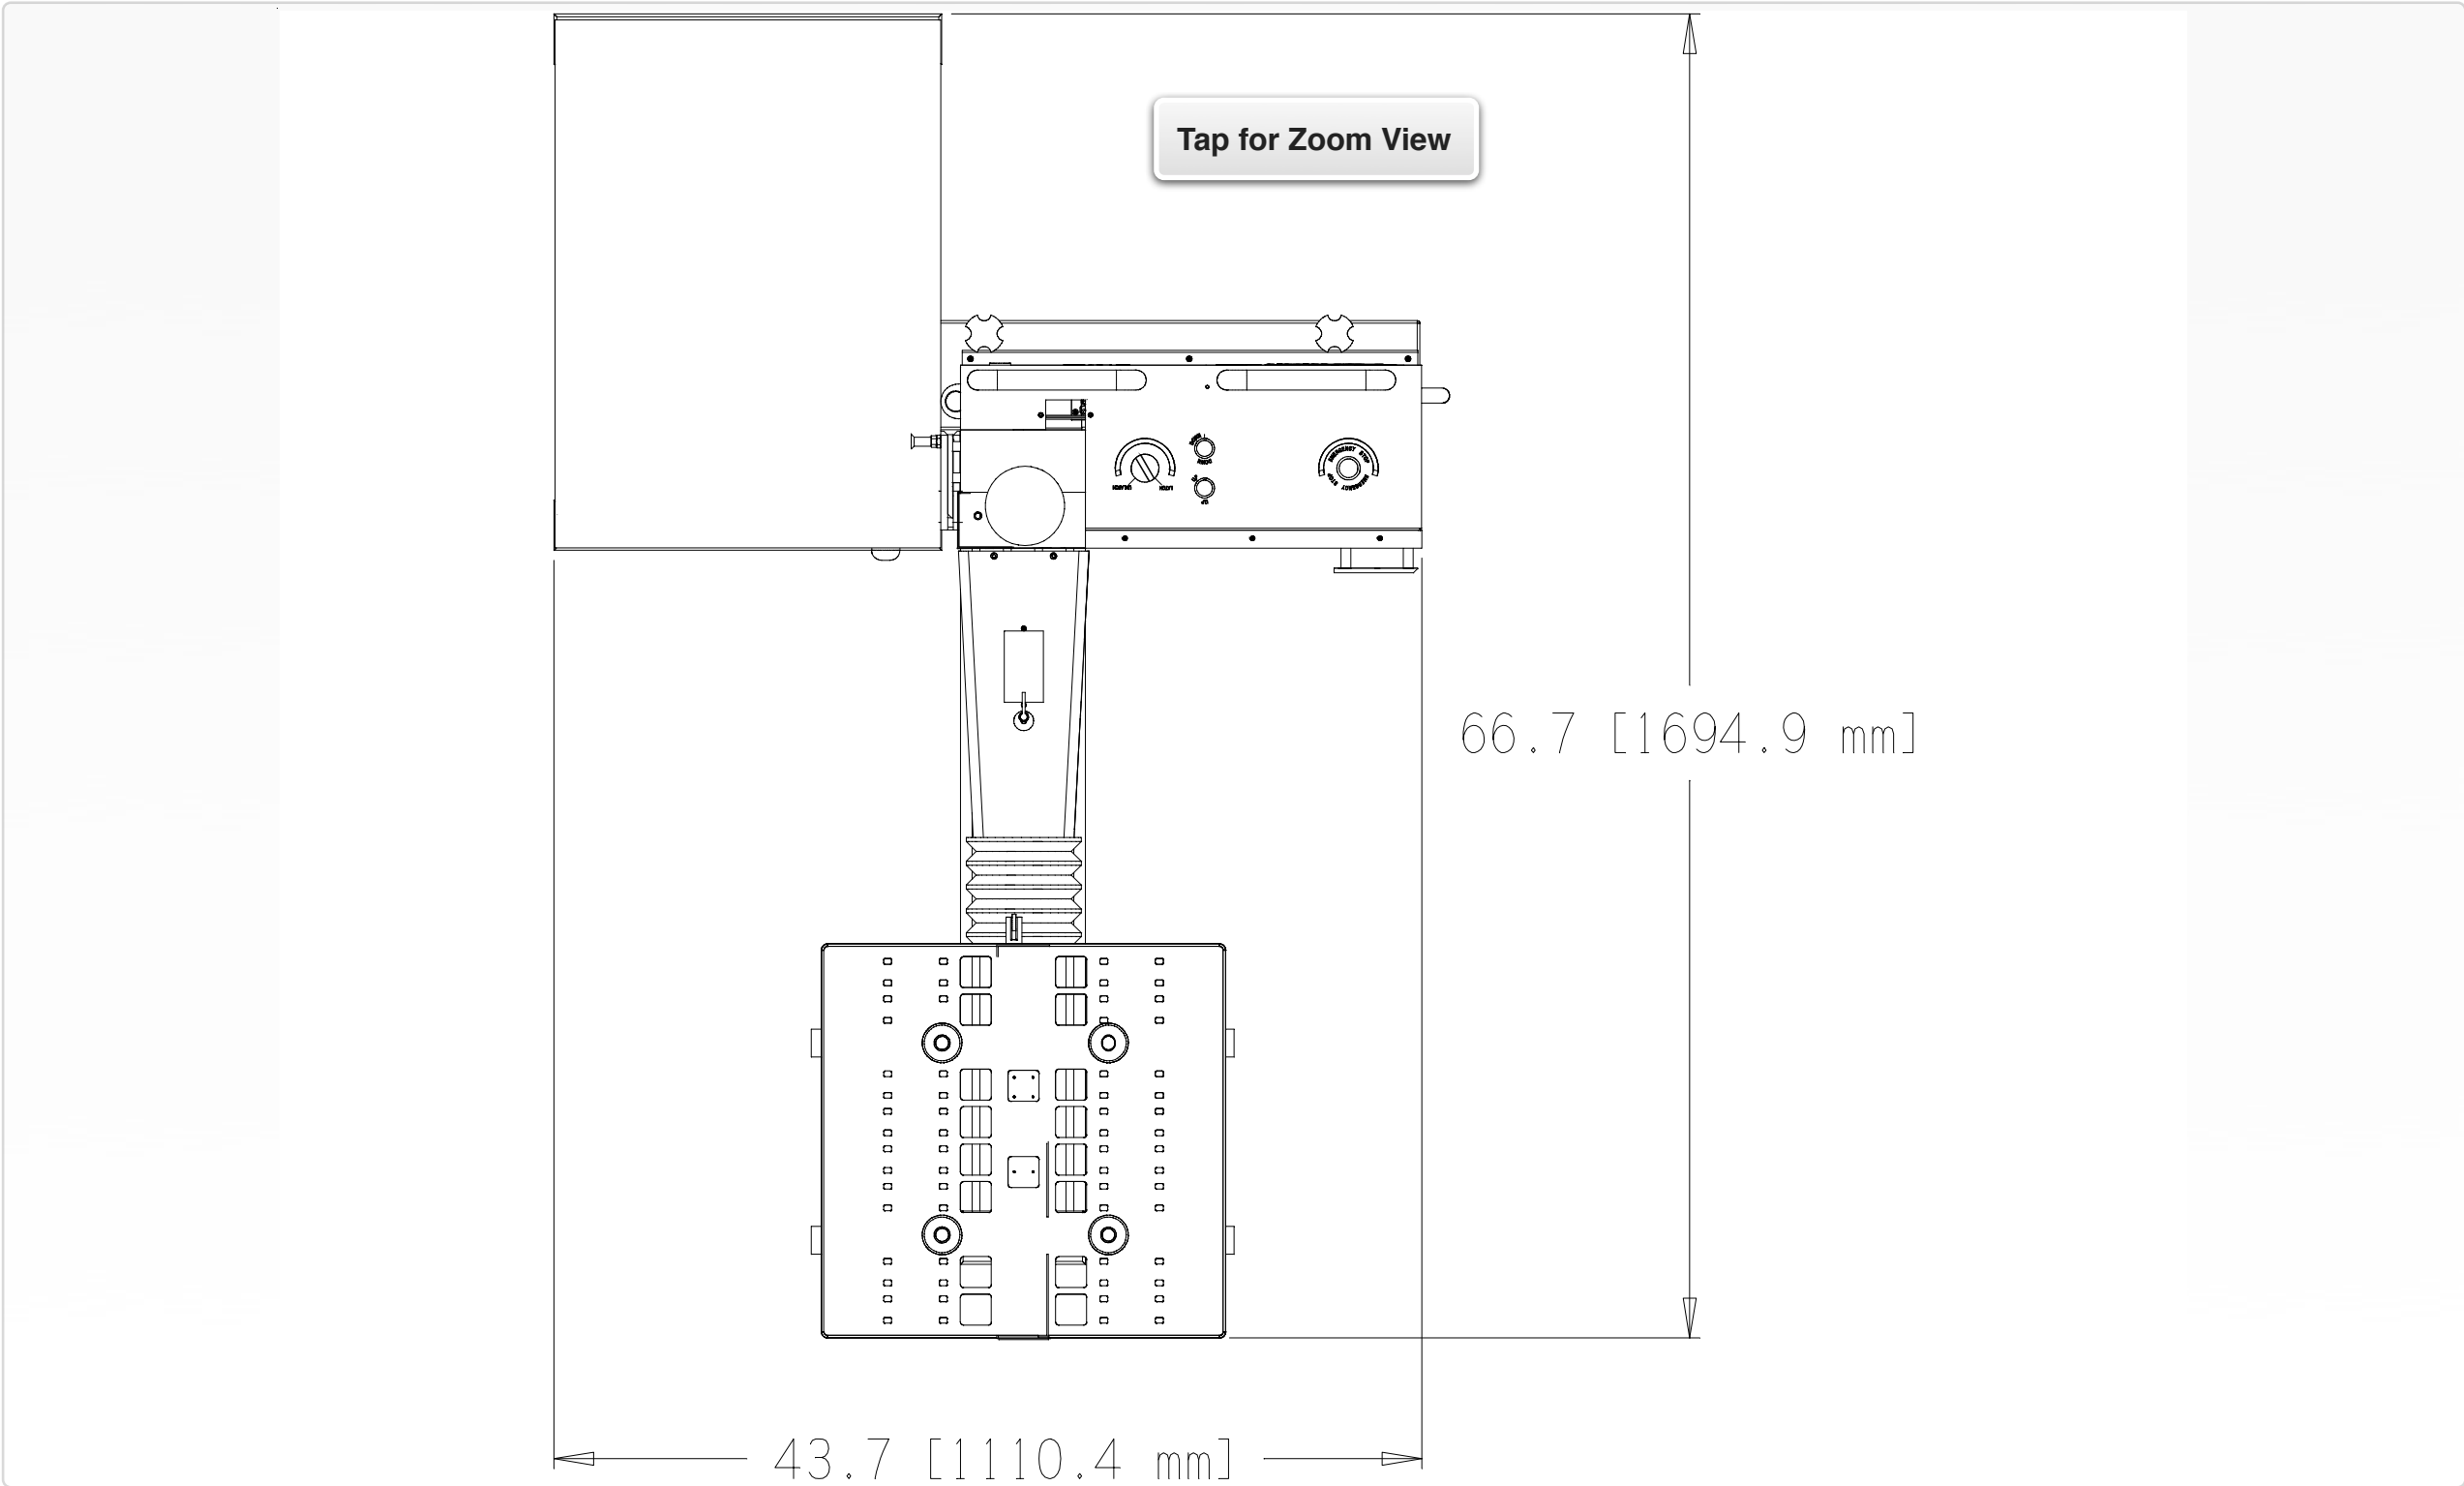



FIGURE 8.13 CIRCUIT BREAKERS AND FIXTURE DOCKING LATCH

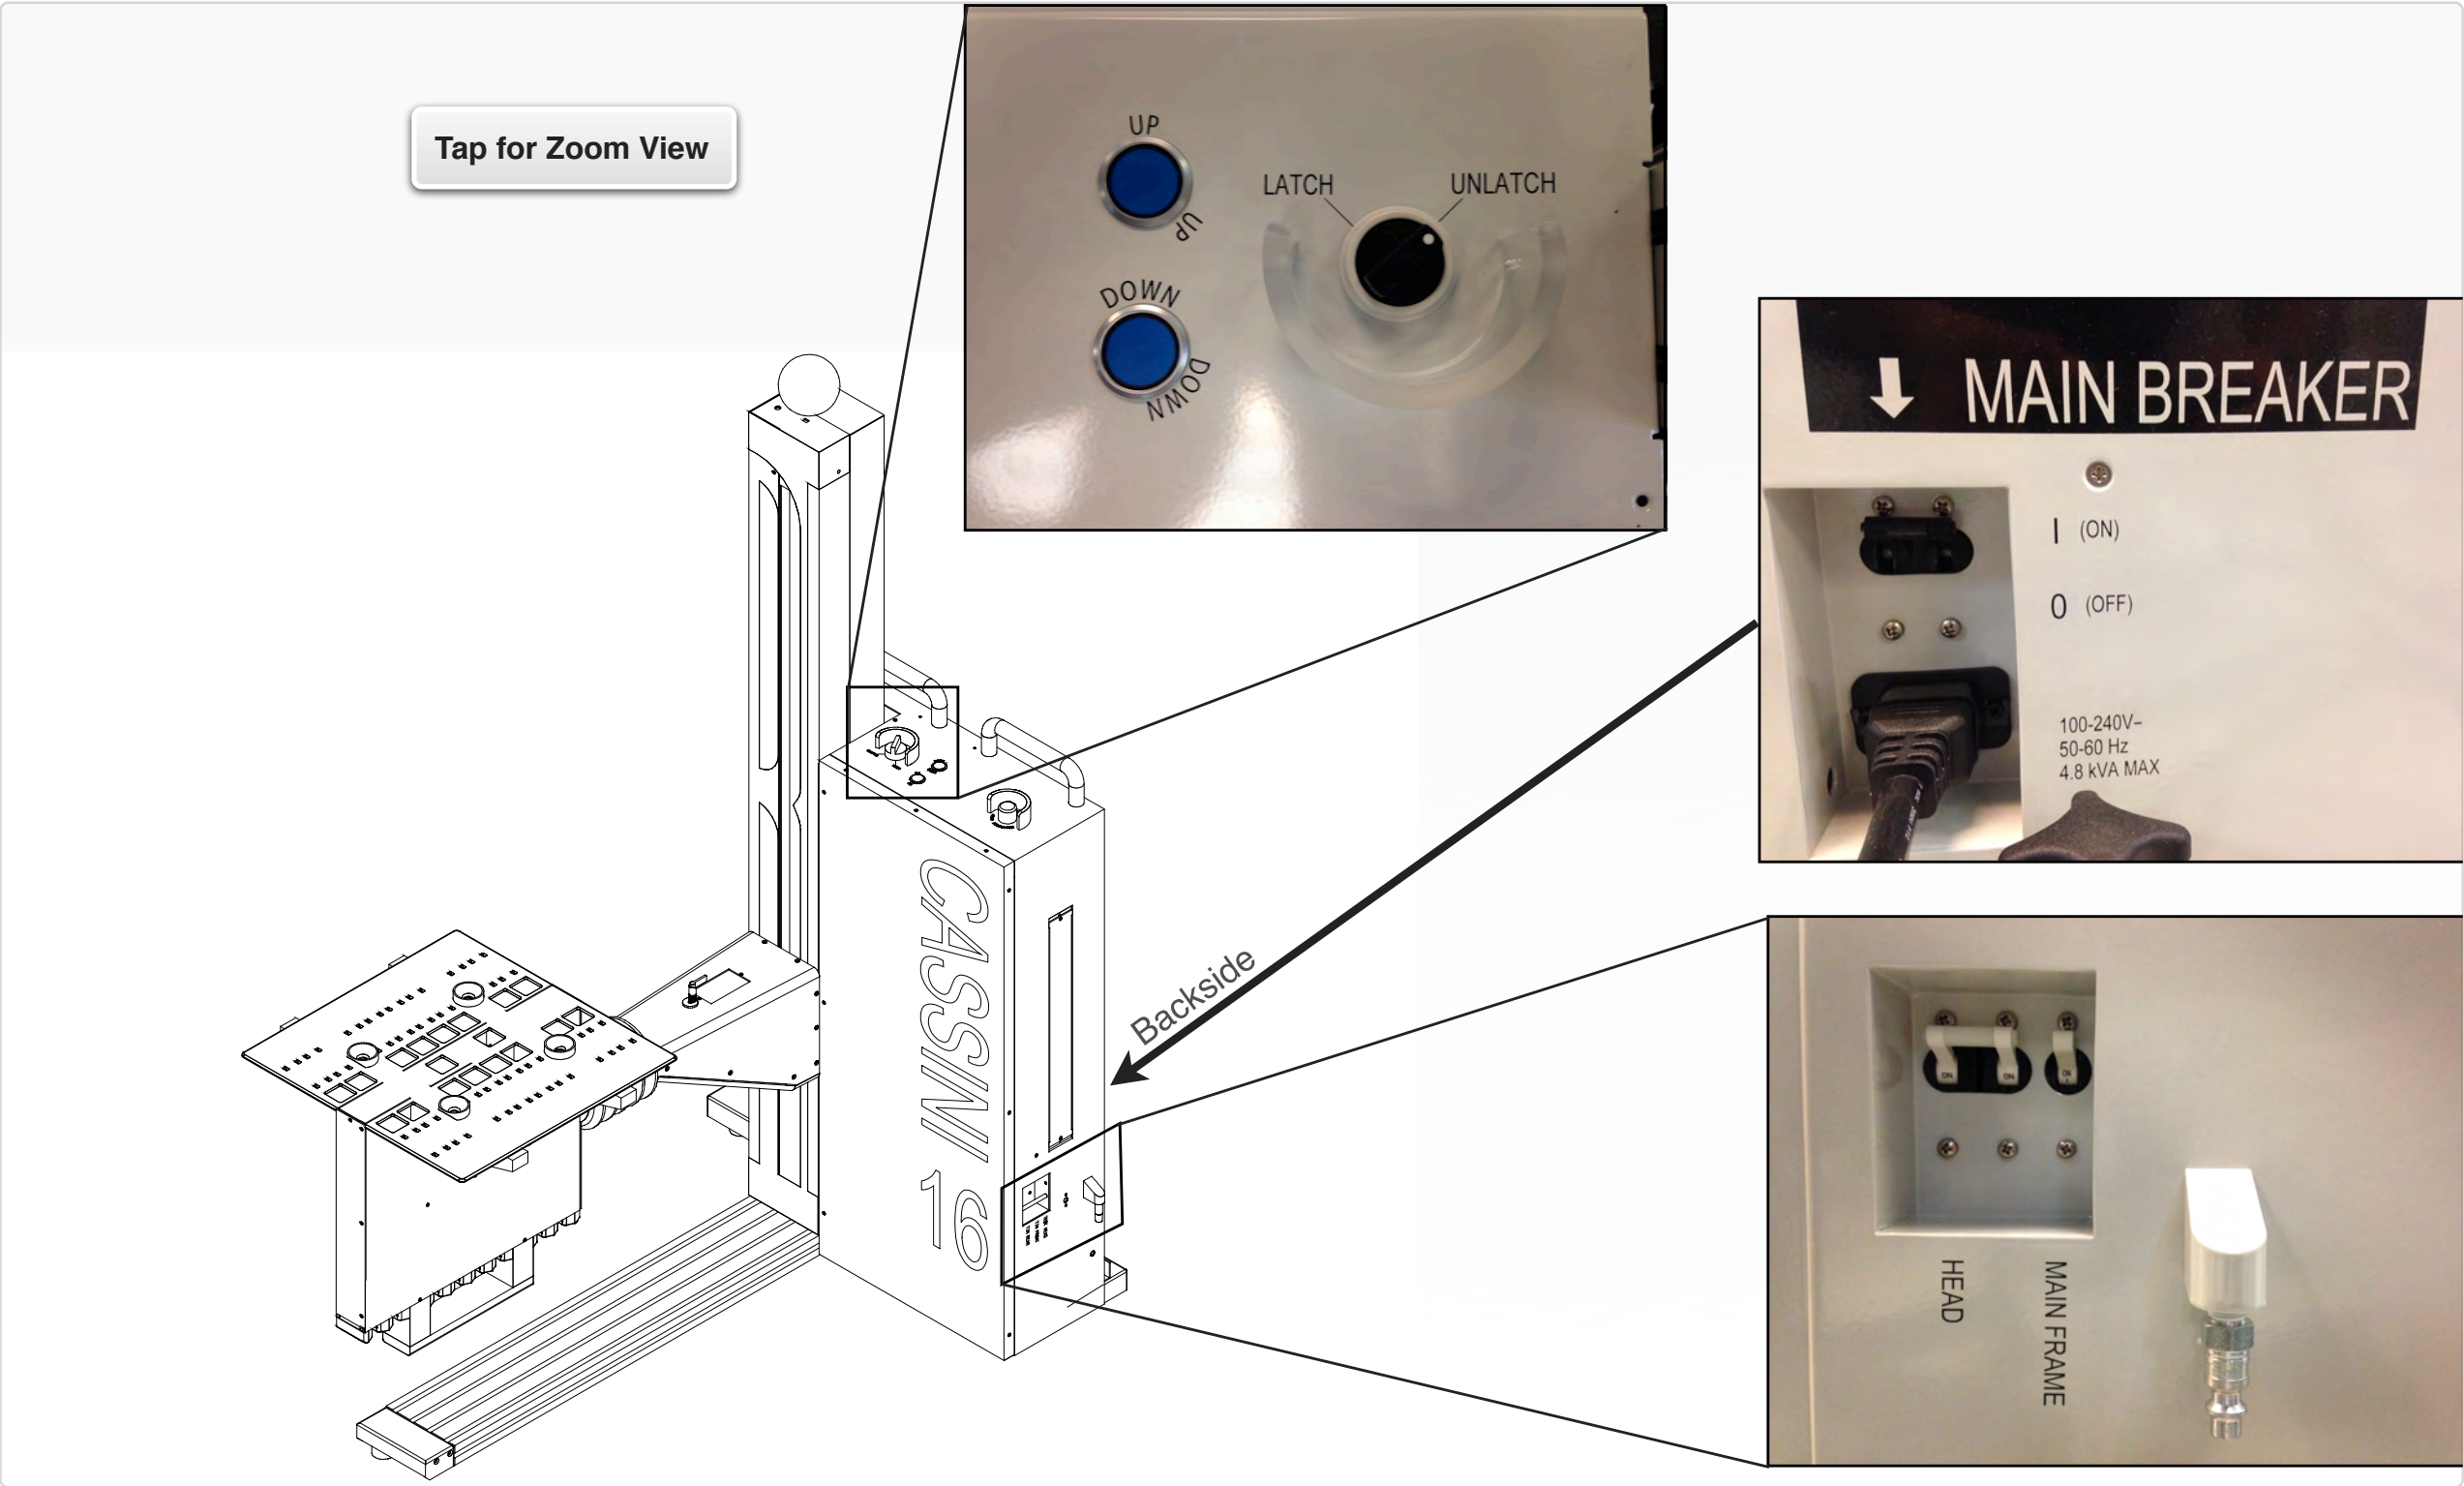

BLOCK DIAGRAM 8.10 TEST HEAD WIRING DIAGRAM

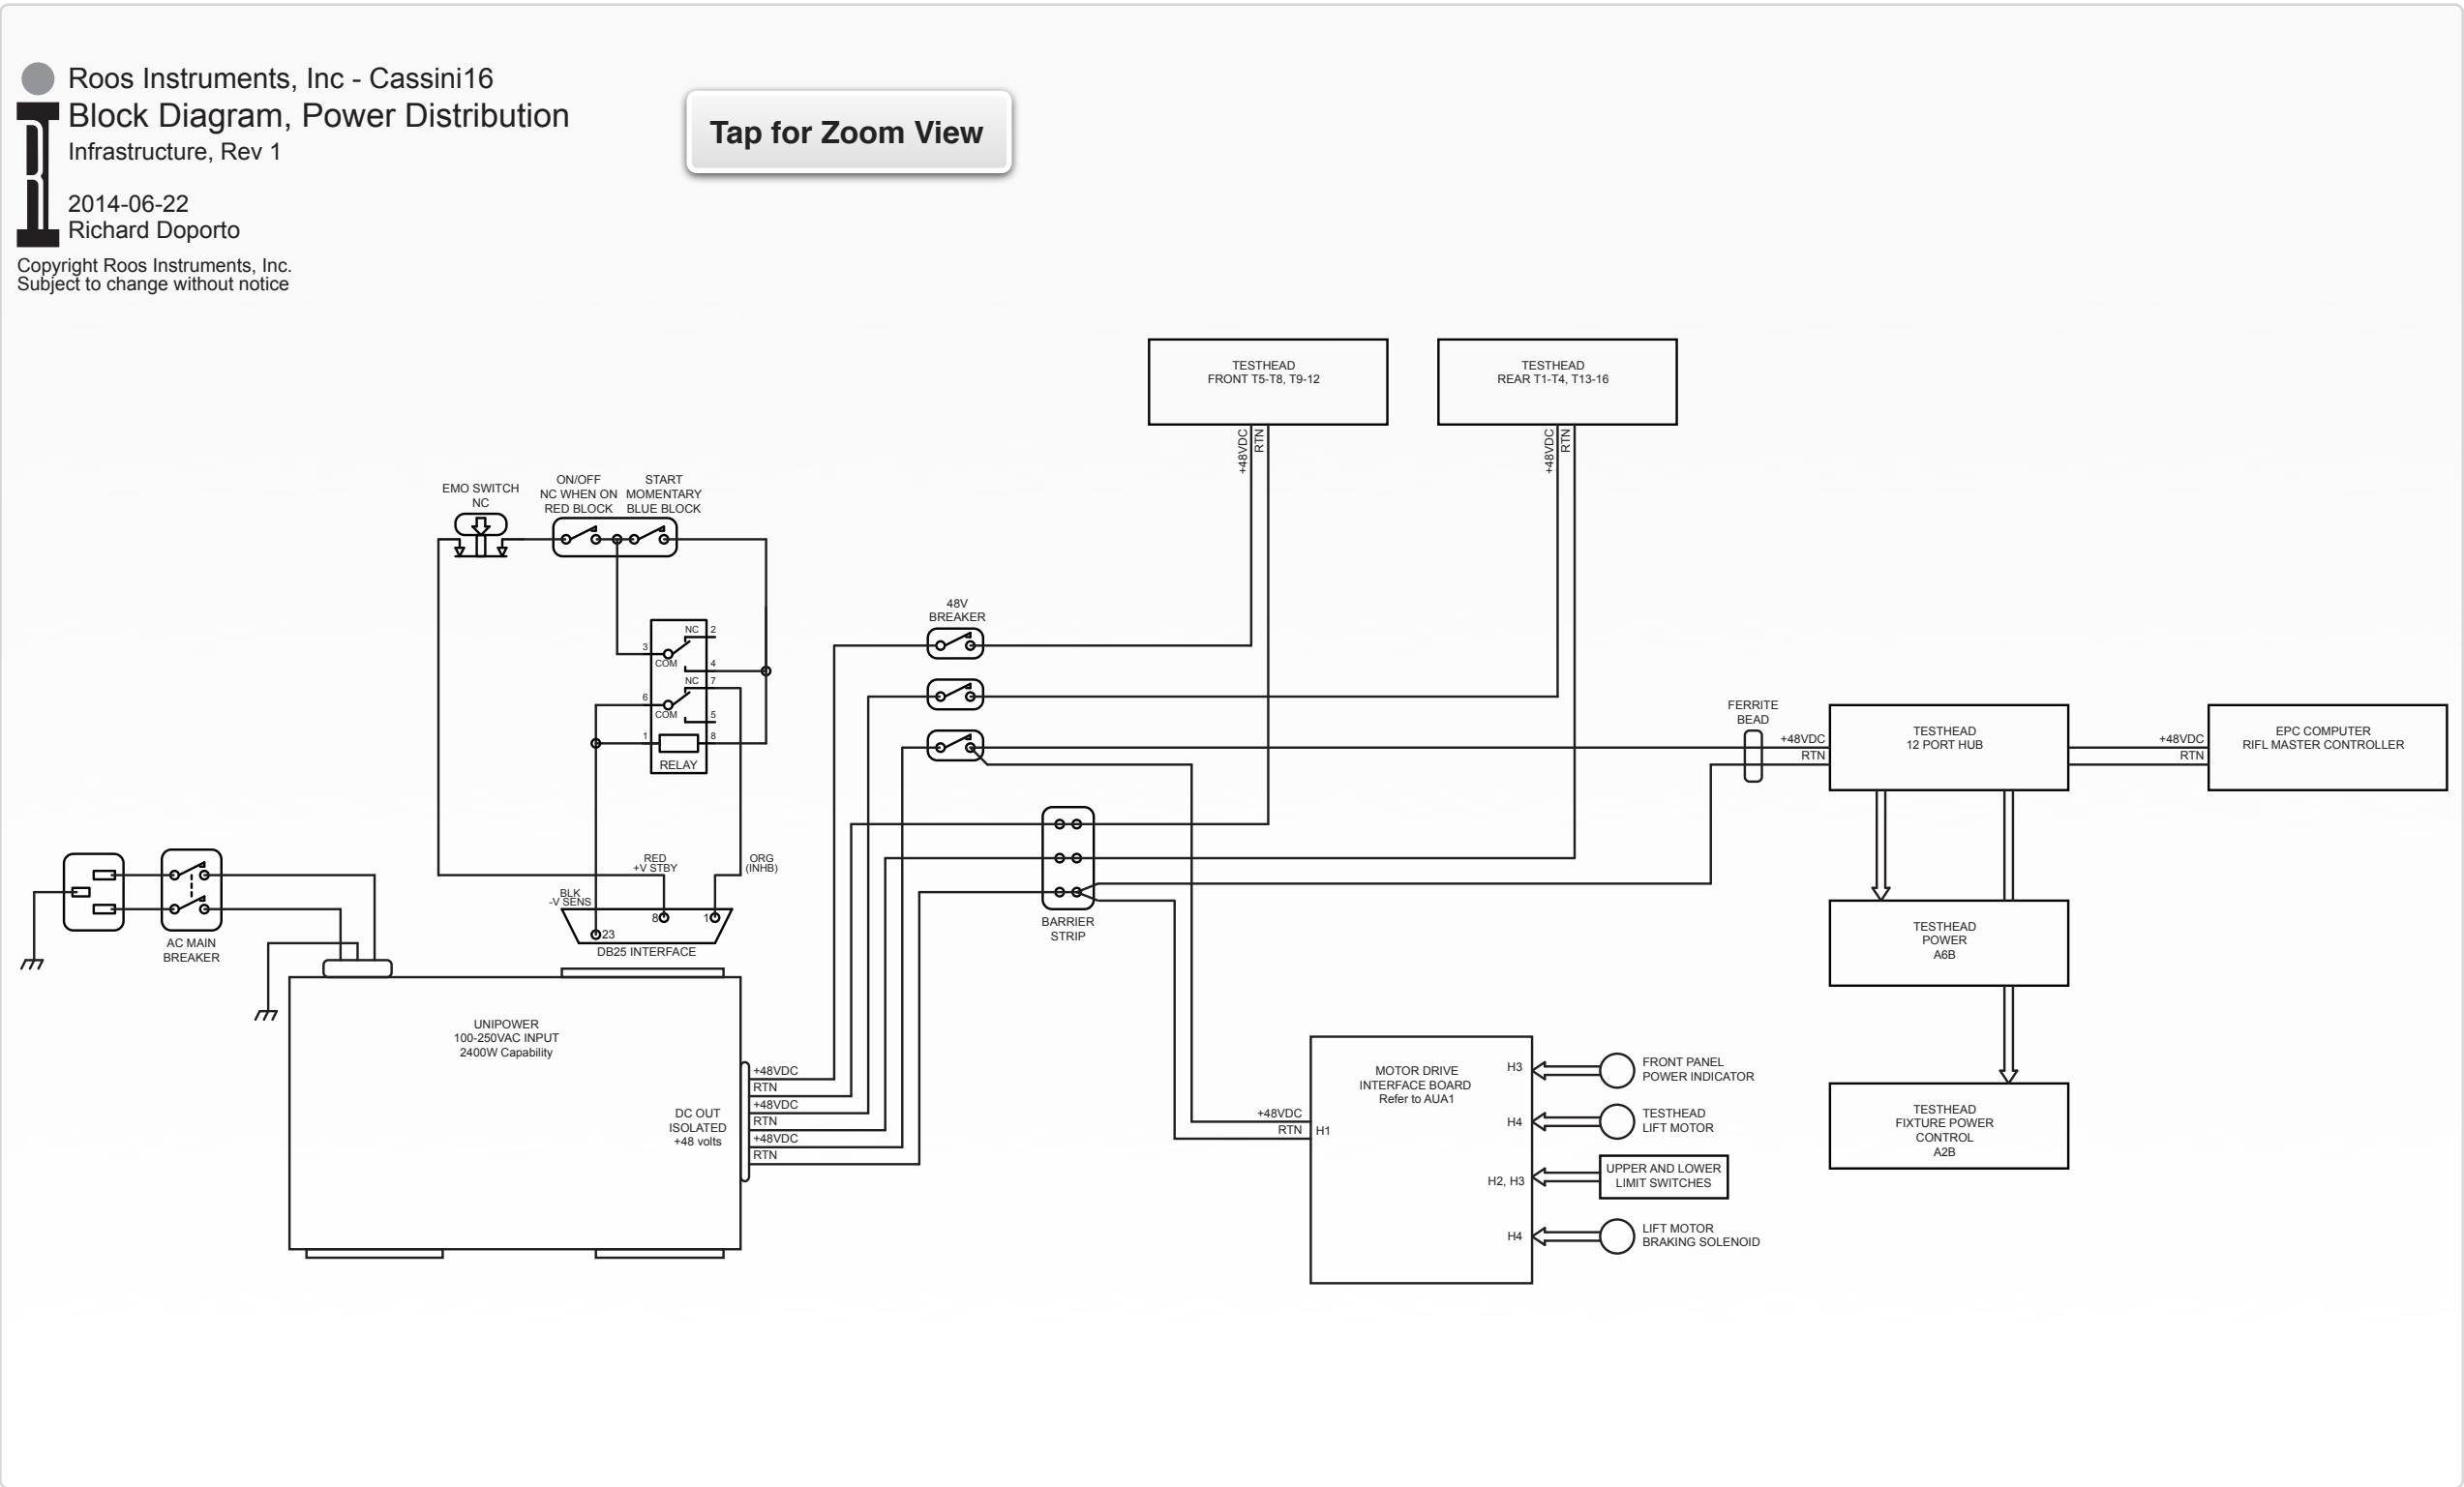

RI8572: WAVEFORM GENERATOR & MEASURE

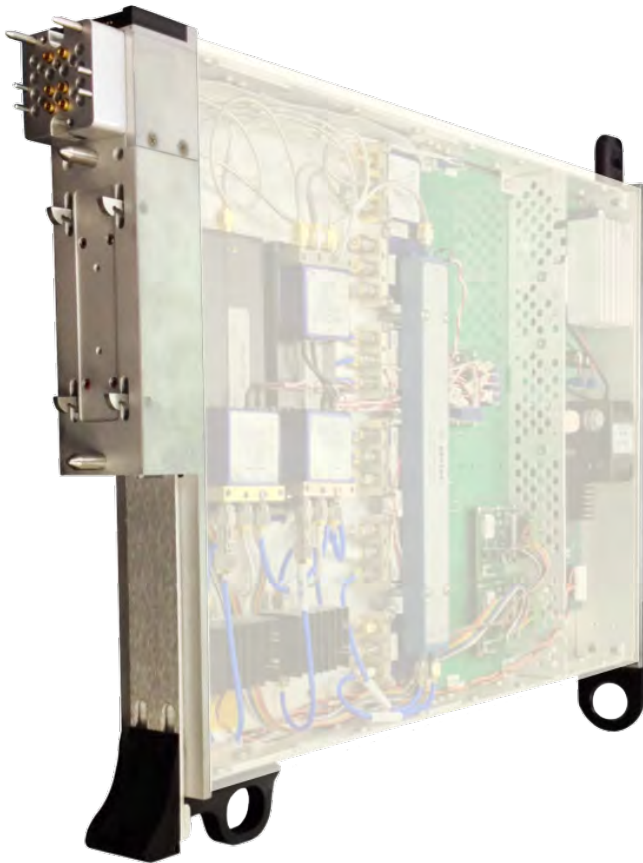

DESCRIPTION

The RI8572 combines two dedicated waveform generators and a dual-channel digitizer in a single instrument for general purpose time domain measurements. A built-in PLL and direct digital synthesizer generates two channels of orthogonal CW signals with phase, amplitude and DC offset controls for single tone applications. An arbitrary waveform generator with an embedded FPGA supplies two, DC coupled outputs with sinusoidal, square-wave, and user-programmable, complex modulated signals for baseband applications. A separate DDS and lookup table engine drives two, AC coupled ports for dedicated sinusoidal signal generation. A dual-channel digitizer provides oscilloscope functionality with two high-speed ADCs and a dedicated FPGA for real-time signal analysis.

KEY FEATURES

- M-ary QAM, M-PSK, & Custom Baseband Signals
- Continuous & Reciprocal Frequency Counter
- Measure S/N, SINAD, Rise / Fall Times

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Oscilloscope**, **SineGen** and **Waveform** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Oscilloscope, RI74105x Hi Spd scope/counter/BER
- SineGen, Ri7403x Dual Sine Source
- Waveform, Ri74211x Complex Waveform


NOTE: Multiple RI8594 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Oscilloscope,SineGen,Waveform; Oscilloscope2,SineGen2,Waveform2; Oscilloscope2,SineGen2,Waveform2; etc).

The “x” in RI8594x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8572 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.11

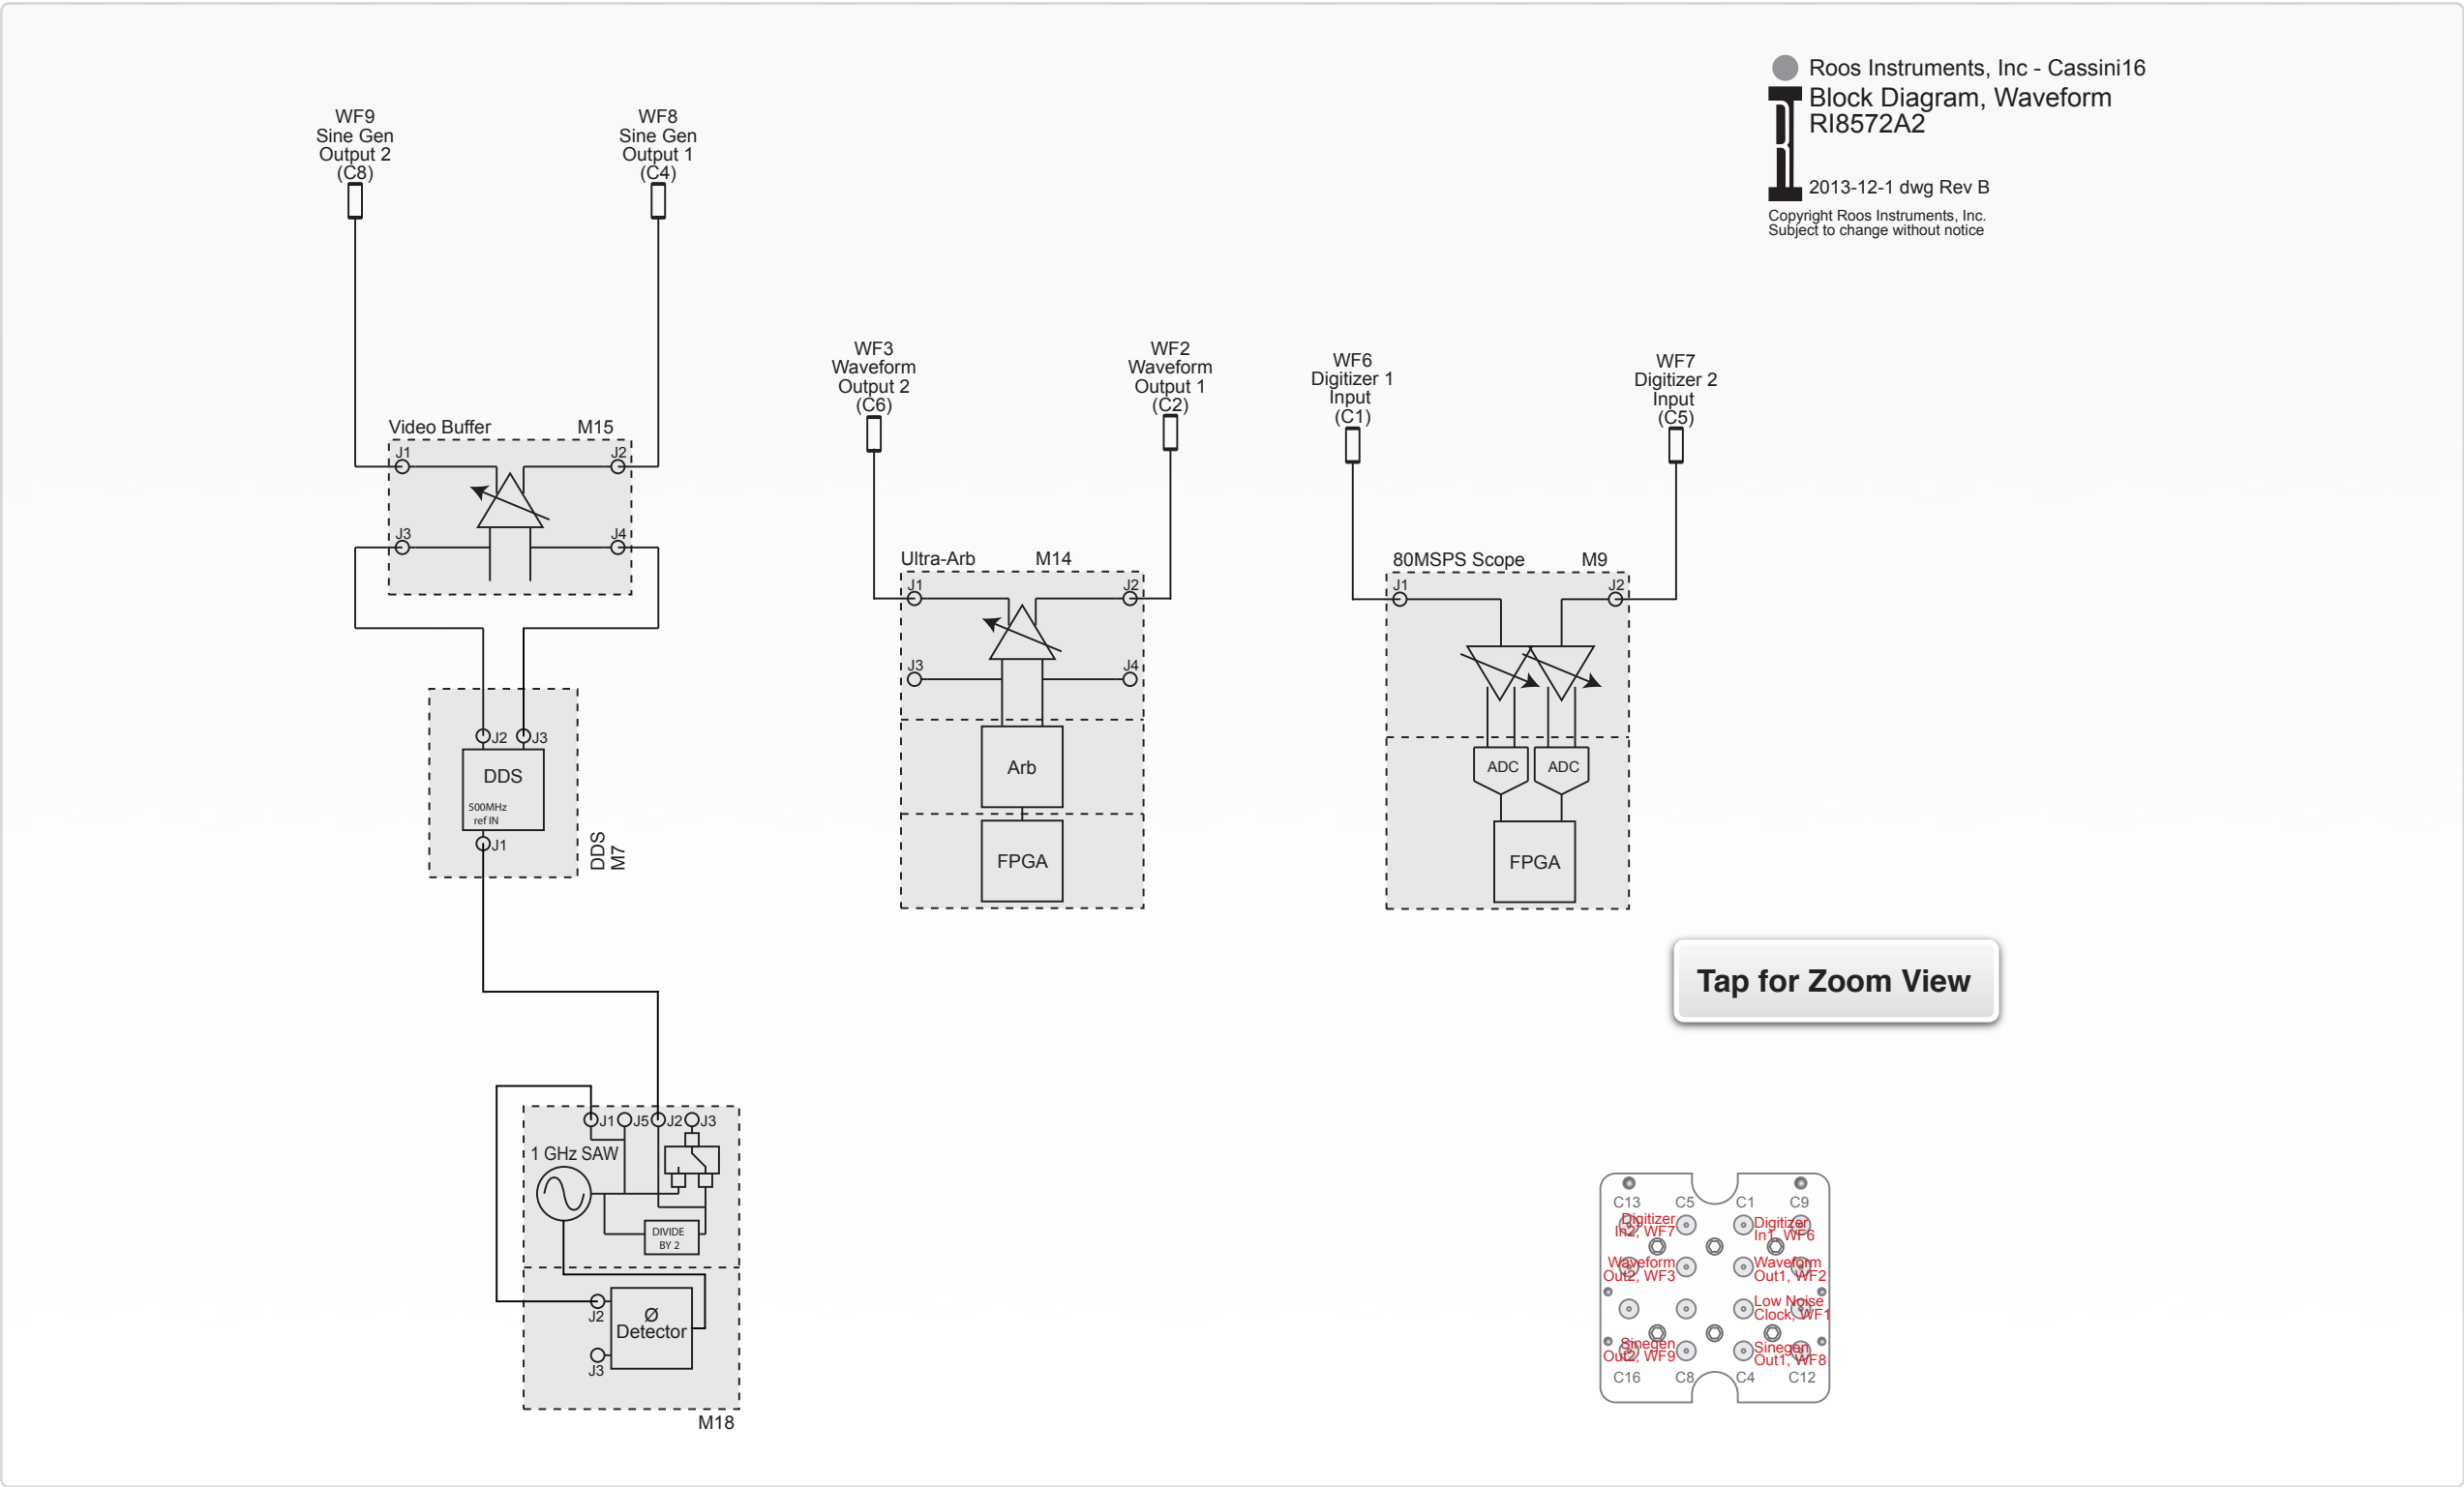

PERFORMANCE SPECIFICATIONS

Sine Wave Generator

Frequency Range	1 kHz to 90 MHz
Voltage Range	0.1 Vp-p to 3 Vp-p

Arbitrary Wave Generator

Frequency Range	1 Hz to 100 MHz
Voltage Range	640 MHz (Max)

Digitizer

Measurement Bandwidth	100 MHz
Signal/Bit Resolution	±0.4V / 14Bits
Sample Rate	80 Msps

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

RI8574: SYSTEM CONTROLLER



DESCRIPTION

The System Controller TIM provides the embedded user interface, multi-instrument control, and graphical test programming environment for the Cassini ATE system. Instrument control and management are provided via the RIFL (Roos Instruments Fast Link) bus. RIFL provides the communication bus as well as distributing 48V instrument power and a shared 10 MHz reference clock across the instrument test head. The controller provides networked data storage and communication capabilities (Guru™) through a standard CAT-5 connections with local storage for online and offline development and USB ports for non-network data transfer. Guru™ provides tools for organizing files, data, and software test resources along with built-in file versioning, automated backups, data and test distribution control, access control and more.

KEY FEATURES

- eComStation embedded Operating Environment
- CASSINI Operator Interface
- Graphical Test Plan Development Environment
- Guru™ - Networked Database System
- Support for Temptronics® TP04310A Temperature Controller

INSTRUMENTS PROVIDED BY THIS TIM

The instruments in this TIM appear as an **DataSim** and **System** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- DataSim, Data Simulator
- System, System Resources 2

NOTE: The “x” in the model number denotes the revision of the Instrument.

Optional Instruments may include:

- (Optional) TempControl, Temptronics TP04310A Temperature Controller (or compatible)

TIM OPERATIONS

Reference the [RI8574 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

RIFL MASTER

Roos Instruments Fast Link (RIFL) is a star topology communication bus that requires a single RIFL Master connected to RIFL Hubs and RIFL Nodes. RIFL Hubs are located in the Infrastructure and distribute power. Every TIM, Fixture Module, and Handler Pod is a RIFL Node.

The RIFL Master used for TIM communication, power and 10 MHz reference clock is contained in this TIM but does not appear in the Tester Configuration. The 10 MHz crystal oscillator is calibrated with an integer offset once at the factory and is expected to remain within tolerances for 25 years.

PERFORMANCE SPECIFICATIONS

Hardware	
CPU	Intel Core2 Duo
RAM	2 GB DDR2 667 MHz
HDD	SSD 120 GB
Operating System	
eComStation	Embedded OS, Graphical User Interface, Human Interface Controls
Interface Ports	
General IO	4 - USB, 1 - VGA (monitor), 2 - PS/2 (mouse & keyboard), 1- Serial, 1-Parallel
Handler/Prober/Temp Controller	Serial, Parallel, or GPIB
Graphical User Interface	Touchscreen and/or Monitor
Networking	10/100/1000 Ethernet, RJ45 Cat 5+
Network Standards	FTP, NSF, SMB, VNC, RSYNC, Telnet, NTP, LPD, SMB Printers, PDF

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

RI8575: PHASE NOISE MEASURE



DESCRIPTION

The RI8575 Phase Noise measurement TIM provides Cassini with a direct Phase Noise test capability to handle microwave VCO's and Oscillators at production speeds. It includes two RF Measure ports and a multipurpose I/O port for biasing and phase locking the device under test, evaluating Kv, Linearity, FM side-band performance, and Phase Noise for devices operating from 100 kHz to 12 GHz.

KEY FEATURES

- Phase Detector with built in Reference Oscillator
- Parametric Supply / Measure for Tune Voltage & Current
- Linearity & Kv Measure with 16-Bit Frequency Counter
- FM Sideband Measure

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **PhaseNoiseAnalyzer** in the panel dialog windows. (See [Graphical Programming](#) chapter)

Model and Name as it appears in the Tester Configuration:


- PhaseNoiseAnalyzer, RI8575x 1 - 16 GHz Phase Noise Analyzer

NOTE: Multiple RI8575 instruments are enumerated incrementally by the system as "2", "3", etc. in the configuration, edit, and control panels(i.e - PhaseNoiseAnalyzer, PhaseNoiseAnalyzer2, PhaseNoiseAnalyzer3, etc). The "x" in RI8575x denotes the model revision number.

BLOCK DIAGRAM 8.12

Roos Instruments, Inc - Cassini
Block Diagram, Phase Noise Discriminator TIM
RI8575A

2012-03-21
Copyright Roos Instruments, Inc.
Subject to change without notice

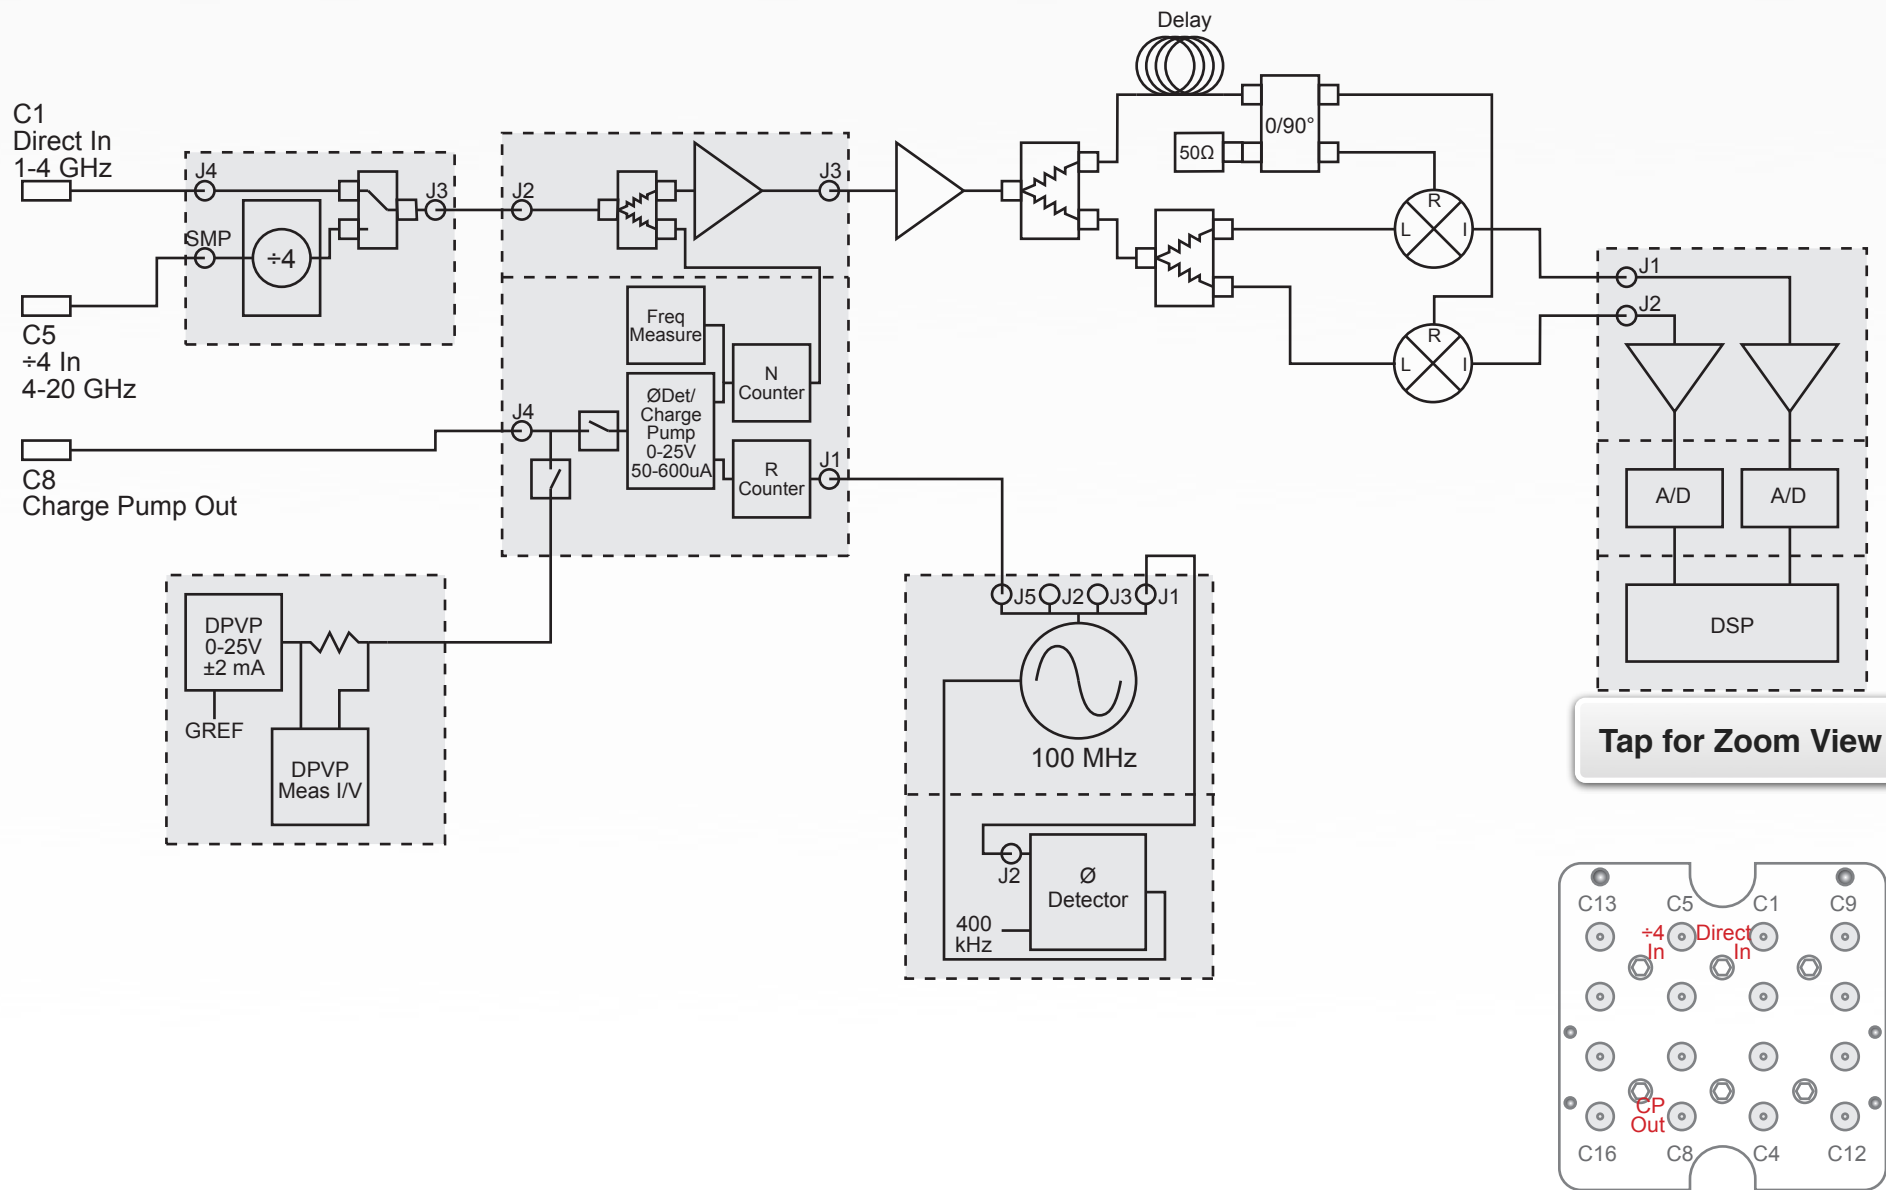

PERFORMANCE SPECIFICATIONS

Phase Noise Measure

Frequency Range	1 GHz to 16 GHz
Frequency Resolution	0.1 Hz
Frequency Offset	50 kHz to 2 MHz
Direct Noise Floor	-129 dBc/Hz @ 50 kHz -161 dBc/Hz @ 2 MHz
Divide-By-4 Noise Floor	-117 dBc/Hz @ 50 kHz -146 dBc/Hz @ 2 MHz

Parametric Measure

Current Range	±2 mA;±2 µA
Voltage Range	-3 V to +25 V

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

RI8577: SOURCE COMBINER



DESCRIPTION

The RI8577 Source Combiner TIM provides add-in capability for microwave mixing of two independent microwave sources for the 200MHz to 20GHz frequency band. Built-in signal amplification of up to 1 Watt and variable attenuation to 110dB provide signal conditioning along with enhanced impedance matching and calibrated signal paths. Internal low-loss RF relays provide two-tone and independent source distribution to support multi-site schemes and multi-port resource sharing applications.

KEY FEATURES

- 200 MHz to 20GHz Frequency Range
- Optimized for 2-tone Signal Measurements: IP3, IMD,
- Microwave Signal Mixing of Two Independent Sources
- Multi-path Signal Switching & Distribution
- Signal Conditioning: Gain, Attenuation, and Enhanced Impedance Matching

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Src12Output** in the panel dialog windows. Additional TIMs appear as Src12Output# with # replaced by the number of TIM.

Model and Name as it appears in the Tester Configuration:

- Src12Output, RI8577x Src1/2 Output TIM


NOTE: Multiple RI8577 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Src12Output, Src12Output2, Src12Output3, etc). The “x” in RI8577x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8577 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.13

Roos Instruments, Inc
Block Diagram, Src1/2 Output TIM
RI8577A0
2013-08-01

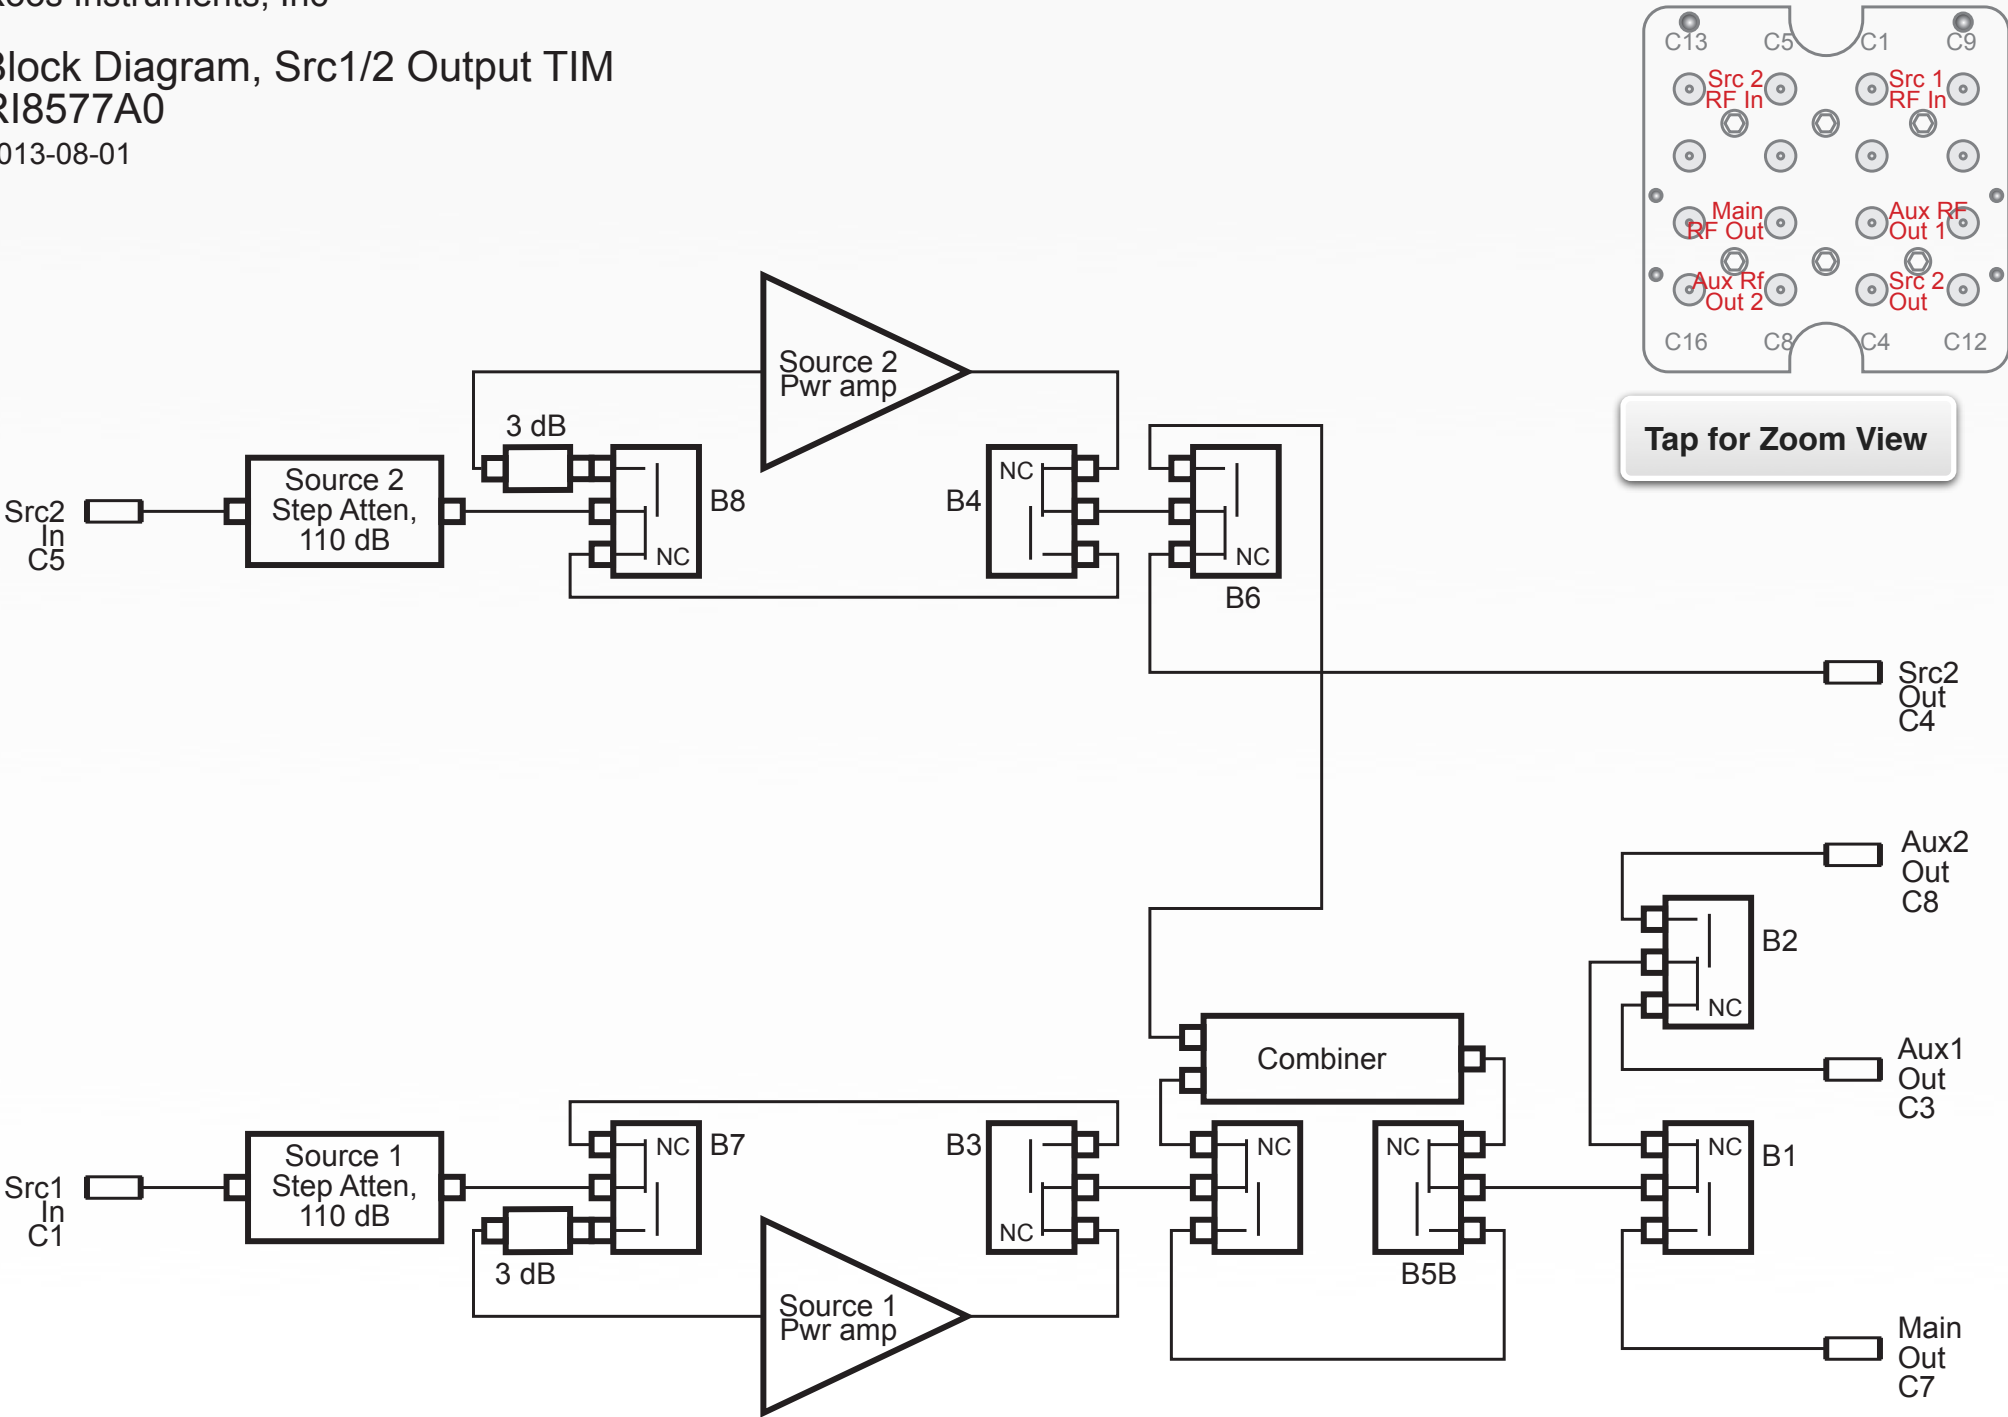


Tap for Zoom View

PERFORMANCE SPECIFICATIONS

Source	
Frequency Range	10 MHz to 20 GHz
Amplifier Gain	20 dB (500 MHz to 6 GHz)
Power Range	-110 dBm to +30dBm
Power Accuracy	± 0.5 dB

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

RI8580: 57GHz TO 64GHz TESTSET

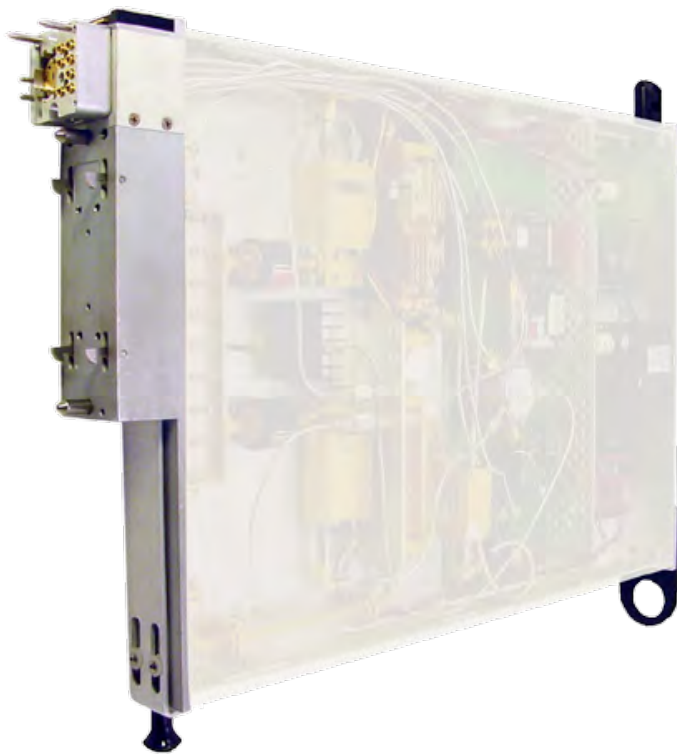

DESCRIPTION

The RI8580 mmWave test port TIM extends the frequency and application capability of Cassini's vector measurements to the 57 GHz - 64 GHz range. Calibrated RF paths deliver precision source and measure of signal power, distortion test, s-parameters, and harmonic measurement. Designed to interface with a Cassini receiver and source instrument, the RI8580 can be shared across multiple mmWave I/O for fast, precision measurements and maximum channel utilization.

KEY FEATURES

- S-Parameters from 57 GHz to 64 GHz
- NIST Calibrated Noise Source & Vector Error Correction
- Measure Noise Figure, P1dB, Abs. Power & Phase Noise
- Waveguide S-Parameter Port

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Test Head66** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- Test Head66, RI8580x 66 GHz Test Set

NOTE: Multiple RI8580 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Test Head66, Test Head662, Test Head663, etc). The “x” in RI8580x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8580 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.14

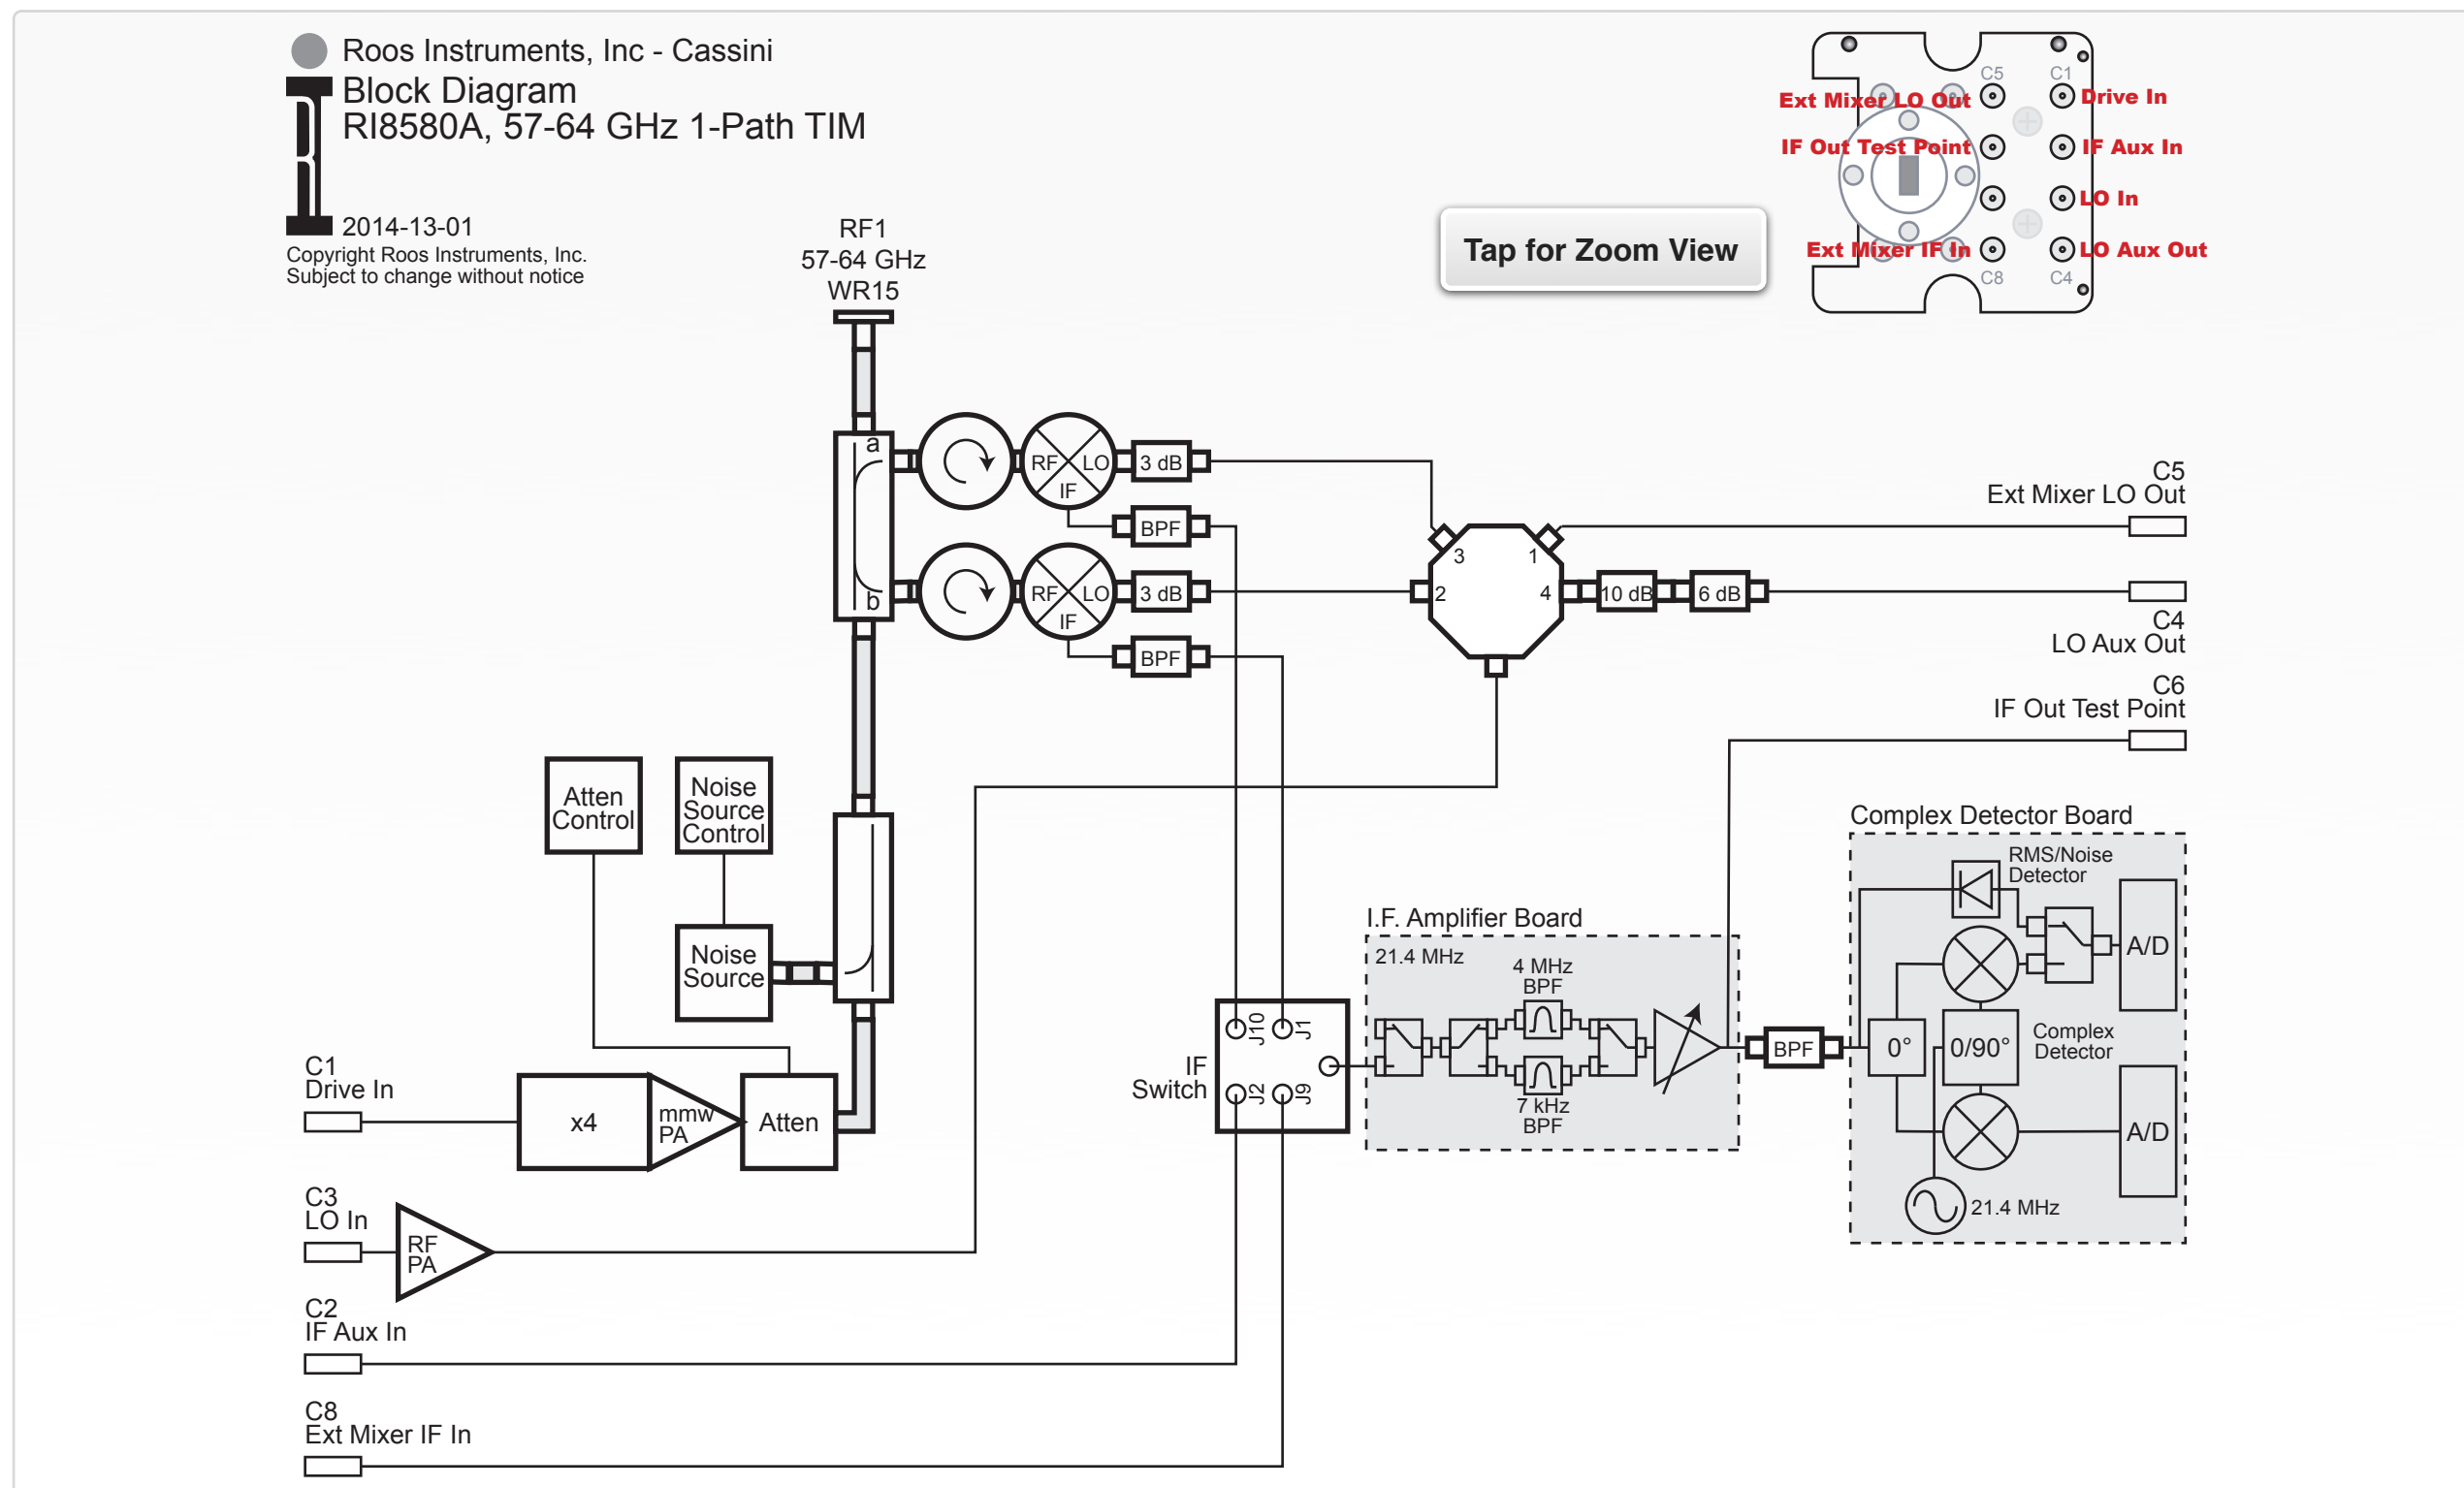

PERFORMANCE SPECIFICATIONS

Source	
Frequency Range	57 GHz to 64 GHz
Frequency Resolution	6 Hz
Power Range ²	-20 dBm to +5 dBm
Power Accuracy	± 0.2 dB
Measure	
Frequency Range	57 GHz to 64 GHz
Power Range	-110 dBm to +10 dBm

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

² Typical performance with an RI8587 Receiver

RI8581: 100kHz TO 20GHz RECEIVER



DESCRIPTION

The RI8581 Receiver TIM provides a scalable RF front-end and frequency downconverter, along with a vector baseband digitizer that covers the 100 kHz to 20 GHz frequency range. The RI8581 features multiple RF ports that interface with the Cassini's Testset Instruments to extend the frequency range of the front-end to 81 GHz and beyond. The synchrodyne (frequency domain, phase and magnitude) back-end provides precision vector measurements while the high-linearity mixers and selectable analog filter bank with 7 kHz to 5 MHz of instantaneous detection bandwidth at signal sensitivities down to -100 dBm. The TIM provides 3 IF input ports, dedicated low and high frequency input ports, LO distribution, 2 auxiliary bypass ports, and a dedicated 21.4 MHz IF output port for bench analysis, engineering, and debugging.

KEY FEATURES

- Absolute Power, Phase, Noise Figure and S-Parameters
- >100 dB of Dynamic Range from 100 kHz to 20 GHz
- Dual Measurement Engines, True RMS & Vector I & Q
- 2 RF Input ports, 3 baseband inputs, and Receiver LO input

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Receiver** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:


- Receiver, RI8581x .01 to 20 GHz Complex Receiver TIM

NOTE: Multiple RI8581 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Receiver, Receiver2, Receiver3, etc). The “x” in RI8581x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8581 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.15

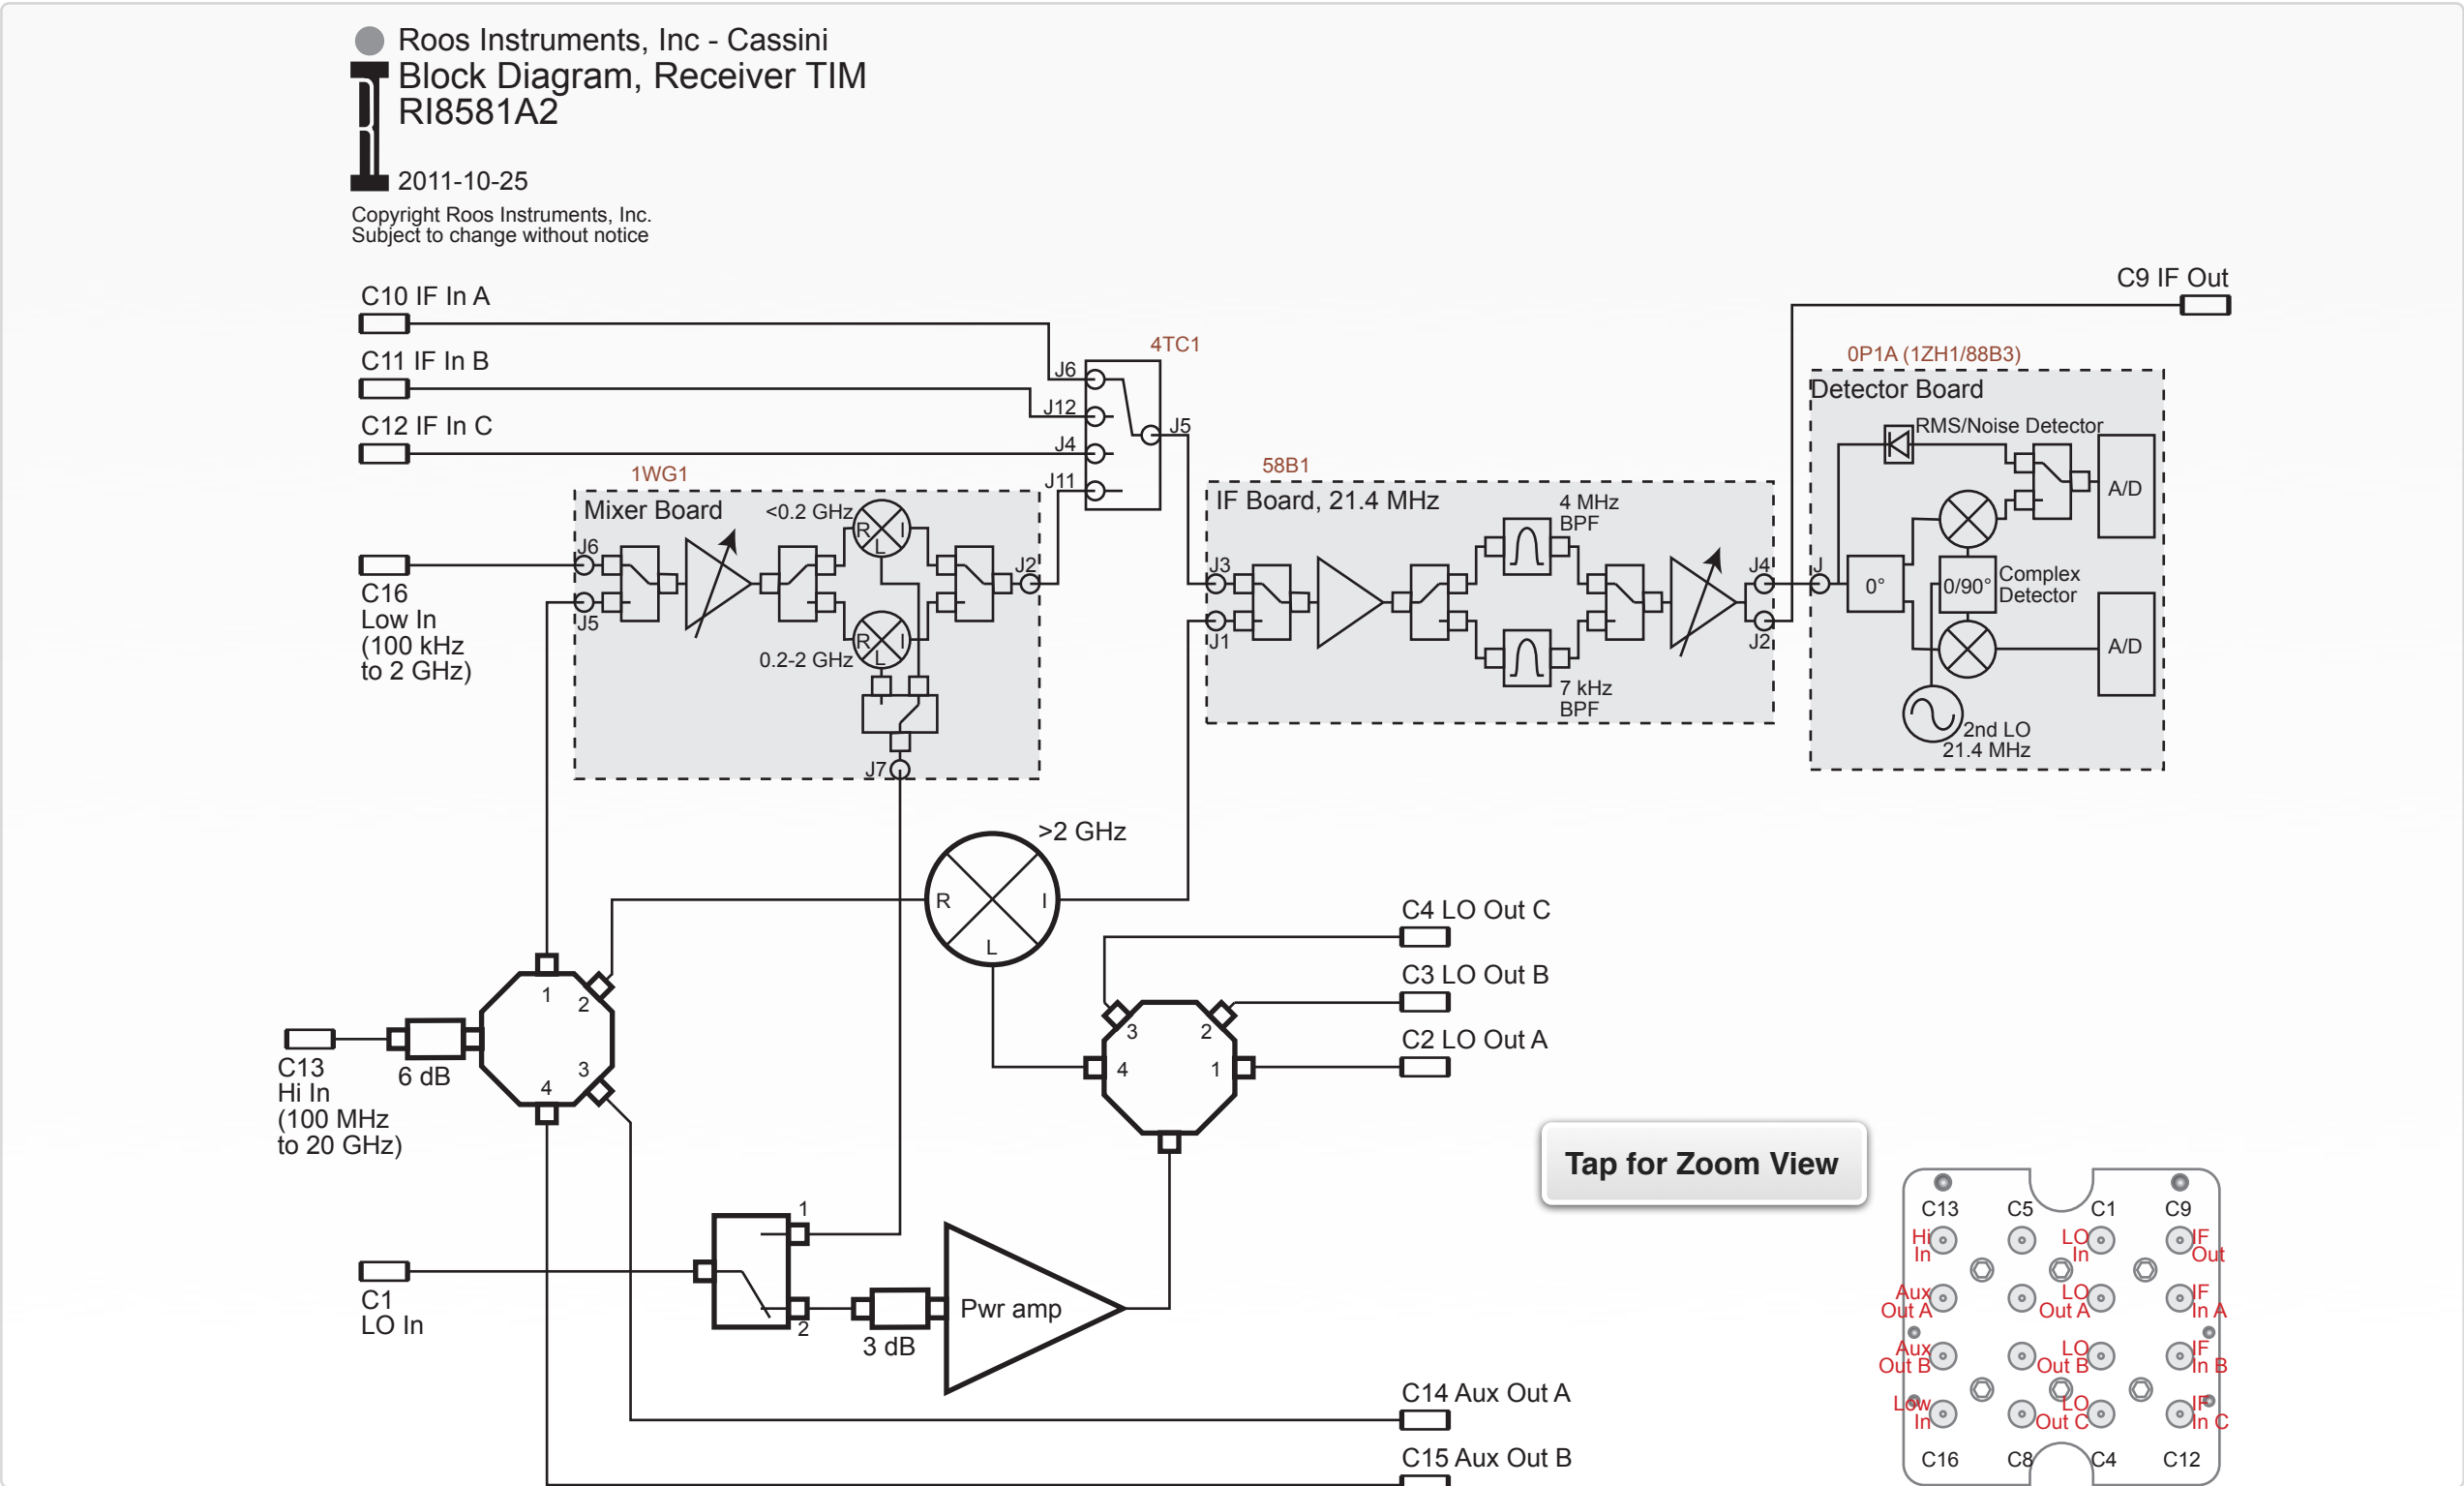

PERFORMANCE SPECIFICATIONS

Front-End

Frequency Range	100 kHz to 20 GHz
Frequency Resolution	1 Hz
Power Range ²	-100 dBm to +10 dBm
Frequency Lock	<100 μsec

Receiver

Analog Bandwidths	7 kHz, 200 kHz, 5 MHz (user Selectable)
Noise Floor	-155 dBm/ Hz @ 1 GHz (typical)
ADC Sample Rate	80 MSps

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

² Typical performance with an RI8587 Receiver

RI8587: 100 kHz TO 20 GHz RECEIVER WITH DSP



DESCRIPTION

The RI8587 Receiver TIM provides a scalable RF front-end and frequency downconverter, along with a vector baseband digitizer that has a local DSP for customized applications in the 100 kHz to 20 GHz frequency range. Incorporating our SyRF Core technology, the RI8587 features multiple RF ports that interface with the Cassini's Testset Instruments to extend the frequency range of the front-end to 81 GHz and beyond. The complex synchrodyne back-end provides high-linearity mixers, selectable analog filter bank with up a range of 1 kHz to 7 MHz of instantaneous detection bandwidth, and dual high-precision ADC's with an embedded FPGA for real-time spectrum analysis, digital filtering, demodulation and user-defined signal processing. The TIM provides 3 IF input ports, dedicated low and high frequency input ports, LO distribution, 2 auxiliary bypass ports, and a dedicated 21.4 MHz IF output port for bench analysis, engineering, and debugging.

KEY FEATURES

- Absolute Power, Phase, Noise Figure and S-Parameters
- >100 dB of Dynamic Range from 100 kHz to 20 GHz
- Real-time DSP for Custom, PAR, ACPR, EVM, and FFTs
- 2 RF Input ports, 3 baseband Inputs, and Reference LO Input

INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **Receiver** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- Receiver, RI8587x .01 to 20GHz Complex Receiver TIM w DSP

NOTE: Multiple RI8587 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Receiver, Receiver2, Receiver3, etc). The “x” in RI8587x denotes the model revision number.


TIM OPERATIONS

Reference the [RI8587 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.16

Roos Instruments, Inc - Cassini
Block Diagram, Receiver TIM
RI8587A

2014-01-13
Copyright Roos Instruments, Inc.
Subject to change without notice

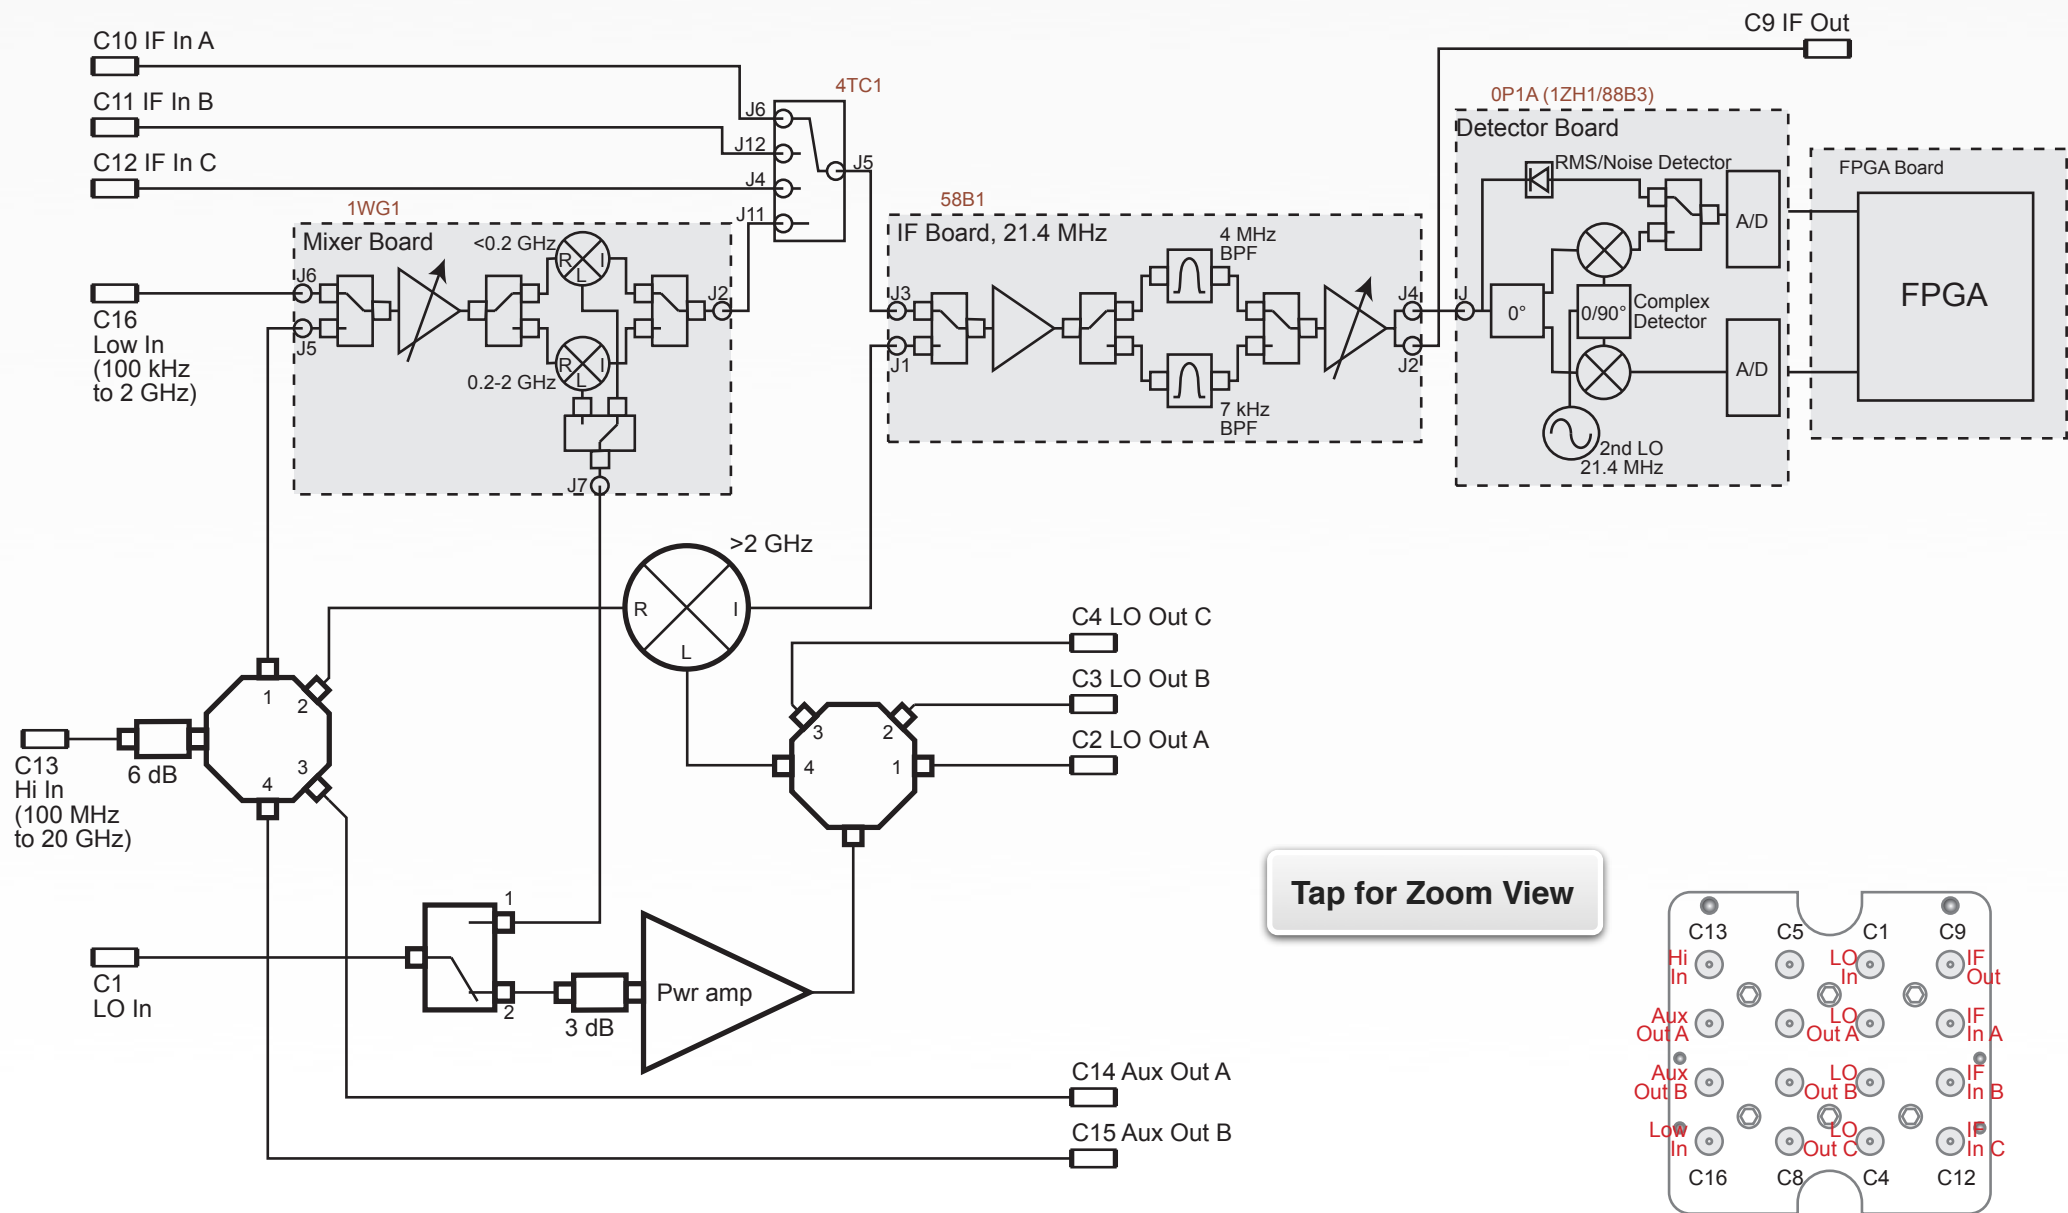

Tap for Zoom View

PERFORMANCE SPECIFICATIONS

Front-End


Frequency Range	100 kHz to 20 GHz
Frequency Resolution	1 Hz
Power Range	-100 dBm to +10 dBm
Frequency Lock	<100 μsec

Receiver

Analog Bandwidths	7 kHz, 200 kHz, 5 MHz (user Selectable)
Noise Floor	-155 dBm/Hz @ 1 GHz (typical)
ADC Sample Rate	80 Msps

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

RI8589: HIGH POWER SUPPLY/PULSER

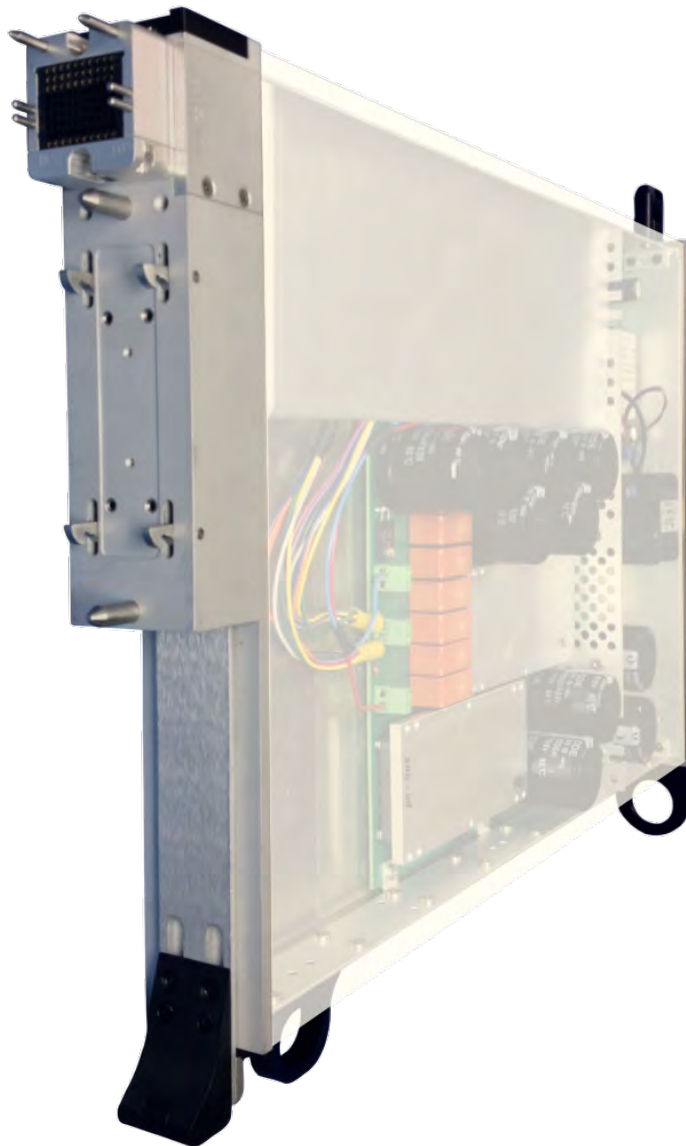

DESCRIPTION

The RI8589 FET Pulser provides power device parametric measurement, characterization, and high power drive supply. With a measurement range from sub- μA to 200V/20A, this instrument allows evaluation of power FETs, BJTs, and IGBT devices as well as wide band-gap materials such as GaN and SiC. The RI8589 enables precise, small on-resistance measurements and 10 μs fast pulse capability for complete power device characterization, temperature stress, and failure analysis.

KEY FEATURES

- DC Parametric Measure & High-Power Supply in One Instrument
- High-Power Polarity Switching without Recabling
- 10 μs , 500W High Power Pulse Capability
- 8 Control Pins for External Relays
- Built-in Fixture Safety Interlock Pins


INSTRUMENTS PROVIDED BY THIS TIM

The instrument in this TIM appear as **FetPulser** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- FetPulser, RI8589x Fet Pulser

NOTE: Multiple RI8589 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - FetPulser, FetPulser2, FetPulser3, etc). The “x” in RI8589x denotes the model revision number.

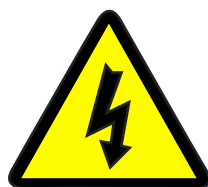

HAZARDOUS VOLTAGES

The RI8589 High Power Supply/Pulser instrument can produce DC and pulse voltages in excess of 170V. It is equipped with safety interlock pins that require a fixture Device Interface Board connection to enable high-power voltages at the output pins of the instrument. Always use certified Roos Instrument's interfaces and interconnect with this instrument.

WARNING: Always power down and remove this instrument before performing any service to the instrument, fixture, DIB, or test system. Never remove or service the device interface board or Quick Lock DIB system while the instrument is powered on.

Roos Instruments, Inc - Cassini16

Block Diagram, Bulk Power FET Pulser TIM RI8589A0

Copyright Roos Instruments, Inc.
Subject to change without notice
2-25-2014 rev D

Tap for Zoom View

Roos Instruments, Inc. logo

Block Diagram, Bulk Power FET Pulser TIM RI8589A0

The diagram illustrates the internal architecture of the Bulk Power FET Pulser TIM RI8589A0. Key components include:

- Power Section:** A CAPACITOR BANK feeds into a PRIMARY POWER (+) and SECONDARY POWER (option) (-) stage. This stage is controlled by a SOFT START IN-RUSH CURRENT LIMITER.
- Relays:** Eight relays (K3-K8) are used to switch the power between the capacitor bank and the output stages. They are labeled with their coil voltage (3.6V or 4.5V) and contact rating (3.6A or 4.5A).
- Output Stages:** The power is delivered to the output terminals (OUT+ (B3-B10), OUT- (A3-A10), GREF (A1)) through a series of relays (K3-K8).
- High Voltage Buffer (HVB):** Multiple HVB modules (M1, M5, M6, M9, M13) are shown, each with its own set of relays (H1-H3) and connections to the output terminals.
- FET Pulser (M14):** A dedicated FET pulser module with its own relays (H1-H2) and connections to the output terminals.
- Octal Vmeasure (M10, M11):** Modules for measuring the output voltage, with connections to the output terminals and the FET pulser.

The diagram also includes a 'Tap for Zoom View' button and a 'Roos Instruments, Inc - Cassini16' logo.

PERFORMANCE SPECIFICATIONS

Supply	Gate Bias	Drain Bias	Drain Pulsing	Drain Reverse Diode Test
$V_{MAX} \mid V_{MIN}$	+60 V -10 V	175 V -10V	50 V 8 V	-5 V -50 V
V_{SET} Resolution	5 mV	20 mV	20 mV	-
I_{MAX}	10 mA	10 mA	20 A	10 A
Settling Time	10 μ s	10 μ s	10 μ s to 100 ms (pulse)	10 μ s
Measure				
Range	1 μ A to 100 mA	1 μ A to 10 mA	10 mA to 20 A	-10 mA to +10 mA
Accuracy	0.1%	0.2%	0.3%	0.1%
Meas. Rate	80 ksps	80 ksps	80 ksps	80 ksps
R_{OUT}	100 Ω 1 k Ω ¹	100 Ω 1 k Ω ¹	0.04 Ω	2.5 Ω

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

¹ Current measurements below 100 μ A use 1 k Ω

RI8594: HIGH PERF. WAVEFORM GENERATOR & MEASURE



DESCRIPTION

The RI8594 delivers enhanced waveform and oscilloscope performance over the RI8572 Waveform/Measure instrument and includes an additional, low-noise clock source. The high-performance PLL supplies an optimal local oscillator reference signal for devices requiring high-fidelity phase noise qualification. The TIM includes a complex sine and arbitrary baseband waveform generator for modulated signal applications with two, DC coupled ports. A sine wave generator that uses a dedicated DDS and lookup table engine with two, AC coupled ports, as well as a dual-channel digitizer with an embedded FPGA for real-time oscilloscope measurements.

KEY FEATURES

- M-ary QAM, M-PSK, & Custom Baseband Generation
- Continuous & Reciprocal Frequency Counter
- Measure S/N, SINAD, Rise/Fall Times
- Ultra Low-Noise Reference LO

INSTRUMENTS PROVIDED BY THIS TIM

The instruments in this TIM appear as **LowNoiseClock**, **Oscilloscope**, **SineGen**, and **Waveform** in the panel dialog windows.

Model and Name as it appears in the Tester Configuration:

- LowNoiseClock, Ri8585x Low Noise Source
- Oscilloscope, RI74105x Hi Spd scope/counter/BER
- SineGen, Ri7403x Dual Sine Source
- Waveform, Ri74211x Complex Waveform


NOTE: Multiple RI8594 instruments are enumerated incrementally by the system as “2”, “3”, etc. in the configuration, edit, and control panels(i.e - Oscilloscope,SineGen,Waveform,LowNoiseClock; Oscilloscope2,SineGen2,Waveform2,LowNoiseClock2; Oscilloscope2,SineGen2,Waveform2,LowNoiseClock2, etc).

The “x” in RI8594x denotes the model revision number.

TIM OPERATIONS

Reference the [RI8594 section](#) of the Graphical Programming chapter for configuration, edit and control panels.

BLOCK DIAGRAM 8.18

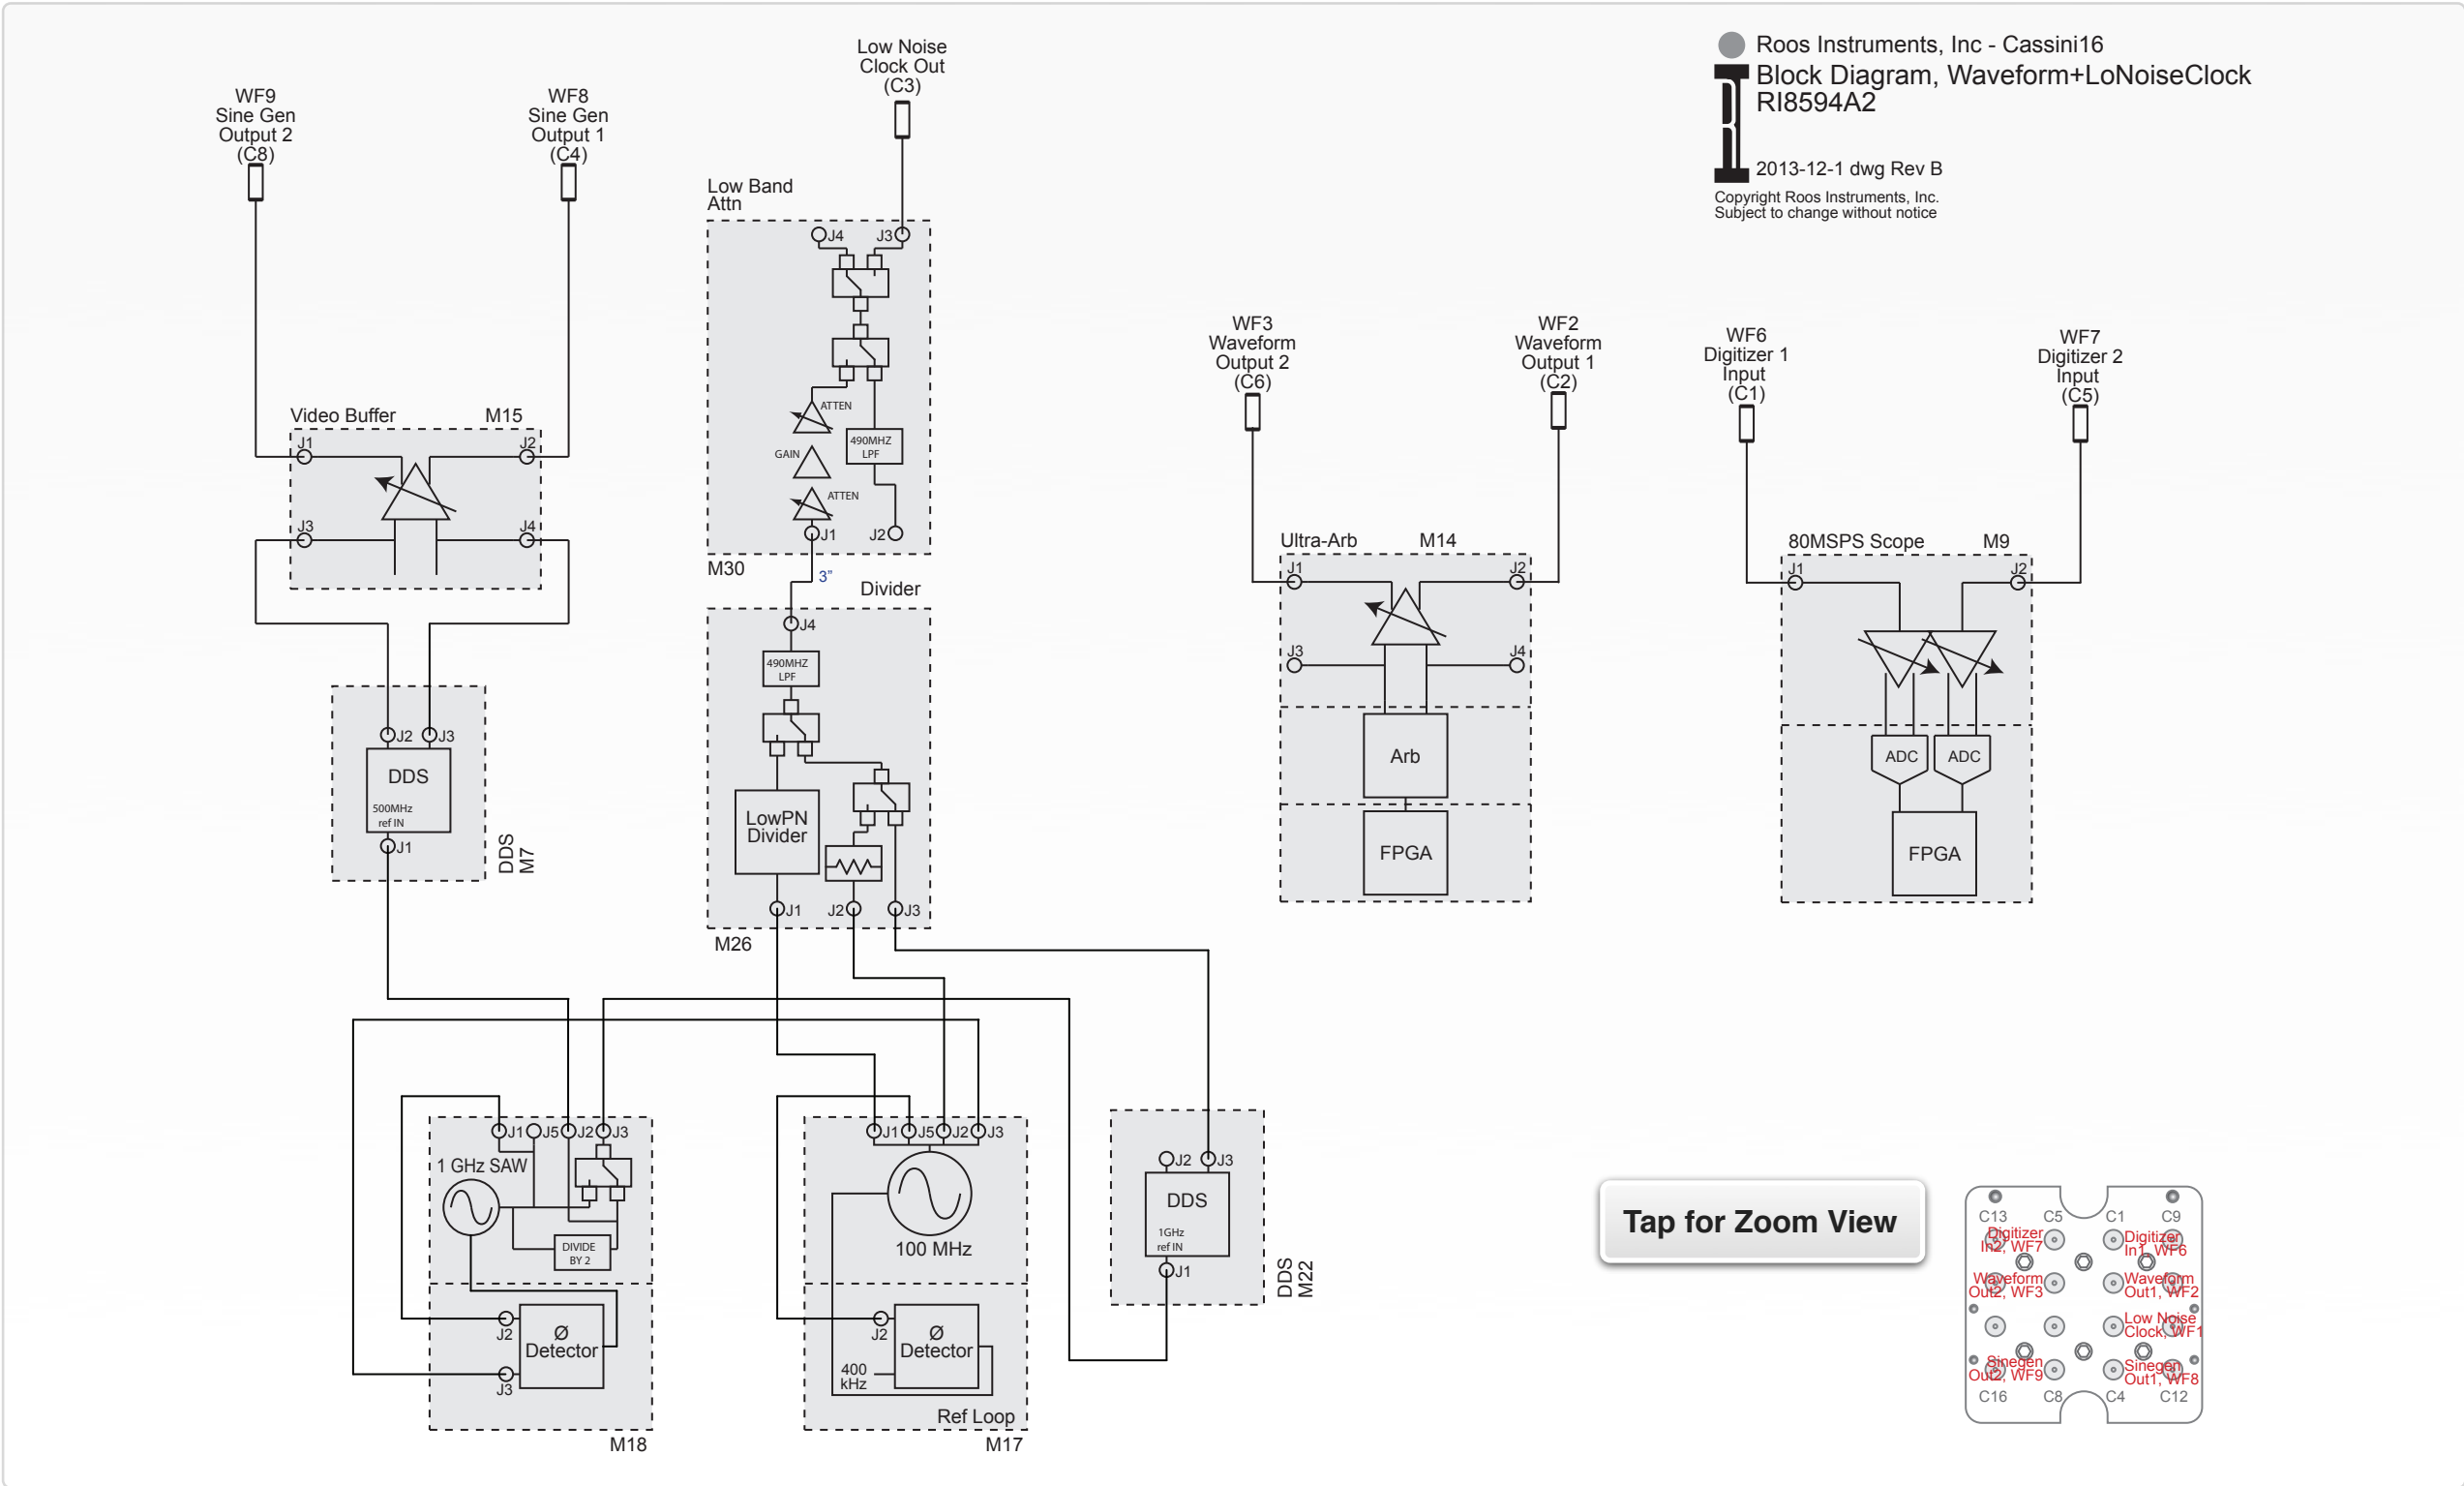

PERFORMANCE SPECIFICATIONS

Low Noise Clock

Frequency Options	100 MHz ÷ 2,4,5,8,10,16,20 100 MHz 200 Hz - 400 MHz
Phase Noise ¹	170 dBc/Hz 148 dBc/Hz 120 dBc/Hz

Sine & Arbitrary Wave Generator

Frequency Range	1 kHz to 100 MHz (Sine) 1 Hz to 80 MHz (Arb.)
Clock Rate	640 MHz (Max)
Bit Resolution	16 Bits/Channel

Digitizer

Analog Bandwidth	100 MHz
Voltage/Bit Resolution	±0.4 V / 14 Bits
Sample Rate	80 Msps

This is an abbreviated list of instrument capability and is subject to change without notice. For comprehensive and up-to-date instruments specifications consult the TIM Specification document.

¹ Typical performance at 20 kHz offset

© 2015 Roos Instruments Inc.

All rights reserved. Designed and published by Roos Instruments in Santa Clara, CA. PDF editions of this book are available upon request. Contact support@roos.com for more information.

All product, product specifications, and data are subject to change without notice to improve performance, function, design, or otherwise.

The information in this document is, to the best of our knowledge, accurate at the time of publication.

To the fullest extent of the law, neither the publisher nor the authors, contributors, or editors assume any liability for any injury and/or damage to persons or property as a matter of products liability, negligence or otherwise, or from any use or operation of any methods, products, instructions, or ideas contained in the material herein.

It is strictly prohibited to copy, redistribute, republish, or modify any materials contained herein or in subsequent support of this content without the prior written consent of Roos Instruments Inc.

Product names, logos, brands and other trademarks referred to within this book are the property of their respective trademark holders.

These trademark holders are not affiliated with Roos Instruments, Inc., our products, or our website. They do not sponsor or endorse our materials.

Below is a listing of these trademarks and their owners. This list is subject to change without notice.

iPad® - iPad is a trademark of Apple Inc., registered in the U.S. and other countries.

ANSI (IMPERIAL)

The American National Standards Institute (ANSI, /ˈænsiː/ an-see) is a private non-profit organization that oversees the development of voluntary consensus standards for products, services, processes, systems, and personnel in the United States. The organization also coordinates U.S. standards with international standards so that American products can be used worldwide. For example, standards ensure that people who own cameras can find the film they need for that camera anywhere around the globe.

ANSI accredits standards that are developed by representatives of other standards organizations, government agencies, consumer groups, companies, and others. These standards ensure that the characteristics and performance of products are consistent, that people use the same definitions and terms, and that products are tested the same way. ANSI also accredits organizations that carry out product or personnel certification in accordance with requirements defined in international standards.

Related Glossary Terms

ISO (Metric)

Index

Find Term

Chapter 7 - Tools Required for TIM Module Repair

CALIBRATION PLATE

Fixture bottom plate with a TIM interface insert layout designed to match a specific Cassini test head configuration for calibrating individual TIMs, custom or application-specific resource configurations, and the overall test system.

Related Glossary Terms

Diagnostic Plate, Fixture

Index

DIAGNOSTIC PLATE

Fixture bottom plate with a TIM interface insert layout designed to match a specific Cassini test head configuration for conducting diagnostics on individual TIMs, custom or application-specific resource configurations, and/or the overall test system.

Related Glossary Terms

Calibration Plate

Index

FIXTURE

Cassini fixtures carry the modular architecture of Cassini into the device interface environment. Housed in a rugged aluminum enclosure is a completely configurable test resource environment. The form factor and discrete design layers support an application range from DC to 90 GHz. Integration with Cassini's software allow fixtures to extend and enhance the capabilities of test instruments with an integrated calibration layer that carries signal accuracy right to the device pin. All the functionality and capability of traditional load boards have been reengineered to take advantage of the configurable instrument framework of Cassini. The discrete device interface layers enable design and development flexibility for high-performance RF devices that can be optimized independently to suite application needs.

Related Glossary Terms

Calibration Plate, TIM

Index

Find Term

INFRASTRUCTURE

The Cassini test system infrastructure is designed to deliver a low-cost, high-throughput ATE solution platforms to support mixed-signal, RF and microwave ICs. The three main elements to the Cassini architecture are:

An RF-based architecture designed for high accuracy, precisions, and test performance

A modular test head that supports a high-speed data bus and precision power bus

Small footprint, energy-efficient, system infrastructure and instruments

Related Glossary Terms

TIM

Index

Find Term

ISO (METRIC)

ISO, the International Organization for Standardization, is an independent, non-governmental organization, the members of which are the standards organization of the 163 member countries. It is the world's largest developer of voluntary international standards and facilitates world trade by providing common standards between nations. Nearly twenty thousand standards have been set covering everything from manufactured products and technology to food safety, agriculture and healthcare.

Use of the standards ensures that products and services are safe, reliable and of good quality. The standards help businesses increase productivity while minimizing errors and waste. By enabling products from different markets to be directly compared, they facilitate companies in entering new markets and assist in the development of global trade on a fair basis. The standards also serve to safeguard consumers and the end-users of products and services, ensuring that certified products conform to the minimum standards set internationally.

Related Glossary Terms

ANSI (Imperial)

Index

Find Term

Chapter 7 - Tools Required for TIM Module Repair

TIM

Stands for Test Instrument Module. Test instrument modules provide an application-specific instrument or instruments designed for the Cassini ATE system. They include a two latch, quick release latching system for docking and undocking to the test head. Each TIM provides resources through a blind-mate interface system designed to comply with Cassini fixtures and diagnostic/calibration interface plates. These self-contained, swappable instruments provide all the source, receive, measure, and signal processing capability for a broad range of DC, digital, mixed-signal, RF, and millimeter-wave applications.

Related Glossary Terms

Fixture, Infrastructure

Index

Find Term